

a @ rusEFI.comm  
/eenenergyecu.kicad\_sch  
**Hellen121vag**  
Date: 2022-10-14 | Rev: d  
.D.A. 8.0.9 | Id: 1/6  
15 | 16

1 2 3 4 5 6

A

A

B


B

C

C

D

D

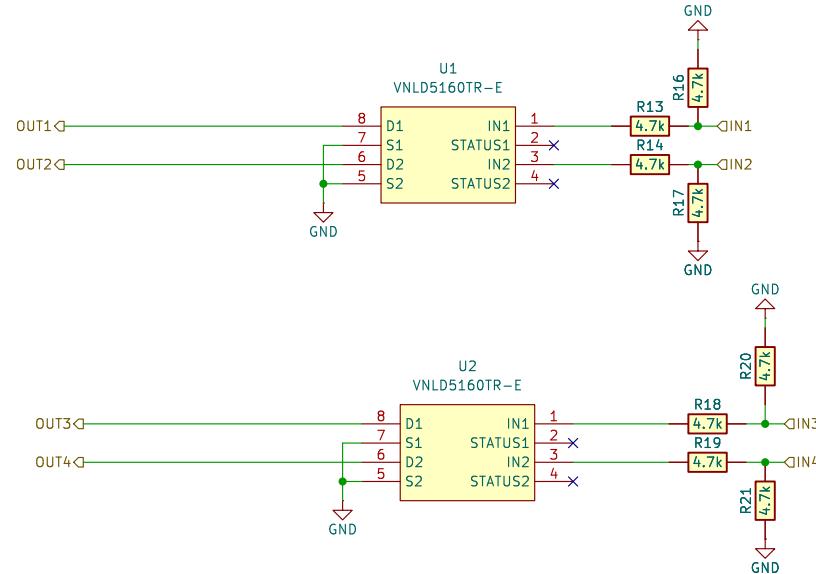

Sheet: /LS/  
File: LS4.kicad\_sch

**Title:**

Size: A4 | Date:  
KiCad E.D.A. 8.0.9

**Rev:**  
Id: 3/6

1 2 3 4 5 6

A

A

B

B


C

C

D

D

Remove R20–R22, R26–R28, and install Q7–Q12 for use with dumb coils

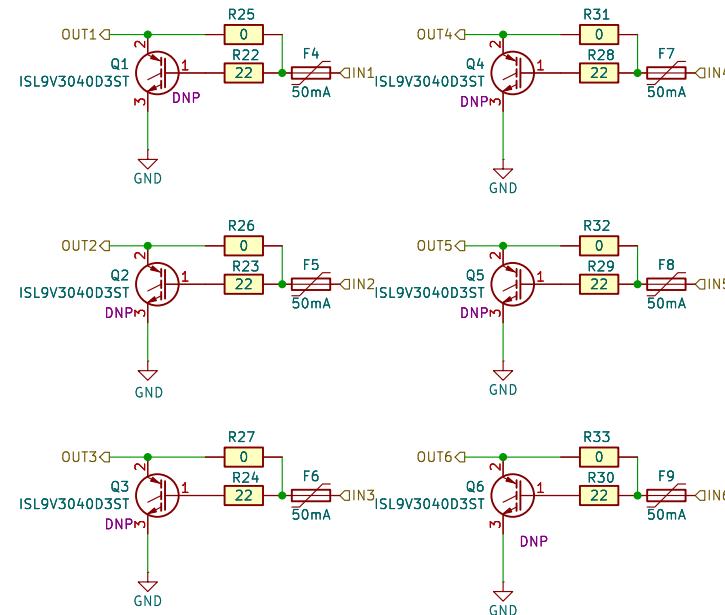

Sheet: /Ignition/  
File: IGN6.kicad\_sch

**Title:**

Size: A4 | Date:  
KiCad E.D.A. 8.0.9

**Rev:**  
Id: 5/6

A

A

B


B

C

C

D

D

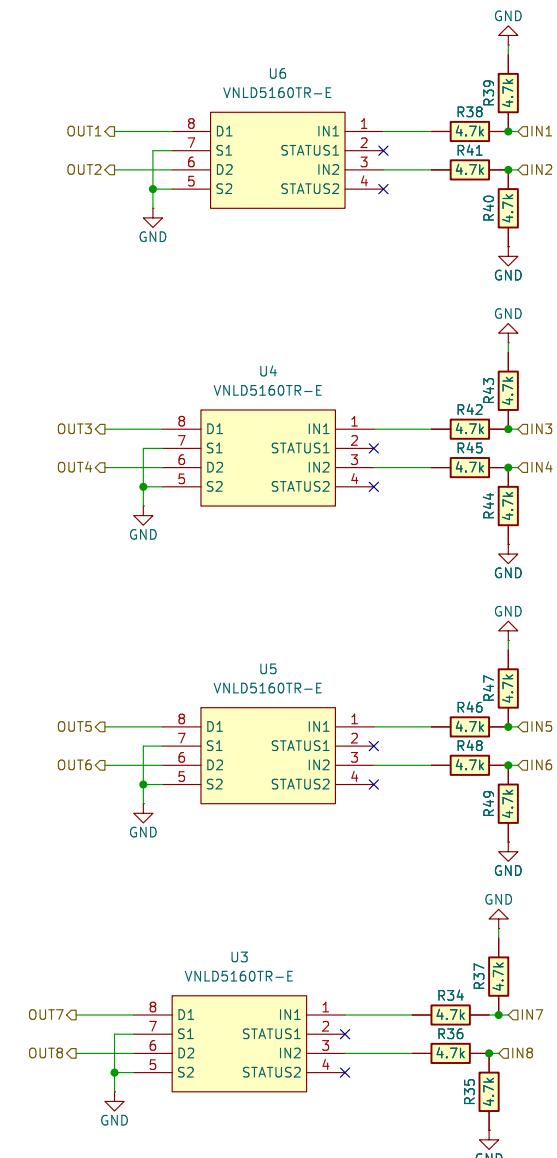

Sheet: /Injector/  
File: INJ6.kicad\_sch

**Title:**

Size: A4 | Date:

KiCad E.D.A. 8.0.9

**Rev:**  
Id: 6/6

A

A

B


B

C

C

D

D

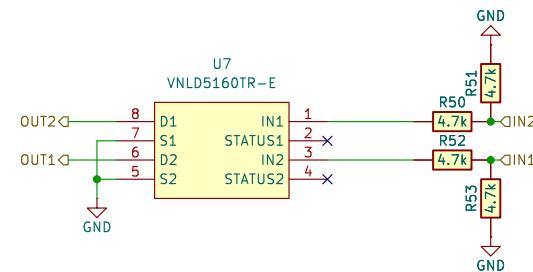

Sheet: /LS HOT/  
File: LS\_HOT.kicad\_sch

**Title:**

Size: A4 | Date:  
KiCad E.D.A. 8.0.9

**Rev:**  
Id: 8/6

1 2 3 4 5 6

A

A

B


B

C

C

D

D

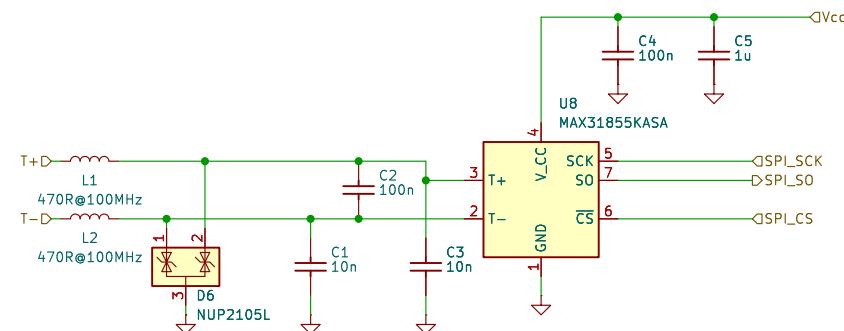

NUP2105L is optional, used for protection

Sheet: /EGT/  
File: egt.kicad\_sch

**Title:**

Size: A4 Date:  
KiCad E.D.A. 8.0.9

**Rev:**  
Id: 9/6

1 2 3 4 5 6