


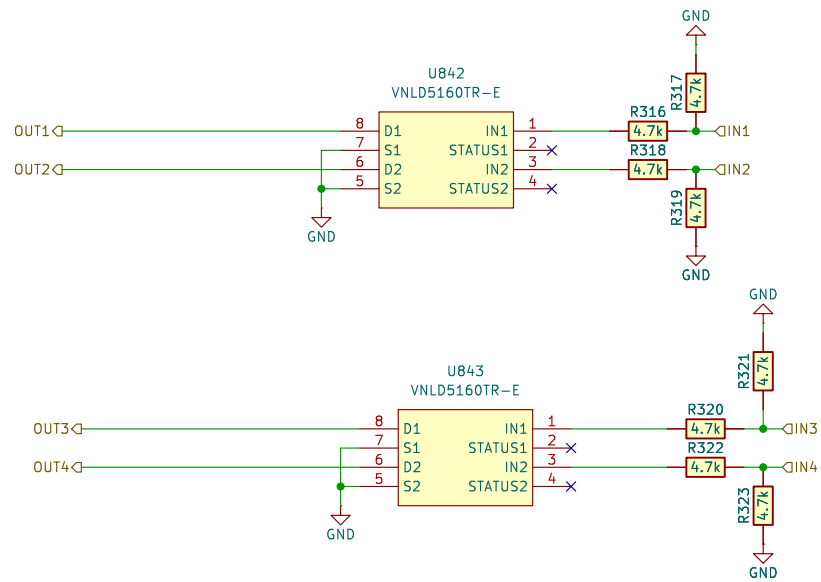

Sheet: /LS/  
File: LS4.kicad\_sch

**Title:**

Size: A4


Date:

KiCad E.D.A. 8.0.9

**Rev:**

Id: 3/6

Remove R20–R22, R26–R28, and install Q7–Q12 for use with dumb coils

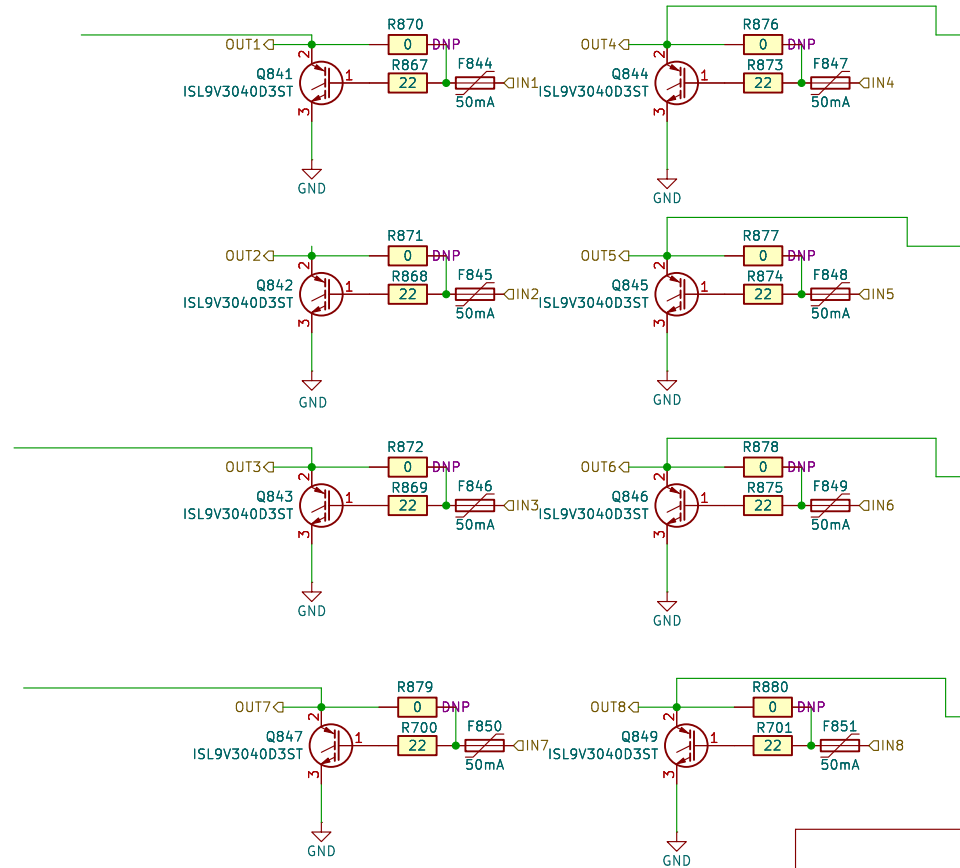

Sheet: /Ignition/  
File: IGN6.kicad\_sch

**Title:**


Size: A4

Date:


KiCad E.D.A. 8.0.9

**Rev:**

Id: 5/6

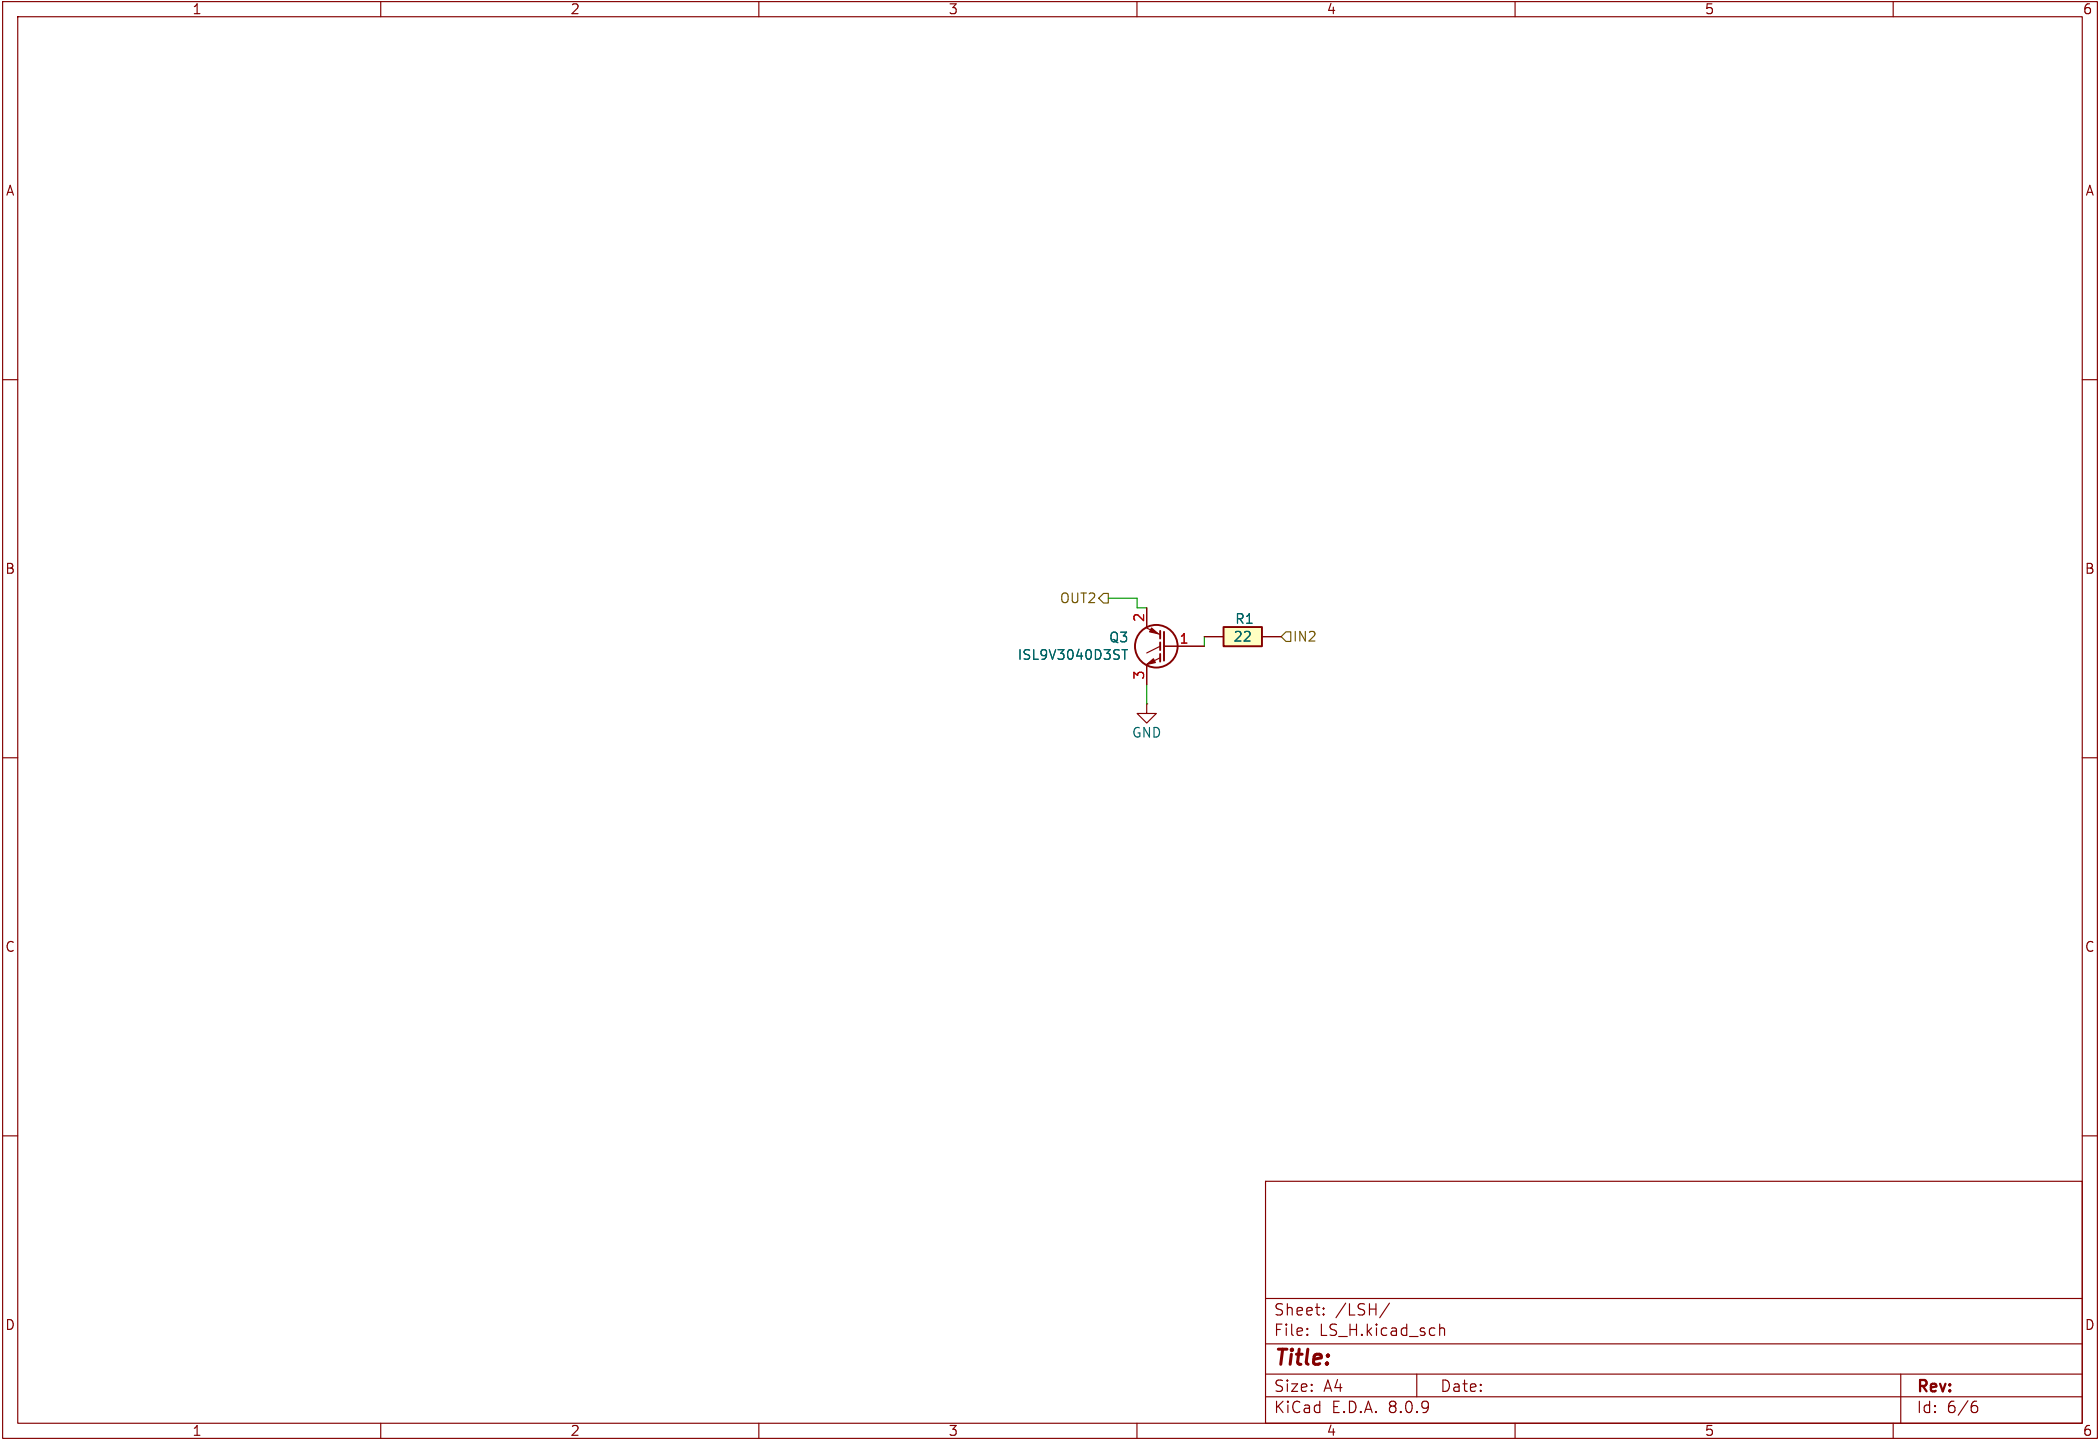

|                                      |       |         |
|--------------------------------------|-------|---------|
| Sheet: /LSH/<br>File: LS_H.kicad_sch |       |         |
| Title:                               |       |         |
| Size: A4                             | Date: | Rev:    |
| KiCad E.D.A. 8.0.9                   |       | Id: 6/6 |

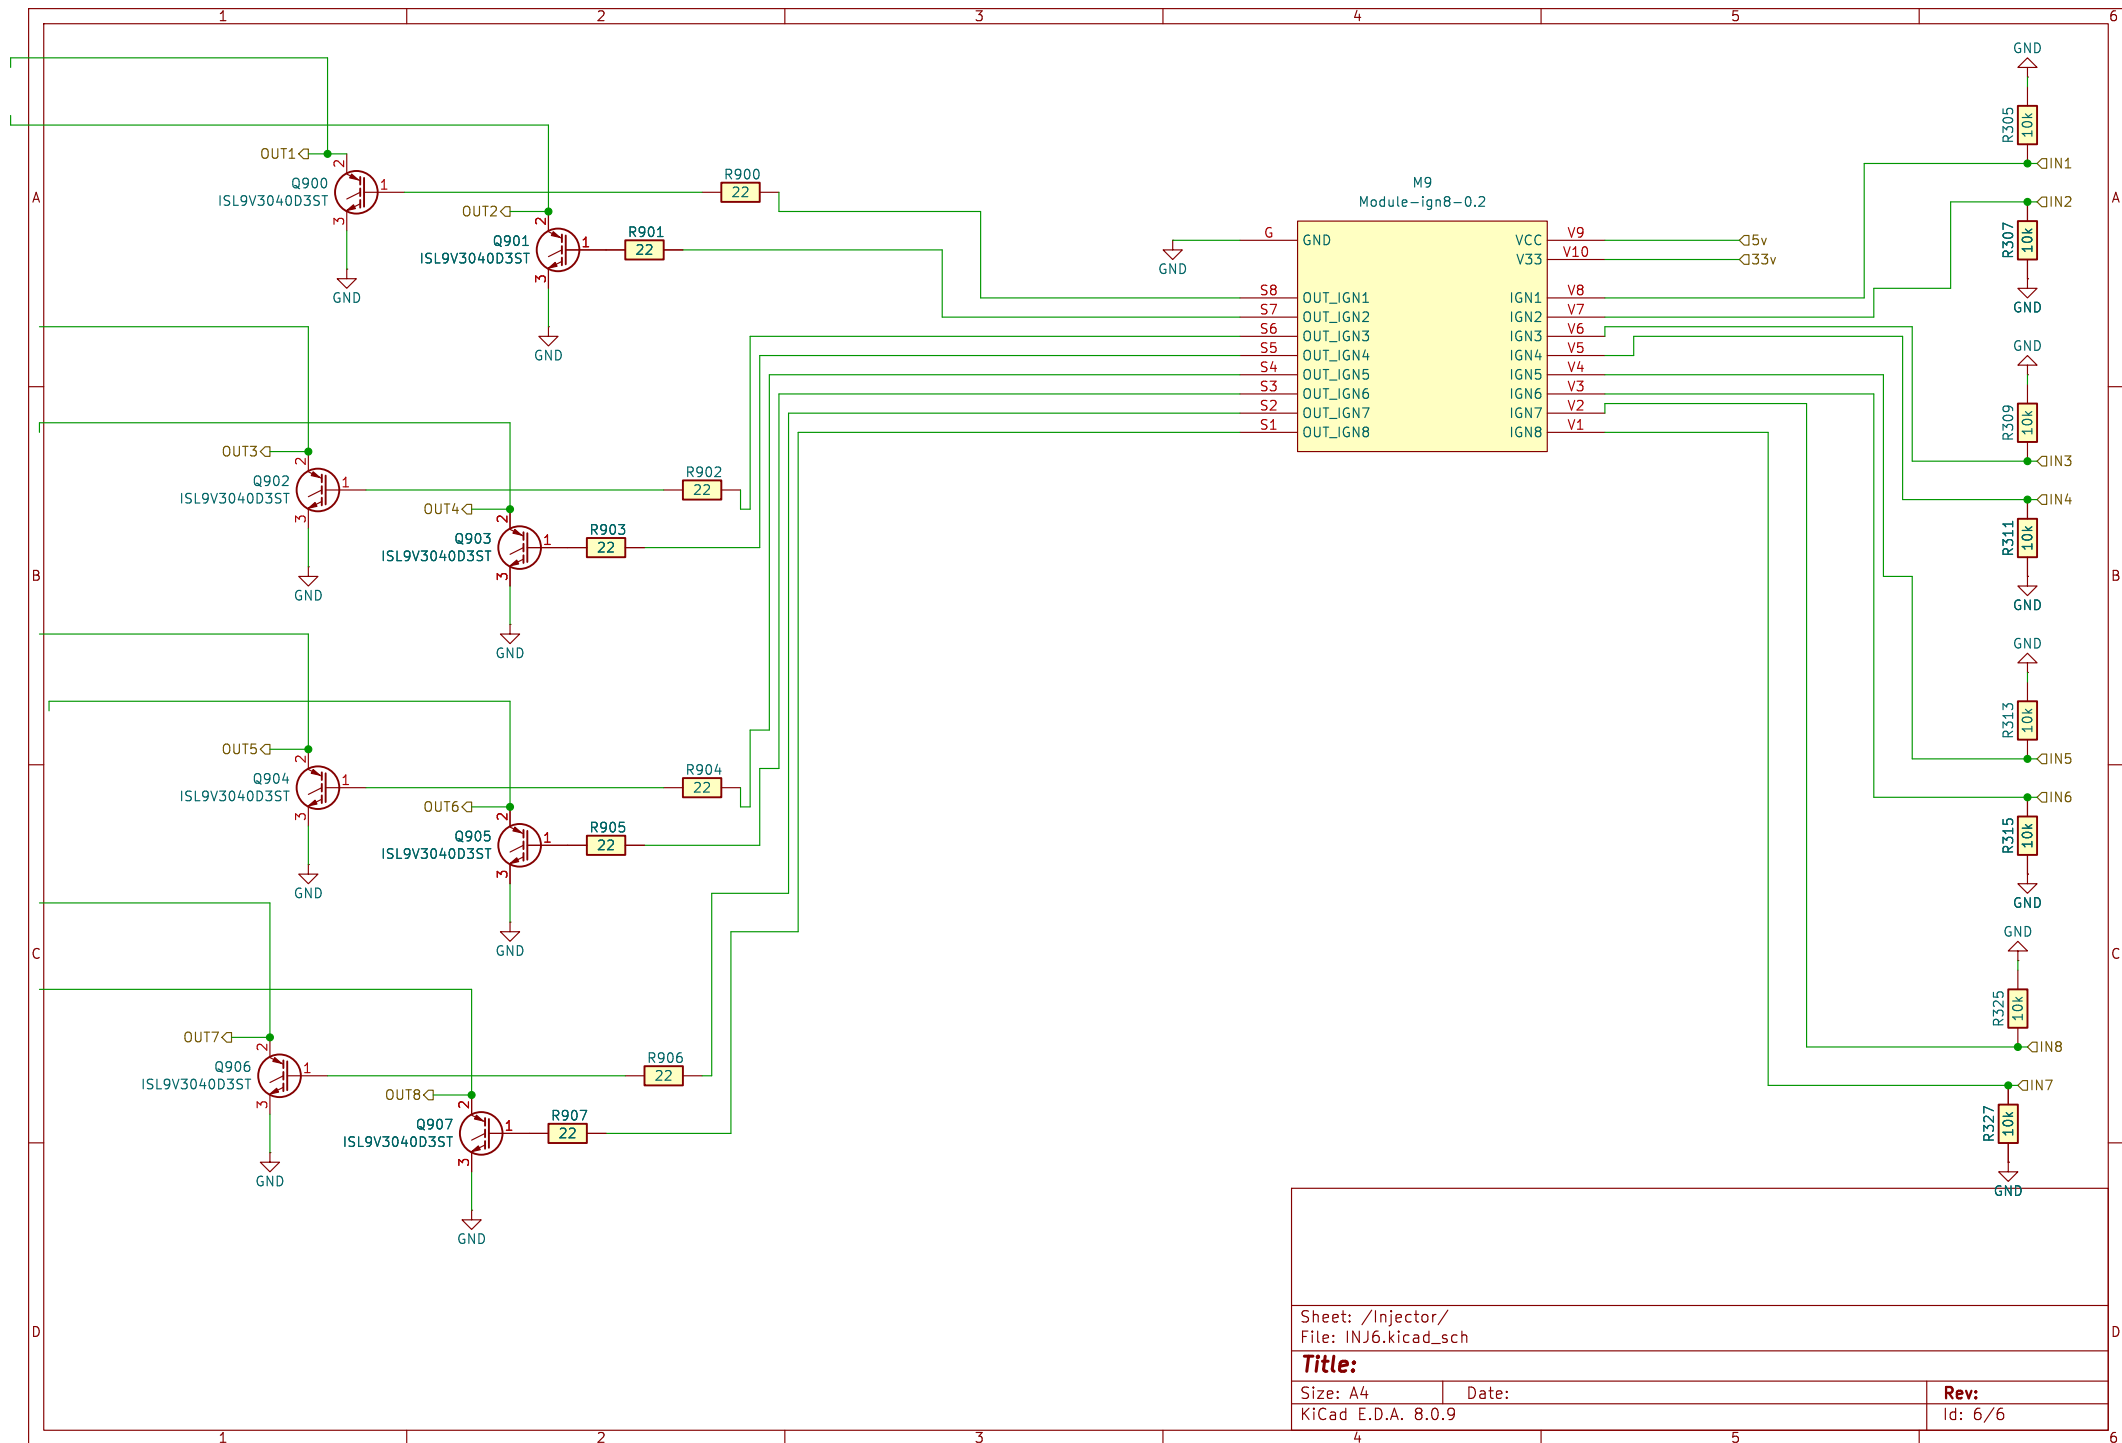

Sheet: /Injector/  
File: INJ6.kicad\_sch

**Title:**

Size: A4


Date:

KiCad E.D.A. 8.0.9

**Rev:**

Id: 6/6



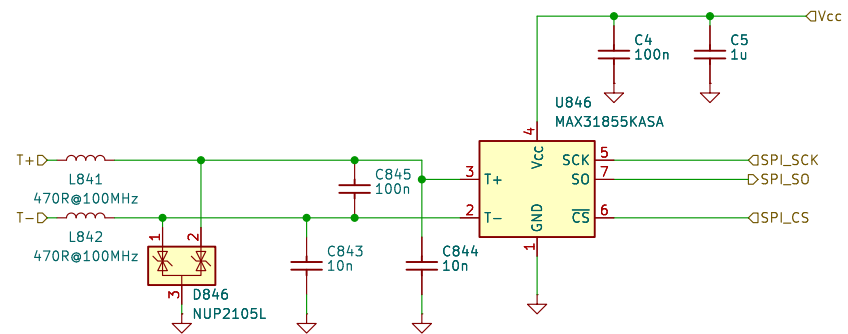

NUP2105L is optional, used for protection

Sheet: /EGT/  
File: egt.kicad\_sch

**Title:**

Size: A4

Date:

KiCad E.D.A. 8.0.9

**Rev:**

Id: 9/6