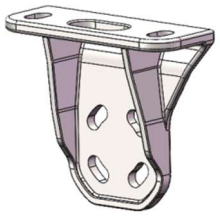
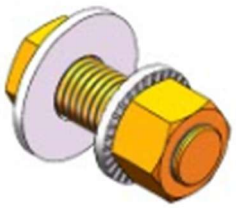
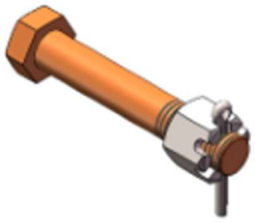
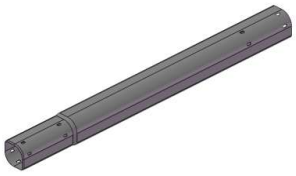
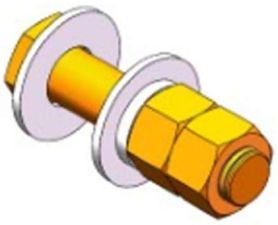
6	Reducer base		15	M12/M14 Bolts with hole	
7	Torque tube connecting the reducer		16	M14 Assembly for Bearing housing	
8	Connecting torque tube		17	M16 Assembly for Reducer base & Bearing base	
9	Purlin		18	M18 Assembly for Reducer	

For detail tightening torque of the bolts, please check Appendix 1.

info@esetsolar.com +86 516-83152579 www.esetsolar.com