




选型指南


SELECTION GUIDE

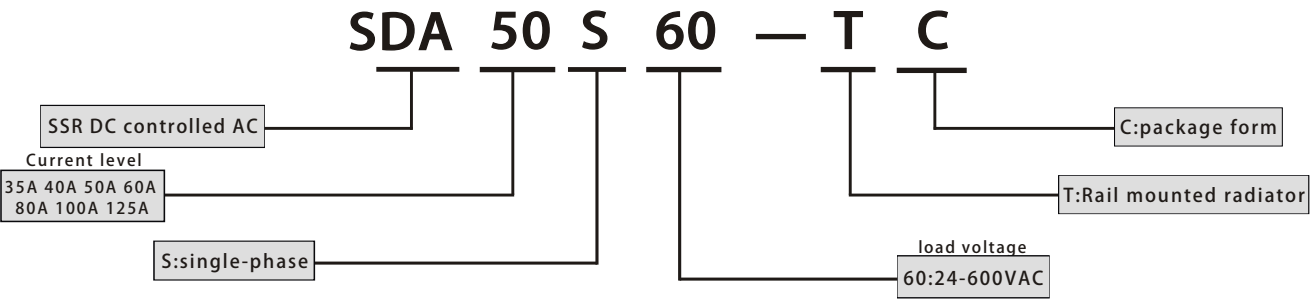


参数列表

PARAMETER LIST

model	Current level	load voltage	control voltage	size mm
SDA35S60-C	35A	24-600VAC	6-32VDC	22.5*90*42
SDA40S60-C	40A	24-600VAC	6-32VDC	22.5*90*42
SDA50S60-C	60A	24-600VAC	6-32VDC	22.5*90*42
SDA60S60-C	75A	24-600VAC	6-32VDC	22.5*90*42
SDA80S60-C	80A	24-600VAC	6-32VDC	22.5*90*42
SDA100S60-C	100A	24-600VAC	6-32VDC	22.5*90*42
SDA125S60-C	125A	24-600VAC	6-32VDC	22.5*90*42

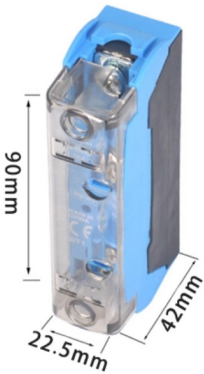

model	Current level	load voltage	control voltage	size mm
SDA35S60-TC	35A	24-600VAC	6-32VDC	22.5*90*112
SDA40S60-TC	40A	24-600VAC	6-32VDC	22.5*90*112
SDA50S60-TC	60A	24-600VAC	6-32VDC	22.5*90*112
SDA60S60-TC	75A	24-600VAC	6-32VDC	22.5*90*112
SDA80S60-TC	80A	24-600VAC	6-32VDC	22.5*90*112
SDA100S60-TC	100A	24-600VAC	6-32VDC	22.5*90*112
SDA125S60-TC	125A	24-600VAC	6-32VDC	22.5*90*112

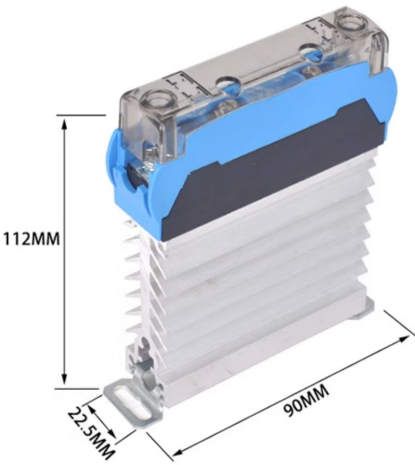

输入参数

ENTER THE PARAMETERS

input parameters	
Input voltage range	[6 – 32] VDC
Ensure the voltage is connected	6VDC
Ensure the voltage is turned off	1.0VDC
Maximum input current	35mA
Minimum input current	5mA

输出参数

OUTPUT PARAMETERS

Product Parameters	zero-crossing type	random type
Working voltage range	24-600V	
Off state leakage current	1ma	
Minimum load current	0.6ma	
Start time	1/2 cycle+1ms	1ms
Closing Time	1/2 cycle+1ms	1ms
Maximum output voltage drop	1.7V r.m.s	
Minimum critical rise rate of off state voltage dv/dt	500[V/us]	
Transient voltage VPK	1200-1800[VPK]	
Input and output terminals, insulation voltage between output and substrate (50/60Hz)	>2000Vrms	


其他参数

OTHER PARAMETERS

Other parameters	
frequency range	47H–63Hz
insulation resistance	1000Mo Ω (500VDC)
Dielectric Withstand	4000Vrms,1 minute,Between input and output
	2500Vrms,1 minute,Between input, output, and radiator
Working environment temperature range	-30 $^{\circ}$ C ~+80 $^{\circ}$ C
Storage environment temperature range	-30 $^{\circ}$ C ~+100 $^{\circ}$ C

接线示意图

SCHEMATIC DIAGRAM OF WIRING


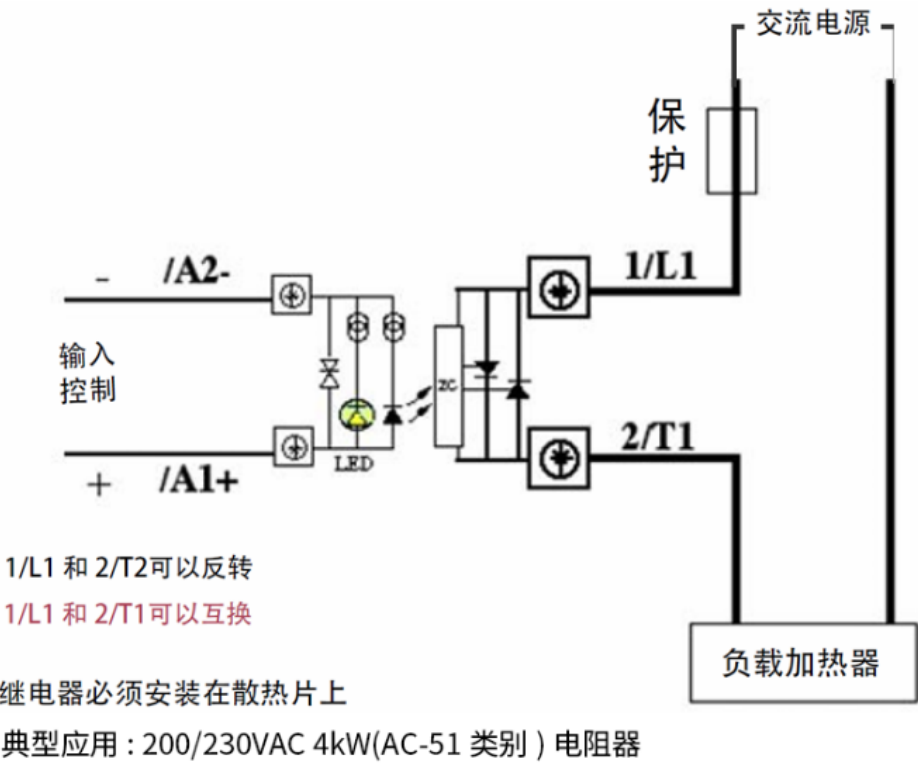






安装说明

INSTALLATION INSTRUCTIONS

Use two screws, first tighten the two screws with a maximum torque of 1 Nm, and then continue to use the nominal torque of 1.8 Nm. It is recommended to use an electric screwdriver instead of a pneumatic tool. It can better adjust the specified tightening parameters, especially to achieve a smoother final torque. When using pneumatic systems, impact and torque overshoot may occur. Suggest limiting the speed of installing screws to ensure even flow and diffusion of thermal paste, especially when using denser thermal paste. If tightened at high speed, internal damage may occur. The maximum screw speed for tightening should not exceed 250 rpm. Soft tightening (without torque overshoot) will reduce internal stress:




install

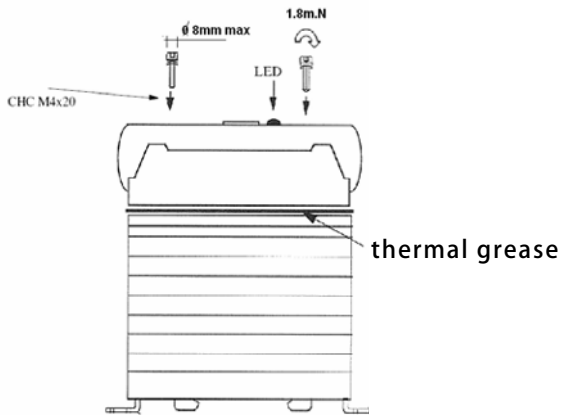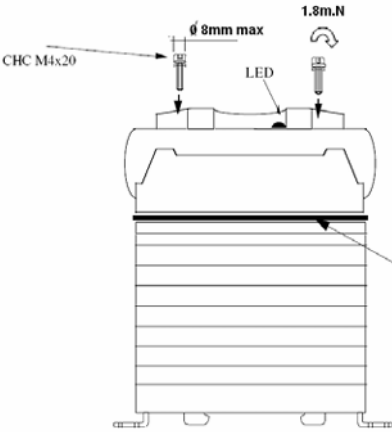

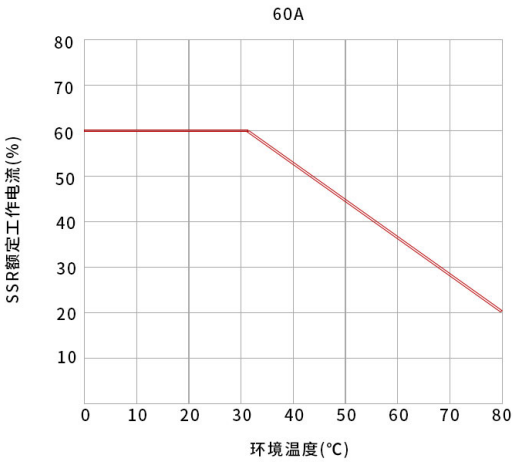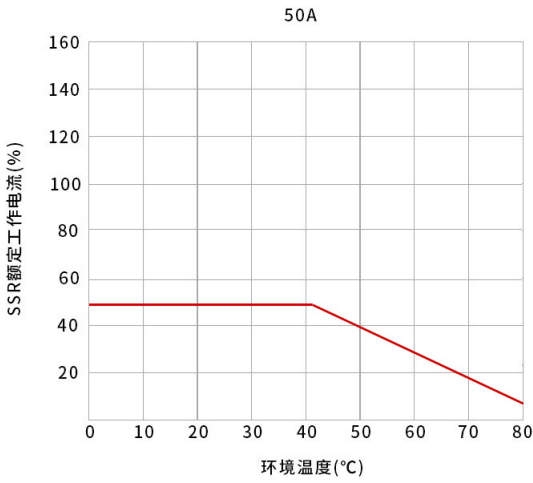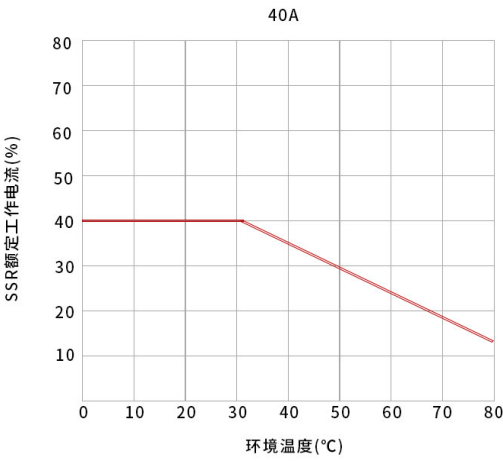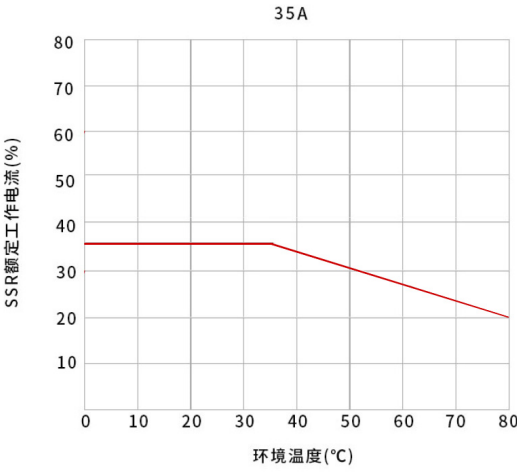

温度曲线图

TEMPERATURE

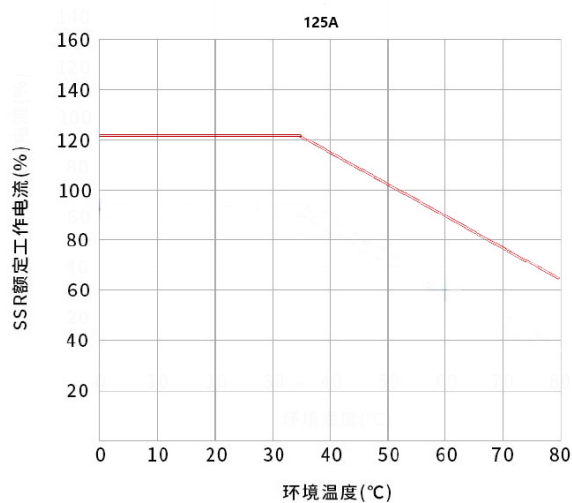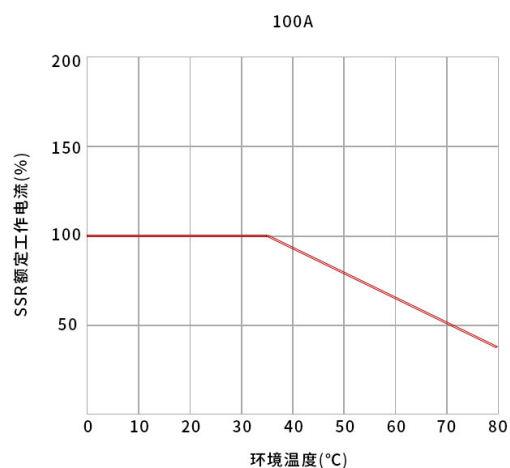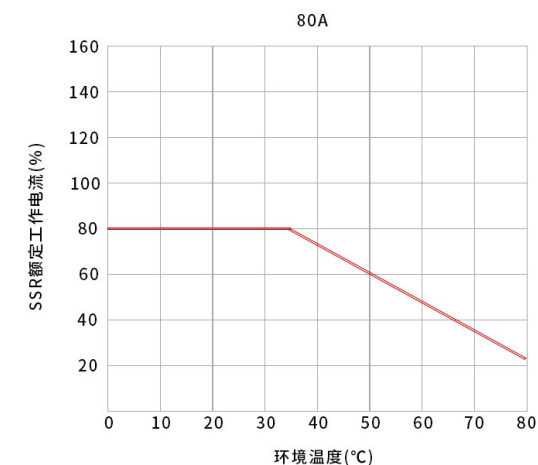

浙江申帝克电气有限公司

Zhejiang Shendike Electric Co., Ltd

全国服务热线: 400-888-9277

天猫: www.Senndik.tmall.comofficial website: www.zcximandun.com

If there are any changes, no further notice will be given