


Cisco ISE Dashboard:

Metrics:

Shows a high-level summary of how many endpoints are active, how many active guests exist, the profiled endpoints, as well as posture compliance.

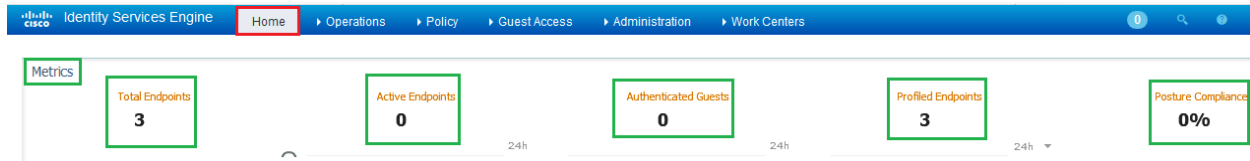

System Summary:

Provides a quick overview of all ISE appliances within the deployment. This summary includes the health status, CPU level, memory usage, and authentication latency for each ISE appliance.

System Summary			
	Name	Utilization and Latency 24h	
		CPU	Memory
	ISE1		


Alarms:

Provides any alarms or anomalous behaviors that have been seen by ISE. A few examples of alarms may be authentication inactivity, NTP sync issues, or insufficient virtual machine resources, just to name a few.

Alarms			
	Name	Occurrences	Last Occurred
	Configuration Changed	36 times	16 mins ago
	ISE Authentication Inactivity	12 times	33 mins ago
	No Configuration Backup Scheduled	12 times	38 mins ago
	Insufficient Virtual Machine Resources	25 times	38 mins ago
	DNS Resolution Failure	12 times	38 mins ago
	NTP Sync Failure	12 times	38 mins ago
	No Accounting Start	2 times	4 months ago
	Unknown NAD	3 times	4 months ago
	Supplicant stopped responding	1 time	9 months ago
	RADIUS Request Dropped	2 times	9 months ago
	Cisco profile applied to all devices	1 time	3 yrs ago


Authentications:

Provides a 24-hour and 60-minute summary of the ISE passed and failed authentications, providing a distribution between identity store, identity group, network device, location, and failure reason (if applicable).

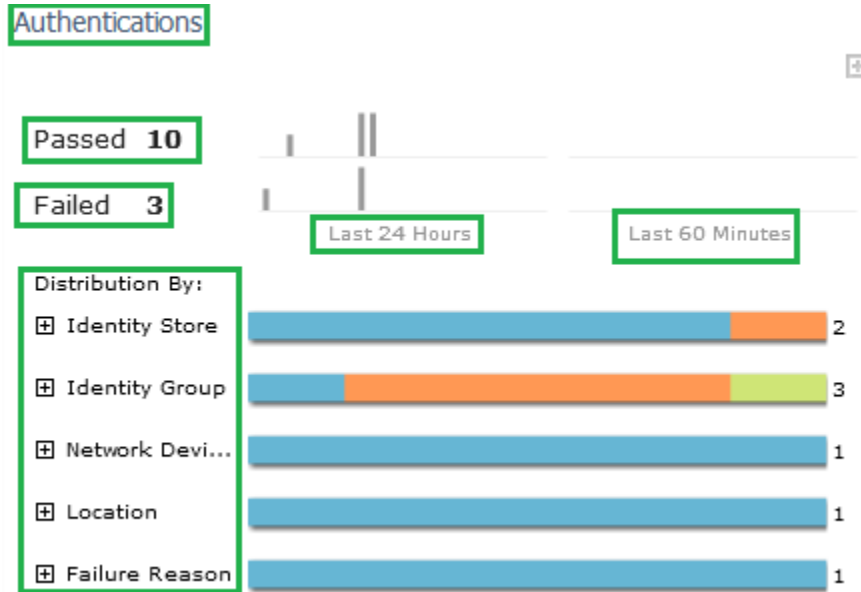


Profiler Activity:

If profiling is enabled, this dashlet provides a 24-hour and 60-minute overview of which endpoint profile or identity group the endpoints were profiled.

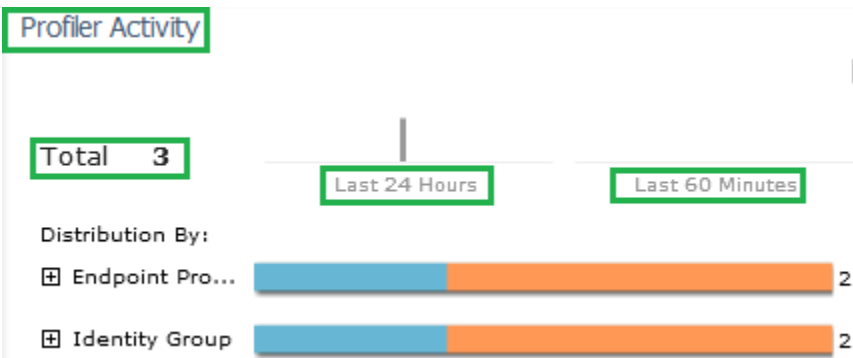

Posture Compliance:

This pane provides the posture status of endpoints, highlighting the distribution based on profile status as well as operating system.

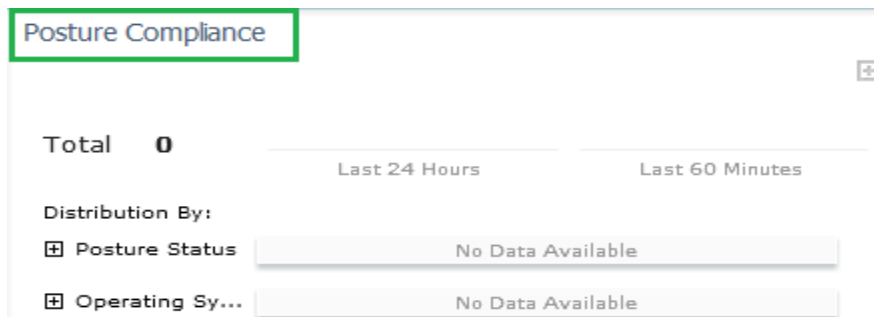

Setup Assistant:

The Setup Assistant link can be used to do an initial configuration of the Cisco ISE. The Setup Assistant guides through a series of questions to configure the basic functionality of Cisco ISE.

Setup Assistant

Run Setup Assistant

View Network Device Configuration

Server Information

Identify Policy Requirements → Configure Network Access Service → Select Network Device Types → Review and C Your Choices

Welcome to the Cisco ISE Policy Setup Assistant.
This assistant will guide you through creating an initial configuration to demonstrate Cisco ISE feature functionality in your network. Your answers to these questions impact these Cisco ISE features: authentication, authorization, profiling, posture, client provisioning, BYOD, guest access and web portal management.

Do you want to setup access services for:

- ☐ Wired
- ☐ Wireless

Which subnets do you want to protect from guests or non-compliant endpoints?

/ +

Server Information:

The hostname of the ISE appliance that is currently being viewed. The information given in this Server Information.

Personas: The active personas on the current ISE appliance.


Role: Whether this ISE is currently in a standalone, primary, or secondary role.

System Time: The current time as seen by the current ISE appliance.

FIPS Mode: If the current ISE node is running in FIPS compliant mode, it is indicated here.


Version: The current version of ISE that is running.

Patch Information: If there is a system patch that has been installed, it is indicated here.

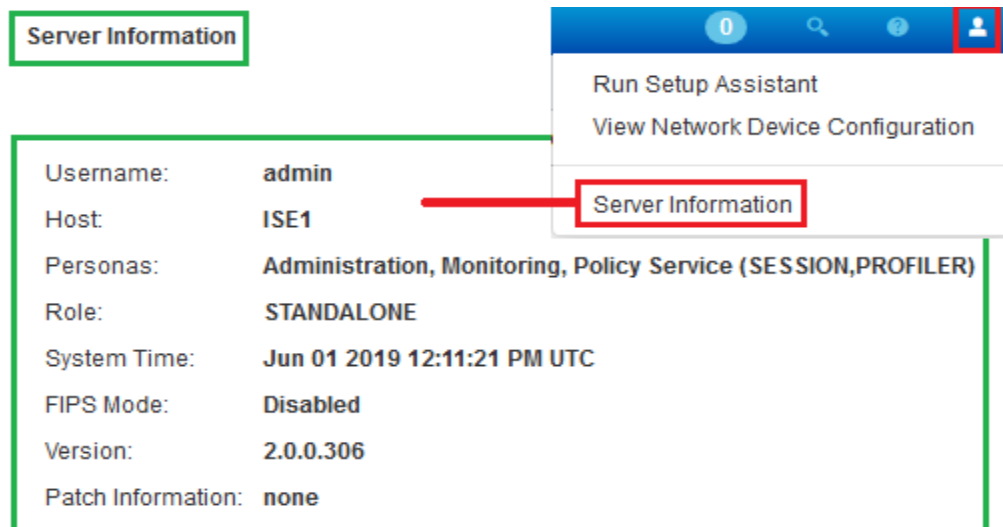

Guest Access:

Guest Access is the New Tabs added to the GUI of ISE 2. Guest Access Tab is something new in Cisco ISE 2. All Sponsor and Guest portal related settings are available at same place.

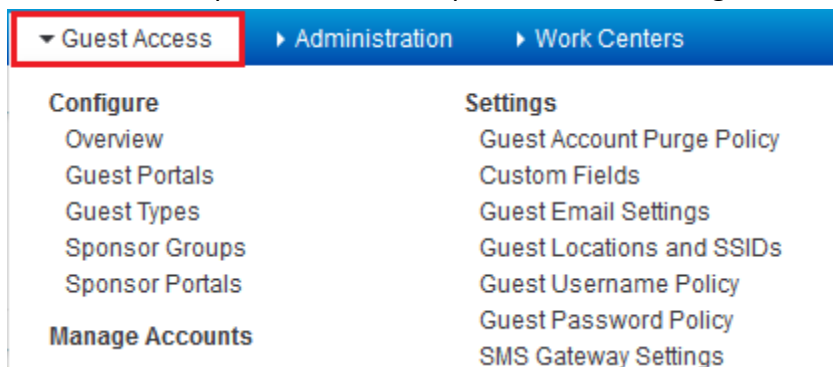

Work Centers:

The Work Center menu contains all the device administration pages, which acts as a single start point for ISE administrators. However, pages that are not specific to device administration such as Users, User Identity Groups, Network Devices, Default Network Devices, Network Device Groups, Authentication and Authorization Conditions, can still be accessed from their original menu options, such as Administration.

▼ Work Centers	
TrustSec	Device Administration
Overview	Overview
Authentication Policy	Identities
Authorization Policy	User Identity Groups
Components	Network Resources
Policy	Network Device Groups
SXP	Policy Conditions
Reports	Policy Results
Settings	Device Admin Policy Sets
	Reports
	Settings

RADIUS Livelog:

- o RADIUS Livelog displays the recent RADIUS authentications.
- o Monitor recent RADIUS authentications as they happen.
- o Also shows the live session entries corresponding to the events.
- o Can drill-down the desired session to view a detailed report to that session.
- o The Live Authentications page provides a tabular account of recent RADIUS authentications.

Show Live Sessions		Add or Remove Columns	Refresh	Reset Repeat Counts	Refresh		Never	Show	Latest 100 records	within	Last 24
Time	Status	Details	Repeat Count	Identity	Endpoint ID	Endpoint Profile	Authentication Policy	Authorization Policy	Authorization Profiles	Network Device	
2019-06-04 19:30:39.753	✖			02:55:55:55:55:55	02:55:55:55:55:53		Default >> MAB >> D...	Default >> Default	DenyAccess	Switch1	
2019-06-04 19:27:38.347	✔			02:55:55:55:55:55	02:55:55:55:55:56		Default >> MAB >> D...	Default >> test	test	Switch1	
2019-06-04 19:26:01.072	✔			02:55:55:55:55:55	02:55:55:55:55:55	Unknown	Default >> MAB >> D...	Default >> test	test	Switch1	
2019-06-04 19:15:14.629	✔			ali			Default >> Default >>...	Default >> Basic_Aut...	PermitAccess	Switch1	
2019-06-04 19:13:32.728	✖			abc			Default >> Default >>...			Switch1	
2019-06-04 19:01:09.512	✖				00:0C:29:55:68:E0					Switch1	
2019-06-04 18:15:11.664	✔			00:0C:29:55:68:E0	00:0C:29:55:68:E0	VMWare-Device	Default >> MAB >> D...	Default >> test	test	Switch1	
2019-06-04 18:06:35.462	✔			00:0C:29:55:68:E0	00:0C:29:55:68:E0	VMWare-Device	Default >> MAB >> D...	Default >> test	test	Switch1	
2019-06-04 17:57:58.876	✔			00:0C:29:55:68:E0	00:0C:29:55:68:E0	VMWare-Device	Default >> MAB >> D...	Default >> test	test	Switch1	
2019-06-04 17:49:23.311	✔			00:0C:29:55:68:E0	00:0C:29:55:68:E0	VMWare-Device	Default >> MAB >> D...	Default >> test	test	Switch1	
2019-06-04 17:40:47.477	✔			00:0C:29:55:68:E0	00:0C:29:55:68:E0	VMWare-Device	Default >> MAB >> D...	Default >> test	test	Switch1	

Options	Description
Time	Shows the time that the log was received by the monitoring and troubleshooting collection agent. This column is required and cannot be deselected.
Status	Shows if the authentication was successful or a failure. This column is required and cannot be deselected. Green is used to represent passed authentications. Red is used to represent failed authentications.
Details	Brings up a report when you click the magnifying glass icon, allowing you to drill down and view more detailed information on the selected authentication scenario. This column is required and cannot be deselected.
Repeat Count	Shows the number of times the authentication requests were repeated in last 24 hours.
Identity	Shows the username that is associated with the authentication.
Endpoint ID	Shows the unique identifier for an endpoint, usually a MAC or IP address.
Endpoint Profile	Shows the type of endpoint that is profiled, for example, profiled to be an iPhone, Android, MacBook, Xbox, and so on.
Authentication Policy	Shows the name of the policy selected for specific authentication.
Authorization Policy	Shows the name of the policy selected for specific authorization.
Authorization Profiles	Shows an authorization profile that was used for authentication.
IP Address	Shows the IP address of the endpoint device.
Network Device	Shows the IP address of the Network Access Device.
Device Port	Shows the port number at which the endpoint is connected.
Identity Group	Shows the identity group that is assigned to the user or endpoint, for which the log was generated.
Posture Status	Shows status of posture validation & details on authentication.
Server	Indicates the Policy Service from which the log was generated.
MDM Server Name	Shows the names of the MDM servers.
Event	Shows the event status.
Failure Reason	Shows a detailed reason for failure, if the authentication failed.
Auth Method	Shows authentication method that is used by the RADIUS.
Authentication Protocol	Shows the authentication protocol used, such as Protected Extensible Authentication Protocol (PEAP), EPEAP
Security Group	Shows the group that is identified by the authentication log.
Session ID	Shows the session ID.

Reports:

- o Reports is a place to generate reports for ISE functions and sessions.
- o Cisco ISE reports are preconfigured and grouped into logical categories.
- o Reports includes information related to authentication & session traffic.
- o Reports also includes device admin, configuration & administration & troubleshooting.
- o The Adaptive Network Control Audit report is based on the RADIUS accounting.
- o It displays historical reporting of all network sessions for each endpoint.
- o The Administrator Logins report provides an audit trail of all administrator logins.
- o The Change Configuration Audit report provides details about configuration changes.
- o This report will allow ISE administrators to identify any issues with TACACS Accounting.
- o AAA Diagnostics report provides details of all network sessions between Cisco ISE and users.

RADIUS LiveLog TACACS LiveLog **Reports** Troubleshoot Adaptive Network Control

Report Selector

Favorites

ISE Reports

- ▶ Audit
10 reports
- ▶ Device Administration
4 reports
- ▶ Diagnostics
10 reports
- ▶ Endpoints and Users
15 reports
- ▶ Guest
5 reports
- ▶ TrustSec
4 reports

Welcome to ISE Reports

- Audit - Reports focused on tracking system change activity.
- Device Administration - Reports focused on TACACS+ Protocol and Device Ad
- Diagnostics - Reports focused on monitoring system health and for troublesh
- Endpoints and Users - Reports focused on endpoints and users connecting to
- Guest - Reports related to guest and sponsor access, and My Devices portal.
- TrustSec - Reports related to TrustSec software-defined segmentation.

Troubleshooting Tools:

- o Diagnostic tools help you diagnose and troubleshoot problems on a Cisco ISE
- o Diagnostic tools provide a detailed instruction on how to resolve problems.
- o RADIUS Authentication Troubleshooting Settings allow to identify problems.
- o RADIUS Authentication Troubleshooting Settings resolve authentication problems.
- o Use to monitor contents of packets on a network interface & troubleshoot problems.

RADIUS LiveLog TACACS LiveLog Reports **Troubleshoot** Adaptive Network Control

Diagnostic Tools

- ▼ General Tools
- **RADIUS Authentication Troubleshooting**
- Execute Network Device Command
- Evaluate Configuration Validator
- Posture Troubleshooting
- EndPoint Debug
- TCP Dump
- ▶ TrustSec Tools

Search and Select a RADIUS Authentication for troubleshooting.

Username: **Select** [Clear](#)

Endpoint ID: **Select** [Clear](#)

Audit Session ID: [Clear](#)

NAS IP: **Select** [Clear](#)

NAS Port: **Select** [Clear](#)

Authentication Status: **Pass Or Fail** [Clear](#)

Failure Reason: **Select** [Clear](#)

Authentication:

- o Authentication of Policy provides interface to configure authentication policies.
- o Authentication policy defines the rules by which ISE identifies the user.
- o Authentication allows you to configure simple and rule-based authentication policies.

Authentication Authorization Profiling Posture Client Provisioning Policy Elements

Authentication Policy

Define the Authentication Policy by selecting the protocols that ISE should use to communicate with the network devices, and the identity source for Policy Export go to [Administration > System > Backup & Restore > Policy Export Page](#)

Policy Type ☐ Simple ☒ Rule-Based

☒	MAB	: If Wired_MAB OR
	Wireless_MAB Allow Protocols : Default Network Access and	
☒	Default	: use Internal Endpoints
☒	Dot1X	: If Wired_802.1X OR
	Wireless_802.1X Allow Protocols : Default Network Access and	
☒	Default	: use All_User_ID_Stores
☒	Default Rule (If no match) : Allow Protocols : Default Network Access and use : All_User_ID_Stores	

Authentication Authorization Profiling Posture Client Provisioning Policy Elements

Authentication Policy

Define the Authentication Policy by selecting the protocols that ISE should use to communicate with the network devices, For Policy Export go to [Administration > System > Backup & Restore > Policy Export Page](#)

Policy Type ☒ Simple ☐ Rule-Based

Network Access Service Allowed Protocol : Default Network

Identity Source All_User_ID_Stores

Options

If authentication failed Reject

If user not found Reject

If process failed Drop

Note: For authentications using PEAP, LEAP, EAP-FAST, EAP-TLS or RADIUS MSCHAP it is not possible to continue processing when authentication fails or user is not found. If continue option is selected in these cases, requests will be rejected.

Save **Reset**

Authorization:

- o Authorization is the process of determining what an endpoint device will have access.
- o The Authorization page display, create, duplicate, modify, or delete authorization policies.

Authentication **Authorization** Profiling Posture Client Provisioning Policy Elements

Authorization Policy

Define the Authorization Policy by configuring rules based on identity groups and/or other conditions. Drag and drop rules to change the order.
For Policy Export go to [Administration > System > Backup & Restore > Policy Export Page](#)

First Matched Rule Applies

► Exceptions (0)

Standard

Status	Rule Name	Conditions (identity groups and other conditions)	Permissions
☒	Wireless Black List Default	if Blacklist AND Wireless_Access	then Blackhole_Wireless_Access
☒	Profiled Cisco IP Phones	if Cisco-IP-Phone	then Cisco_IP_Phones
☒	Profiled Non Cisco IP Phones	if Non_Cisco_Profiled_Phones	then Non_Cisco_IP_Phones
☐	Compliant_Devices_Access	if (Network_Access_Authentication_Passed AND Compliant_Devices)	then PermitAccess
☐	Employee_EAP-TLS	if (Wireless_802.1X AND BYOD_is_Registered AND EAP-TLS AND MAC_in_SAN)	then PermitAccess AND BYOD
☐	Employee_Onboarding	if (Wireless_802.1X AND EAP-MSCHAPv2)	then NSP_Onboard AND BYOD
☐	Wi-Fi_Guest_Access	if (GuestType_Daily (default) OR GuestType_Weekly (default) OR GuestType_Contractor (default) AND (Guest_Flow AND Wireless_MAB)	then PermitAccess AND Guests

Profiling:

- o Profiling Policies page displays endpoint-profiling policies with their names.
- o Profiling Policies page displays endpoint type, description and the status.
- o Cisco ISE includes predefined default profiling policies when Cisco ISE is deployed.

Authentication Authorization **Profiling** Posture Client Provisioning Policy Elements

Profiling

Profiling Policies

Logical Profiles

Profiling Policy Name	Policy Enabled	System Type
☐ 2Wire-Device	Enabled	Cisco Provided
☐ 3Com-Device	Enabled	Cisco Provided
☐ Aastra-Device	Enabled	Cisco Provided
☐ Aastra-IP-Phone	Enabled	Cisco Provided
☐ Aerohive-Access-Point	Enabled	Cisco Provided
☐ Aerohive-Device	Enabled	Cisco Provided
☐ American-Power-Conversion-Device	Enabled	Cisco Provided

Posture:

- o ISE is mainly use for posturing & policy compliance checking of hosts.
- o Posturing check health of endpoints like antivirus, latest service pack & OS updates.
- o Detailed information about the endpoint's software and hardware configuration.

Authentication	Authorization	Profiling	Posture	Client Provisioning	Policy Elements
----------------	---------------	-----------	----------------	---------------------	-----------------

Posture Policy

Define the Posture Policy by configuring rules based on operating system and/or other conditions.

Status	Rule Name	Identity Groups	Operating Systems	Other Conditions
☒	Enter policy name	If Any	and Select ...	(Optional) Dictiona...