


Storm Control:

- o Prevent large number of broadcast, Unicast & multicast packets are receive on port.
- o Storm Control can limit broadcast, unicast and multicast traffic on per interface basic.
- o By default, in every Cisco Switch storm control feature is disable and not working.
- o In Storm Control, rising and falling thresholds use to block and then restore traffic.
- o Storm Control can be turn off or send trap message to server if limit exceed on port.
- o Storm Control prevent from Denial-of-Service (DOS) and Distributed (DOS) attack.
- o Storm control can be configured based on bandwidth percentage & packets per second
- o Storm Control can be also configured in Cisco Switches based on bits per second (bps).
- o Storm Control can send Syslog Messages, SNMP traps, and shutdown the Switch port.

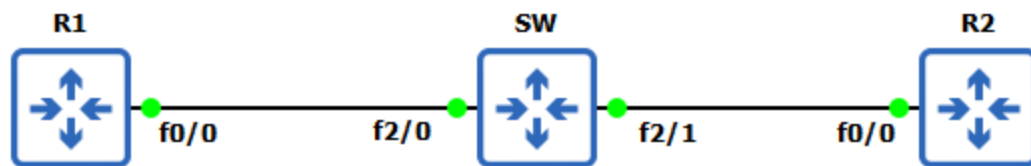

Basic Devices Configuration

```
R1(config)# interface fastEthernet 0/0
R1(config-if)#ip address 192.168.1.1 255.255.255.0
R1(config-if)#no shutdown
```

```
R2(config)# interface fastEthernet 0/0
R2(config-if)#ip address 192.168.1.2 255.255.255.0
R2(config-if)#no shutdown
```

```
SW(config)#interface FastEthernet 2/0
SW(config-if)#switchport mode access
SW(config-if)#switchport access vlan 1
```


```
SW(config)#interface FastEthernet 2/1
SW(config-if)#switchport mode access
SW(config-if)#switchport access vlan 1
```

```
SW(config)#interface vlan 1
SW(config-if)#ip address 192.168.1.10 255.255.255.0
SW(config-if)#no shutdown
```

Storm Control Configuration

```
SW(config)#interface FastEthernet2/0
SW(config-if)#storm-control broadcast level 40
SW(config-if)#storm-control multicast level bps 10m
SW(config-if)#storm-control broadcast level 80 60
SW(config-if)#storm-control unicast level pps 30m 20m
SW(config-if)#storm-control action trap
SW# show storm-control broadcast/ multicast
```

Descriptions	Commands
Move in interface mode Whenever broadcast traffic exceeds 40% of the interface bandwidth traffic will drop	SW(config)#interface FastEthernet0/1 SW(config-if)#storm-control broadcast level 40
Once multicast exceeds 10Mbps, traffic will be dropped	SW(config-if)#storm-control multicast level bps 10m
The rising threshold level 80 and the falling threshold is 60 percent to permit traffic	SW(config-if)#storm-control broadcast level 80 60
The rising threshold is 30Mbps & The falling threshold is 20Mbps to permit traffic	SW(config-if)#storm-control unicast level pps 30m 20m
Set the storm control action	SW(config-if)#storm-control action trap
Verify storm control	SW# show storm-control
Verify storm control broadcast	SW# show storm-control broadcast/ multicast

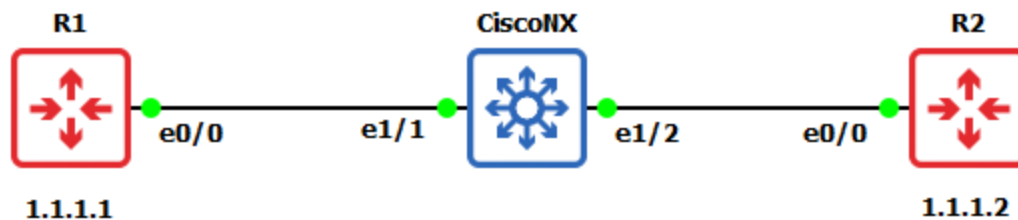

R1 Basic Configuration
R1(config)#interface ethernet 0/0 R1(config-if)#ip address 1.1.1.1 255.0.0.0 R1(config-if)#no shutdown
R2 Basic Configuration
R2(config)#interface ethernet 0/0 R2(config-if)#ip address 1.1.1.2 255.0.0.0 R2(config-if)#no shutdown
Cisco NX Switch Configuration
CiscoNX(config)# interface ethernet 1/1 CiscoNX(config-if)# storm-control unicast level 0.01 CiscoNX(config-if)# storm-control multicast level 0.01 CiscoNX(config-if)# storm-control broadcast level 0.01
CiscoNX(config)# interface ethernet 1/2 CiscoNX(config-if)# storm-control unicast level 0.01 CiscoNX(config-if)# storm-control multicast level 0.01 CiscoNX(config-if)# storm-control broadcast level 0.01
CiscoNX# show interface ethernet 1/1 counters storm-control