



Utilisation de l'utilitaire IDA.EXE pour modifier la base de données

Objet	: IDA.EXE est un utilitaire qui permet d'ouvrir la base de données de DIALOGUE NT et de modifier les enregistrements, par exemple lors d'un passage de la version 6.4 à 6.7.
Pré requis	: L'opérateur a une bonne base informatique, il est rigoureux et a conscience que toute modification de la DB influe directement sur la sécurité. Une sauvegarde préalable de la DB est obligatoire.


Changement de l'état d'une zone dans DIALOGUE NT dans le cas où il ne correspond pas à l'état dans la centrale.

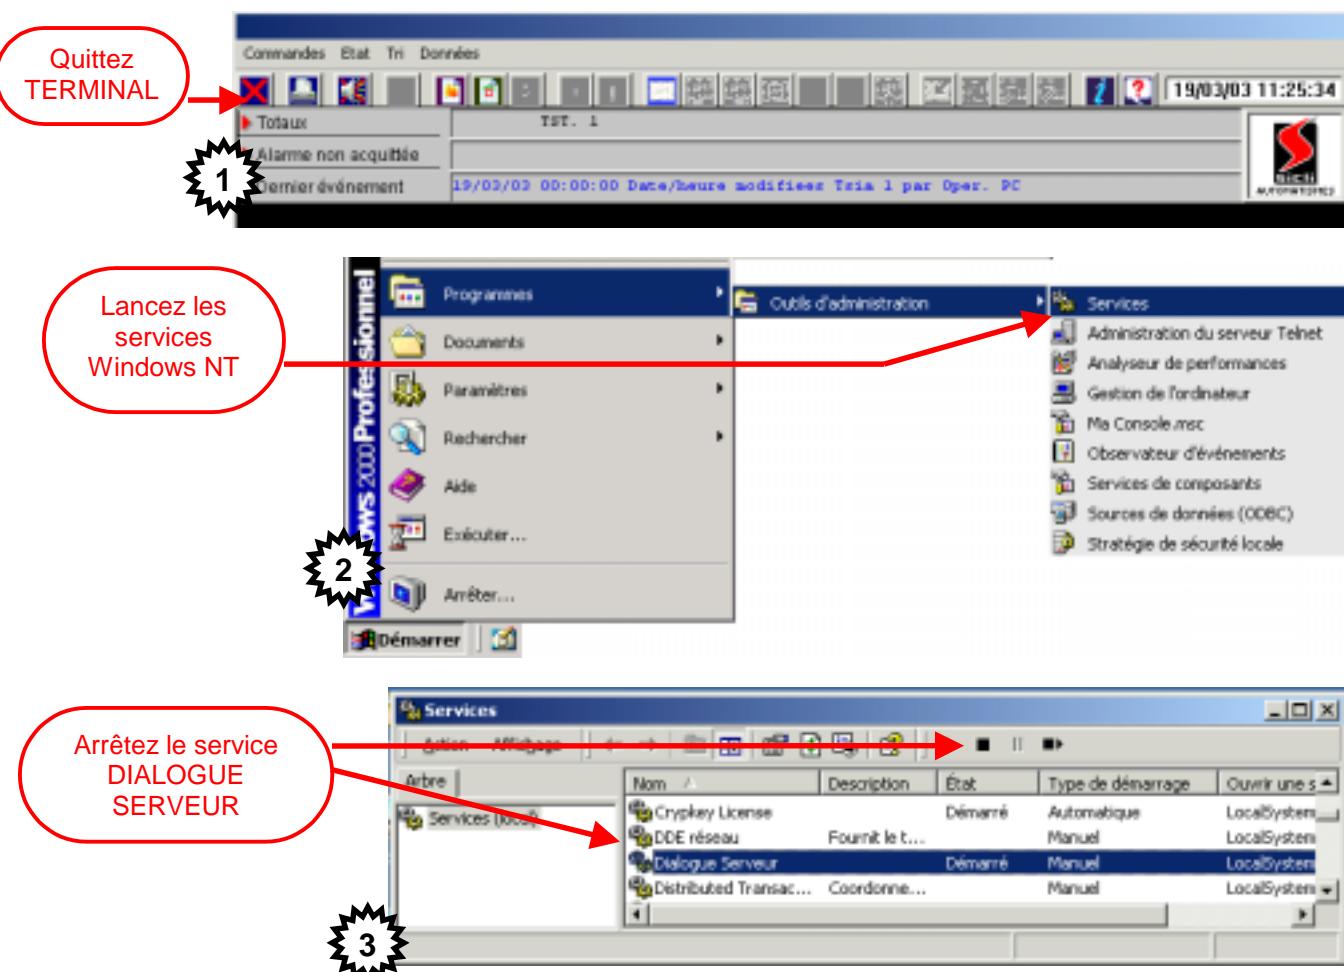


Lancez IDA.EXE

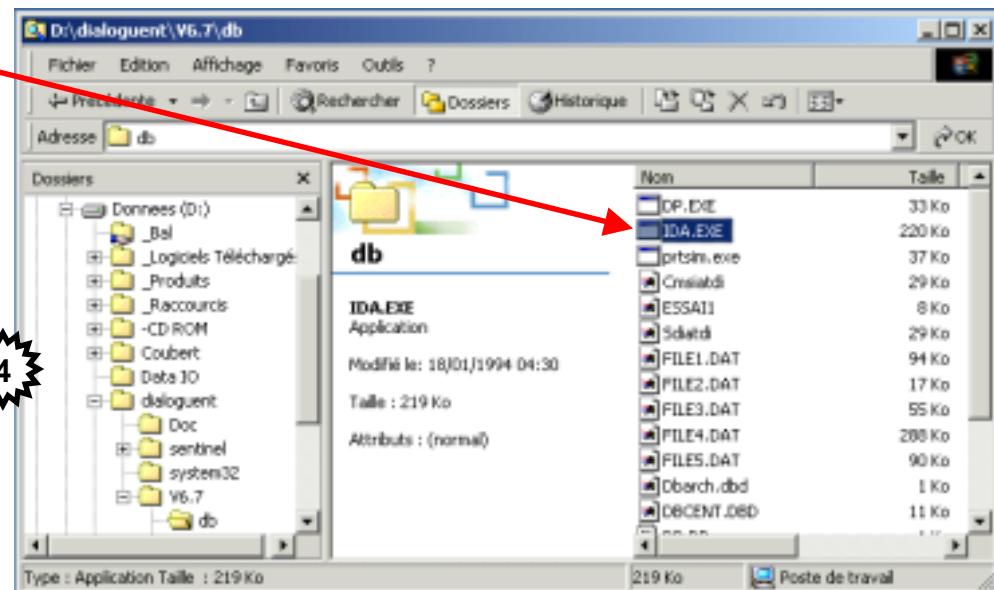

Validez Open puis  
One\_user

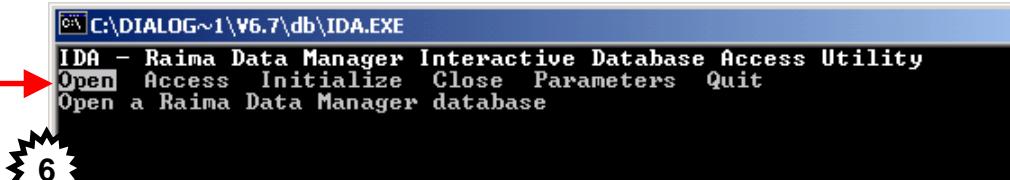

Sélectionnez  
DBCENT

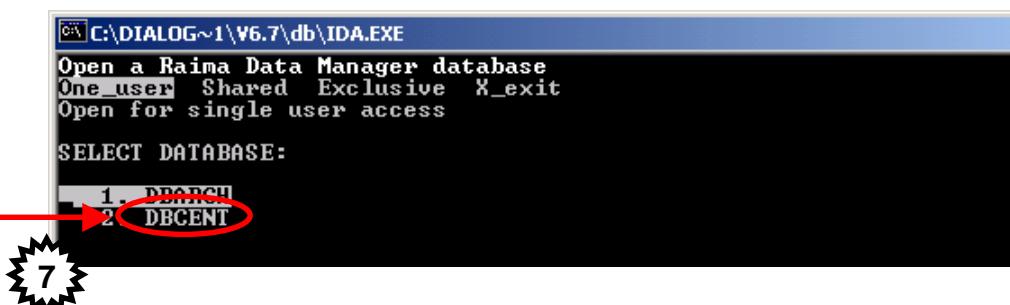

Validez Acces  
puis Record,  
puis Rescan,  
puis Scan

8

- Sélectionnez 13. Zone puis Select.

D:\DIALOG~1\V6.7\db\IDA.EXE

Scan and view records based on database address

Scan First Last Next Previous X\_exit

Scan and view records on database address

SELECT RECORD TYPE:

0. SYSTEME  
1. PASSWORD  
2. LOGIN  
3. TERMINAL  
4. TYPE\_ACQUIT\_CONSNT  
5. CONSIGNE  
6. COMMENTAIRE  
7. TYPE\_TAB  
8. GENRE  
9. GAMME\_TAB  
10. TABLEAU  
11. FSM  
12. MOT\_CLE\_ZON  
13. ZONE  
14. MOT\_CLE\_ADR

Sélectionnez 13  
puis select

9

Sélectionnez select  
puis sélectionnez  
une ligne à modifier  
et validez

10

Scan and View Records  
Next First Select X\_exit  
Display next page of records

RECORD: ZONE

RECORD CONTENTS:

1.	<0,0,0,0,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
2.	<0,0,0,1,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
3.	<0,0,0,2,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
4.	<0,0,0,3,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
5.	<0,0,0,4,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
6.	<0,0,0,0,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\001"
7.	<0,0,0,2,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"t"
8.	<0,0,0,3,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\001"
9.	<0,0,0,1,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\001"
10.	<0,0,0,5,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
11.	<0,0,0,6,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
12.	<0,0,0,7,0,0,<0,0>	"I"	"D"	"\001"	"\001"	"\001"	"\001"
13.	<0,0,0,4,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\002"
14.	<0,0,0,5,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\002"
15.	<0,0,0,6,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\002"
16.	<0,0,0,7,0,0,<0,0>	"S"	"S"	"\002"	"\001"	"\001"	"\002"

D:\DIALOG~1\V6.7\db\IDA.EXE

Scan and view records based on database address  
Scan First Last Next Previous X\_exit  
Scan and view records on database address

RECORD: ZONE SIZE: 427 TOTAL FIELDS: 31

CAC_ZON	>0<
HSU_ZON	>0<
TST_ZON	>1<
NUM_ZON_ZON	>1<
X_ZON	>0<
Y_ZON	>0<
ETAT_ZON	>128<
ACTIU_ZON	>0,0<
NOM_TYPE_ZON	>I<
NOM_COURT_ZON	>I<
NUM_TAB_ZON	>>001<
ID_ETAT_ZON	>>0<
TYPE_ZON	>>0<
COD_ZON	>0<

11

Validez X-exit

D:\DIALOG~1\V6.7\db\IDA.EXE

Record Manipulation Functions  
Keypress Get Enter Modify Delete Recscan X\_exit  
Scan and view record based on key

RECORD: ZONE SIZE: 427 TOTAL FIELDS: 31

'AC_ZON	>0<
'SU_ZON	>0<
'ST_ZON	>0<

12

Validez Modify

Validez Edit

D:\DIALOG~1\V6.7\db\IDA.EXE

Display/Edit Record  
Edit Init Next Prev Write Store\_key Delete\_key Owner Connect X\_exit  
Edit record

RECORD: ZONE SIZE: 427 TOTAL FIELDS: 31 PAGE 1 OF 3

13

D:\DIALOG~1\V6.7\db\IDA.EXE

Display/Edit Record  
Edit Init Next Prev Write Store\_key Delete\_key Owner Connect X\_exit  
Edit record

Mode: COMMAND

FIELD: ETAT\_ZON EDIT:>128< TYPE: unsigned short SIZE: 2

CAC_ZON	>0<
HSU_ZON	>0<
TST_ZON	>1<
NUM_ZON_ZON	>1<
X_ZON	>0<
Y_ZON	>0<
ETAT_ZON	>128<
ACTIU_ZON	>0,0<
NOM_TYPE_ZON	>I<
NOM_COURT_ZON	>I<
NUM_TAB_ZON	>>001<
ID_ETAT_ZON	>>0<
TYPE_ZON	>>0<
COD_ZON	>0<

14

Sélectionnez la ligne  
ETAT\_ZON >128<

FIELD: ETAT\_ZON  
EDIT:><

Tapez la touche Suppr 3 fois de suite

14'

