

TIPs on Telnet Configuration

H3C switch/router work as telnet server

Telnet tool for Windows work as a client

Both the server and client are connected to the network

Configure telnet Server without authentication

Operation description	Commands	TIPs
Enter the system view	system-view	
Enable Telnet services for devices	telnet server enable	MUST
Enter one or more VTY user interface views	user-interface vty <i>first-number</i> [<i>last-number</i>] e.g. user-interface vty 0 4	
Set the login authentication method for VTY users to not authenticate	authentication-mode none	MUST
Configure the command levels accessible to users logging into the system from the current user interface	user privilege level <i>level</i> e.g. user privilege level 1	MUST By default, the command level that can be accessed by logging into the system through the VTY user interface is 0

2.3.3 配置通过Telnet Client登录设备时无需认证（None）

表2-10 认证方式为 None 的配置

操作	命令	说明
进入系统视图	system-view	-
使能设备的Telnet服务	telnet server enable	必选
进入一个或多个VTY用户界面视图	user-interface vty <i>first-number</i> [<i>last-number</i>]	-
设置VTY登录用户的认证方式为不认证	authentication-mode none	必选
配置从当前用户界面登录系统的用户所能访问的命令级别	user privilege level <i>level</i>	必选 缺省情况下，通过VTY用户界面登录系统所能访问的命令级别是0
配置VTY用户界面的公共属性	-	可选 详细配置请参见 2.3.6 配置VTY用户界面的公共属性（可选）

Configure telnet Server with password


Operation description	commands	TIPs
Enter the system view	system-view	
Enable Telnet services for devices	telnet server enable	MUST
Enter one or more VTY user interface views	user-interface vty <i>first-number</i> [<i>last-number</i>] e.g. user-interface vty 0 4	
Set the login authentication method for VTY users to not authenticate	authentication-mode password	MUST
Set the password for local authentication	set authentication password {cipher simple } <i>password</i> e.g. set authentication password simple 123	MUST By default, No password set for local authentication
Configure the command levels accessible to users logging into the system from the current user interface	user privilege level <i>level</i> e.g. user privilege level 2	MUST By default, the command level that can be accessed by logging into the system through the VTY user interface is 0

2.3.4 配置通过Telnet Client登录设备时采用密码认证（Password）

表2-11 认证方式为 Password 的配置


操作	命令	说明
进入系统视图	system-view	-
使能设备的Telnet服务	telnet server enable	必选
进入一个或多个VTY用户界面视图	user-interface vty <i>first-number</i> [<i>last-number</i>]	-
设置登录用户的认证方式为本地密码认证	authentication-mode password	必选
设置本地验证的密码	set authentication password { cipher simple } <i>password</i>	必选 缺省情况下，没有设置本地认证的密码
配置从当前用户界面登录系统的用户所能访问的命令级别	user privilege level <i>level</i>	必选 缺省情况下，通过VTY用户界面登录系统所能访问的命令级别是0
配置VTY用户界面的公共属性	-	可选 详细配置请参见 2.3.6 配置VTY用户界面的公共属性（可选）

Enable Telnet on Windows(p33 of lab4)

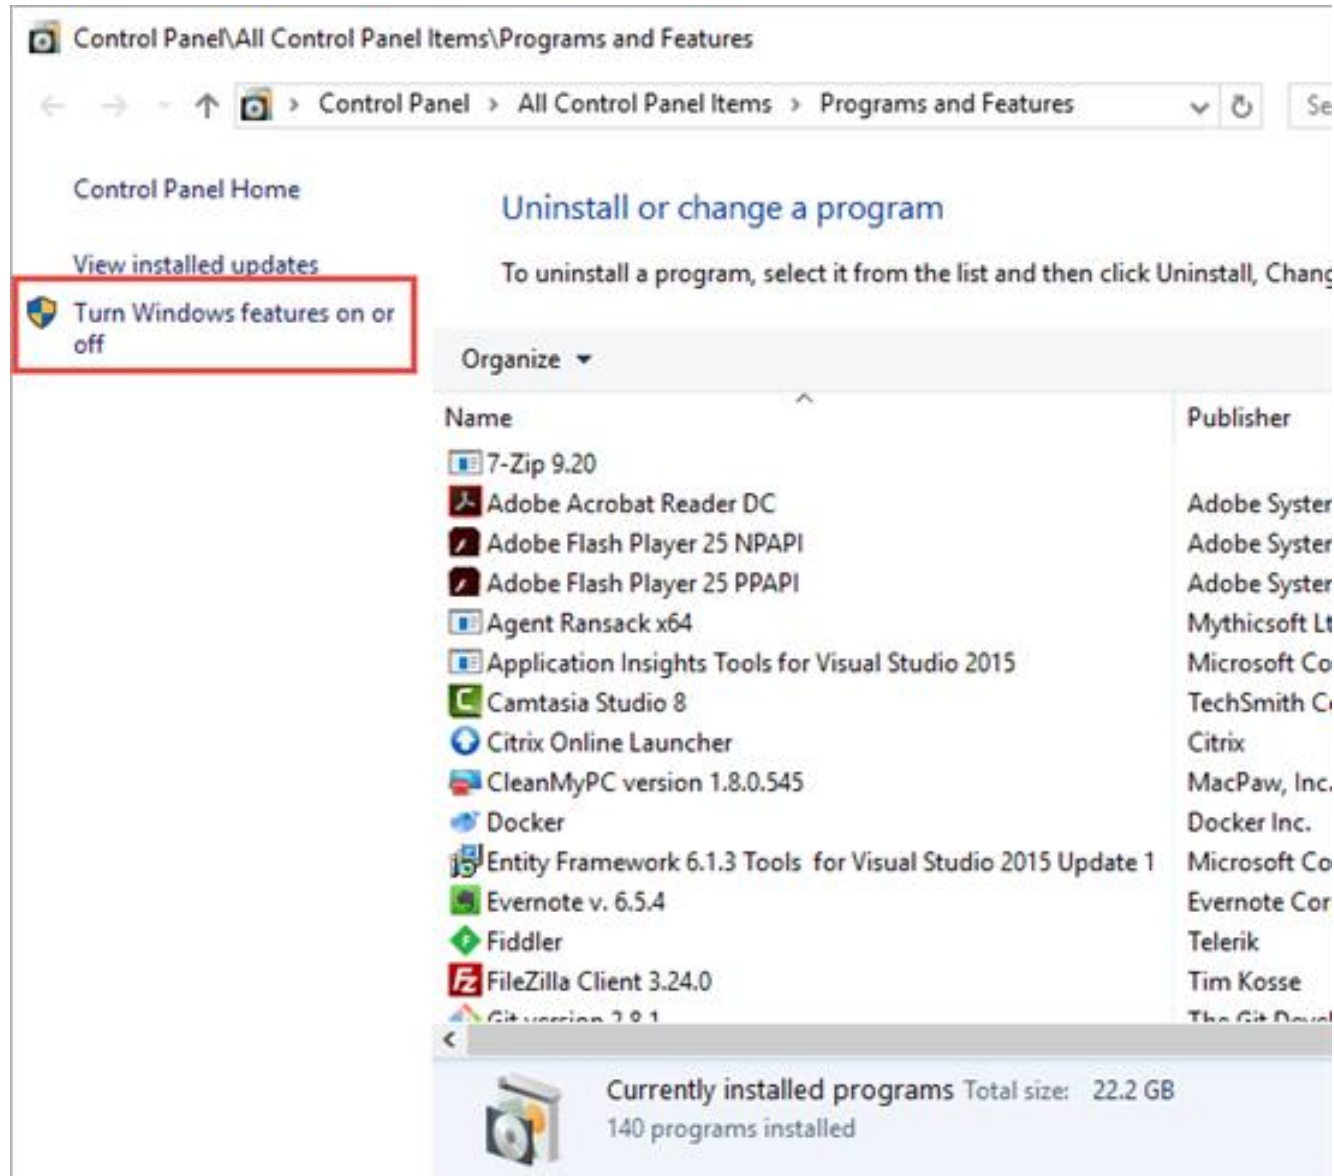



Reference: <https://social.technet.microsoft.com/wiki/contents/articles/38433.windows-10-enabling-telnet-client.aspx>

Enable Telnet on Windows(p34 of lab4)

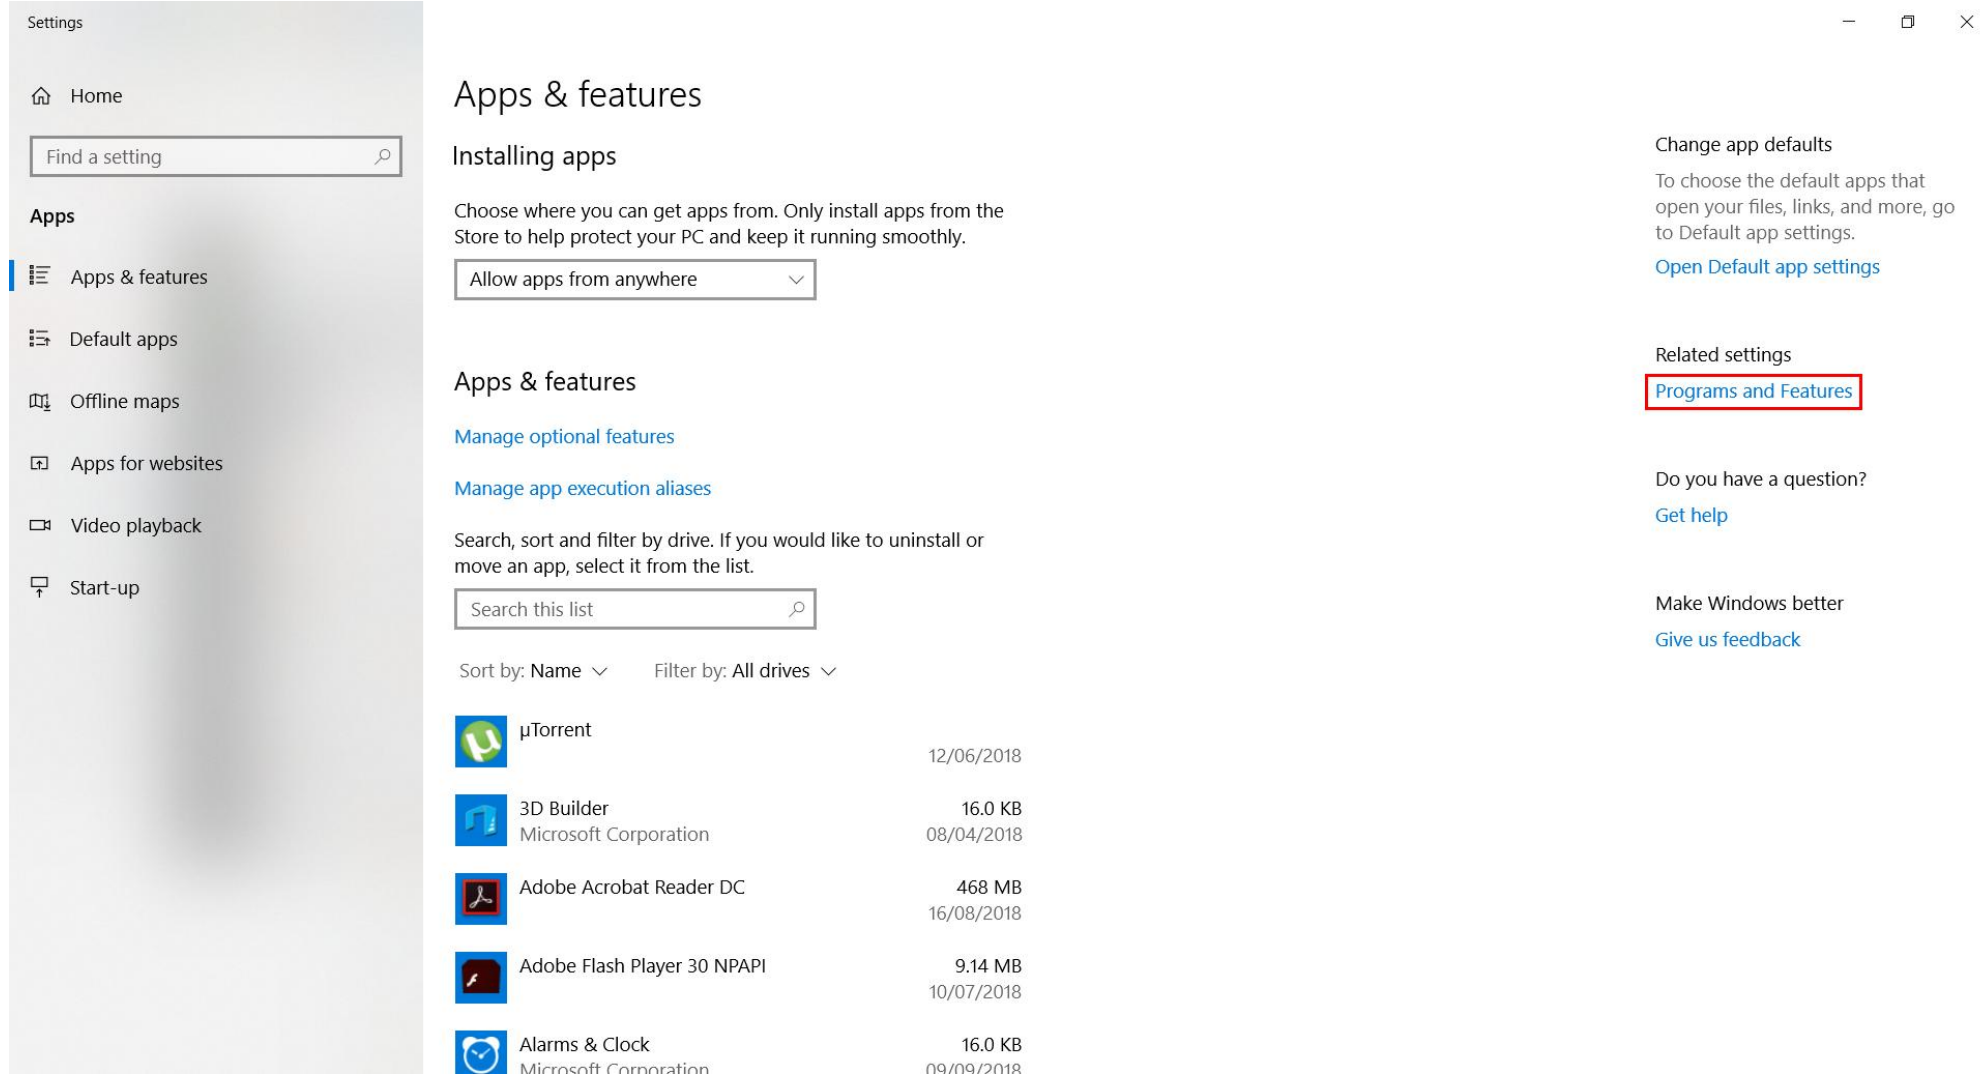

Reference: <https://social.technet.microsoft.com/wiki/contents/articles/38433.windows-10-enabling-telnet-client.aspx>

Enable Telnet on Windows(p35 of lab4)

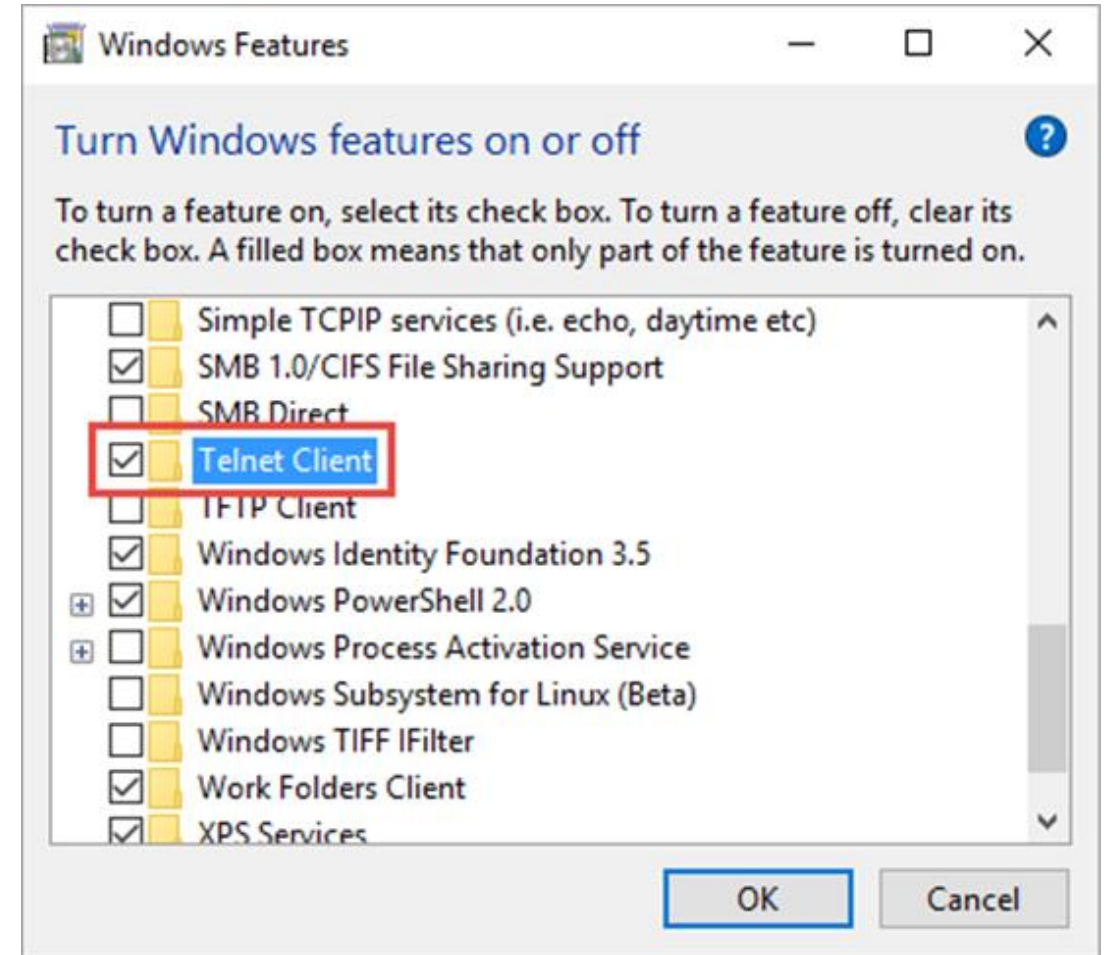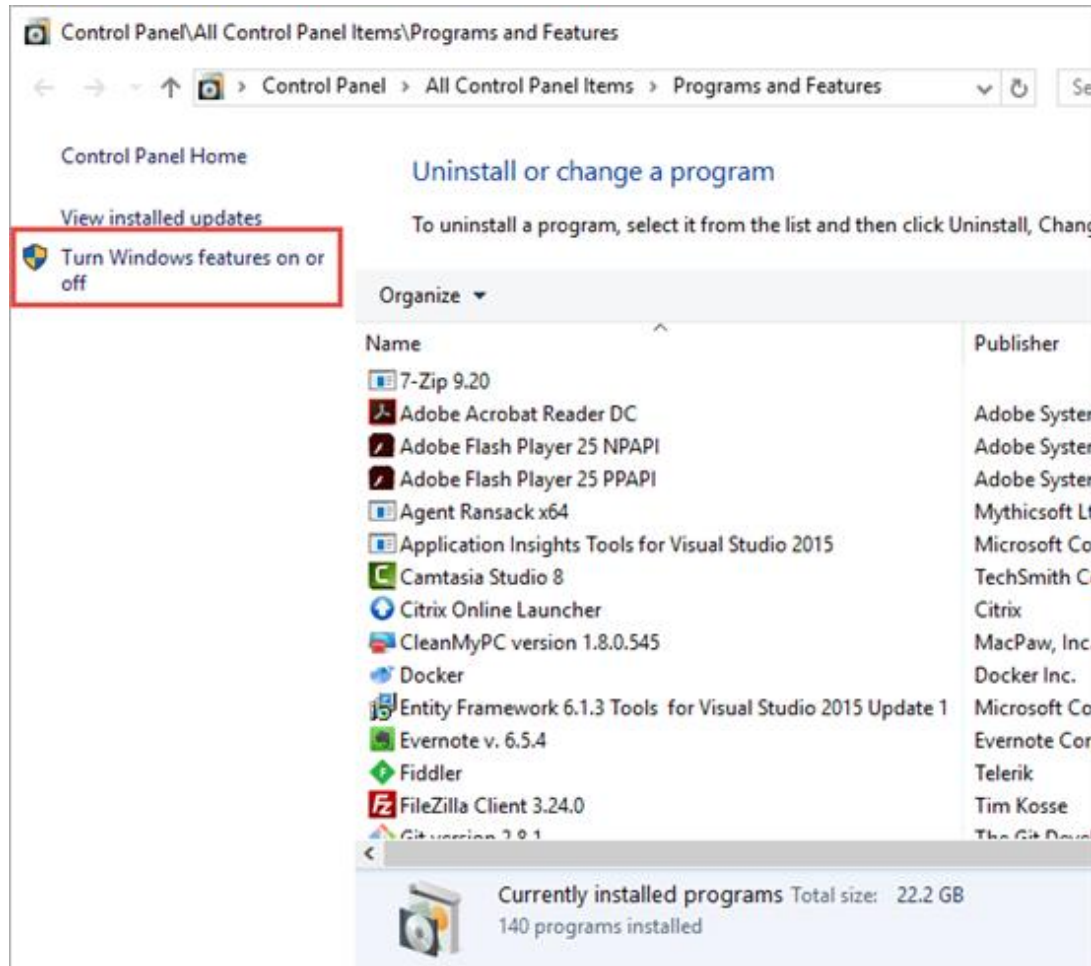

Reference: <https://social.technet.microsoft.com/wiki/contents/articles/38433.windows-10-enabling-telnet-client.aspx>