LY AN ROASTER LAB

LyAn Bridge Geek


Quick Start Guide · Bridge with a screen for the Skywalker V1 roaster

Guide edition: English · 5 Nov 2026 · For firmware v1.7.1

What it does

LyAn Bridge Geek is a small stick with a **color screen**. It sits between your **Skywalker V1** roaster and your phone or computer, so you can watch the bean temperature and control **Heater, Air, Drum, Cool and PID** from software, and see the same numbers on the screen.

You pick **one** connection at a time with a single button. The screen shows which one is active.

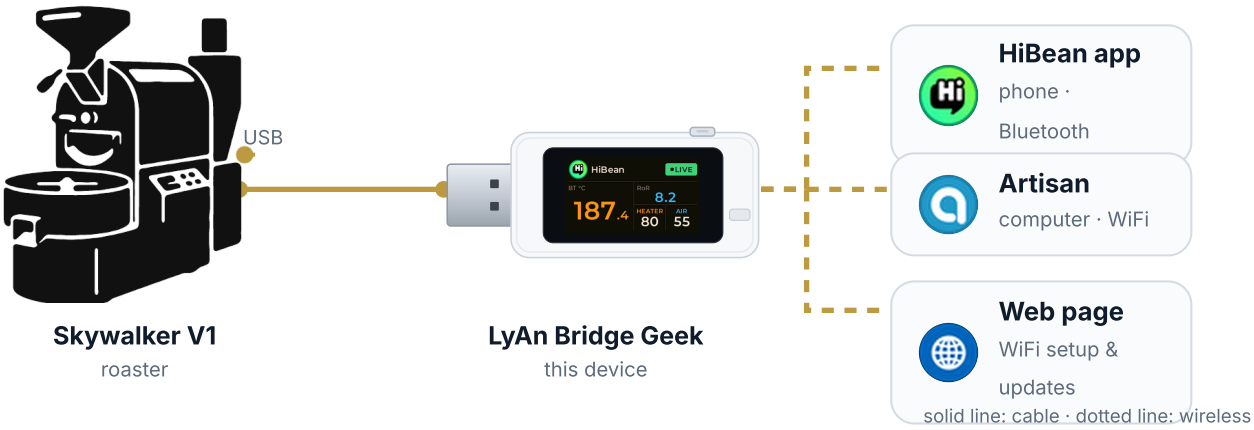

Quick start

1. **Plug** the Bridge Geek's USB connector into the roaster. The screen shows the HiBean logo and it **blinks**: it is waiting for the HiBean app.
2. **Choose your connection** by pressing the BOOT button briefly: once for **Artisan**, twice for the **Web portal**, three times to go back to **HiBean**.
3. **Roast.** When your software connects, the logo stops blinking and stays on.


Why only one at a time? Bluetooth and WiFi share one antenna in this small chip. Using one mode at a time keeps the connection stable.

Screen upside down? The stick can be plugged in either way up. **Hold the BOOT button for 2 seconds** and the screen turns 180°. The device remembers it, even after the power is switched off (see page 3).

No roaster plugged in? About 10 seconds after power-up the screen shows a yellow SIM tag: the device pretends to be a roaster, so you can practice with HiBean or Artisan (see page 3).

One button, three modes

Press the BOOT button on the stick to move to the next mode. The device always starts in **Mode 1**. Each change also **switches the heater and PID off** (air, drum and cooling stay).

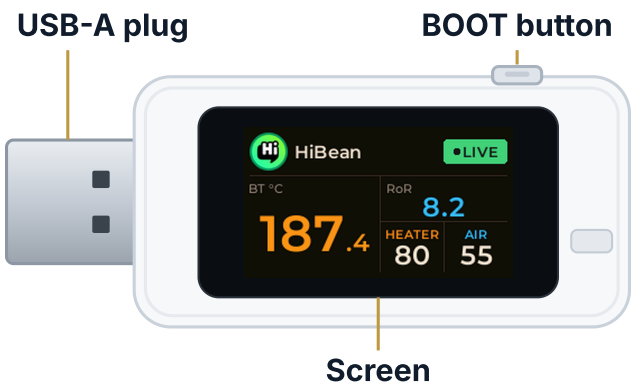


Simplified drawing.

USB-A plug
Plug it into the roaster.

BOOT button
The small button on the top edge, near the right end. A short press goes to the next mode; holding it for 2 seconds turns the screen upside down (page 3). It also confirms a factory reset (page 5).

Screen
The logo and name on the screen tell you which mode is active.

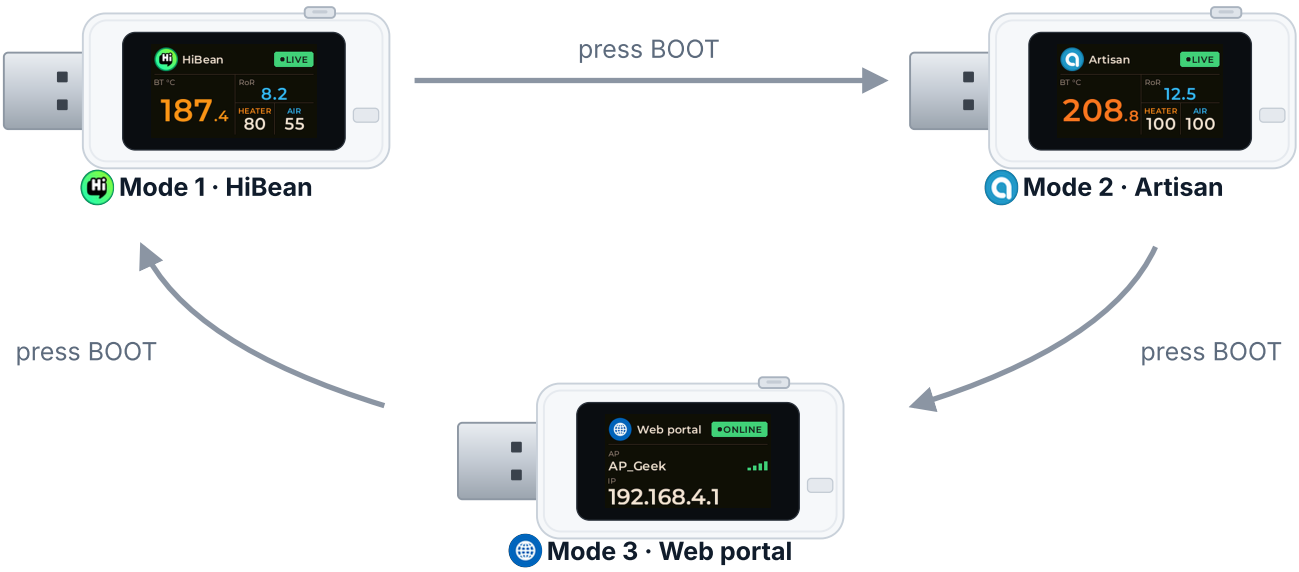


What the screen means

There is no colored light: the logo and name at the top of the screen show the mode, and its blinking shows the state.

MODE	LOGO	MEANING
HiBean	blinking slowly steady	**Mode 1 · HiBean.** Blinking: waiting for the HiBean app. Steady: HiBean is connected.
Artisan	blinking slowly steady	**Mode 2 · Artisan.** Blinking: WiFi is on, waiting for Artisan. Steady: Artisan is connected.
Web portal	blinking slowly steady	**Mode 3 · Web page.** Blinking: waiting for a connection. Steady: connected.
Red screen	flashing red	**Warning, any mode.** OVERHEAT or NO SIGNAL. See Safety on page 6.

Reading the screen

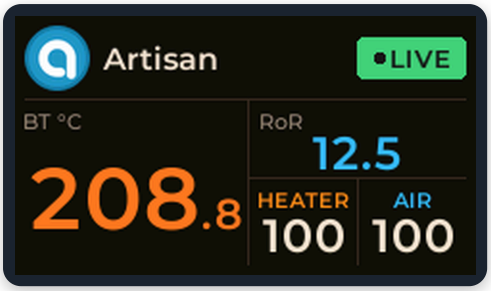

HiBean and Artisan pages look the same
real roaster connected

BT °C
Bean temperature, big number. The color goes from blue (cool) to red (hot).

RoR
Rate of rise: how fast the bean temperature is climbing, in °C per minute.

HEATER · AIR
Heater and air power in %, the same values as in HiBean or Artisan.


"---"
No temperature signal yet.

TAG	MEANING
● LIVE	Reading the real roaster.
SIM	Simulation: practice mode, no real roaster (below).
WAIT	No temperature signal yet.
● ONLINE	Web portal page: the device is on a WiFi network (yours, or its own).
PID	PID is on (next to LIVE or SIM).
OTA	A firmware update is being installed (blinks fast). Do not switch off the power.
RESET?	Waiting for you to confirm a factory reset with BOOT (blinks white, page 5).


Practice with the simulation (SIM)

If no roaster temperature arrives within about 10 seconds of power-up, the yellow SIM tag appears and the device acts as a pretend Skywalker V1: HiBean and Artisan see simulated temperatures that react to Heater, Air and PID.

- When the **real roaster** signal appears, SIM stops at once and Heater, PID, Air and Cool go to 0. Nothing simulated is ever sent to a real roaster. If a real signal is **lost** later, SIM does not start: you get the red NO SIGNAL warning (page 6).
- In Artisan press **CHARGE** once the simulated drum is above about 120 °C: the temperature drops and climbs again. SIM restarts from the rule above after a power-up.

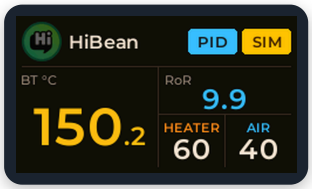

SIM + PID
practice mode

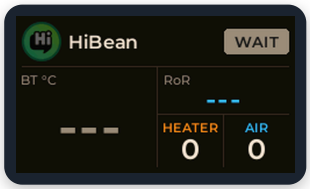


WAIT
no temperature signal yet

Turn the screen upside down

The stick can be plugged in either way up. **Hold the** BOOT **button for 2 seconds**: when the 2 seconds are over, the screen turns 180° (you can let go). Do it again to turn it back.

- A **short press** (under 2 seconds) switches the mode. Holding does not.
- The direction is **remembered**, also after power-off. While a factory reset waits for confirmation, BOOT only confirms it.

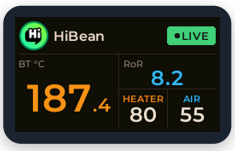

Normal



Turned 180°

MODE 1 Roast with HiBean (phone)

1. Power on. The screen shows **HiBean** with a blinking logo. (If it shows another name, press BOOT until it says HiBean.)
2. Open the HiBean app on your phone and search for devices over Bluetooth.
3. Choose **LyAn Roaster Geek**. The name shows the firmware version after it.
4. The logo stops blinking. You can now control Heater, Air, Drum, Cool and PID from HiBean.
   Works with HiBean model V1 and V2.

MODE 2 Roast with Artisan (computer)

First time only: load the settings file

1. Switch to **Mode 3** (Web portal) and open the web page (page 5). Tap **Config Artisan**, then **Download Artisan settings file**.
2. In Artisan choose **Help → Load Settings** and pick the file you downloaded.


Before loading, use **Help → Save Settings** to keep your old Artisan setup: the file replaces it. Download the file again if the device address changes (for example, you move to a different WiFi), or after a firmware update that says so.

Every roast

1. Press **BOOT** once from Mode 1. The screen shows **Artisan** with a blinking logo. (Bluetooth turns off.)
2. Put your computer on the **same WiFi network** as the device, or on the device's own WiFi **AP_Geek** if no saved network is available.
3. In Artisan press **ON**. The logo stops blinking and the bean temperature (BT) starts to run.
4. Use the row of control buttons that came with the file. **No START button is needed.**

HEATER −	HEATER +	AIR −	AIR +	DRUM ON
DRUM OFF	COOL ON	COOL OFF	PID ON	PID OFF

Each Heater or Air press changes the value by 5%. Artisan's own event buttons (DRY END, FC START, SC START, DROP) only mark the chart; they do not control the device. CHARGE marks the chart too, and in practice mode (SIM) it also drops the simulated temperature, like loading beans.

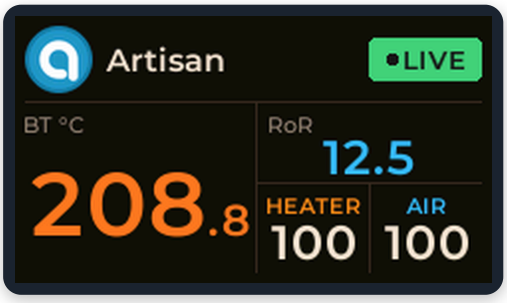


Artisan connected
steady logo, LIVE tag


MODE 3 Web page: WiFi setup and updates

1. Press **BOOT** until the screen says **Web portal** (twice from Mode 1). Changing mode switches the heater and PID off, so the page can open.
2. Open the page on your phone or computer:
   - If the device joined your WiFi: `http://lyangeek.local` (the screen also shows the IP address)
   - Otherwise join the device WiFi `AP_Geek` password: then open `http://192.168.4.1`
3. Tap **Setup WiFi**. If your network is missing, tap **Rescan** and wait a few seconds.
4. Pick your network, type the password, tap **Save and connect**.

The device keeps up to 5 networks and joins the strongest one it finds. If none is in range after about 12 seconds, it starts its own WiFi instead. After you save a network, the address changes: next time use `lyangeek.local`.

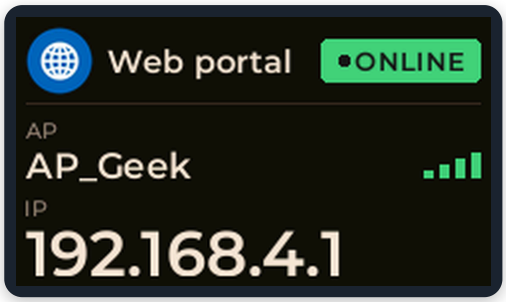

Device WiFi
"AP" = the device's own WiFi

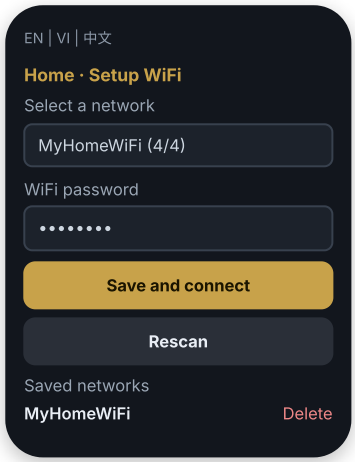

Simplified example of the web page

Update the firmware (no cable needed)

1. In Mode 3, open the web page, tap **Firmware** and enter the PIN (default `0918393391`).
2. Choose the firmware file (`.bin`) supplied with your update and tap **Update firmware**.
3. The screen shows the pink OTA tag. Wait about 10 seconds for the restart. Do not switch off the power.

The update is refused while the heater is on or PID is running. If the power fails halfway, the old version keeps running. The web page switches off by itself while a roast is running.

Change the PIN

1. In Mode 3, open the web page and tap **PIN** at the bottom. Enter the current PIN (default `0918393391`).
2. Type the new PIN (4 to 10 digits) twice and tap **Save PIN**.
3. Log in again with the new PIN. It is stored in the device and kept after power-off.

Forgot the PIN? On the PIN screen type the default PIN `0918393391`. The page asks **Factory reset?** Tap **Yes**, then press the **BOOT** button within **10 seconds** (the screen shows a blinking white **RESET?**). The PIN and all saved WiFi networks are erased and the device restarts. Tap **No**, or do nothing, to cancel.

Safety (built in)

Warning screens

The whole screen flashes red, in any mode, and clears by itself when the cause is gone.

OVERHEAT from **230 °C** bean temperature (shows the temperature). Lower the heater at once.

NO SIGNAL when the temperature signal from the roaster was seen and then lost. Check the USB connection.





• Bean temperature reaches **240 °C**: the heater is cut. • Above **50 °C**: the drum turns on by itself and cannot be turned off.
• Heater on: air goes up to at least **10%**. • No temperature signal for **7.5 s** while heating: heater off and PID off (red NO SIGNAL screen).

Troubleshooting

PROBLEM	WHAT TO TRY
HiBean cannot find the device	Check that the screen says **HiBean**. If not, press BOOT until it does. Wait a few seconds for the logo to blink.
Artisan does not connect	The screen must say **Artisan**. Put the computer on the same WiFi as the device. Download the Artisan settings file again if the device address changed.
The web page does not open	The screen must say **Web portal**. Join **AP_Geek** and use **192.168.4.1**, or use **lyangeek.local** when on your own WiFi. The page is off during a roast.
The network list is empty	Tap **Rescan** and wait a few seconds. If your phone drops off the device WiFi while scanning, reconnect and open the page again.
Tag stays WAIT and BT shows "---"	No temperature signal yet. Check the USB connection to the roaster and that the roaster is on. After about 10 seconds the SIM tag may appear (practice mode).
Red NO SIGNAL screen	The temperature signal from the roaster was lost and the heater was cut. Check the USB connection between the Bridge Geek and the roaster.
Firmware update refused	Turn the heater off (0%) and switch PID off, then try again.
Wrong or forgotten PIN	After several wrong tries, wait 1 minute. If you forgot it, see **Forgot the PIN?** on page 5.

Keep your device private

The default PIN `0918393391` is printed in this guide, so change it (page 5) before using or handing over a device. Write the device WiFi password in the space on page 5 and keep this guide in a safe place.

CONTACT

LY AN Roaster LAB
Phone: +8491 8393 391
Email: lycoffee.ai@gmail.com
Ho Chi Minh – Viet Nam

You can also open the About page on the device web page to see the firmware version and these details.