LY AN ROASTER LAB

LyAn Bridge Zero


Quick Start Guide · Bridge for the Skywalker V1 roaster

Guide edition: English · 3 Nov 2026 · For firmware **v4.2.4**

What it does

LyAn Bridge Zero is a small box with no screen. It sits between your **Skywalker V1** roaster and your phone or computer, so you can watch the bean temperature and control **Heater, Air, Drum, Cool and PID** from software.

You pick **one** connection at a time with a single button. A colored light tells you which one is active.

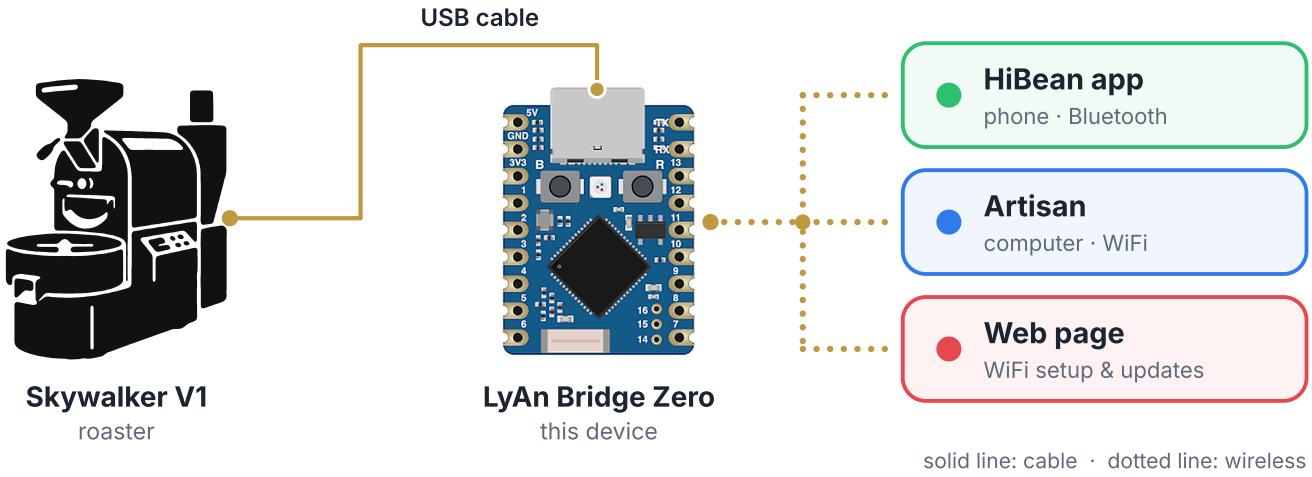


Quick start

1. **Plug** the Bridge Zero's USB-C port into the roaster. The light GREEN blinks: it is waiting for HiBean.
2. **Choose your connection** by pressing the **BOOT** button: once for Artisan (blue), twice for the web page (red), three times to go back to HiBean (green).
3. **Roast.** When your software connects, the light stops blinking and stays on.

> **Why only one at a time?** Bluetooth and WiFi share one antenna in this small chip. Using one mode at a time keeps the connection stable.

One button, three modes

Press the **BOOT** button on the board to move to the next mode. The device always starts in **Mode 1**.

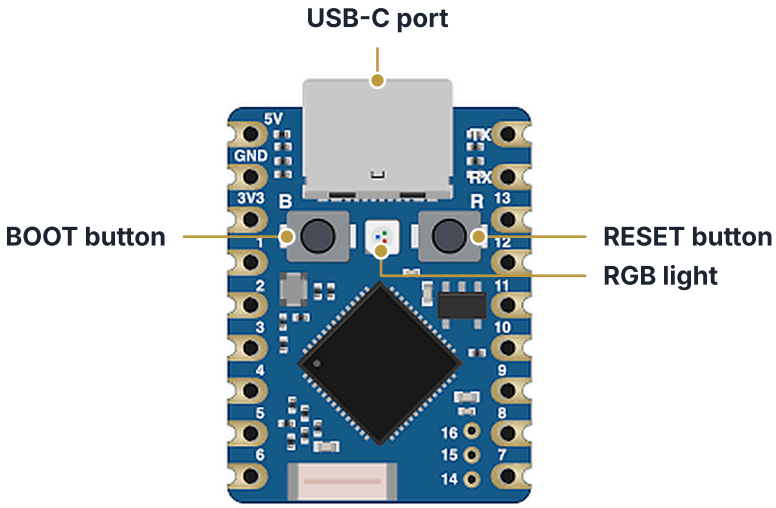


USB-C port
Plug it into the roaster.

BOOT button
Switch to the next mode. It also confirms a factory reset (see page 4).

RESET button
Restarts the board. Your saved WiFi and PIN are kept.

RGB light
Shows the active mode (colors below).

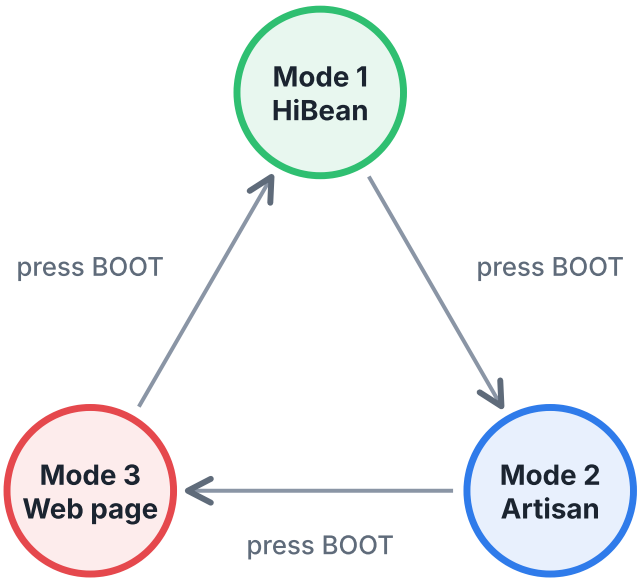

What the light means

COLOR	LIGHT	MEANING
GREEN	blinking slowly steady	**Mode 1 · HiBean.** Blinking: waiting for the HiBean app. Steady: HiBean is connected.
BLUE	blinking slowly steady	**Mode 2 · Artisan.** Blinking: WiFi is on, waiting for Artisan. Steady: Artisan is connected.
RED	blinking slowly steady	**Mode 3 · Web page.** Blinking: waiting for a phone or computer. Steady: someone is connected to the web page.
PURPLE	blinking fast	**Warning, any mode.** The temperature signal from the roaster has been lost. See Safety on page 4.

MODE 1 Roast with HiBean (phone)

1. Power on. The **green** light blinks slowly. (If it is another color, press **BOOT** until it is green.)
2. Open the **HiBean** app on your phone and search for devices over Bluetooth.
3. Choose **LyAn Roaster Zero**. The name shows the firmware version after it.
4. The light turns **steady green**. You can now control Heater, Air, Drum, Cool and PID from HiBean.

Works with HiBean model V1 and V2.

MODE 2 Roast with Artisan (computer)

First time only: load the settings file

1. Switch to **Mode 3** (red) and open the web page (page 4). Tap **Config Artisan**, then **Download Artisan settings file**.
2. In Artisan choose **Help → Load Settings** and pick the file you downloaded.

Before loading, use **Help → Save Settings** to keep your old Artisan setup: the file replaces it. Download the file again if the device address changes (for example, you move to a different WiFi).

Every roast


1. Press **BOOT** once from Mode 1. The **blue** light blinks. (Bluetooth turns off.)
2. Put your computer on the **same WiFi network** as the device, or on the device's own WiFi `LyAn_Roaster_Zero` if no saved network is available.
3. In Artisan press **ON**. The light turns **steady blue** and the bean temperature (BT) starts to run.
4. Use the row of control buttons that came with the file. No START button is needed.


HEATER −	HEATER +	AIR −	AIR +	DRUM ON
DRUM OFF	COOL ON	COOL OFF	PID ON	PID OFF

Each Heater or Air press changes the value by 5%. Artisan's own event buttons (CHARGE, DRY END, FC START, SC START, DROP) only mark the chart; they do not control the device.

MODE 3 Web page: WiFi setup and updates

1. Press **BOOT** until the light is **red** (twice from Mode 1).
2. Open the page on your phone or computer:
   • If the device joined your WiFi: `http://lyanzero.local`
   • Otherwise join the device WiFi `LyAn_Roaster_Zero`
   password: _____
   then open `http://192.168.4.1`
3. Tap **Setup WiFi**. If your network is missing, tap **Rescan** and wait a few seconds.
4. Pick your network, type the password, tap **Save and connect**.

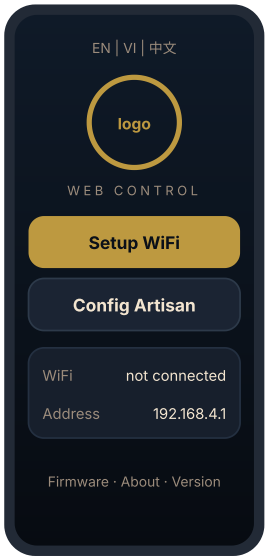

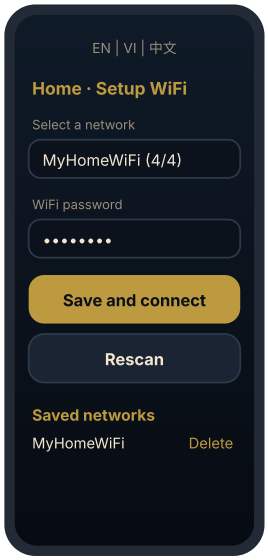

The device keeps up to 5 networks and joins the strongest one it finds. If none is in range after about 12 seconds, it starts its own WiFi instead. After you save a network, the address changes: next time use `lyanzero.local`.

Screens are simplified examples of the web page.

Update the firmware (no cable needed)

1. In Mode 3, open the web page, tap **Firmware** and enter the PIN (default `0918393391`).
2. Choose the firmware file (`.bin`) supplied with your update and tap **Update firmware**.
3. Wait about 10 seconds for the restart. Do not switch off the power.

The update is refused while the heater is on or PID is running. If the power fails halfway, the old version keeps running. The web page switches off by itself while a roast is running.

Change the PIN

1. In Mode 3, open the web page and tap **PIN** at the bottom. Enter the current PIN (default `0918393391`).
2. Type the new PIN (4 to 10 digits) twice and tap **Save PIN**.
3. Log in again with the new PIN. It is stored in the board and kept after power-off.

> **Forgot the PIN?** On the PIN screen type the default PIN `0918393391`. The page asks **Factory reset?** Tap **Yes**, then press the **BOOT** button within **10 seconds** (the light blinks white). The PIN and all saved WiFi networks are erased and the board restarts. Tap **No**, or do nothing, to cancel.

Safety (built in)

• Bean temperature reaches **240 °C**: the heater is cut. • Above **50 °C**: the drum turns on by itself and cannot be turned off.
• Heater on: air goes up to at least **10%**. • No temperature signal for **7.5 s** while heating: heater off and PID off (purple light).

Troubleshooting

PROBLEM	WHAT TO TRY
HiBean cannot find the device	Check that the light is **green**. If not, press BOOT until it is. Wait a few seconds for it to blink.
Artisan does not connect	Light must be **blue**. Put the computer on the same WiFi as the device. Download the Artisan settings file again if the device address changed.
The web page does not open	Light must be **red**. Join `LyAn_Roaster_Zero` and use `192.168.4.1`, or use `lyanzero.local` when on your own WiFi. The page is off during a roast.
The network list is empty	Tap **Rescan** and wait a few seconds. If your phone drops off the device WiFi while scanning, reconnect and open the page again.
Purple light blinks fast	The temperature signal from the roaster is lost and the heater was cut. Check the USB cable between the Bridge Zero and the roaster.
Firmware update refused	Turn the heater off (0%) and switch PID off, then try again.
Wrong or forgotten PIN	After several wrong tries, wait 1 minute. If you forgot it, see **Forgot the PIN?** on page 4.

Keep your device private

The default PIN `0918393391` is printed in this guide, so **change it** (page 4) before using or handing over a device. Write the device WiFi password in the space on page 4 and keep this guide in a safe place.

Contact

LY AN Roaster LAB

Phone: +8491 8393 391
Email: lycoffee.ai@gmail.com
Ho Chi Minh – Viet Nam

You can also open the **About** page on the device web page to see the firmware version and these details.