



3500W Induction Cooktop

After-Sales content

To apply for after-sales service, please contact customer service if there are any malfunctions after purchase. Thank you!



Commercial Induction Cooktop

(Knob + Button Type)



User Manual

CONTENTS

①Product Principle	01
②Performance and Features	01
③Product Diagram	01
④Operation Guide	02
⑤Usage Instructions	02
⑥Precautions and Safety Rules	04
⑦Daily Maintenance and Repair	05
⑧Repair Services	06
⑨Fault Identification and Handling	06
⑩Electrical Schematic Diagram	07
⑪After-sales Warranty	07

I. Product Principle

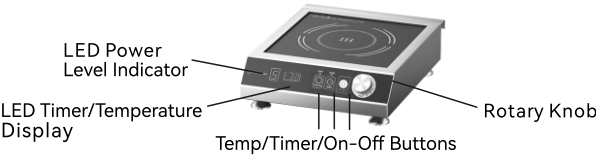
An induction cooker is a kitchen appliance that converts electrical energy into thermal energy using electromagnetic induction. Inside the cooker, a rectifier circuit transforms 50Hz/60Hz alternating current (AC) into direct current (DC). A control circuit then converts this DC voltage into high-frequency voltage (15–40 kHz). The rapidly changing current passing through the coil generates a high-speed alternating magnetic field. When the magnetic flux lines penetrate the base of a metal cookware, countless eddy currents are induced within the metal. These currents cause the cookware itself to rapidly generate heat, thereby heating the food inside.

II. Performance and Features

- 1.**High Efficiency:** Heats ferrous cookware via electromagnetic induction,delivering rapid temperature rise and high thermal efficiency.
- 2.**Safety:** Advanced microcomputer control system with Non-destructive detection, Over-temperature protection, Automatic fault diagnosis, Over/under voltage protection.
- 3.**Intelligent Design:** Continuous power adjustment, Constant power output, Wide voltage range compatibility.
- 4.**Energy Saving:** No heat conduction or radiation losses, significantly more efficient than traditional gas or oil stoves.
- 5.**Eco-Friendly:** Flame-free operation, Zero smoke, dust, or exhaust emissions, Low noise operation.
- 6.**Aesthetic & Durable:** Engineered stainless steel cabinet with ergonomic design for intuitive operation and long-lasting performance.
- 7.**Wide Applicability:** Ideal for commercial kitchens, Chinese restaurants, fast-food outlets, snack bars, cafeterias, ships, and more.

III.Product Diagram

An induction cooker is a kitchen appliance that converts electrical energy into thermal energy using electromagnetic induction. Inside the cooker, a rectifier circuit transforms 50Hz/60Hz alternating current (AC) into direct current (DC). A control circuit then converts this DC voltage into high-frequency voltage (15–40 kHz). The rapidly changing current passing through the coil generates a high-speed alternating magnetic field. When the magnetic flux lines penetrate the base of a metal cookware, countless eddy currents are induced within the metal. These currents cause the cookware itself to rapidly generate heat, thereby heating the food inside.



Caution: The ceramic glass panel of the induction cooker has a limited load-bearing capacity. Do not place excessively heavy objects on the surface or subject it to impact. Failure to comply may cause damage to the panel.

IV. Operation Guide

1. After power-on, hear a "Di" sound; the digital tube displays "---", and the unit digital tube "-" flashes, entering standby mode.
2. In standby mode, press the (ON/OFF) button once to start the induction cooker, entering Power mode. The cooker defaults to level 5 "2200W" operation. Rotate the knob to select your desired power level (1-9), with maximum level 9 at 3500W.
3. For 3500W models: Rotate the knob to select any power level between: Level 1: 400W, Level 2: 800W, Level 3: 1600W, Level 4: 2000W, Level 5: 2200W, Level 6: 2400W, Level 7: 2800W, Level 8: 3200W, Level 9: 3500W.
4. Press the "Function" button once to enter "Temperature mode", where each power level corresponds to a relative temperature. Rotate the knob to select any temperature between 80, 100, 120, 140, 150, 160, 180, 200, 240°C.
5. Time setting: After setting power/temperature, press the "TIMER" button once; the digital display shows "000". Rotate the knob to set time (up to 250 minutes). When time elapses, the cooker automatically enters standby mode.
6. To stop use: Press the (ON/OFF) button to enter standby mode.
7. Please unplug the power after cooking.

V. Usage Instructions

Safety Rules Summary:

The product you purchased is the latest technology product complying with relevant safety rules, but potential dangers still exist. Therefore, it must be operated correctly and refer to the following instructions. Use the induction cooker within its designed scope.

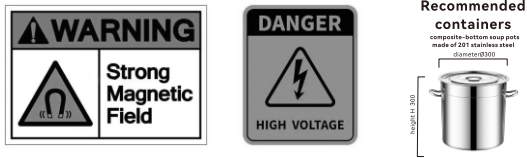
Pre-Operation Check:

- Before trial operation, first check whether the voltage type indicated on the power cord matches your household voltage. If voltages are inconsistent, turning on the cooker may cause severe harm to humans and the cooker itself.
- When using cookware, ensure the cookware bottom matches the ceramic surface to prevent excessive actual temperatures caused by incompatibility. Resulting in overheating or ignition of contents.

Note: To avoid potential hazards or electric shock, observe the following before use:



1. Users must carefully read the instructions before use.
2. This product is for household kitchen use only; outdoor use is prohibited to prevent accidents.
3. Connection to 220V power must be performed by the manufacturer's after-sales service agency or qualified electricians.
4. Do not touch the induction cooker or its power cord with wet hands.
5. Do not use the induction cooker with other appliances on the same socket; plug it into a suitable socket.
6. Do not pull the power cord to move the induction cooker. Never move the induction cooker while cookware is placed on its surface or during operation.
7. Do not place empty metal cans on the induction cooker surface or under the stove. Do not place metal objects on the induction cooker surface or under the stove.
8. Do not place paper, cloth, or similar items directly on the panel for heating, to avoid excessive pot-bottom temperatures causing combustion.
9. Do not place empty cookware on the ceramic glass panel; if the induction cooker heats empty cookware, it may trigger the anti-dry-boil protection and automatically shut down. Operate the appliance carefully, as the user's rings, watches, etc. will heat up when near the cooking surface; pot bottoms must exceed 25cm. For woks, use the company's dedicated matched iron wok. After use, the induction cooker's power must be switched off to confirm shutdown; never rely solely on the pot's detector to determine shutdown status.
10. Do not place plastic containers on high-temperature surfaces to prevent damage; do not stack items on the hob surface to avoid ceramic panel breakage; kitchen utensils, metal items like forks/knives must not be placed in the cooking zone on the hob surface, as they will heat up.
11. Scientific tests prove induction cookers are harmless to humans, but persons with cardiac pacemakers must maintain at least 60cm distance during operation. Persons with physical, sensory, or intellectual disabilities, or lacking experience/knowledge (including children), shall not use it.
12. Do not leave the induction cooker unattended during use. Do not place the induction cooker where children may touch it.





- 13.If the induction cooker is damaged or malfunctioning, do not use it. Avoid impacting the cooker; if cracks appear on the panel, immediately cut power and send for repair. Only professionals using original parts may repair this cooker; never attempt self-repair.
WARNING: If the hob surface cracks, immediately disconnect the appliance or cut its power.
- 14.Do not use non-manufacturer-supplied accessories, as this may damage the cooker or cause other hazards.
- 15.When replacing power cords:
For 3.5kW models, use 14AWG cord (ground wire: green).
- 16.Non-ionizing electromagnetic radiation: Indicates exposure exceeding conventional levels with potential hazards. CAUTION: Strong magnetic field present!



- 17.Dangerous voltage: Refers to voltages in circuits non-compliant with current-limiting/TNV circuit requirements, where AC peak exceeds 42.4V or DC exceeds 60V.
- 18.Recommended containers: Use composite-bottom soup pots made of 201 stainless steel, dimensions Ø300 x H300mm, capacity 21L, thickness 0.8mm.
- 19.Never heat sealed containers, sealed foods, or frozen packaged foods on the induction cooker, as thermal expansion may cause explosions or fires.

VI. Precautions and Safety Rules

1.The fixed power line circuit must be equipped with a leakage-protection air switch. 	2.The fixed power line circuit must be equipped with a leakage-protection air switch. 
3.To ensure heat dissipation, maintain ≥50mm clearance between the unit and walls. 	4.Installation/maintenance shall only be performed by the manufacturer's after-sales service or qualified electricians. 

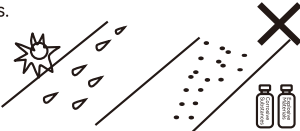5.Electrical specifications:Rated voltage: 220V AC Rated frequency: 50Hz 	6.Prevent small insects (e.g., bats) from entering the unit to avoid malfunctions. 
7.Install the product on a flat, stable surface with adequate operational/maintenance access. 	8.If the ceramic glass panel cracks during operation, immediately cut off the cooker's input power. 
9.Never use in areas with high temperature, high humidity, excessive dust, or near acidic/explosive materials. 	10. If the power cord is damaged, a specialized terminal block must be replaced by professional technicians to prevent hazards. 
11.Do not place metal objects like kitchen utensils or cutlery on the curved ceramic glass panel. 	12.Never insert foreign objects (e.g., wire) or block exhaust/intake vents to avoid dangers. 
13.Users with cardiac pacemakers should consult the manufacturer for approval before operation.	14.CAUTION: Empty cookware may glow red-hot when idle. Monitor to prevent fires. Dry-boiling damages the cooker and causes malfunction.

VII. Daily Maintenance and Repair

- 1.Before cleaning, unplug the power cord. Do not clean with any corrosive cleaner and avoid liquid entering the induction cooker body.
- 2.Before cleaning, the ceramic panel must fully cool; clean promptly after each use.
- 3.Do not use water jets to clean the induction cooker to prevent water ingress hazards.
- 4.To avoid electric shock, do not immerse the induction cooker, power cord, or plug in water or other liquids.
- 5.Use a soft damp cloth to clean the panel; do not use corrosive soap for cleaning.
- 6.Use a soft cloth or neutral detergent to wipe the cooker's housing and control panel.

- Do not use gasoline or similar products to clean the induction cooker to protect its plastic housing and control panel.
- Do not place flammable, acidic, or alkaline materials near the induction cooker; this shortens its lifespan and may cause ignition during power cycling.
- If the ceramic panel has cracks, prevent cookware bottoms from scratching it.
- Perform proper cleaning before storing the induction cooker.

VIII. Repair Services

- Our company’s products have a one-year warranty period; during this period, we provide free repairs, but round-trip shipping costs are not covered.
- Warranty period determination: The start date is based on the valid purchase receipt date. If no valid receipt is provided, the production date on the product nameplate plus fifteen days shall be the start date.
- During the warranty period, free repairs do not cover the following:
 - Inability to provide valid purchase receipt;
 - Product failure due to non-compliance with the manual’s usage requirements;
 - Self-repair, disassembly, torn warranty void sticker, or damage from improper maintenance;
 - Damage caused by force majeure;
 - Missing original packaging or partition board damage.
- Products not covered under free repair will be charged according to out-of-warranty standards.
- Present the Product Service Card and valid purchase receipt when requesting repairs.
- Product replacements for quality issues require a copy of the valid purchase receipt.


IX. Fault Identification and Handling

For the following common faults, confirm and handle according to the instructions below. If unresolved or undiagnosed, contact the retailer or our authorized service center. For your safety, never attempt self-repair or disassembly.

Fault phenomenon	Possible Cause	Cause Analysis
IGBT Overheating	9	Internal fan failure or air vent blockage
Coil Overheating	8	Cookware dry / Coil fan damaged / Inadequate ventilation
Circuit Fault	0	Check for open induction coil circuit
No Cookware Detected	1	No pot placed or incompatible cookware
Undervoltage	2	Low input voltage
Overvoltage	3	High input voltage
Surface Sensor Open	4	Check for broken thermistor wiring or loose connector

X. Electrical Schematic Diagram

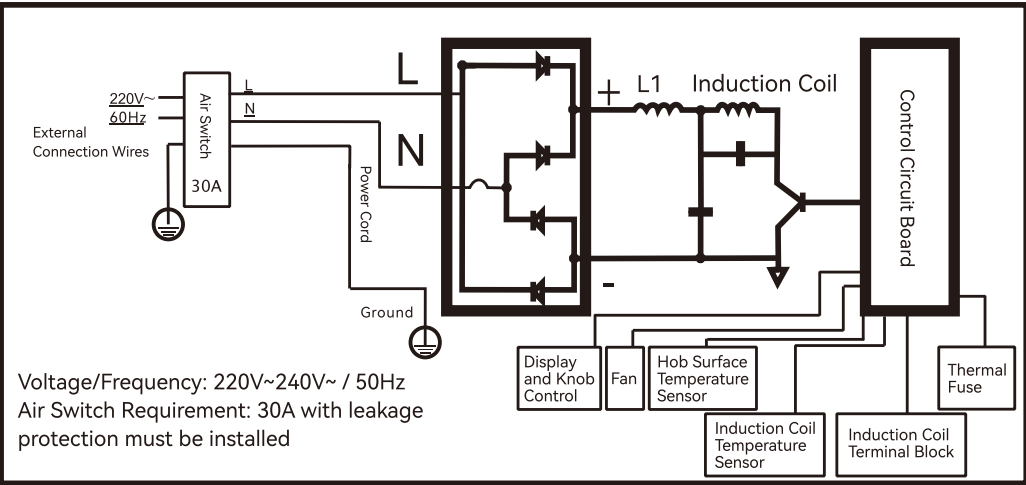For the following common faults, confirm and handle according to the instructions below. If unresolved or undiagnosed, contact the retailer or our authorized service center. For your safety, never attempt self-repair or disassembly.



For 3.5-kW Countertop Models:External wiring requires installation of a 30A air switch with leakage protection.