



MINING DEALER BEST PRACTICE

Changing the Position of the Jack Sensor Box – MD6640

**Maintenance and
Repair**

Application

Component Life
Management

Component
Renewal (CRC)

MARC
Management


Changing the Position of the Jack Sensor Box –	
MD6640	1
1.0 Introduction	2
2.0 Best Practice Description.....	3
3.0 Implementation Steps	3
4.0 Benefits	4
5.0 Resources Required	4
6.0 Supporting Attachments / References	4
7.0 Related Best Practices.....	5
8.0 Acknowledgements	5

DISCLAIMER: The information and potential benefits included in this document are based upon information provided by one or more Cat® dealers, and such dealer(s) opinion of “Best Practices.” Caterpillar makes no representation or warranty about the information contained in this document or the products referenced herein. Caterpillar welcomes additional “Best Practice” recommendations from our dealer network.


February 2022
1.10-220218-1

1.0 Introduction

The maintenance and repair of the sensors of the front jacks to the activity in the MD6640 is done at a height of approximately 3 meters in a condition of difficult access, without a fixed anchor point, without a support base appropriate, exposing the technician to a high risk of falling during the execution of the activity.

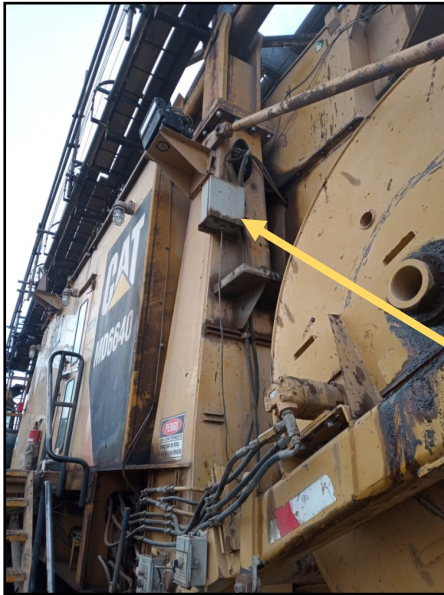

Jack sensor box
factory default position

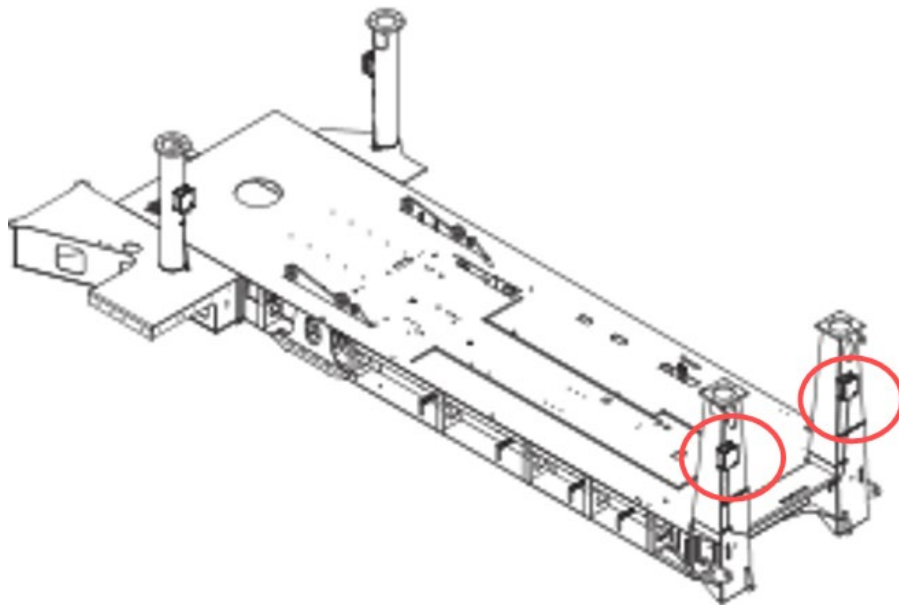

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR

Changing the Position of the Jack Sensor Box –
MD6640

DATE
2/18/2022

CHG
NO
00

NUMBER
1.10-220218-1

2.0 Best Practice Description

The jack sensor box was removed and reinstalled in an easily accessible position for technicians now located at the bottom of the machine, allowing ground level access, thus eliminating the risk of falling from work at height.




3.0 Implementation Steps

1. With the equipment stopped and the equipment's electrical control system blocked, remove the front Jack Sensor Box from their original factory position.



2. Install the 2 front Jack Sensor Box in the bottom of the machine close to the ground, as shown in the figure below.

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR			
Changing the Position of the Jack Sensor Box – MD6640	DATE 2/18/2022	CHG NO 00	NUMBER 1.10-220218-1

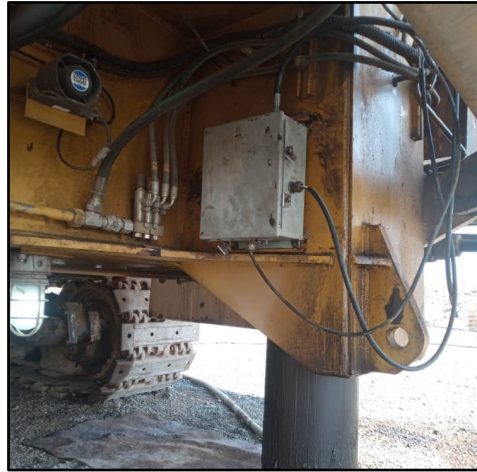

3. Connect the box cables and hoses according to the electrical diagram.



4.0 Benefits

1. Easy access
2. Elimination of exposure to falls of different level.

The Sotreq team removed the jack sensor box from the factory position and installed it in another more easily accessible position.

6.0 Supporting Attachments / References

- Drawing (see document appendix)

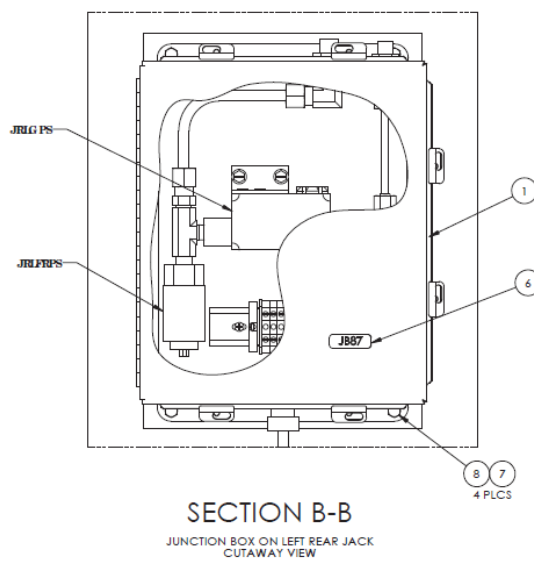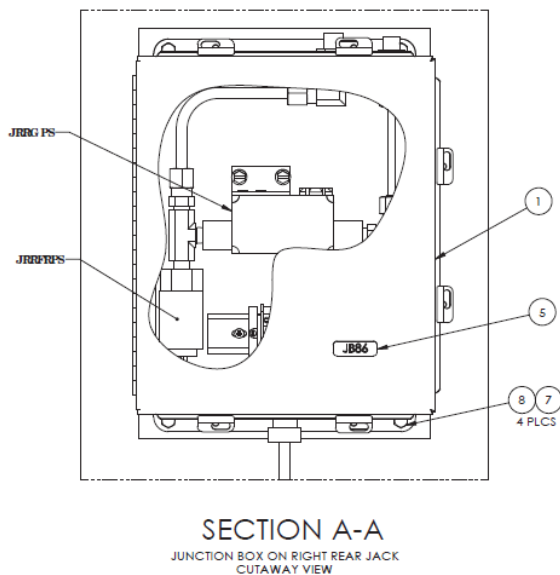

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR			
Changing the Position of the Jack Sensor Box – MD6640	DATE 2/18/2022	CHG NO 00	NUMBER 1.10-220218-1

7.0 Related Best Practices

The upgrade is preferably implemented during preventive maintenance.

8.0 Acknowledgements

This Best Practice was written by:

Josinei Ataíde Valentim

Fleet Performance Engineer

+55 (94) 991902053

josinei.valentim@sotreq.com.br

Raissa Maués Nascimento

Fleet Performance Engineer

+55 (94) 992764580

raissa.nascimento@sotreq.com.br

This Best Practices was designed and implemented by:

Josinei Ataíde Valentim

Fleet Performance Engineer

+55 (94) 991902053

josinei.valentim@sotreq.com.br

Special thanks to the efforts of the engineering team at Sotreq Salobo, always willing to offer support in the development of solutions for partners and customers, and other participants involved in this project.

THE INFORMATION HEREIN MAY NOT BE COPIED OR TRANSMITTED TO OTHERS WITHOUT THE WRITTEN PERMISSION OF CATERPILLAR			
Changing the Position of the Jack Sensor Box – MD6640	DATE 2/18/2022	CHG NO 00	NUMBER 1.10-220218-1