



虚拟机 Ubuntu 安装 Vivado 指南


- 出现如下界面，如果弹出更新提示，关掉即可，然后点击“Next”。

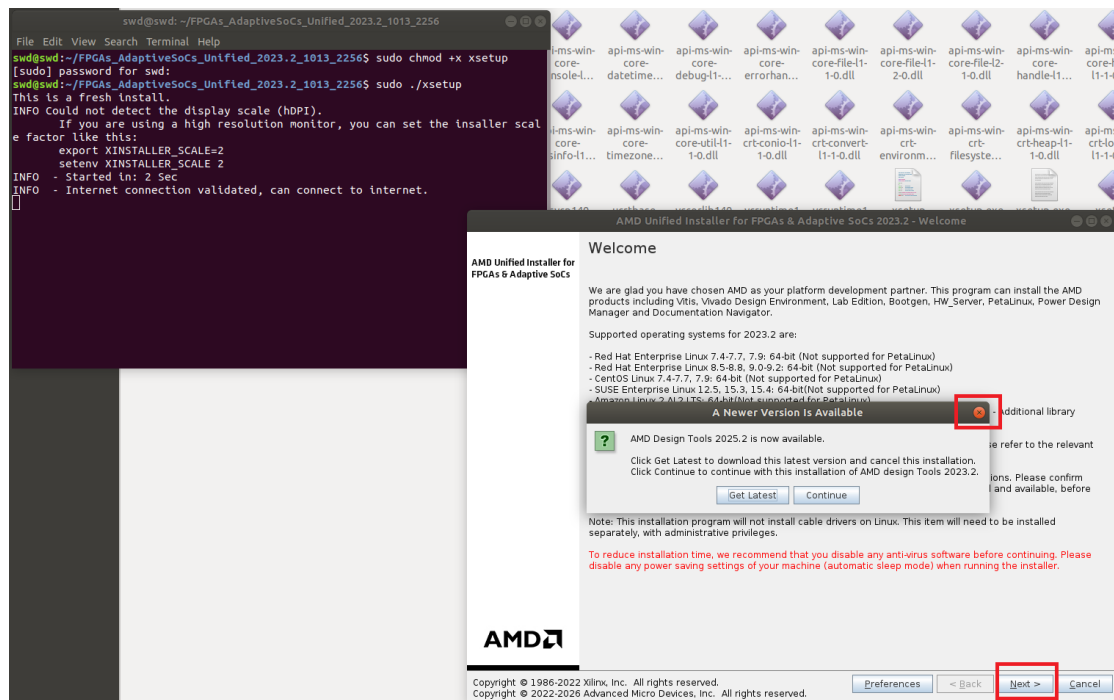


- 勾选“Vitis”，然后点击“Next”。

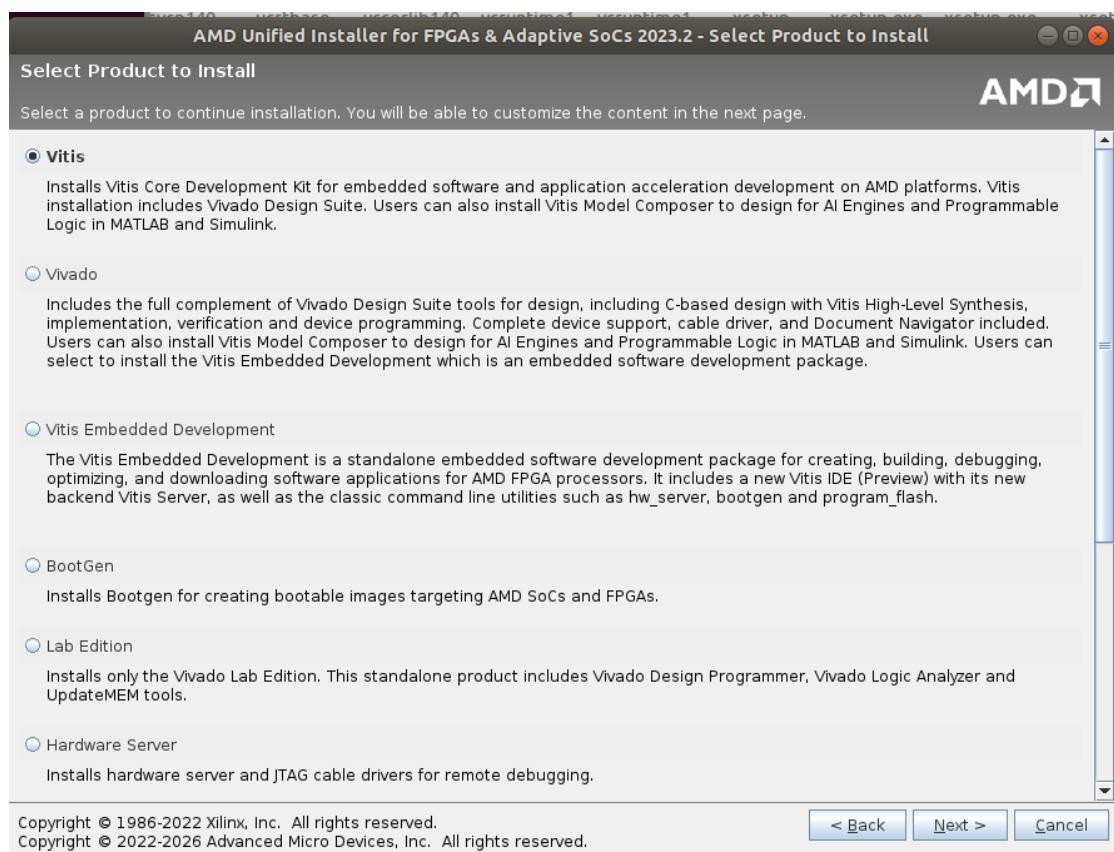


- 按需勾选需要的，占用空间较大，然后点击“Next”。

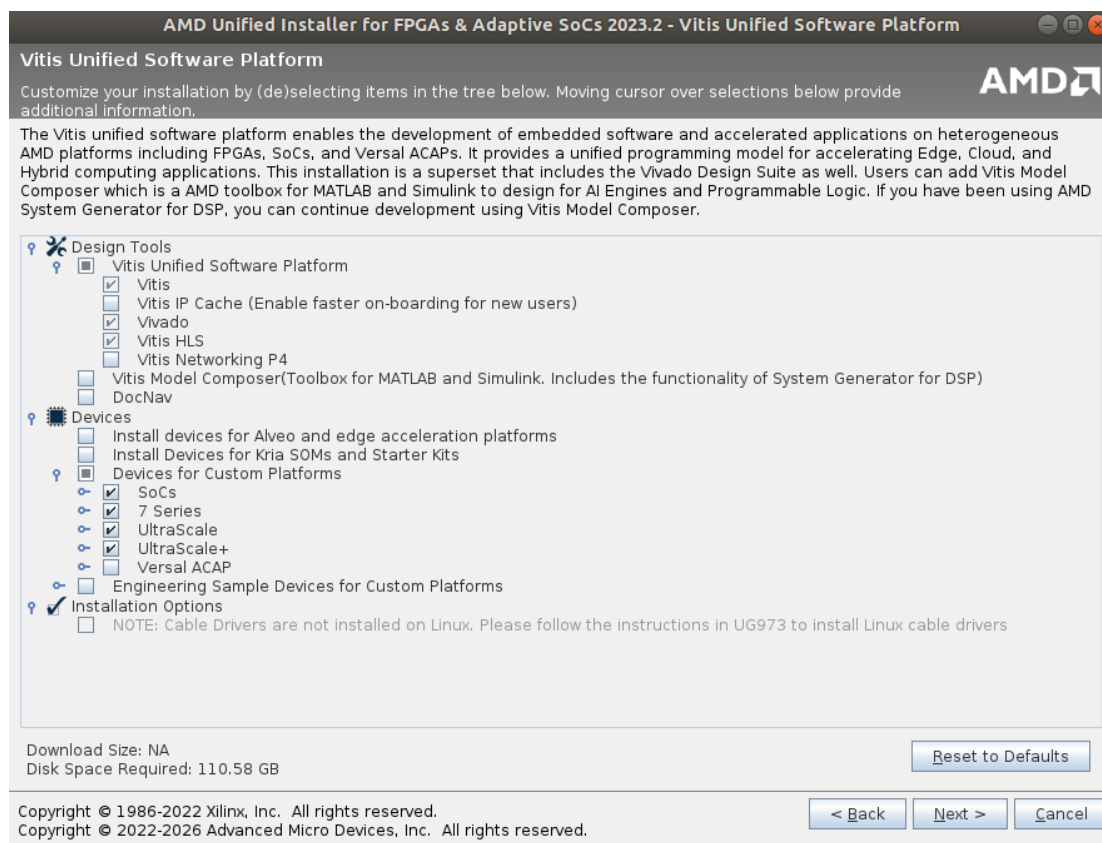


- 勾选全部“I Agree”，然后点击“Next”。

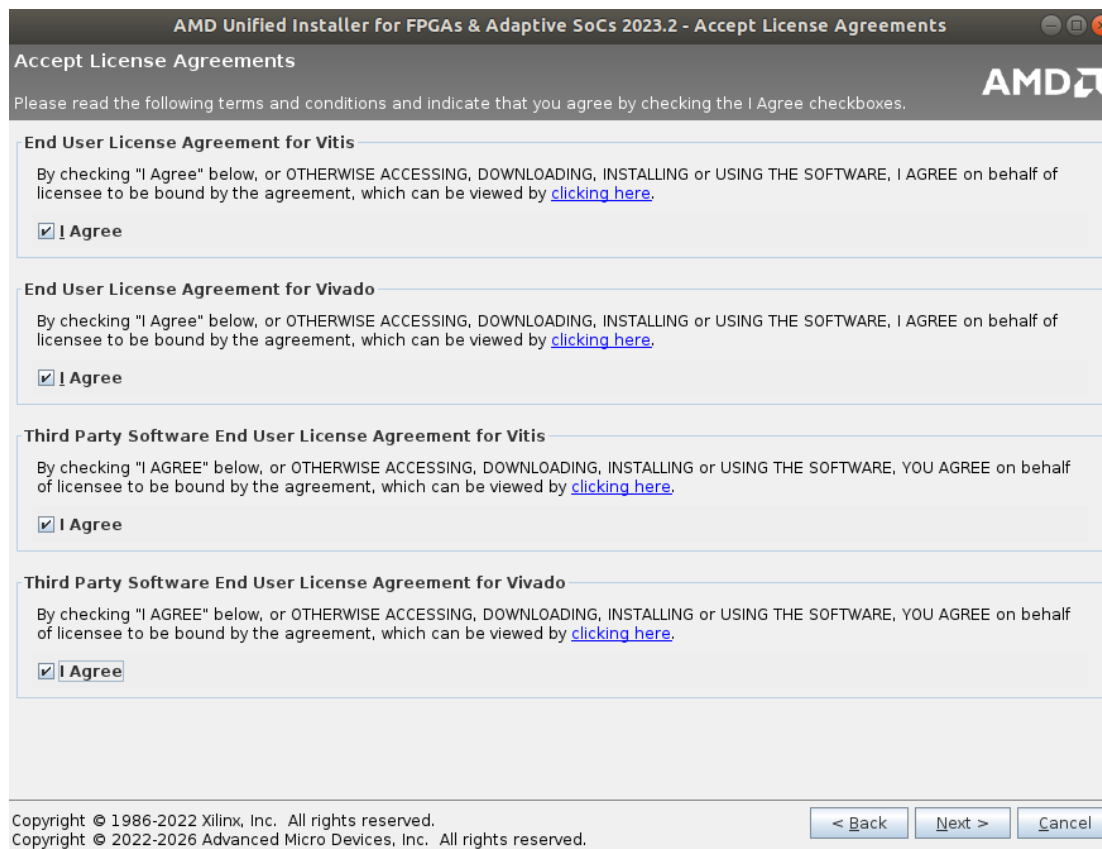


- 选择安装文件夹，笔者安装在“/opt”文件夹中，然后点击“Next”。

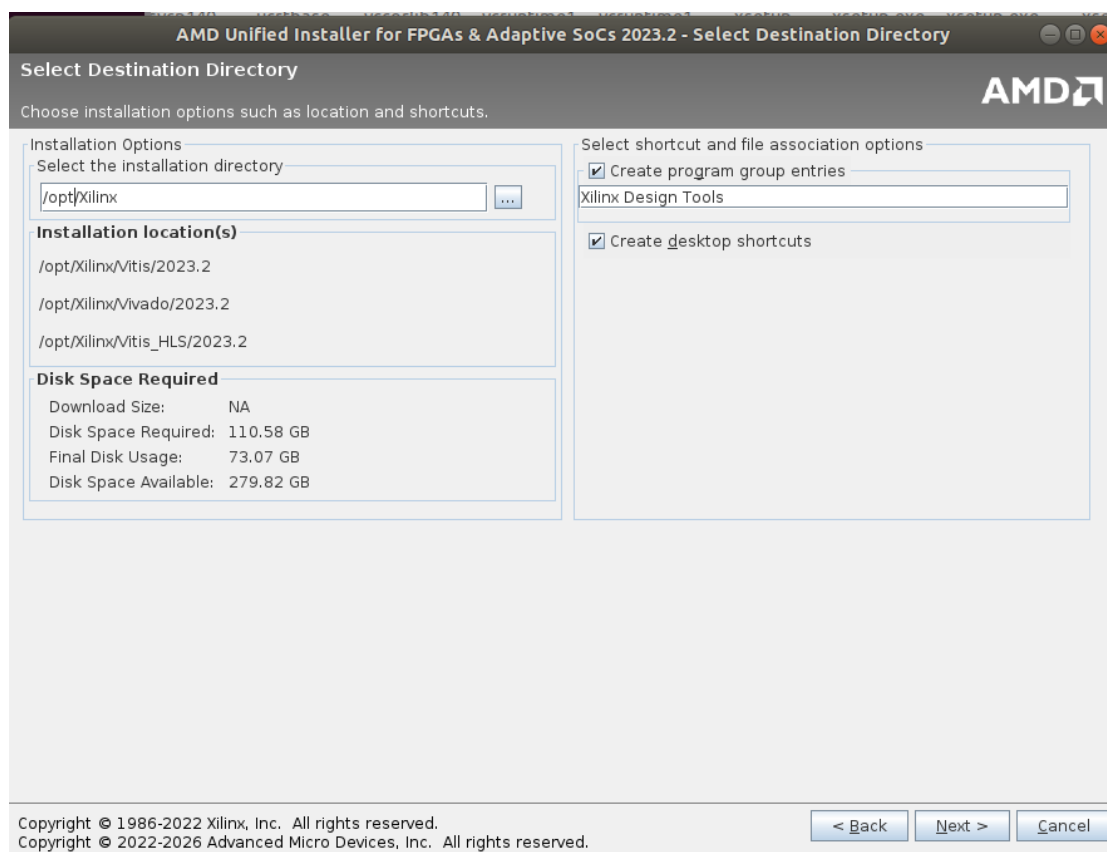


- 弹出如下界面，点击“Yes”。

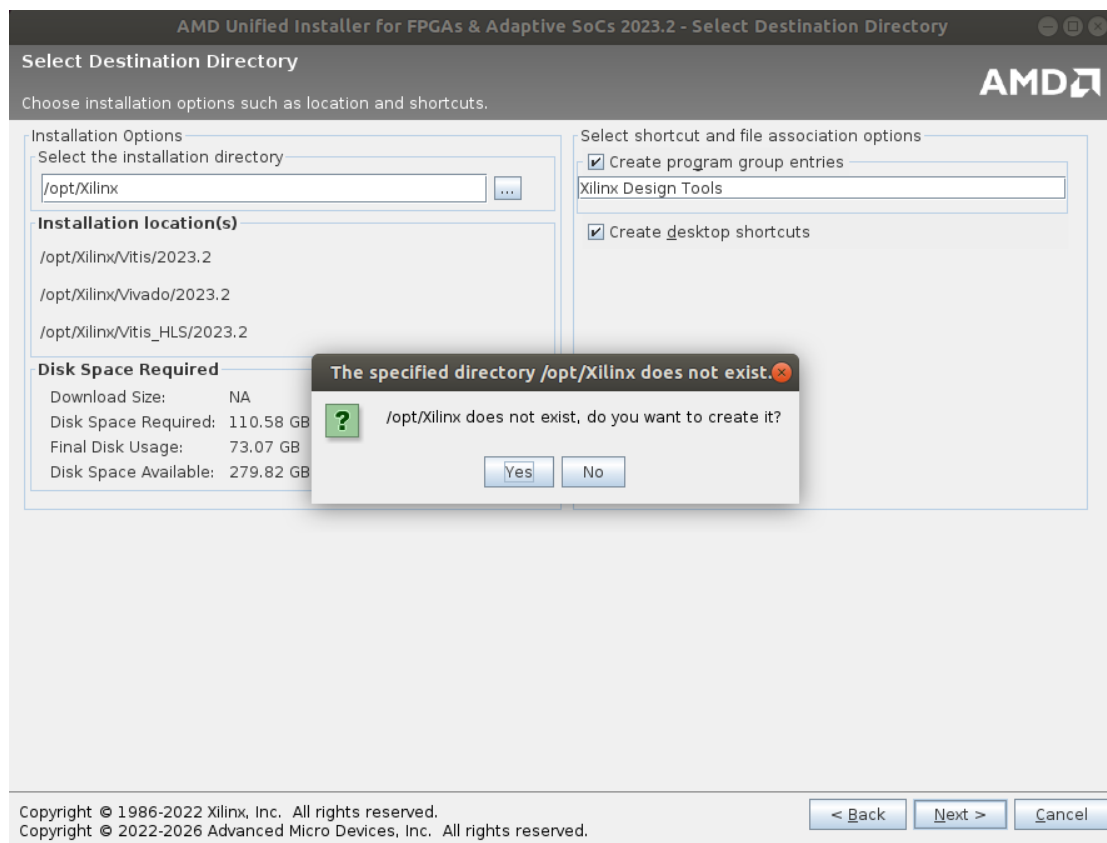


- 点击“Install”，开始安装 Vivado。

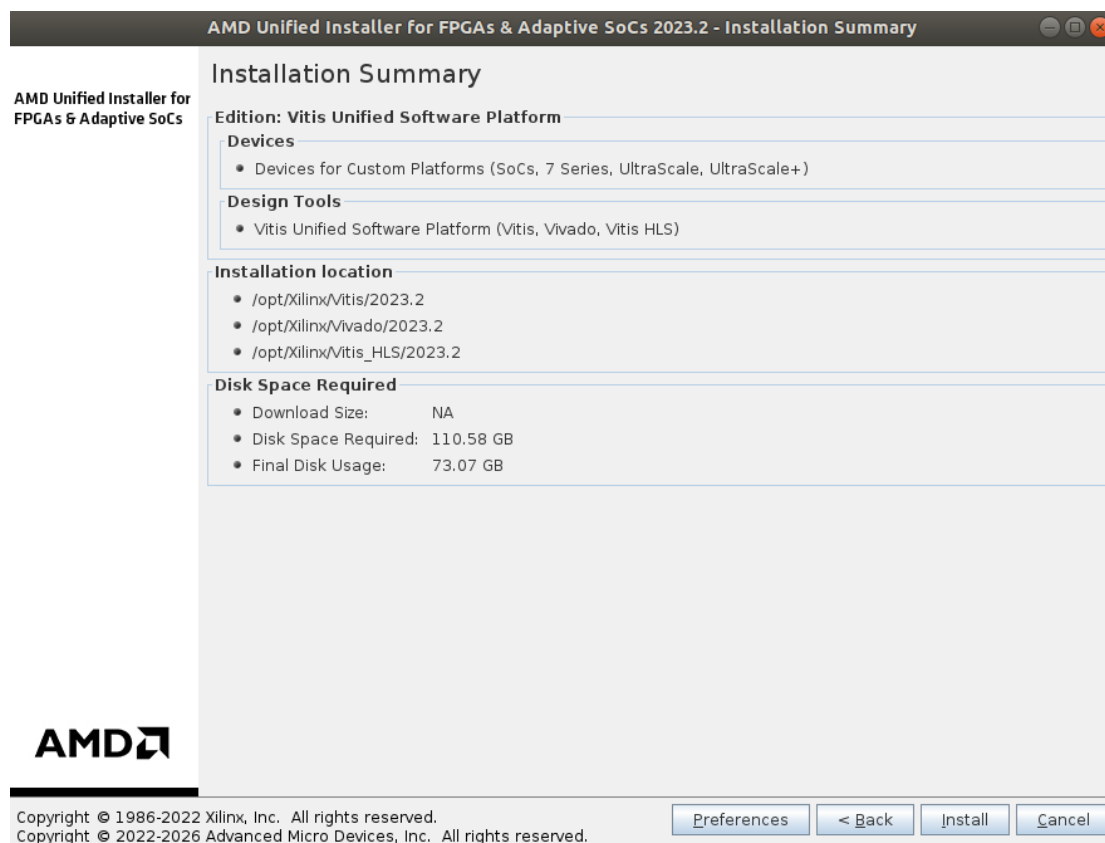


- 安装过程较慢，请耐心等待。

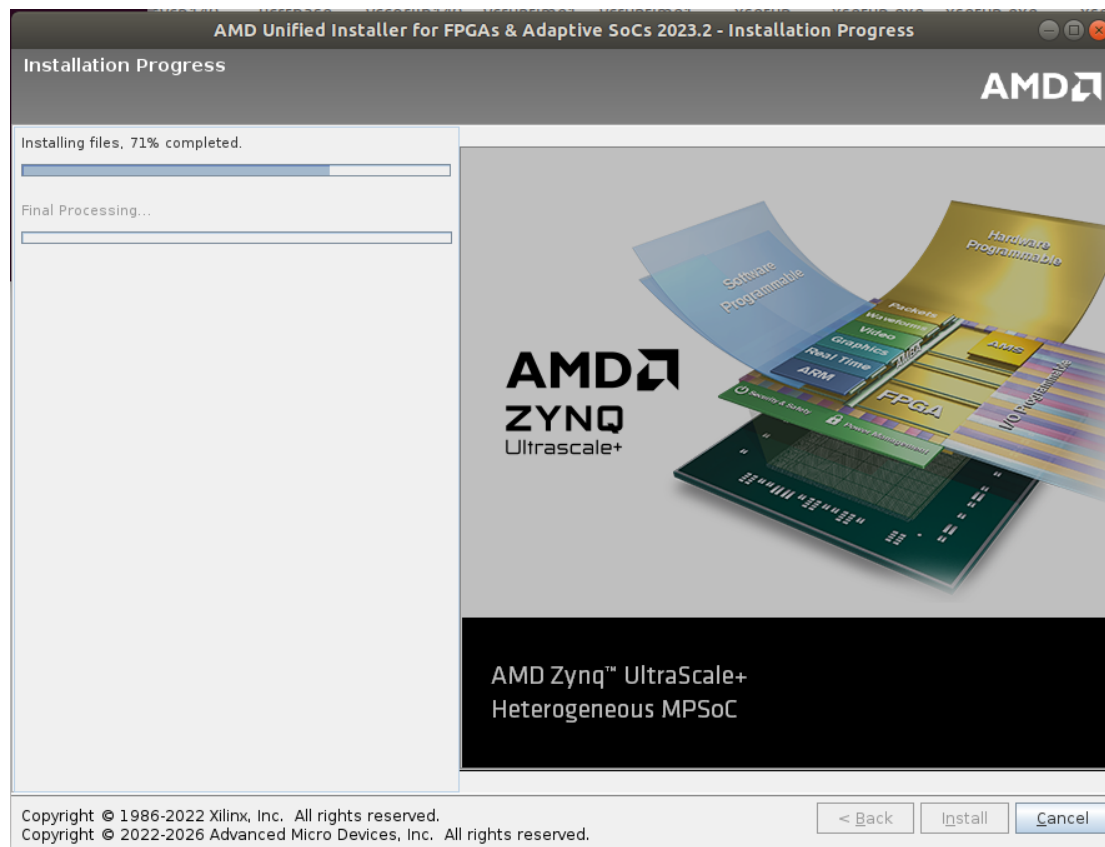


- 点击“OK”。

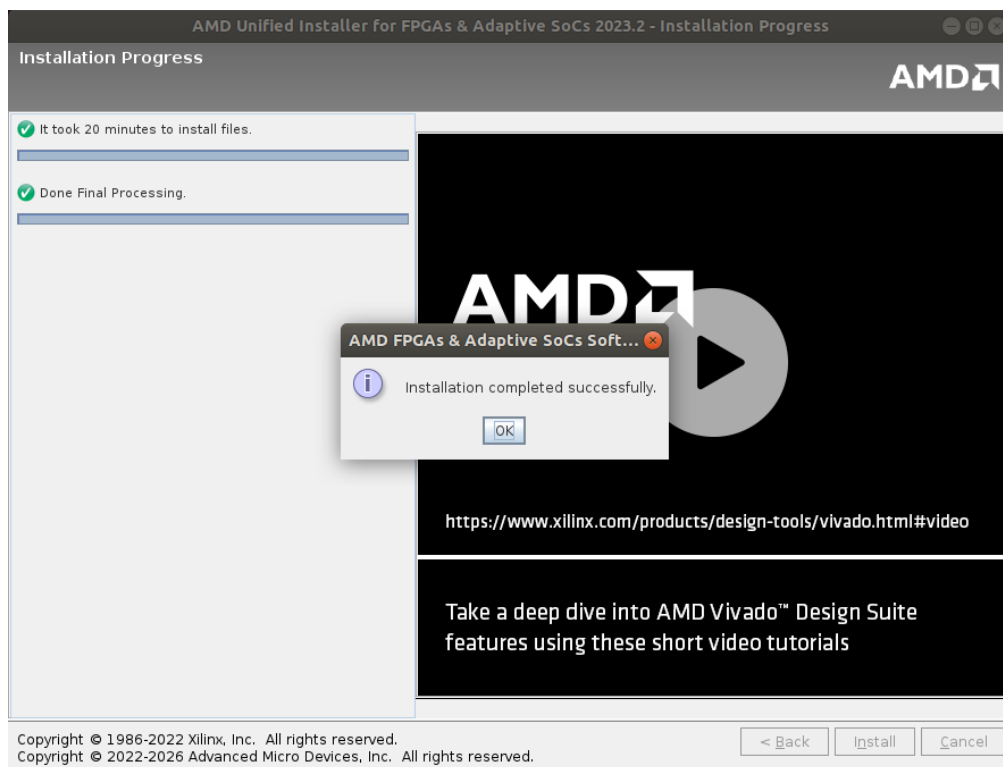

- 如果出现如下窗口，关掉即可。

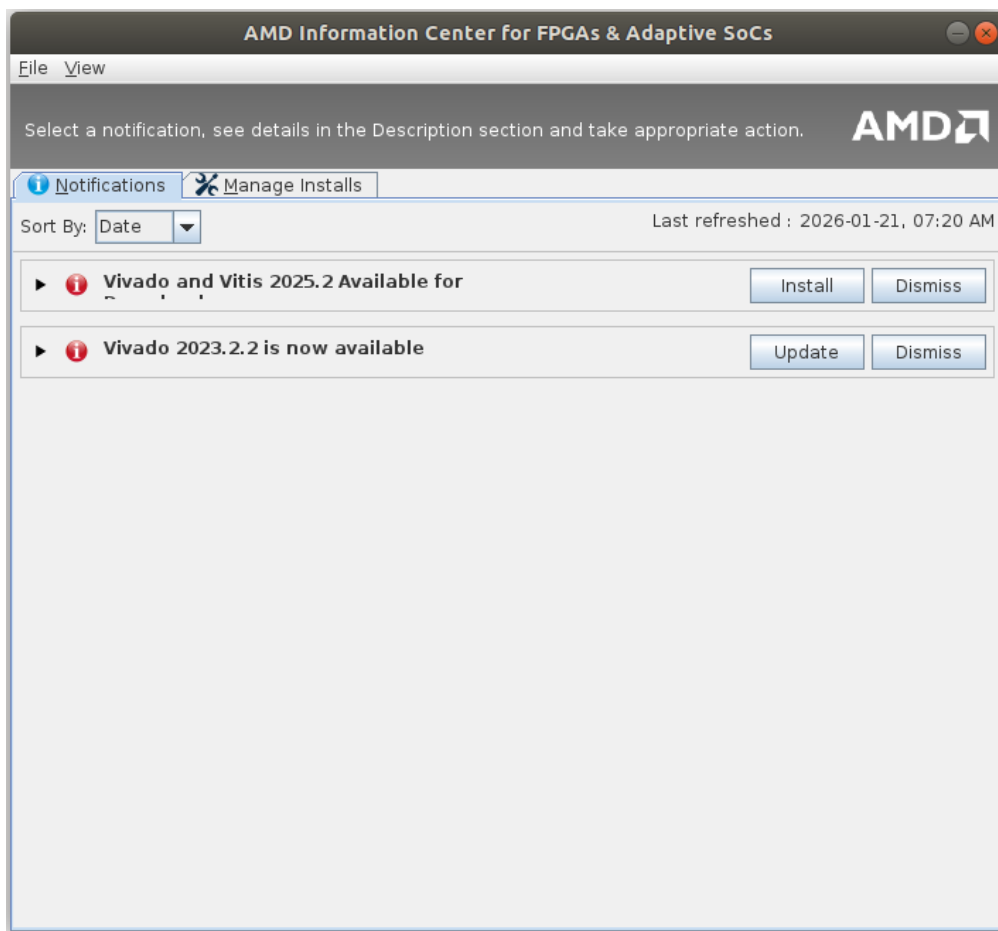


- 输入：“cd ..”退出当前文件夹，或关闭终端重新打开。

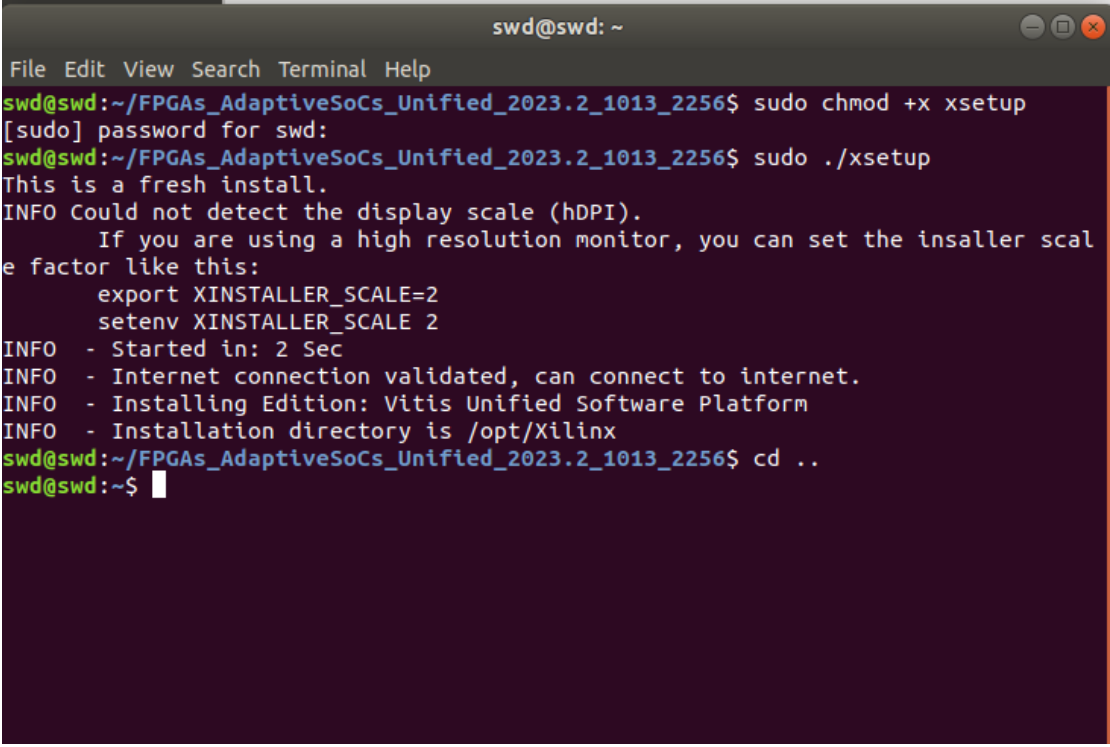

```
swd@swd: ~  
File Edit View Search Terminal Help  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ sudo chmod +x xsetup  
[sudo] password for swd:  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ sudo ./xsetup  
This is a fresh install.  
INFO Could not detect the display scale (hDPI).  
If you are using a high resolution monitor, you can set the insaller scal  
e factor like this:  
    export XINSTALLER_SCALE=2  
    setenv XINSTALLER_SCALE 2  
INFO - Started in: 2 Sec  
INFO - Internet connection validated, can connect to internet.  
INFO - Installing Edition: Vitis Unified Software Platform  
INFO - Installation directory is /opt/Xilinx  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ cd ..  
swd@swd:~$
```


- 输入：“source /opt/Xilinx/Vivado/2023.2/settings64.sh”指令，然后按“Enter”键。

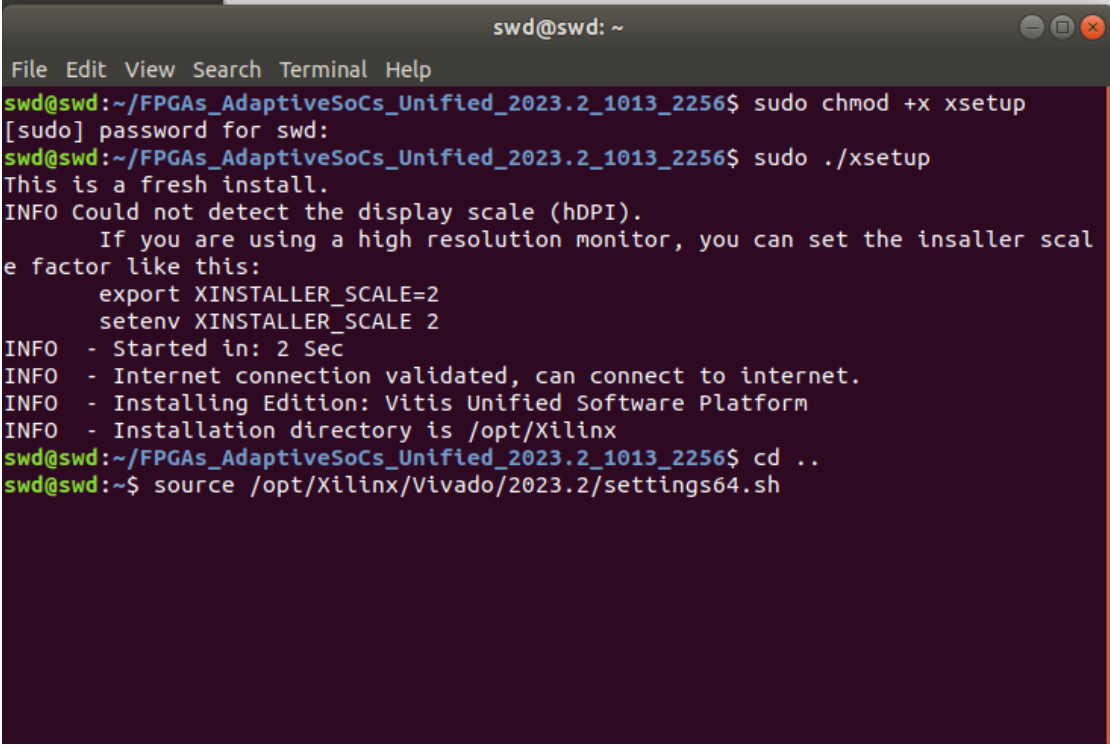


```
swd@swd: ~  
File Edit View Search Terminal Help  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ sudo chmod +x xsetup  
[sudo] password for swd:  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ sudo ./xsetup  
This is a fresh install.  
INFO Could not detect the display scale (hDPI).  
If you are using a high resolution monitor, you can set the insaller scal  
e factor like this:  
    export XINSTALLER_SCALE=2  
    setenv XINSTALLER_SCALE 2  
INFO - Started in: 2 Sec  
INFO - Internet connection validated, can connect to internet.  
INFO - Installing Edition: Vitis Unified Software Platform  
INFO - Installation directory is /opt/Xilinx  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ cd ..  
swd@swd:~$ source /opt/Xilinx/Vivado/2023.2/settings64.sh
```

- 输入：“vivado”指令，然后按“Enter”键，启动 Vivado。


```
swd@swd: ~  
File Edit View Search Terminal Help  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ sudo chmod +x xsetup  
[sudo] password for swd:  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ sudo ./xsetup  
This is a fresh install.  
INFO Could not detect the display scale (hDPI).  
If you are using a high resolution monitor, you can set the insaller scal  
e factor like this:  
    export XINSTALLER_SCALE=2  
    setenv XINSTALLER_SCALE 2  
INFO - Started in: 2 Sec  
INFO - Internet connection validated, can connect to internet.  
INFO - Installing Edition: Vitis Unified Software Platform  
INFO - Installation directory is /opt/Xilinx  
swd@swd:~/FPGAs_AdaptiveSoCs_Unified_2023.2_1013_2256$ cd ..  
swd@swd:~$ source /opt/Xilinx/Vivado/2023.2/settings64.sh  
swd@swd:~$ vivado
```

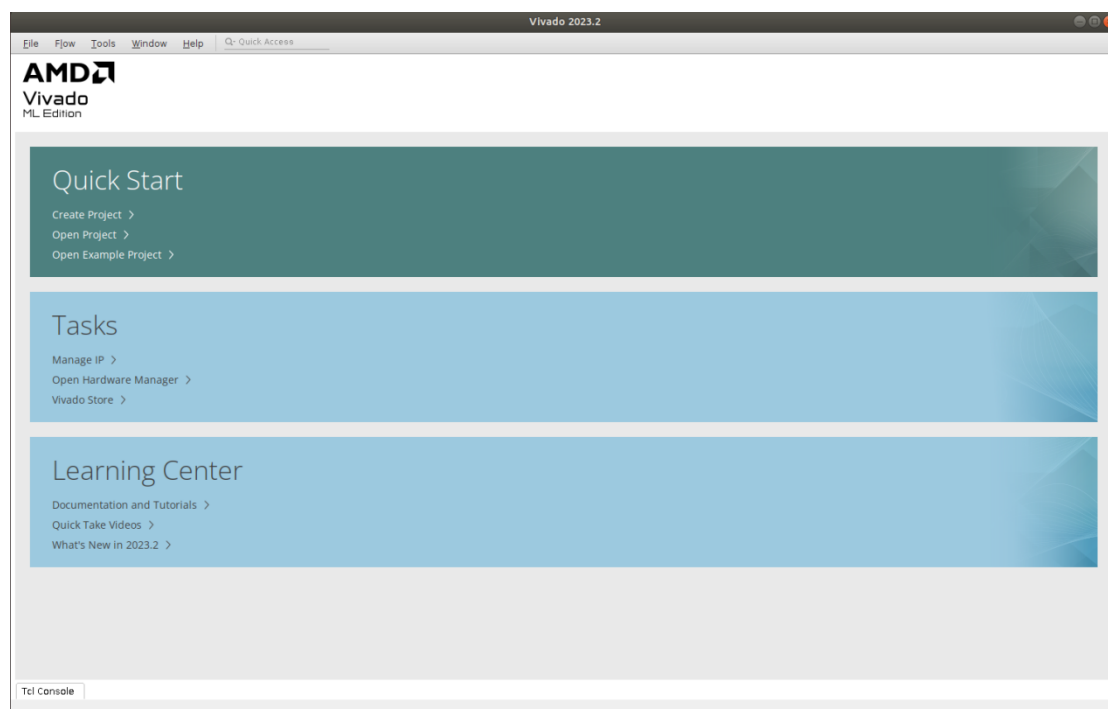


- 管理 License。

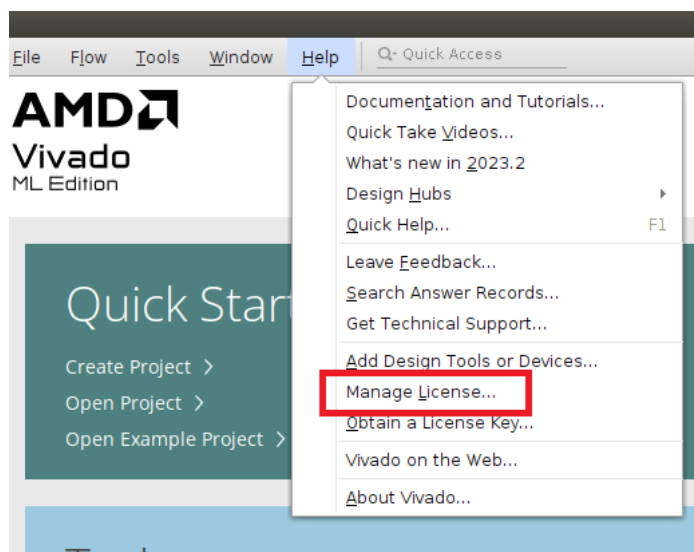

- 点击“Load License”,然后点击“Copy License”,选中 License 文件,点击“OK”。弹出如下界面,说明 License 加载成功。点击“OK”。

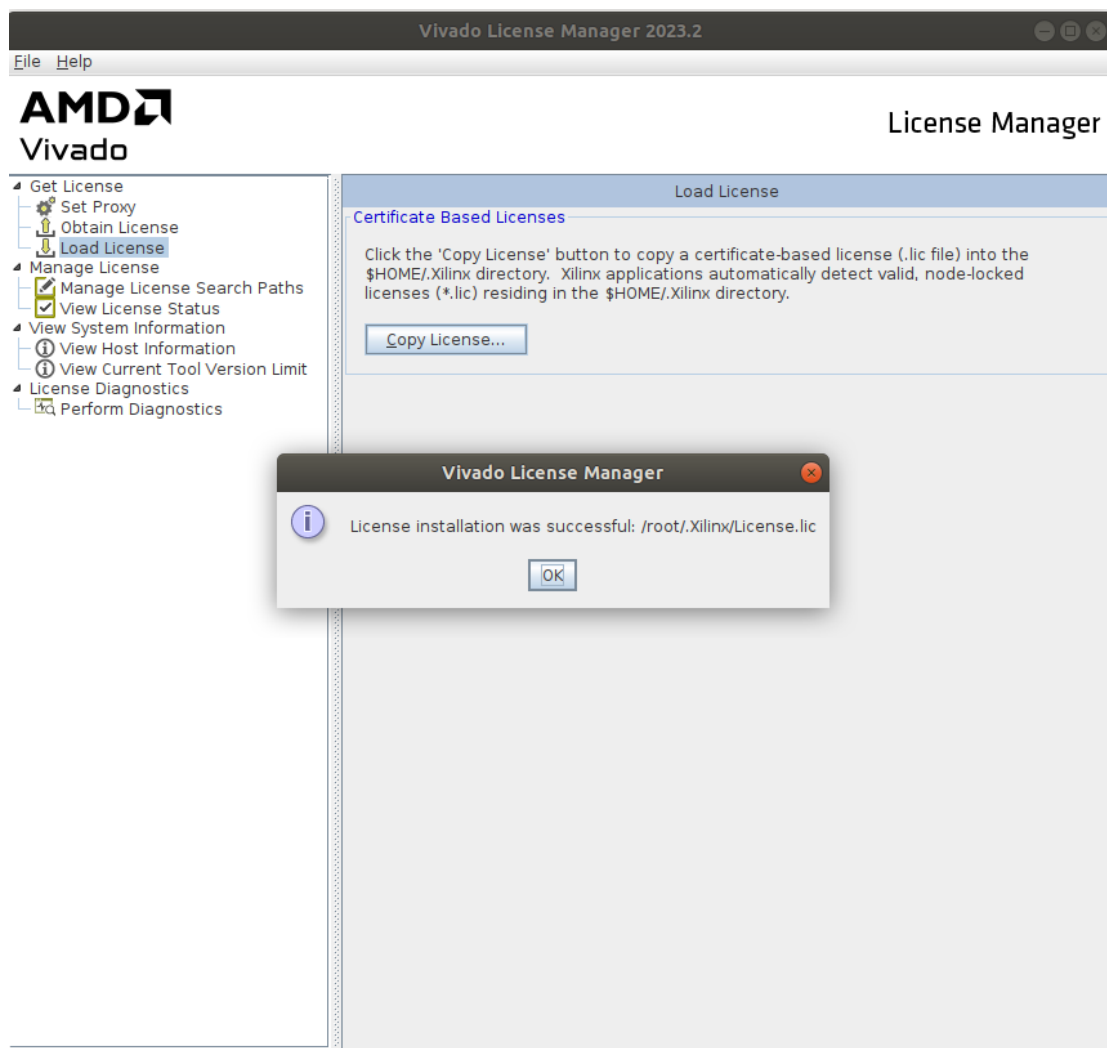

- 点击“View License Status”，查看 License 状态。

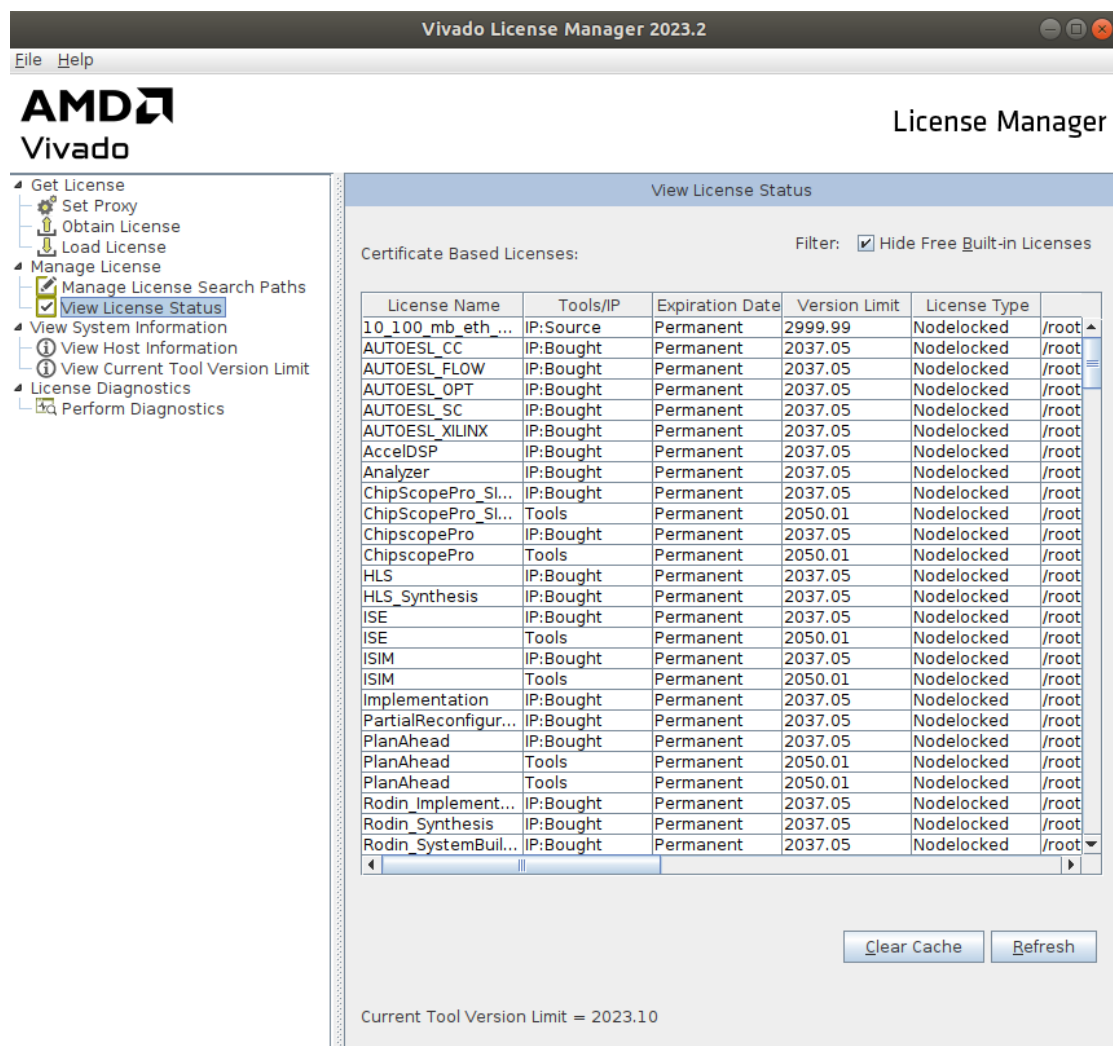

如果 License 状态为空白，但是上一步却显示安装成功，关闭 Vivado，打开终端，参考如下指令输入，再查看 License 状态。

```
mkdir ~/.Xilinx
sudo -s
cd /root/.Xilinx/
cp -r ./* /home/swd/.Xilinx
```

若启动 Vivado 时提示无权限访问.Xilinx 文件夹，执行如下指令：sudo chmod 777 .Xilinx