



2 Connect IR sensor

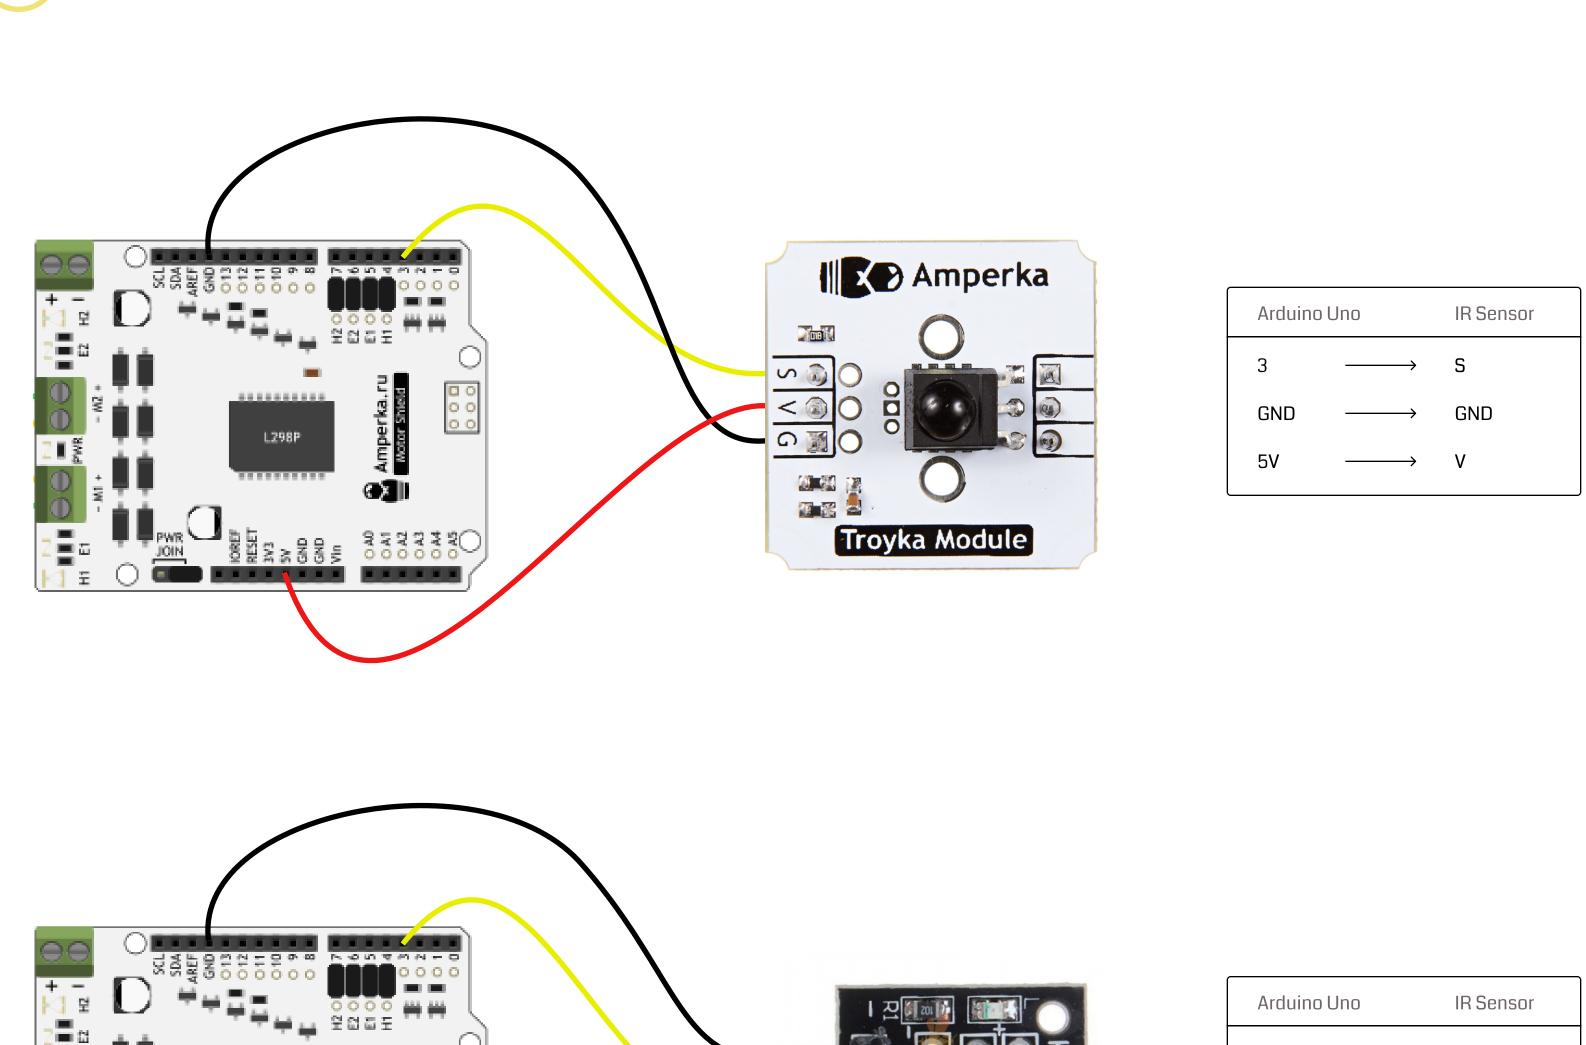


GND

5V

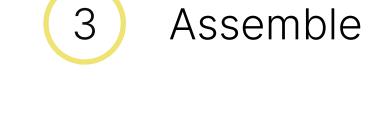

L298P

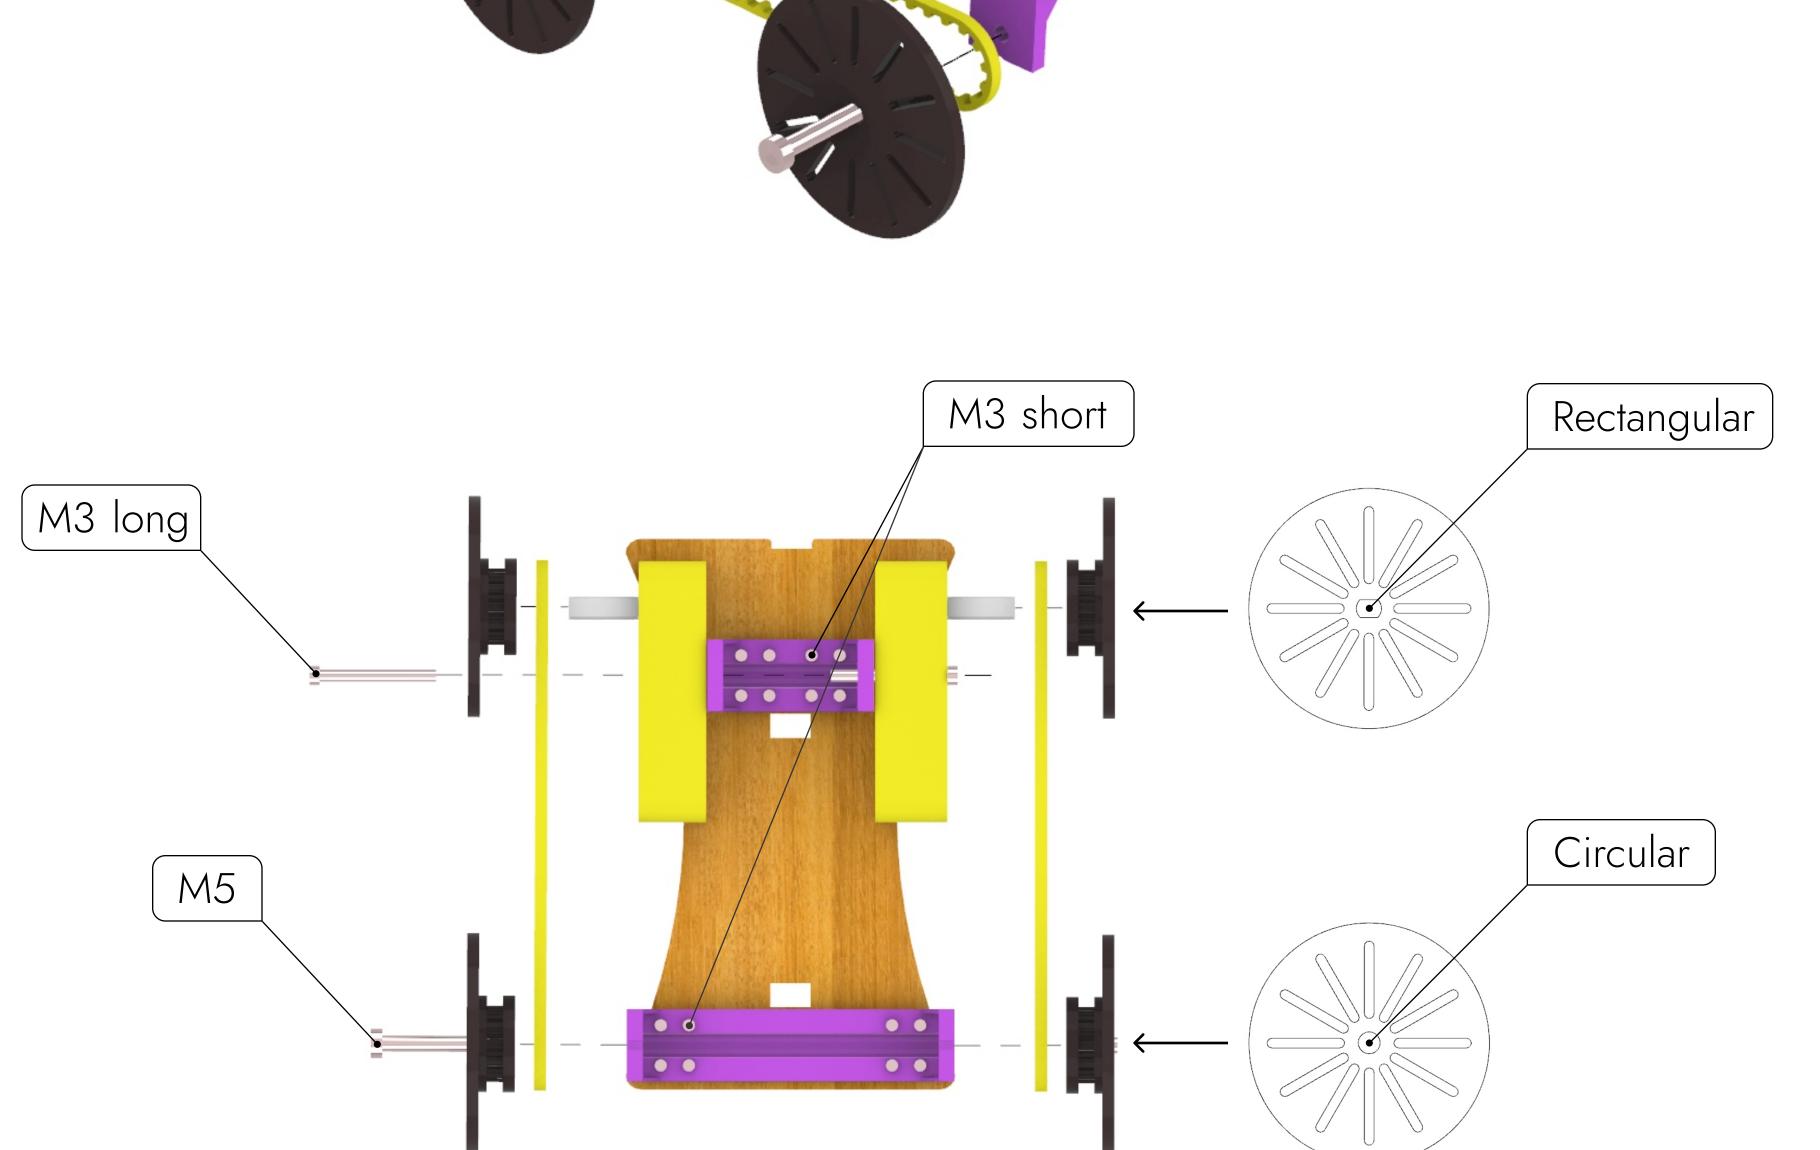

Use zip ties to fasten electronics

