

EASTRON SDM120CTM INSTALLATION GUIDANCE



CT-Meter installation guidance

Preparation List:

1. **Meter** :SDM120CTM 100mA
2. **CT**:ESCT-TA16 100A/100mA



Communication definition:


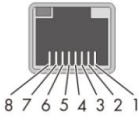
Inverter	Meter	CT
Inv_Pin 1 RS485A-----Meter_10 RS485A Inv_Pin 2 RS485B-----Meter_9 RS485B		Black line-----Meter_1 White line-----Meter_2
  Pin 1=TX_RS485A Pin 2=TX_RS485B Pin 3=NC Pin 4=GND Pin 5=NC Pin 6=NC Pin 7=NC Pin 8=NC		 CT Arrow pointing to inverter

Diagram:

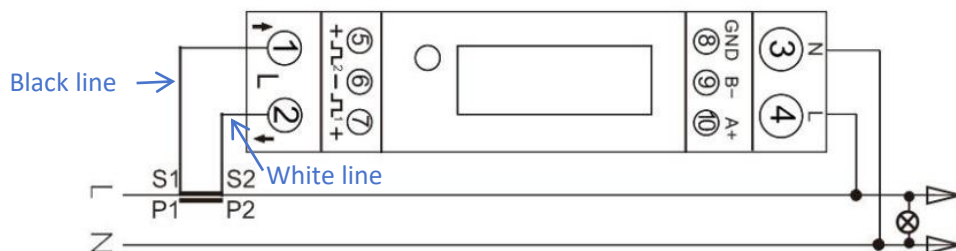

Debugging steps:

1. Ensure that the current ratio is 100A/100mA, if it is other types of nA /100mA, set the ratio on the meter side according to the Appendix.
2. Switch the meter display to the power view according to the Appendix. First to ensure that the meter displays data normally.
3. Check the data on the Rahvolt Cloud APP to ensure that it is consistent with the meter.

Appendix

There is a button on the front of the meter. After initialization and self-checking program, the meter display the measured values. The default page is total kWh. If the user wants to check other information, he needs to press the scroll button on the front panel.

	Click the button, the LCD display will scroll the measurements.
	Keep pressing the button for 3 seconds, the meter will get into set-up mode.

1		Total active energy (kWh) Display format: 0000.00→9999.99→10000.0→99999.9→000000→999999→0000.00
2		Import active energy (kWh) Display format: 0000.00→9999.99→10000.0→99999.9→000000→999999→0000.00
3		Export active energy (kWh) Display format: 0000.00→9999.99→10000.0→99999.9→000000→999999→0000.00
4		Voltage (V)
5		Current (A)
6		Active power (W)
7		Frequency (F)
8		Power factor (PF)

9		Modbus Address (ID) Default: 001
10		Baud rate Default : 2400bps
11		Parity Option: None/even/odd Default: none
12		CT1 Primary current 5A-9999A Default: 5

Set-up Mode

To get into set-up mode, the user need keep pressing the button for 3 seconds, the meter LCD will shows “-SET-“. The meter support to set the CT 1 through button. Under the “-SET” menu, pressing the button again for 3 seconds, enter into the CT1 setting mode.

	Under this menu, long press the button for 3 seconds enter to the set up mode.
	The rightmost digit will flash, press the button to select the CT1 value. (Range: 5. 10. 20. 30. 40. 50. 75. 100. 125. 150. 200. 250. 300. 400. 600)
	After the setting the value, press the button for 3 seconds to confirm the setting. Meanwhile, the display will back to the “total kWh” menu.

Other ManualsLib Projects



www.manualslib.com



www.manualslib.de



www.manualslib.es



www.manualslib.fr



www.manualslib.nl



www.manualslib.mx



www.manualslib.tech 30+ Languages