
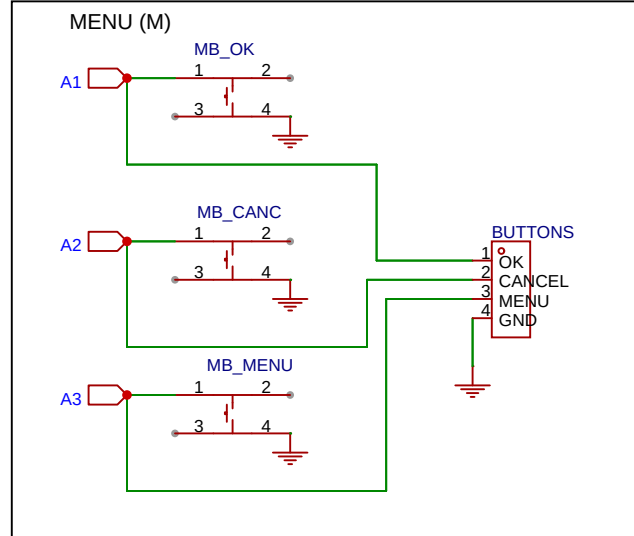
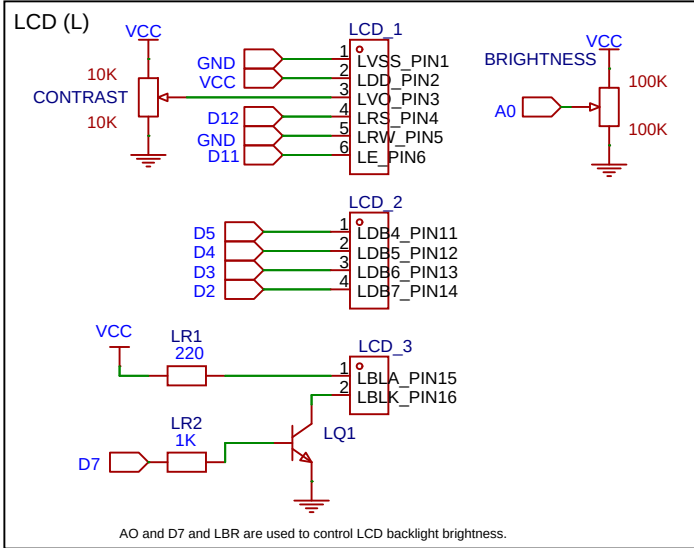


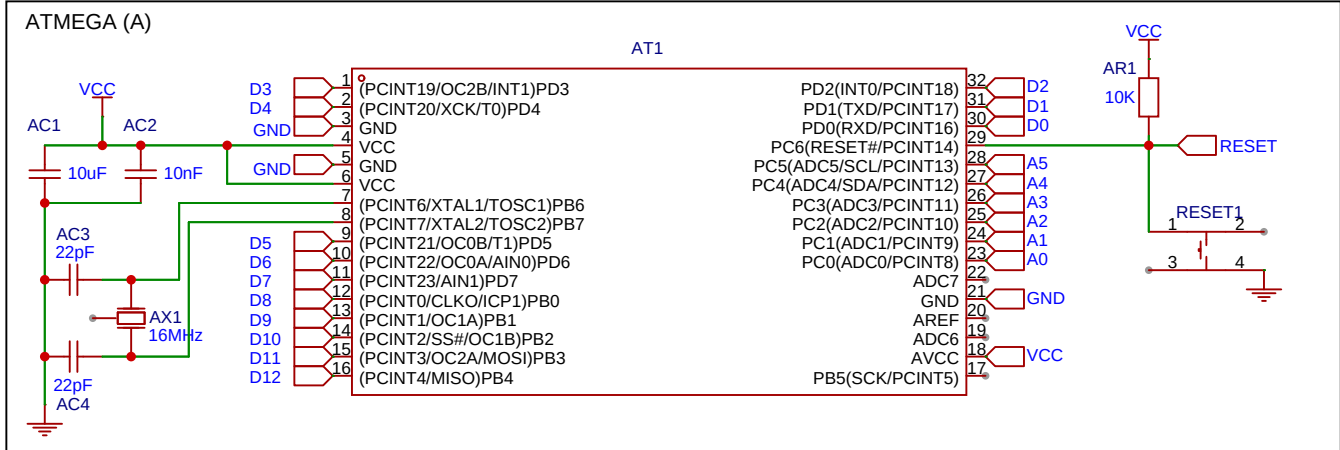

SUB: YAMAHA
SUB: CAMBRIDGE
SPK: YAMAHA
SPK: CAMBRIDGE

REMOTE SWITCH: SUB TO CAMBRIDGE
REMOTE SWITCH: SUB TO YAMAHA

YAMAHA TRIGGER ON: SUB/SPK: YAMAHA
YAMAHA TRIGGER OFF: SUB/SPK: CAMBRIDGE

MENU: PROGRAM REMOTE

JW2SN-DC5V

