

PonyABC Desktop — a short guide

For the PonyABC P5 reading pen. Version 0.3.17.

This app does four things: it puts books on your pen, keeps a copy of your child's recordings, updates the pen itself, and tells you when something needs your attention. You do not need to know anything technical to use it.

1. Install it

1. Open the **Microsoft Store** on your Windows computer.
2. Search for **PonyABC Desktop**, or go to <<https://apps.microsoft.com/detail/9P544XC6B609>>.
3. Select **Get**, then **Open**.

There is nothing to set up afterwards.


On a Mac you can manage books and recordings, but not update the pen itself — see section 6.

2. Connect your pen


Use the **USB cable** that came with the pen, plugged into your computer.

A Bluetooth connection is not enough. The pen has to appear as a drive on your computer for the app to put anything on it, and only the cable does that.


When it is connected, the first page says so:

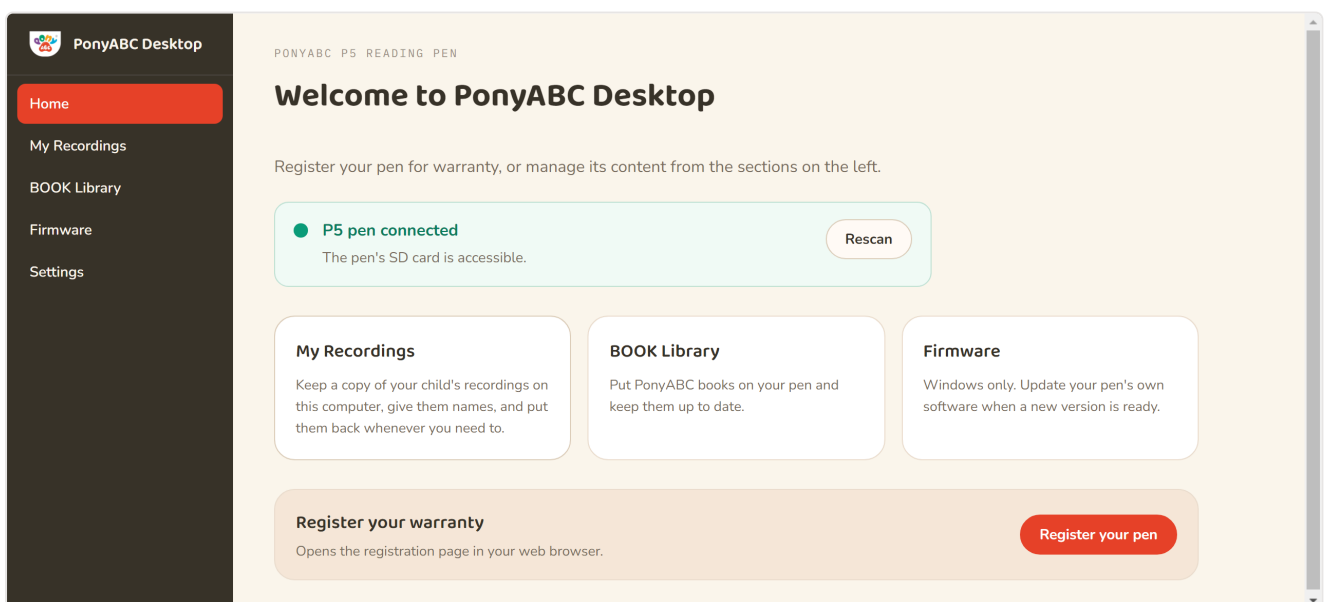

If it says the pen is not connected, try a different cable or a different USB socket. Some cables are made for charging only and cannot carry data.

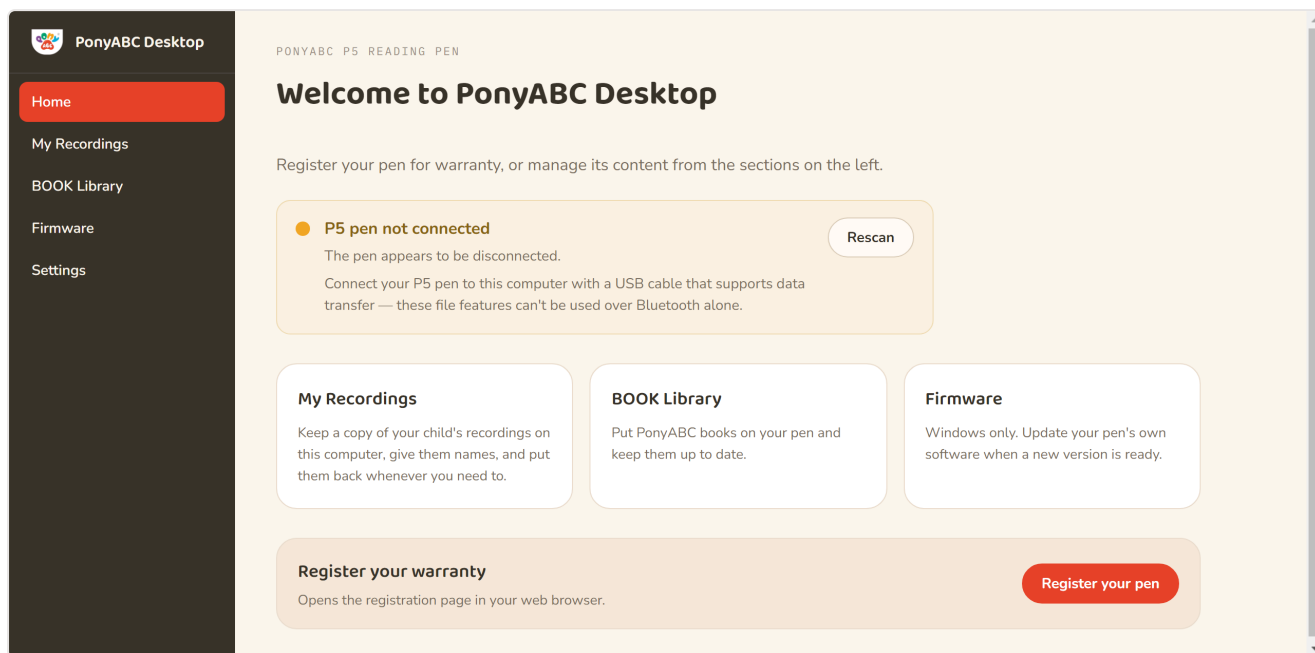

3. Put books on your pen

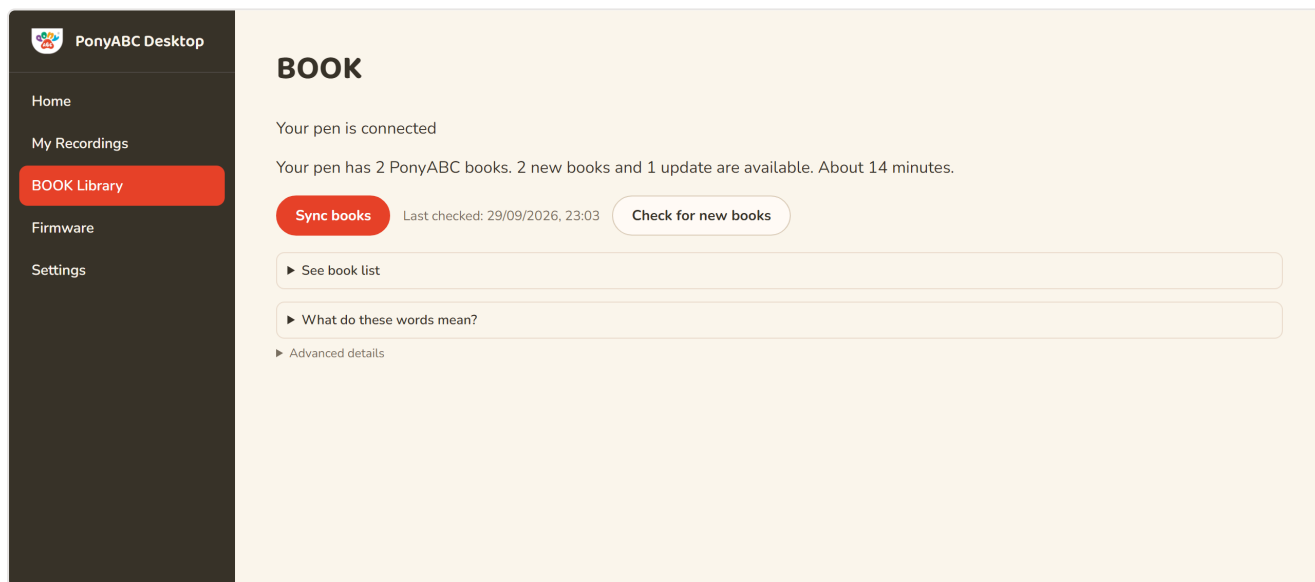

Go to **BOOK Library**. The app tells you, in one line, what it would do:

Your pen has 2 PonyABC books. 2 new books and 1 update are available. About 14 minutes.

Select **Sync books**. That is the whole thing — you do not choose books, and you cannot remove them by accident.

While it works, keep the pen plugged in:

Please don't unplug your pen


Your pen is being written to. Unplugging now could leave a book unfinished.

 A photo of this screen while it is working goes here.

(To be taken during the real-pen test session.)

It takes a while, and that is normal. The pen reads and writes slowly — about a megabyte a second — so a large book can take twenty minutes. The app tells you roughly how long before it starts, and counts down while it goes. You can leave it and come back.

When everything is already up to date

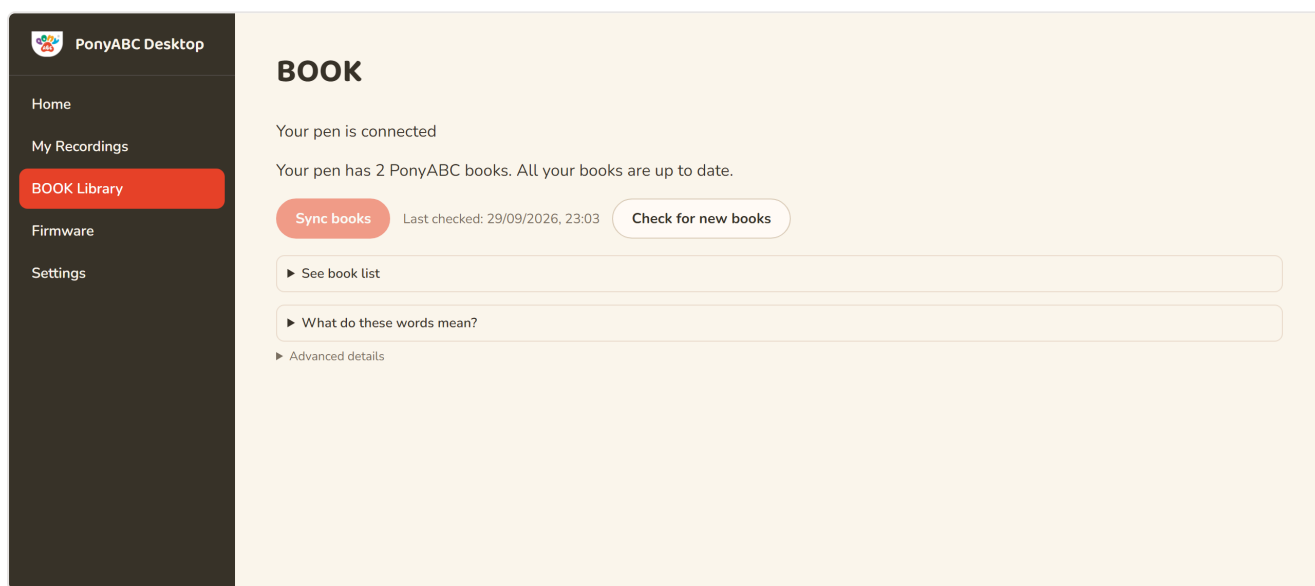


All your books are up to date.

Nothing to do. Select **Check for new books** any time you want to look again.

4. Switch your pen off and on

Whenever a sync has put anything on your pen — a new book or a newer version of one you already had — it finishes with:

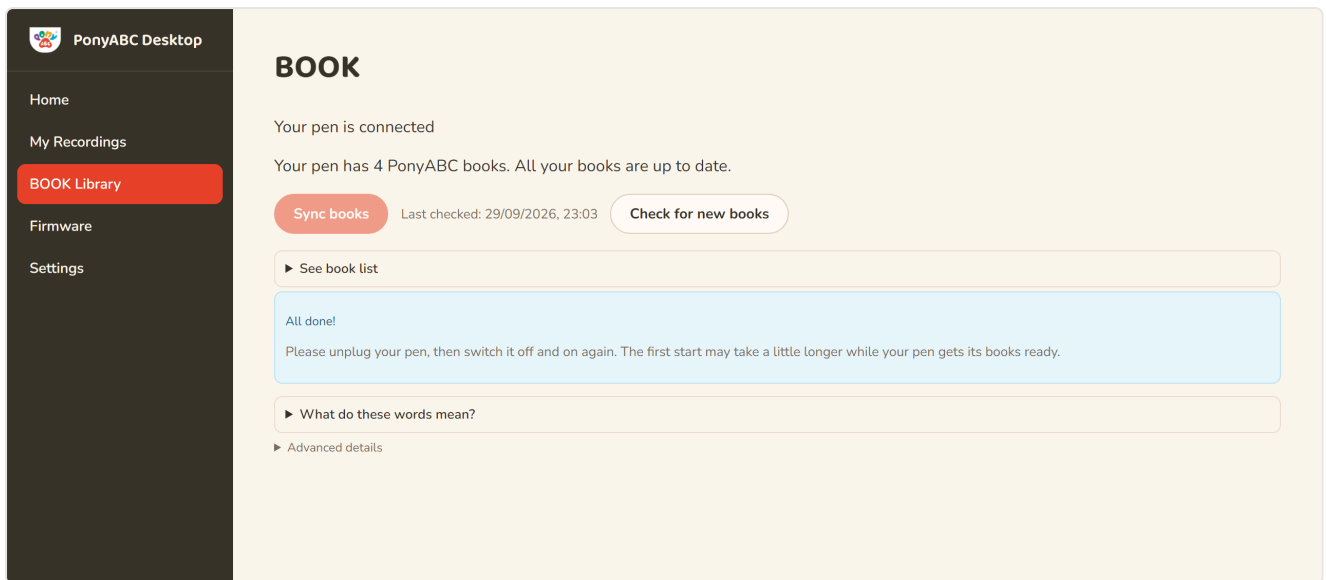

All done!

Please unplug your pen, then switch it off and on again. The first start may take a little


longer while your pen gets its books ready.

Please do this every time you see it. The pen builds its own list of books when it starts, and until it has, what the app just put there will not play properly.

That first start is slower than usual. The pen is working, not stuck. Leave it on until it responds.

If there was nothing to sync, nothing happens to your pen and you will not be asked to restart it.

5. If your pen runs out of space

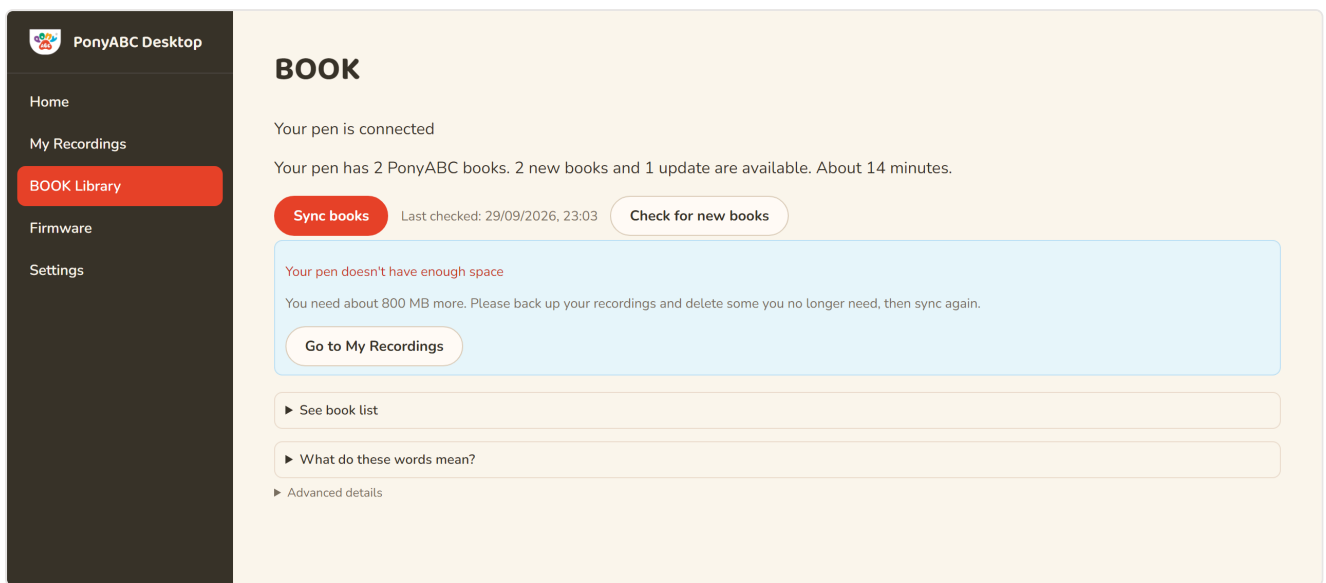

Your pen doesn't have enough space


You need about 800 MB more. Please back up your recordings and delete some you no longer need,

then sync again.

Nothing has been written to your pen, and nothing is broken. The app checks before it starts precisely so you are not left half-way.

Select **Go to My Recordings**, back up your recordings to this computer, then delete the ones you no longer need from the pen. Your backed-up copies stay on the computer.


Occasionally the app cannot read how much room is left at all. It stops there rather than guessing:


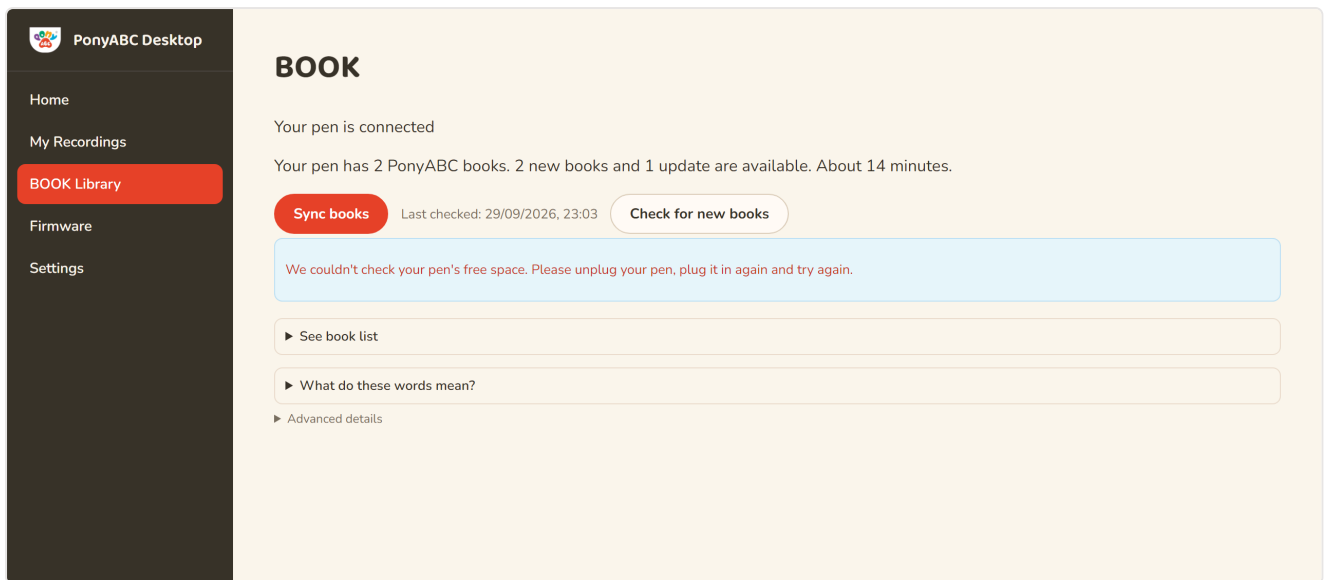


Unplug the pen, plug it in again, and try once more.


6. Update the pen itself (Windows only)

Occasionally the pen's own software needs updating. Go to **Firmware** and follow the steps. The app walks you through them one at a time.

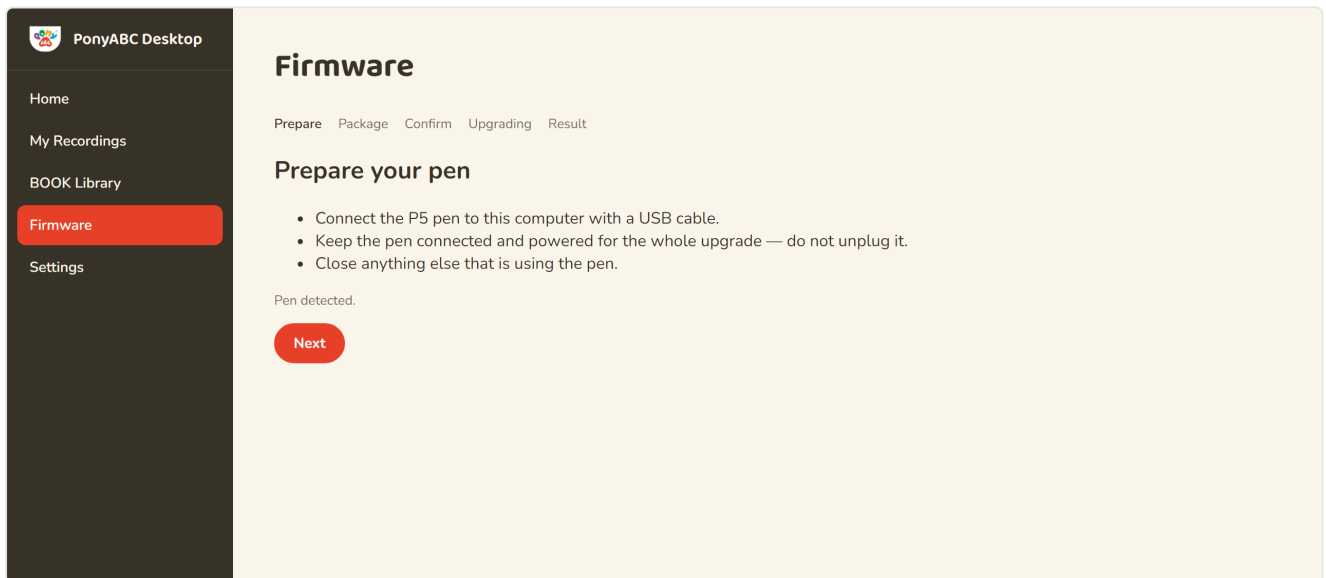


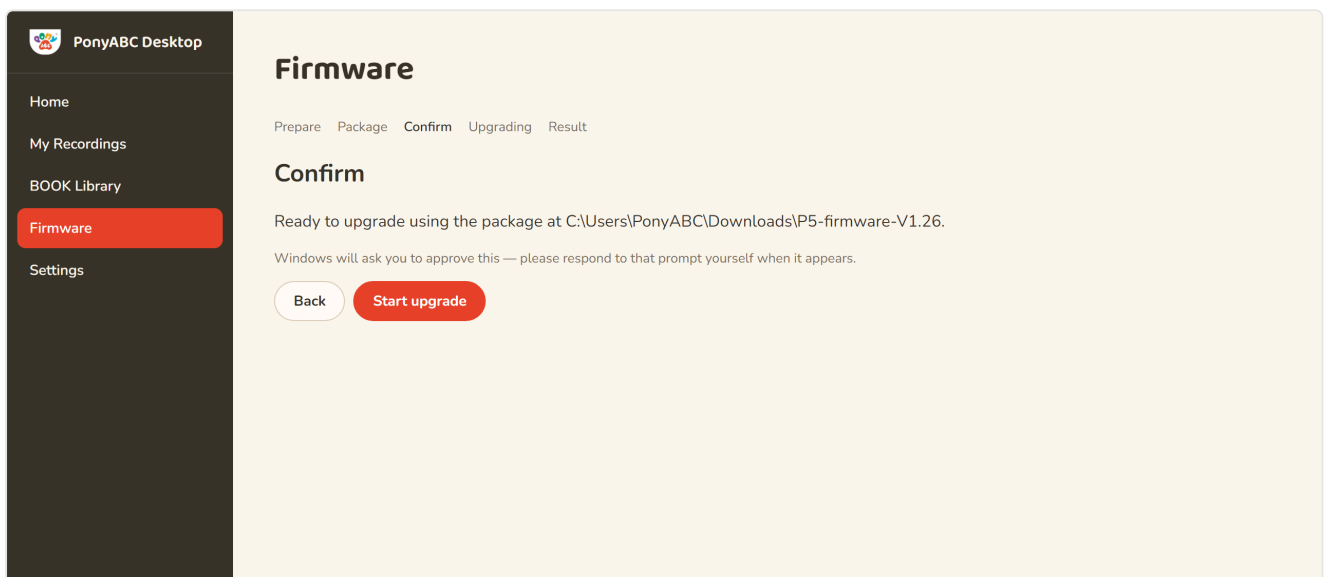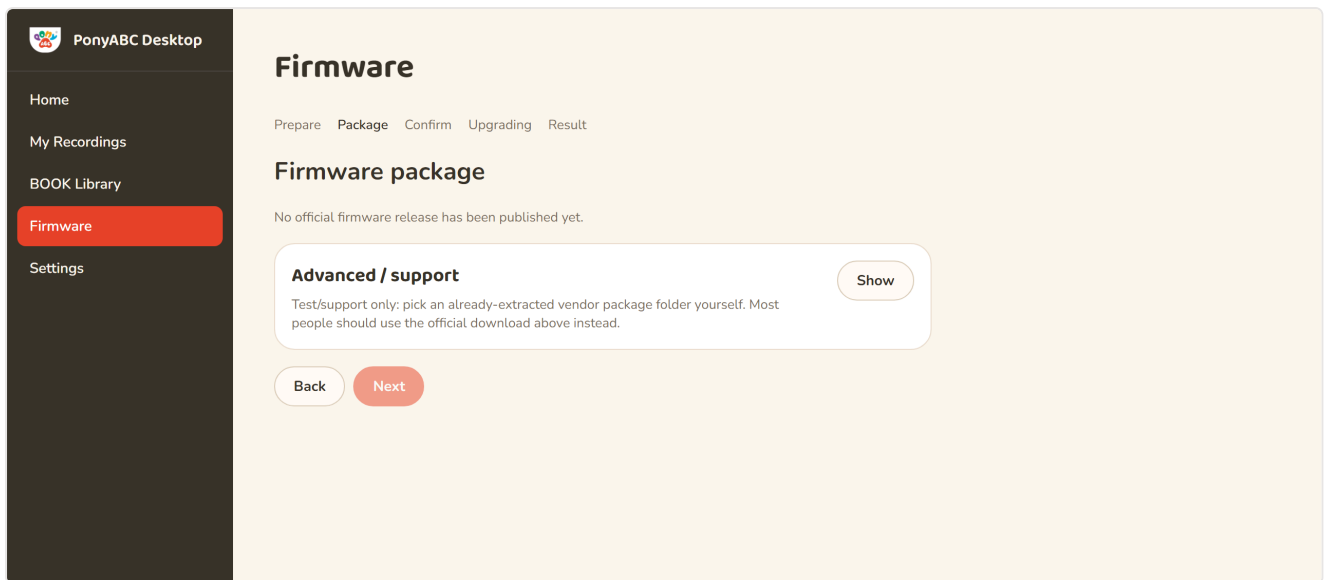

- Windows will ask your permission partway through. Please say yes — it cannot continue otherwise.
- **Do not unplug the pen** while it runs.
- When it finishes, switch the pen off and on and try one of your books.

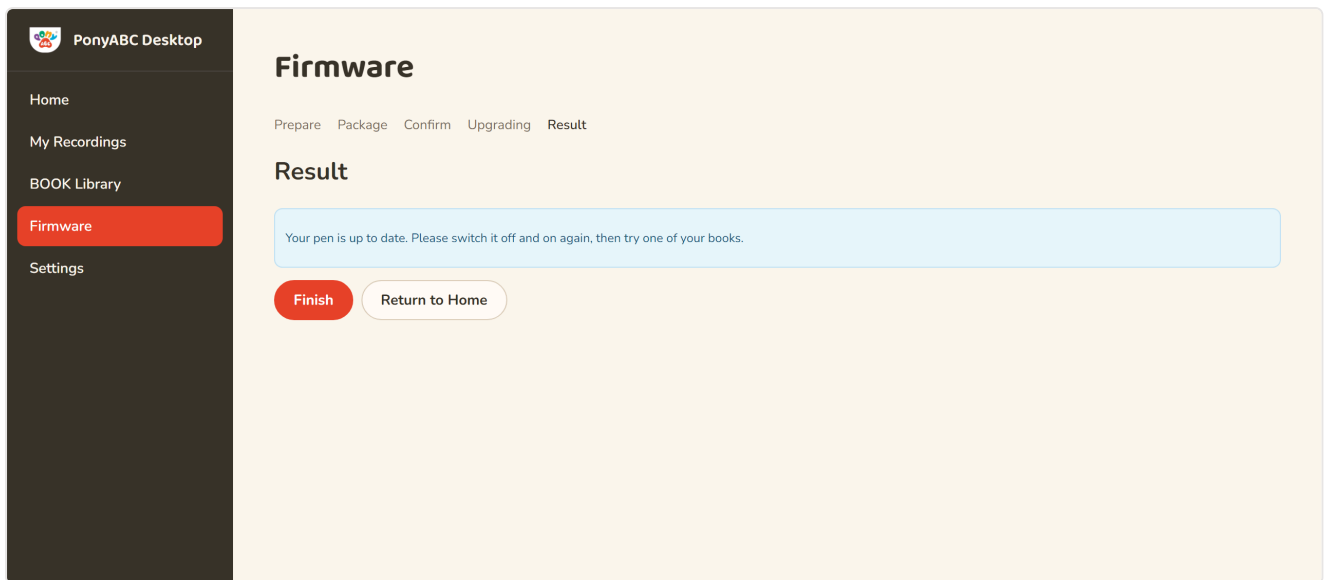


If something stops it before it starts — including saying no to the Windows prompt — the app tells you plainly, and your pen has not been touched:

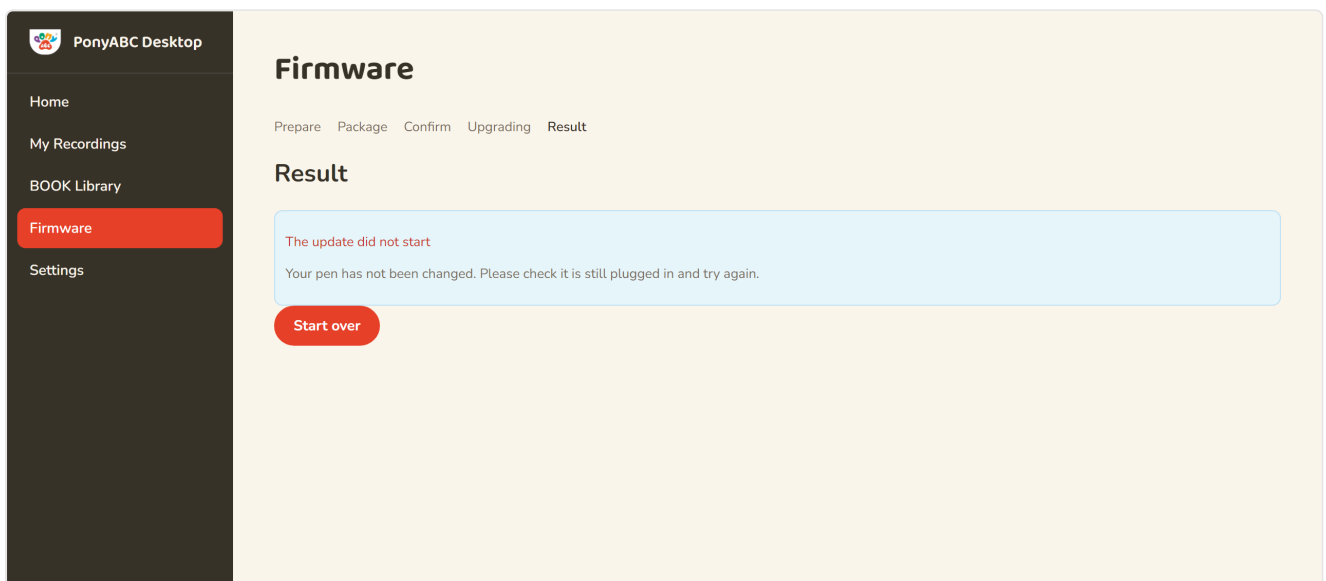


This is not available on a Mac.

7. Your child's recordings


Go to **My Recordings**. Everything on the pen is on the left; the backups kept on this computer are on the right.

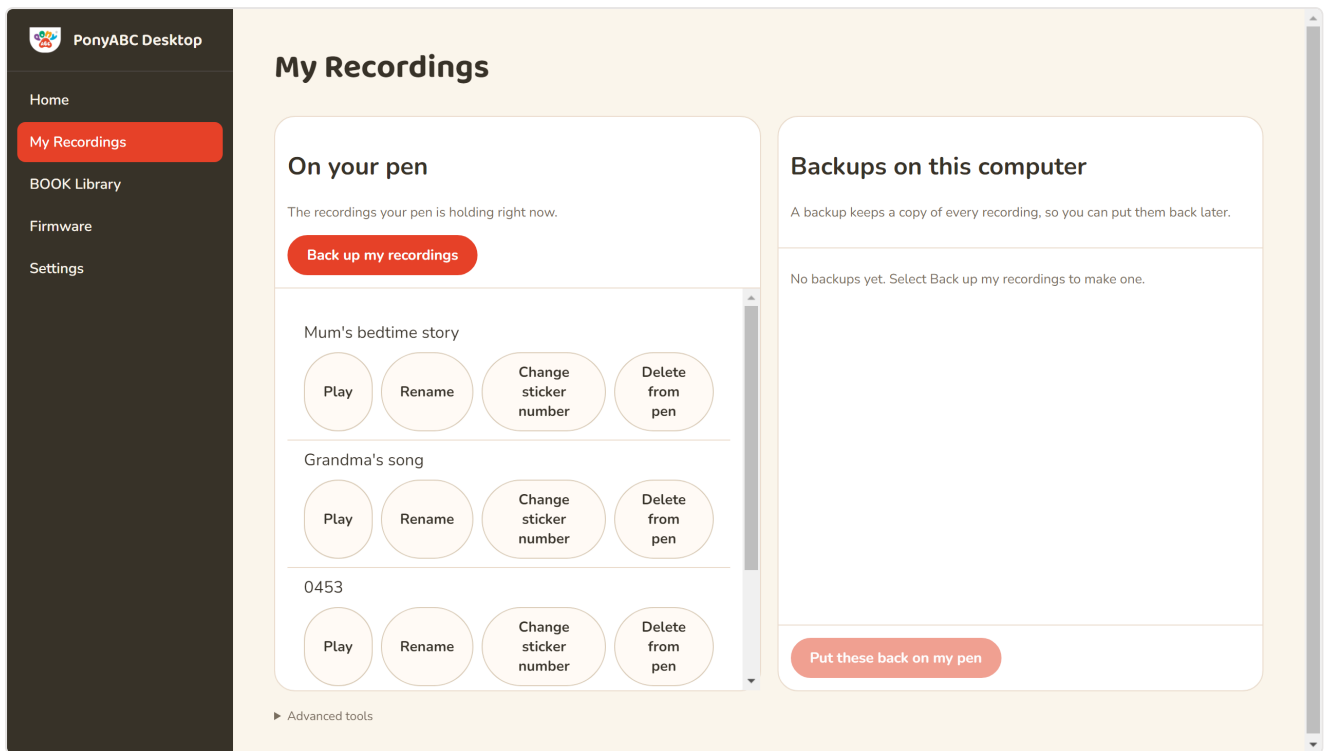


- **Back up my recordings** copies everything on the pen to this computer. Do this before you delete anything.

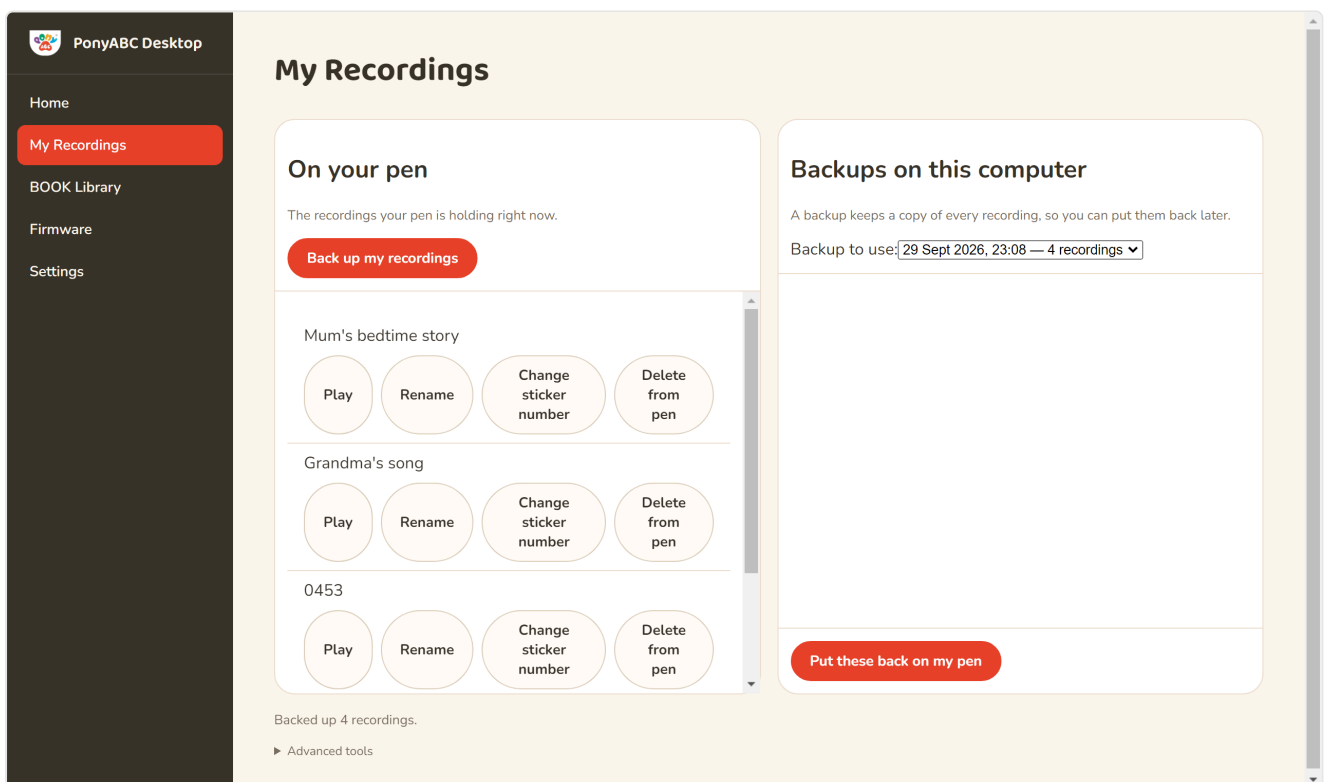


- **Put these back on my pen** restores from a backup. If a recording already exists on that sticker number, the app plays you both and asks which to keep — it never chooses for you.

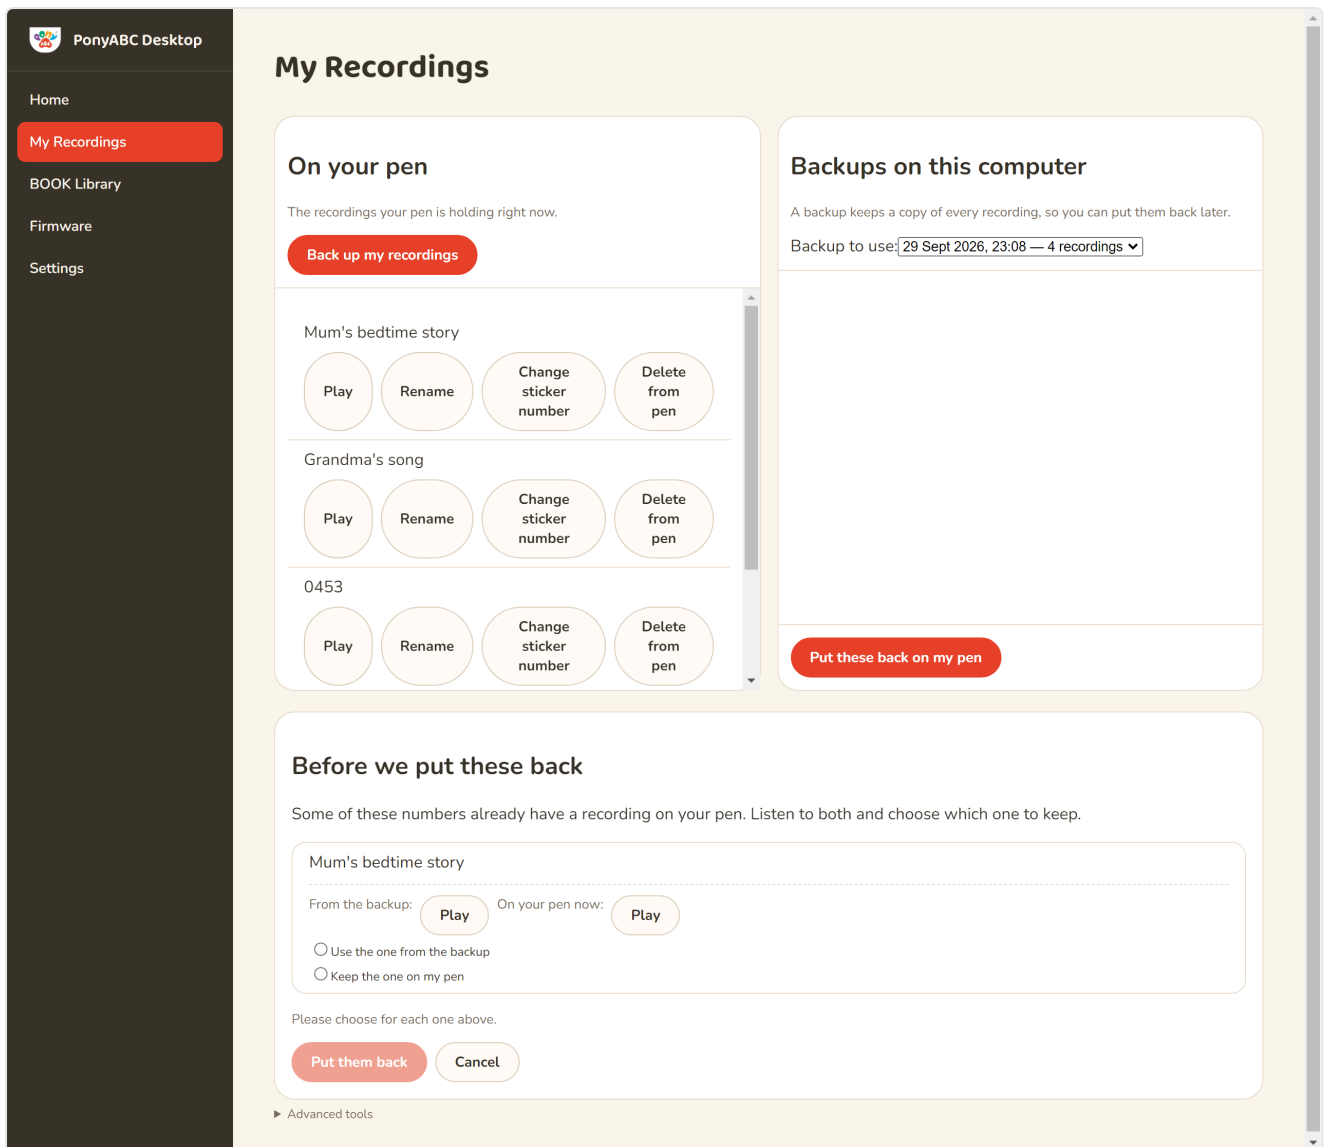

- **Rename** gives a recording a name you will recognise. The name stays on this computer; the pen always uses the sticker number.

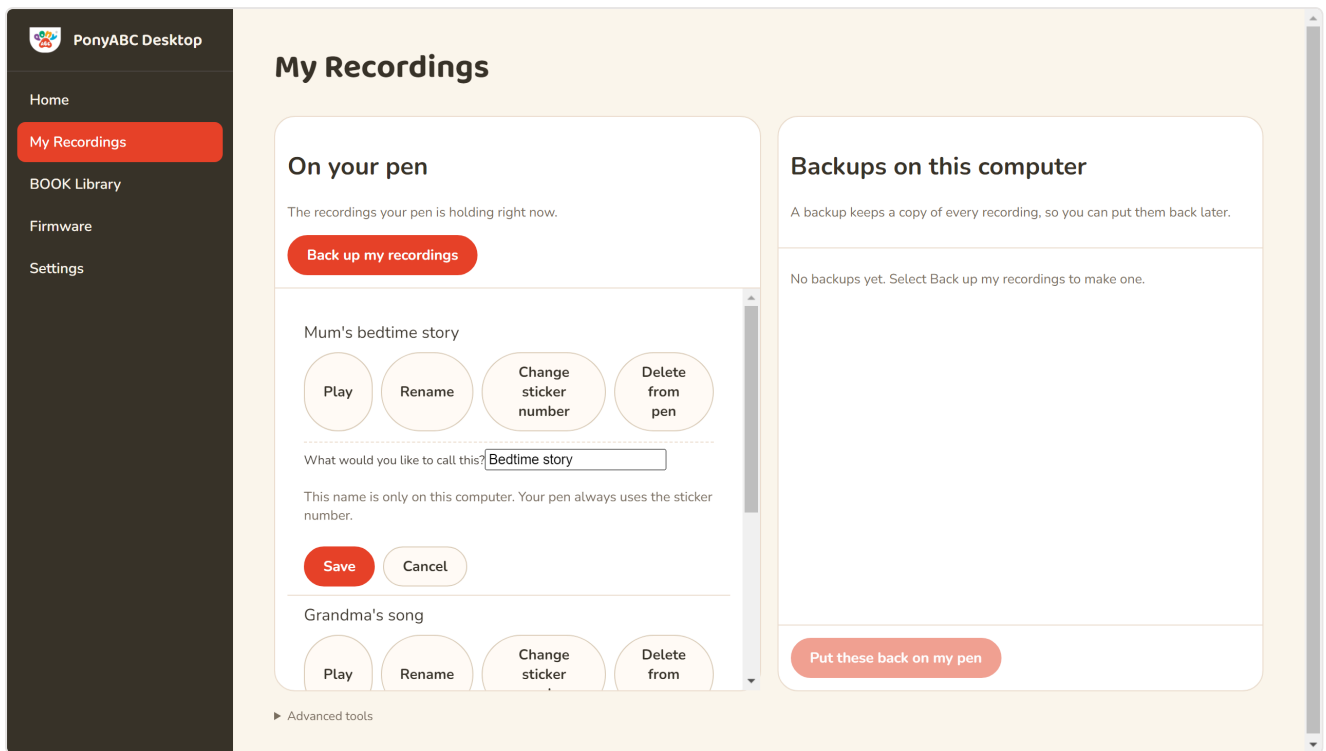

- **Change sticker number** moves a recording to a different sticker. Type the number exactly as it is printed, including any zeros at the start.

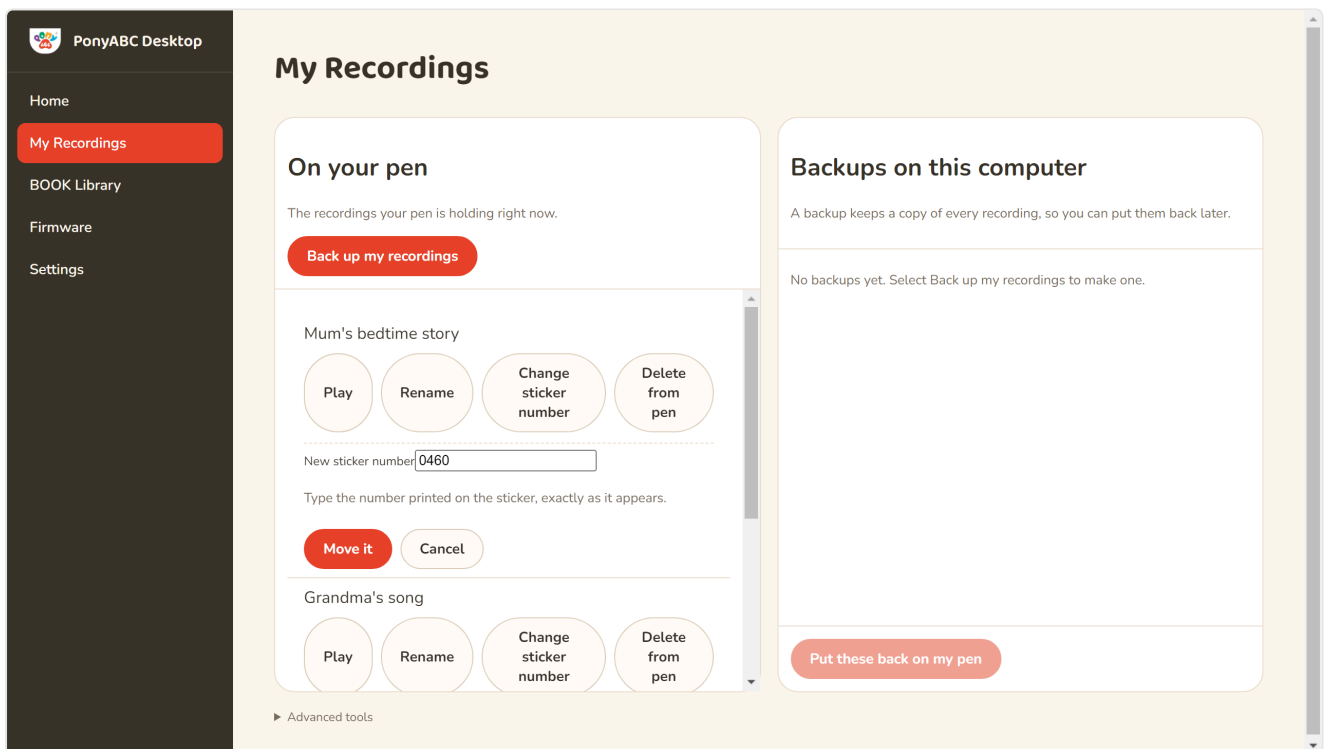

- **Delete from pen** always saves a copy to this computer first.

8. What the words mean

The app says	It means
Your pen is connected	The app can see your pen and can put books on it.
Up to date	This book is the current version. Nothing to do.
Update available	There is a newer version of this book. Sync will replace it.
Other books (not from PonyABC)	Books that came from somewhere else. The app never changes them.
All done!	The sync finished. Unplug and restart the pen.

The same list is on the BOOK Library page itself, under **What do these words mean?**, with an **Advanced details** section below it for anything our support team asks you to open.


The screenshot shows the PonyABC Desktop application interface. On the left is a dark sidebar with a menu: Home, My Recordings, BOOK Library (highlighted in red), Firmware, and Settings. The main area has a light beige background. At the top, it says 'BOOK'. Below that, it states 'Your pen is connected' and 'Your pen has 2 PonyABC books. 2 new books and 1 update are available. About 14 minutes.' There are two buttons: 'Sync books' (red) and 'Check for new books' (white with a grey border). Below these is a link 'See book list'. A section titled 'What do these words mean?' is expanded, showing a table of status messages and their meanings. At the bottom of this section is a link 'Advanced details'.

▼ What do these words mean?	
Each book shows whether it is on your pen. Open Advanced details if you need the technical version.	
On your pen	This book is on your pen and ready to use.
Update available	A newer version of this book is available. Sync books replaces it — the old one is kept as a backup first.
Not on your pen yet	This book is not on your pen yet. Sync books puts it on.
Downloading...	The book is being copied to this computer, and then to your pen.
Checking...	The app is checking this book. It only takes a moment.
Something's not right — open for help	This one needs a closer look — the book list may be incomplete. Nothing is wrong with your pen. Open Advanced details, or contact support.
► Advanced details	
► Advanced details	

9. If something goes wrong

The app says my pen isn't connected. Try the other end of the cable, a different USB socket, and a different cable. Charging-only cables are common and will not work.

A book I added doesn't play. Switch the pen off and on and wait for it to finish starting. If it still does not play, open the app with the pen connected — if it offers ****Fix my pen's book list****, select it, then restart the pen again.

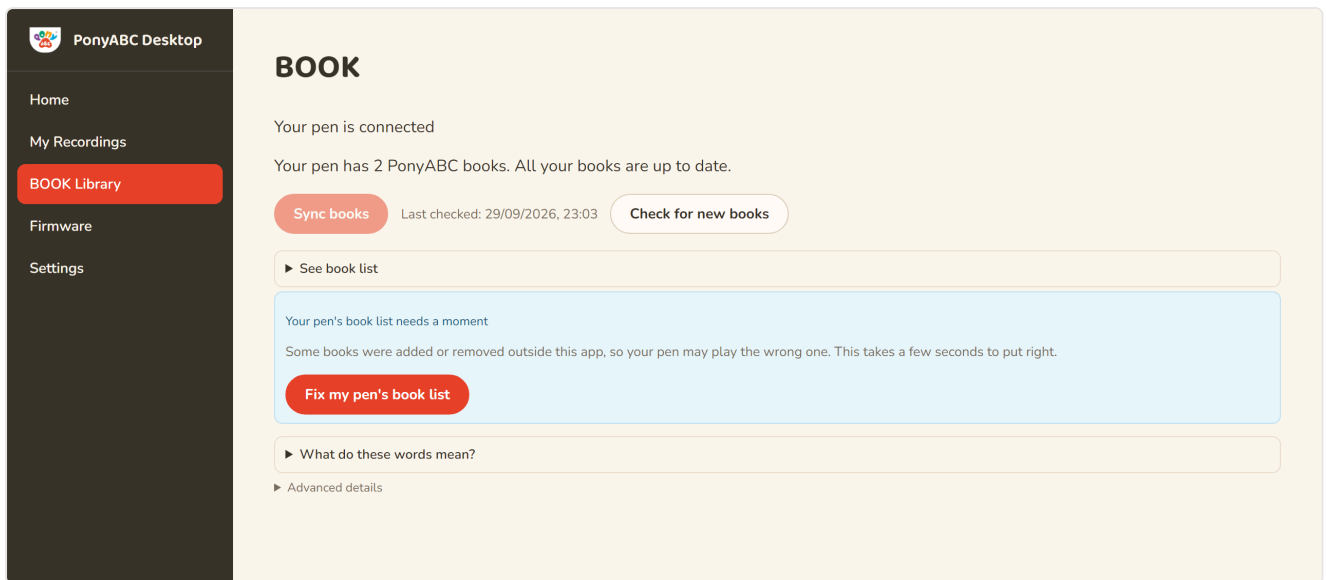

The app says it couldn't check my pen's free space. Unplug the pen, plug it in again, and try again.

It has been copying for a long time. That is usually normal — a large book takes about twenty minutes. The progress bar moves slowly but it does move.

Something else. Go to **Settings** → **Export diagnostics**, and send us the file it saves.

It contains a record of what the app did, which is how we can tell what happened.

PonyABC · <<https://ponyabc.uk>>