
Outlander（GM4W), Outlander PHEV（GN0W）
Steering wheel product date confirmation and replacement procedure

＜Work flow＞

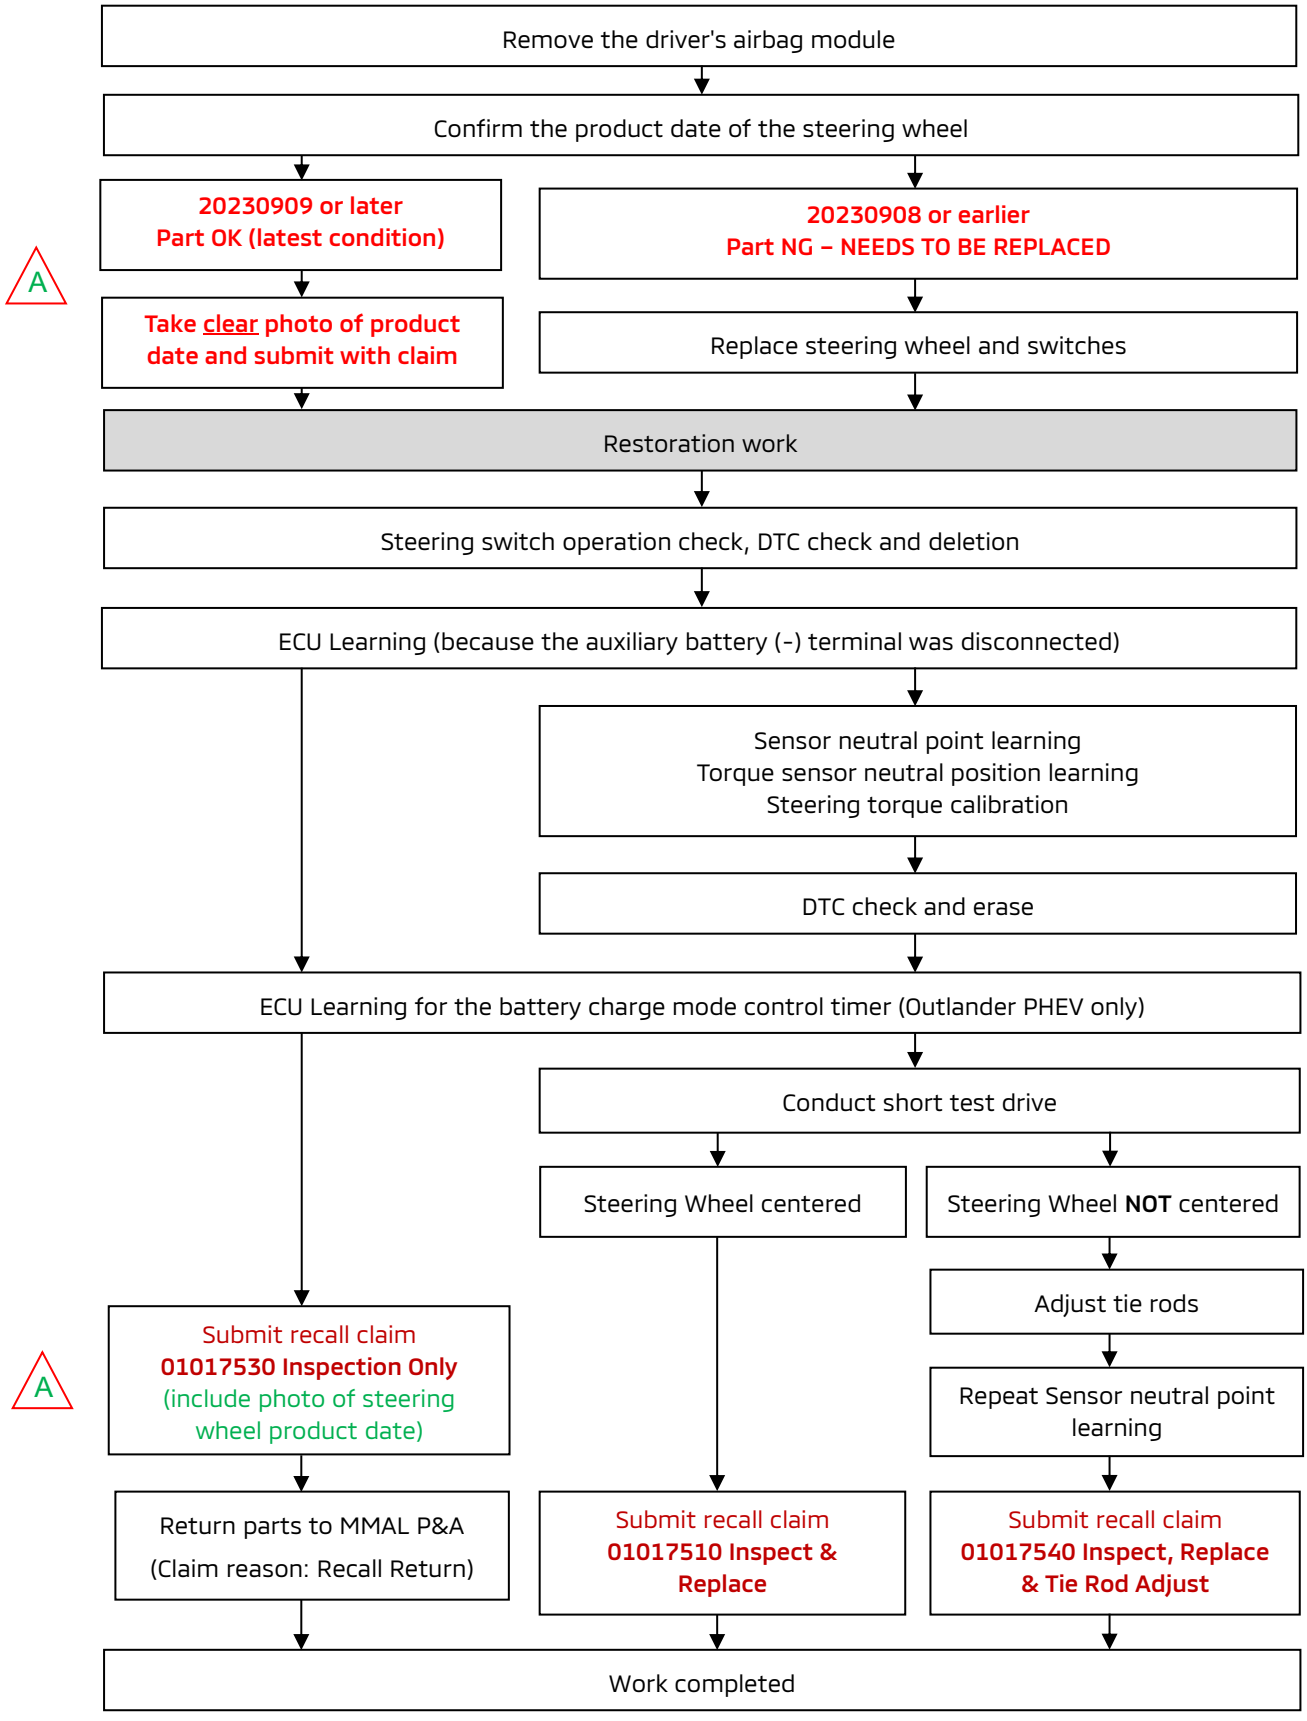

Commercial In Confidence

<Required parts and tools>

(a) Required parts

Check the steering wheel identification (product date), and if it is not a countermeasure part, it needs to be replaced.

If the countermeasure part is fitted, there are no replacement parts.

Component parts		Part No.	Qty
①	Steering wheel ASSY	MW400340	1
②	Steering switch ASSY	MW400346	1
③	Steering wheel bolt	MW400341	1



①Steering wheel ASSY



②Steering switch ASSY



③Steering wheel bolt

(b) Special tool

Tool name	Picture
Steering wheel puller <Commercially available also can be utilized.	

(c) Other general tools

Tool name	Picture	Tool name	Picture
T-30 Torx screwdriver		Ratchet wrench	
T-50 Torx socket		Torque wrench	—
		(-) Screw Driver	—

Commercial In Confidence

1. Remove the driver's airbag module

(a) Refer to workshop manual and remove the driver's airbag module.

⚠ Caution
- **Before removing or attaching any SRS airbag components or harnesses, turn Outlander: engine switch/Outlander PHEV: power switch OFF, disconnect the auxiliary battery (-) terminal, and leave it for at least three minutes.**


2. Check before or after steering wheel countermeasure

(a) Check the date on the label attached to the steering wheel (YYYYMMDD format)



Date	Judgement	Remark
20230908 or earlier	Steering wheel needs to be replaced as it is a product before countermeasure. (Go to "3. Steering wheel replacement")	September 8, 2023 or earlier
20230909 or later	No need to replace steering wheel as this is a countermeasure product (Go to "4. Restoration Work")	September 9, 2023 or later
Not possible to identify	Steering wheel needs to be replaced (Go to "3. Steering wheel replacement")	Unable to identify due to torn label, faded numbers, etc.

<Label location: 4 o'clock position on steering wheel>

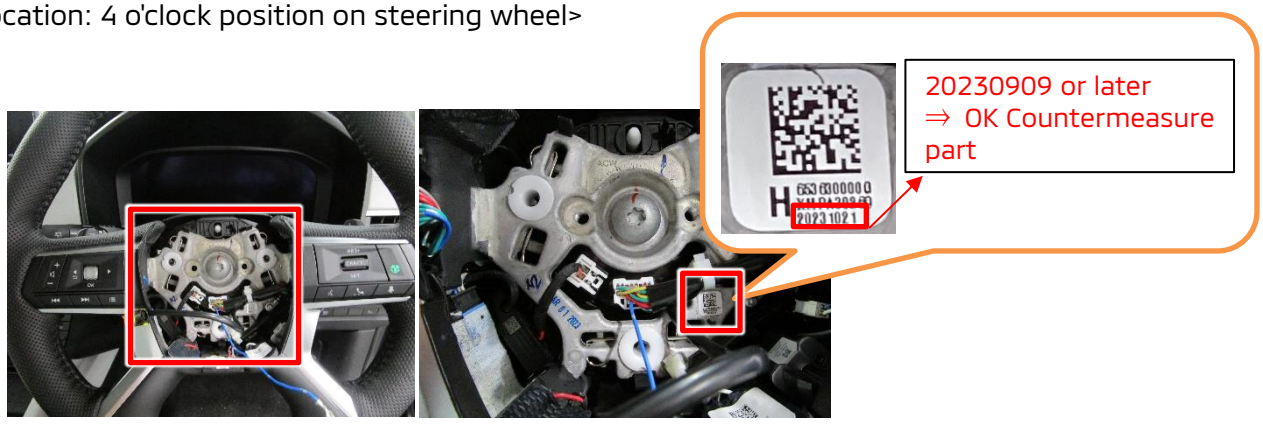

3. Steering wheel replacement

(a) Refer to workshop manual and replace the steering wheel.

4. Restoration work

(a) Refer to workshop manual, install the driver's airbag module, and restore the vehicle.

Commercial In Confidence

5. Steering switch operation check, DTC check and erase

⚠ Caution
- Provide power backup as necessary to prevent the auxiliary battery from running out. **- Be careful when backing up the auxiliary battery when the Outlander is "idling"/Outlander PHEV "READY" (hereinafter referred to as "idling"/"READY"), as this may result in the battery becoming overcharged.**

(a) Turn "Power Mode ON" and check that the combination meter is displayed.
"Power Mode ON": Without depressing the brake pedal, press Outlander: engine switch/Outlander PHEV: power switch once.

(b) Check the operation of the steering switches.
Left side: Press  and check that the screen in the combination meter changes.
Right side: Press the MI-PILOT switch and check that the MI-PILOT operation light appears in the combination meter.

(c) Connect the MUT-Ⅲ SE and check and clear DTCs.
☞ Check DTCs because the driver's airbag module has been removed.
☞ If DTCs do not clear, refer to workshop manual and perform a fault diagnosis.

6. ECU Learning as the auxiliary battery (-) terminal) was disconnected

(a) Learn the throttle valve control servo according to workshop manual.

(b) Initialize the power window system operation according to workshop manual.

Commercial In Confidence

7. [ABS] Sensor neutral point learning <Power mode ON>

⚠ Caution

- **Always perform this with "power mode ON". (An error may be displayed if performed with the vehicle in "idling"/"READY" mode.)**
- **Never touch the steering wheel while learning is in progress.**
- **After learning is completed, the combination meter will display "System failure...", but turning the power mode OFF/ON will return the system to normal.**
- **If the "System failure..." message does not disappear, perform the steps below and then perform "Sensor neutral point learning" again.**

1. Close and lock all doors, hood, and tailgate.
2. Wait for more than two minutes, and make sure that the combination meter, the P indicator on the parking lock switch (above the selector lever), and the parking brake switch indicator light are off, then unlock and turn "power mode ON".
3. Perform "All DTCs (erase & read)".

(a) Turn on the power mode.

(b) Perform the following preliminary inspections for diagnosis.
① Remove the steering cover if one was installed during maintenance.
② Park the vehicle on a flat surface.
③ Adjust the tire pressure to the specified pressure value.
④ Remove any cargo from the vehicle.
☞ Remove heavy cargo only if it will change the vehicle's posture.
<Reference: Learning conditions>
- Outlander: Engine not started
- Outlander PHEV: READY (ready to drive) indicator light: off
- Shift position: P position
- MI-PILOT: OFF
- Vehicle speed: 0km/h
- ADAS C/U voltage: 10.5V or higher
- Parking brake switch indicator light is on.
- Steering wheel: Center (within ±15°)

(c) Use MUT-III SE to perform ABS sensor neutral point learning. (About 20 seconds)
From the system list, select "ABS" ⇒ "Special Functions" ⇒ "Sensor Neutral Point Learning" ⇒ OK (✓)
(Selected item: Steering Angle Sensor Adjustment)

(d) After learning is completed, the combination meter will display "System Failure...", so turn the power mode OFF and wait 5 seconds. Turn the power mode ON again.

(e) Pull the parking brake switch.

(f) Turn "Power Mode ON" OFF.

Commercial In Confidence

(g) Get out of the vehicle and close all doors.

(h) Wait for more than 2 minutes, and from outside the vehicle, check that the combination meter, the P indicator on the parking lock switch (on the selector lever), and the parking brake switch indicator light are off, then turn "Power Mode ON".

8. [Electric power steering/DAST3] Learning (torque sensor neutral position learning) <Power mode ON>

⚠ Caution
・Always carry out this procedure with the power mode ON. (An error may be displayed if this is carried out while the vehicle is idling/in READY mode.) **・Never touch the steering wheel while learning is in progress.** **・If an error occurs, carry out the steps below and then start again from "11. [ABS] Sensor neutral point learning <power mode ON>".** **1. Close and lock all doors, hood, and tailgate.** **2) Wait for more than two minutes, then make sure that the combination meter, the P indicator on the parking lock switch (on the selector lever), and the parking brake switch indicator light are off, then unlock the vehicle and turn "power mode ON."** **3) Carry out "All DTCs (erase & read)."**

(a) Make sure that "power mode is ON".

(b) Use MUT-III SE to learn the electric power steering/DAST3. (Approximately 20 seconds)
From the system list, select "Electric power steering/DAST3" ⇒ "Special functions" ⇒ "Learning" ⇒ OK (✓)
(Selected item: Torque sensor neutral position learning)

(c) Change "power mode ON" to OFF.

(d) Wait 5 seconds.

(e) Turn "power mode ON".

(f) Pull the parking brake switch.

(g) Change "power mode ON" to OFF.

(h) Get out of the car and close all doors.

(i) Wait for more than 2 minutes, and from outside the vehicle, make sure that the combination meter, the P indicator on the parking lock switch (on the selector lever), and the parking brake switch indicator light are off, then turn "power mode ON".

Commercial In Confidence

9. [Automatic distance control system/ADAS] Steering torque calibration <"Idle driving"/"READY">

⚠ Caution

- **Always perform this when the vehicle is "idling"/"READY". (An error may be displayed if performed with power mode ON.)**
- **Never touch the steering wheel while learning is in progress.**
- **If an error occurs, perform the steps below and then perform "11. [ABS] Sensor neutral point learning <power mode ON>" again.**
  1. **Close and lock all doors, hood, and tailgate.**
  2. **Wait for more than two minutes, and then check that the combination meter, the P indicator on the parking lock switch (on the selector lever), and the parking brake switch indicator light are off, then unlock and turn "power mode ON".**
  3. **Perform "All DTCs (erase & read)".**

(a) Set to "Idle driving"/"READY".

(b) Use MUT-III SE to perform steering torque calibration for the automatic distance control system/ADAS. (Approximately 30 seconds)

From the system list, select "Automatic distance control system/ADAS" ⇒ "Special functions" ⇒ "Steering torque calibration" ⇒ OK (✓)

(Selected item: Steering torque calibration)

(c) Set to OFF from "Idle driving"/"READY".

(d) Wait 5 seconds.

(e) Set to "Power mode ON".

(f) Pull the parking brake switch.

(g) Set to OFF from "Power mode ON".

(h) Get out of the car and close all doors.

(i) Wait for more than 2 minutes, and from outside the car, check that the combination meter, the P indicator on the parking lock switch (on the selector lever), and the parking brake switch indicator light are off, then set to "Power mode ON".

Commercial In Confidence

10. DTCs clear

(a) Perform "all DTCs (erase & read)" on MUT-III SE

⚠ Caution

・If the diagnostics remains at "Currently faulty", learning/calibration may not have been performed correctly, so after performing the steps below, please perform "11. [ABS] Sensor neutral point learning <Power mode ON>" again.

1. Close and lock all doors, hood and tailgate.

2. Wait for more than two minutes and make sure that the combination meter, P indicator on the parking lock switch (above the selector lever) and parking brake switch indicator lights are off, then unlock and turn "Power mode ON".

3. Perform "All DTCs (erase & read)".

11. Learning the battery charge mode control timer (replacing fuel in the fuel line) (PHEV only)

(a) Press the EV mode selector switch to select "CHARGE" and start the engine.

Each time press the EV mode selector switch, the mode will change in the following order:

"NORMAL" ⇒ "EV" ⇒ "SAVE" ⇒ "CHARGE" ⇒ "NORMAL"

12. Conduct Short Test Drive

(a) If the steering wheel is centered then no further action is required.

(b) If the steering wheel is NOT centered follow Steps 13 & 14.

IF THE STEERING WHEEL IS NOT CENTERED:

13. Adjust the Tie Rods to Centre the Steering Wheel

(a) As per the Workshop Manual.

14. Repeat the Sensor Neutral Point learning

(a) Selected item: Steering Angle Sensor Adjustment

This completes the procedure.

Commercial In Confidence