Revision G – 29/04/2026


020223 and 020224 Work Procedure

Service Interval Update – ALL models


ENSURE BATTERY CHARGER IS CONNECTED TO VEHICLE PRIOR TO COMMENCING SOFTWARE UPDATE

1. Turn Ignition on to permanent IGN mode - Permanent IGN is displayed on instrument cluster


2. Click on **USB Token or Certificate**

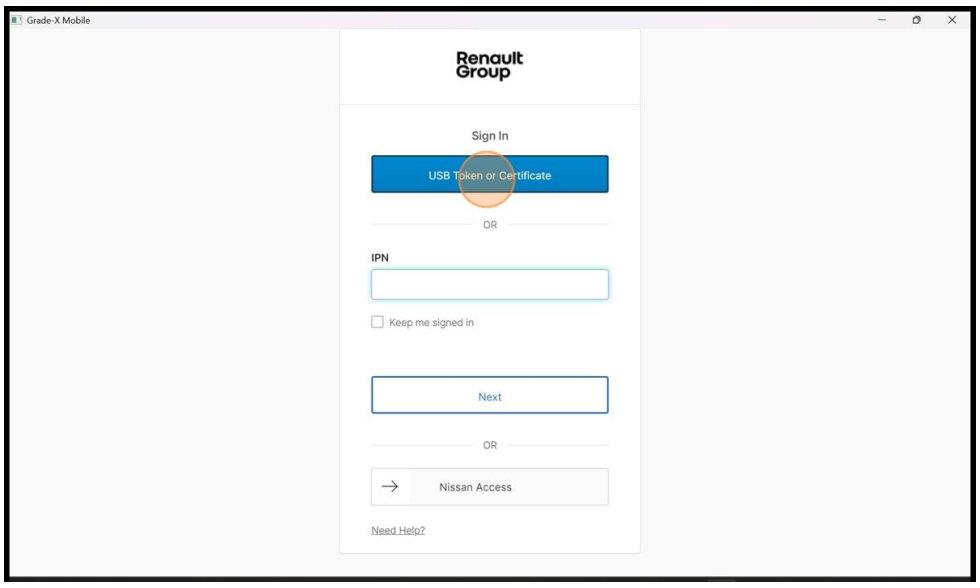

3. Click on “All ECU” as shown below

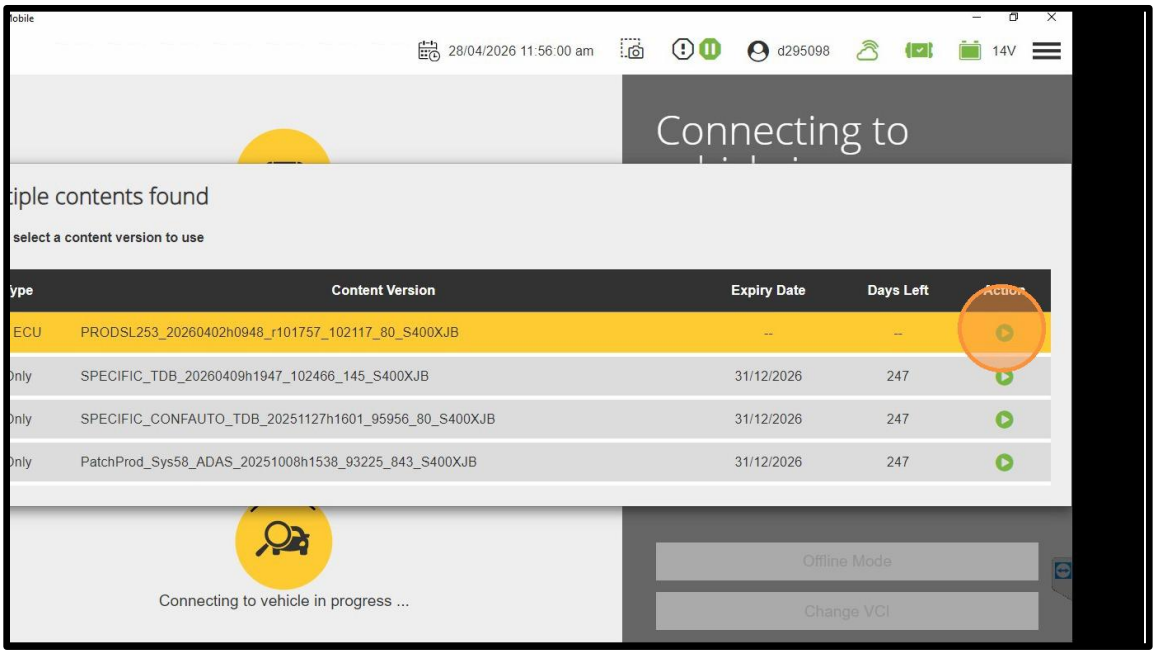


4. Click on **TDB_247**

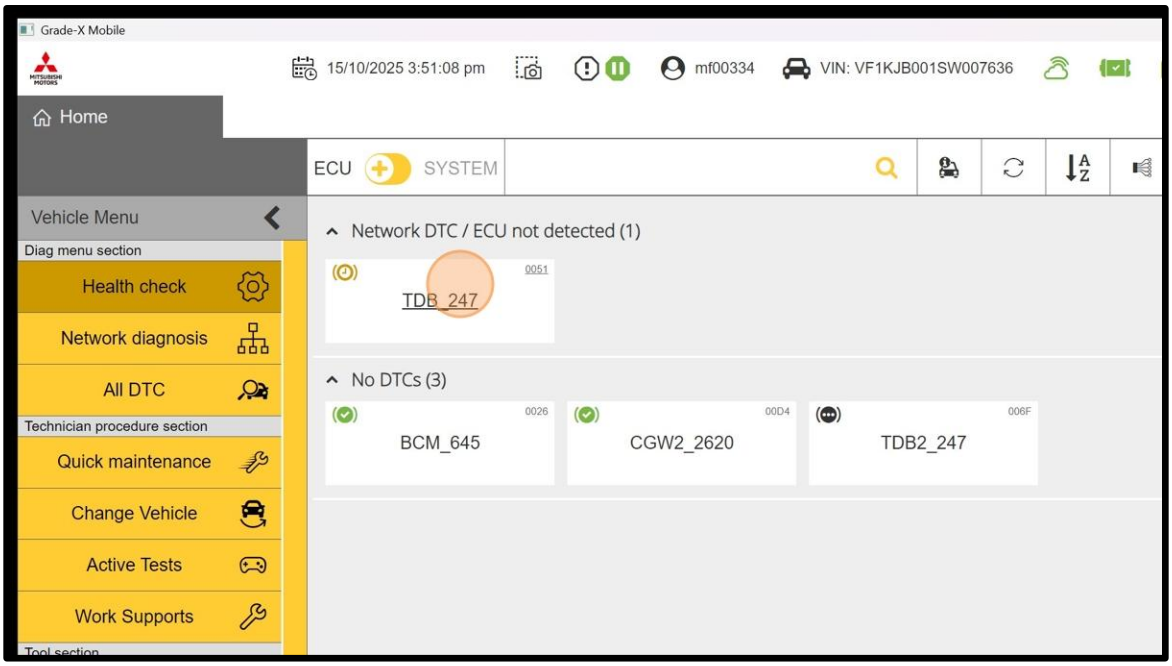


5. Click on **ECU AutoConf**




6. Enter token password if/when, then click **OK**

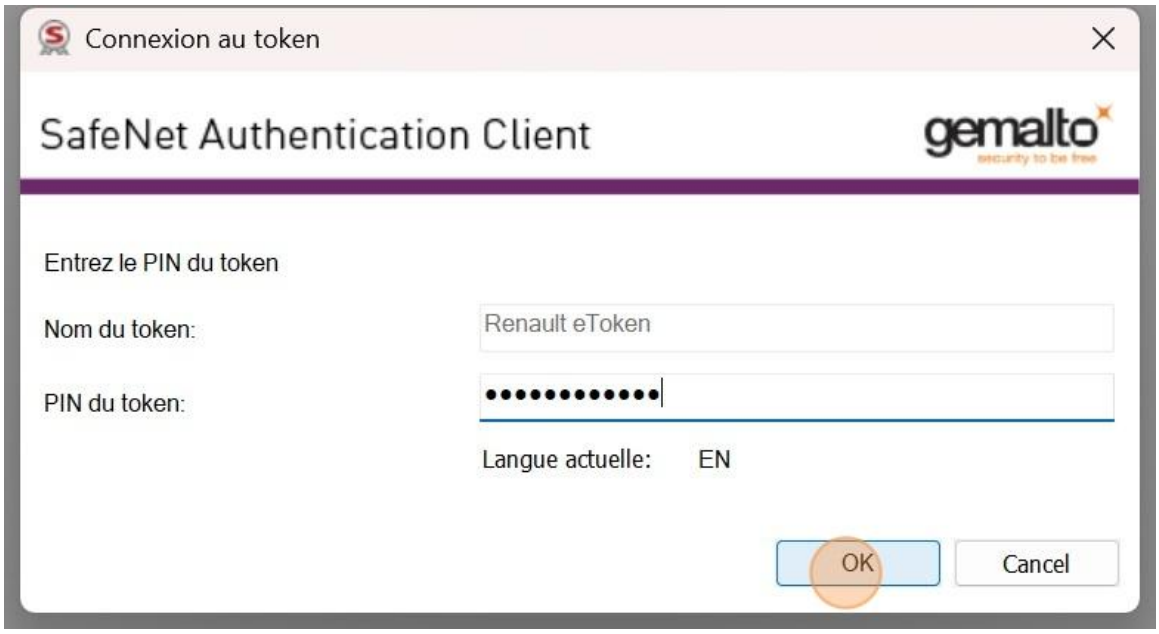


7. Click **Next**

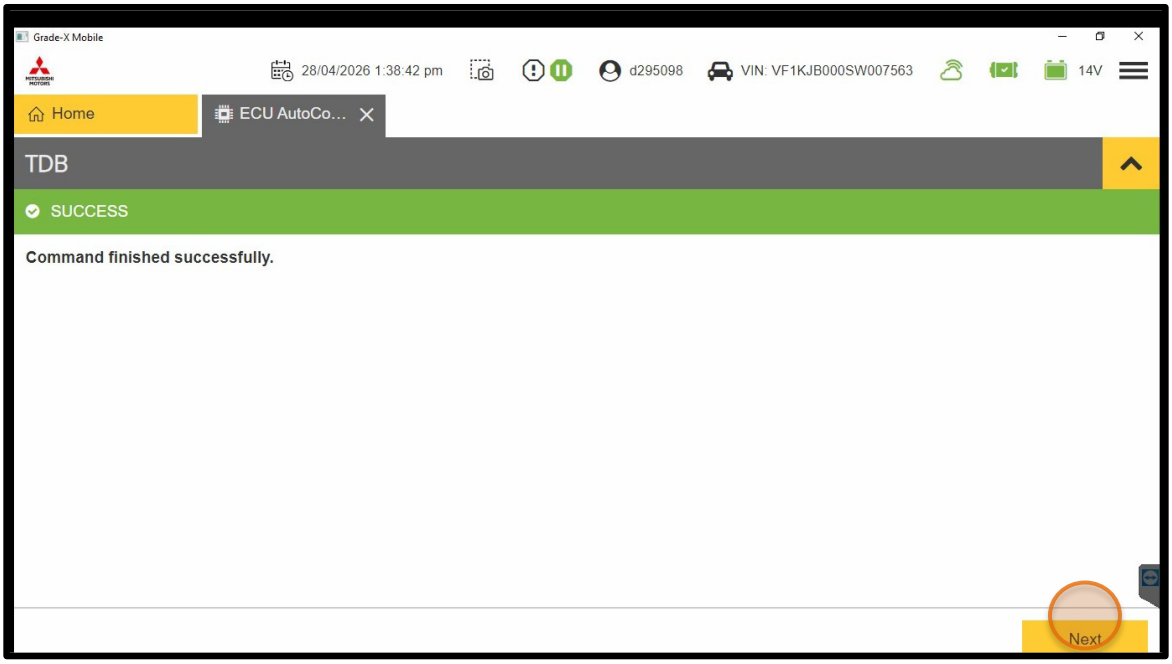


8. Click **Finish**

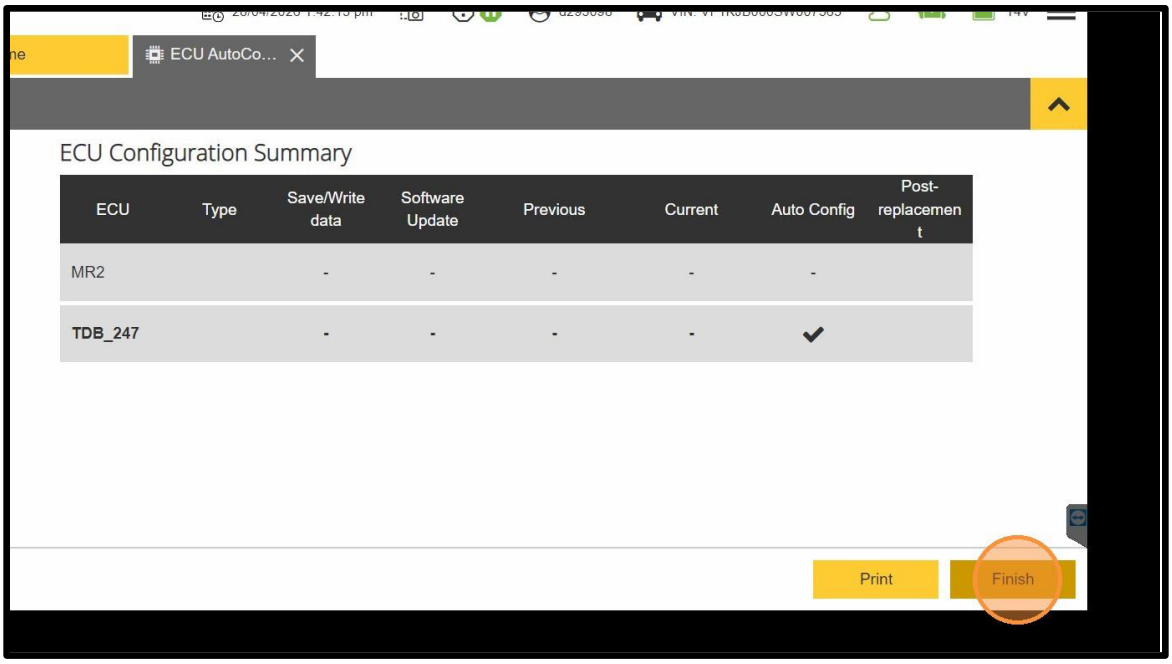


9. Ensure **ECU** is selected, then **All DTC**

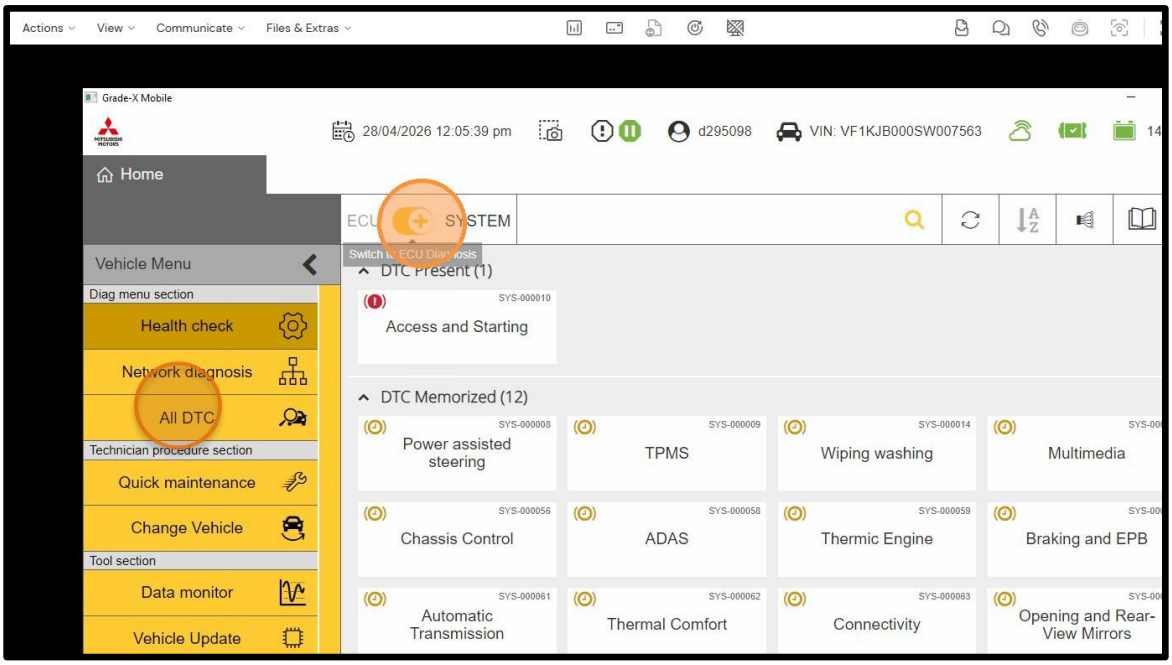

10. Click here

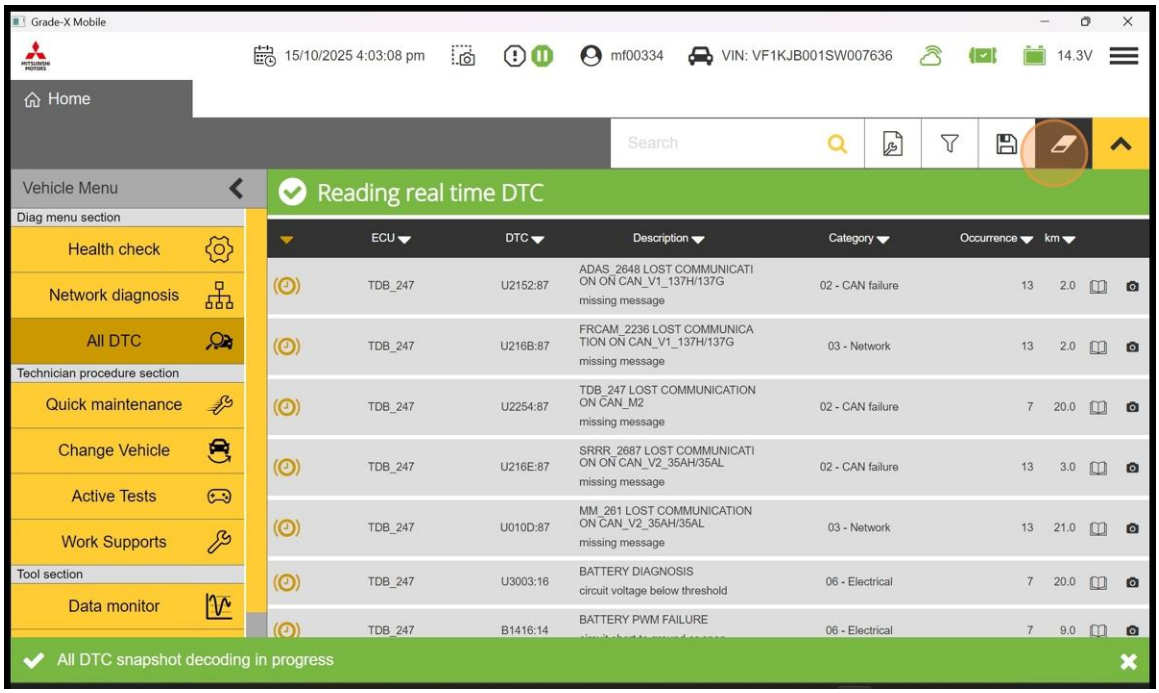

11. Click **Yes**

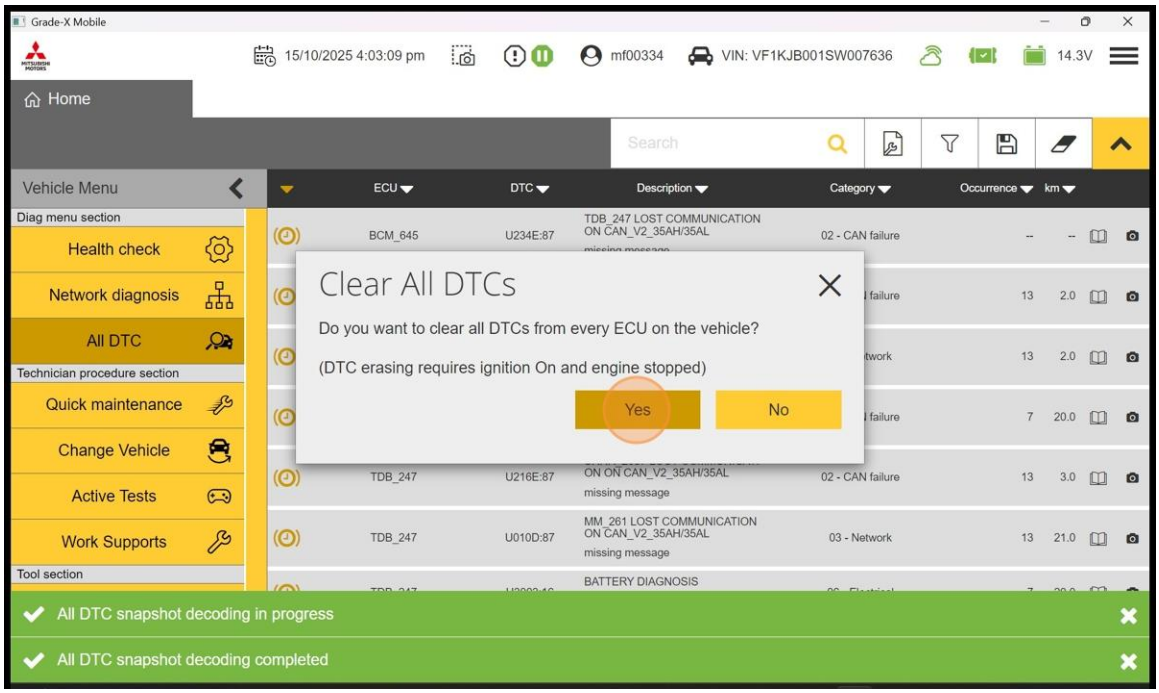

12. Turn vehicle off.


13. Lock vehicle.

14. Take keys away from vehicle and leave locked for 15 minutes.

15. Unlock vehicle.

16. Switch on the ignition by pressing the Start-Stop button (without pressing the brake) - Do not start the engine.

17. Navigate to the service or oil change screen using the arrow buttons on the steering wheel to scroll through the dashboard menu. Stop when you see either:
    - "Oil change in ..."
    - "Service in ..."

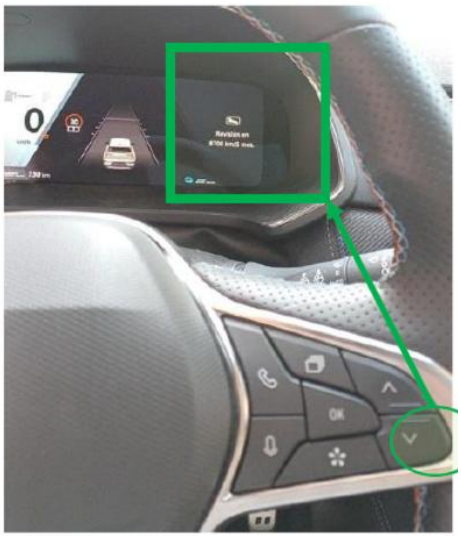

18. Reset the reminder - Press and hold the "OK" button (or the down arrow, depending on the model) for about 10 seconds. The display will start blinking. Once it stops blinking, the reminder is reset.

A

19. **If DTCs are present following the update and will not clear, carry out a power latch (IGN OFF, lock the vehicle and remove the cards from the vehicle) for 15 minutes and recheck the vehicle for codes following this procedure.**