MV Triton Fuel Tank Cleaning Procedure

Hotline Fix 2026 - 008

MV Triton Fuel Tank Cleaning Procedure

Tools and parts preparation

- Hand pumps (2 pieces – one for dirty fuel, one for clean fuel)
- Portable Fuel Container
- Lint free waste cloths/rags
- Filter funnel (30µm mesh)
- Vinyl sheet (minimum 4 pieces)
- Rubber band (minimum 3 pieces)
- Fuel locking ring wrench (MB993036V)
- New Fuel Pump assembly

MV Triton Fuel Tank Cleaning Procedure

See following pages for detail on steps 1 - 9

Step	Work Procedure
[0]	Remove fuel tank from vehicle (refer to the workshop manual for the procedure)
[1]	Cover the filler and leveling pipe ends with a vinyl sheet and rubber band.
[2]	Clean the fuel pump module surrounding area as shown on page 4. For example, use a compressed air nozzle (air blow), wiping waste cloths/rags and brush. In the case the tank is very dirty, use a high-pressure washer to clean, then dry upper area with waste cloths/rags or air blow.
[3]	Remove the fuel pump module using the specified SST to remove the cam locking ring.
[4]	Suck the fuel out of the tank with the "dirty" hand pump and strain with filter funnel into a clean container. Tilt the fuel tank to remove all fuel.*
[5]	Wipe any contamination from the fuel tank with lint free wiping waste cloths/rags.
[6]	Add some cleaned fuel or new clean fuel* (about 10L) to the fuel tank using the "clean" hand pump to suck the fuel from the clean container.
[7]	Cover fuel tank hole with vinyl sheet and cam locking ring.
[8]	Shake the fuel tank (2 person)
[9]	Repeat the procedures from [4] to [8] twice, then perform steps [4] and [5] again. Move to step [10].
[10]	Install the new fuel pump assembly (refer to the workshop manual for the procedure).
[11]	Install the fuel tank assembly back to the vehicle (refer to workshop manual for the procedure).
[12]	Refill the fuel tank with the strained clean fuel from step [4]*.
*	Note: If the original fuel was heavily contaminated, it should be replaced with clean fuel (replacement fuel is not claimable for this repair).

MV Triton Fuel Tank Cleaning Procedure

Detailed instructions

Step [1] - To prevent dust from entering the fuel tank during the process, cover filler and leveling pipe end with vinyl and rubber band.



Step [2] - To prevent dust from entering the fuel tank during the process, clean dust around fuel pump installation area.



Mad, sand etc...



Use air blow



Use wiping waste
or
Scrub with a brush

MV Triton Fuel Tank Cleaning Procedure

Detailed instructions


Step [3] - Remove the fuel pump assembly.





Step [4] – Using the "dirty" hand pump, suck the fuel from the tank through a strainer filter funnel (30μm mesh) into a clean fuel container.

To gather contamination, shake the tank when there is a small amount of fuel remaining. If a lot of fuel remains, remove more using the hand pump and then shake. ※Be careful not to spill fuel.

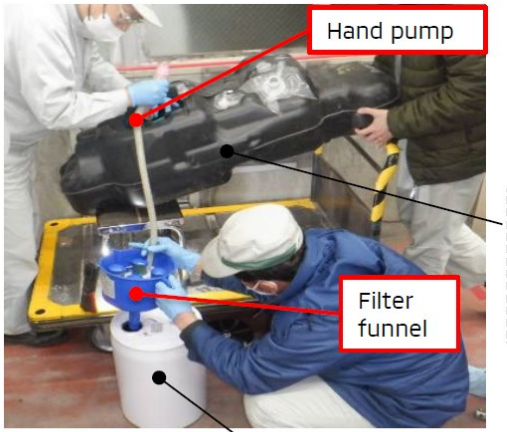

Tilt the fuel tank to the fuel pump side and suck the fuel with hand pump.

MV Triton Fuel Tank Cleaning Procedure

Detailed instructions

Step [5] - Wipe remaining contamination with clean, lint free wiping waste/rag to remove contamination from inside the fuel tank.



Step [6] - Return some clean fuel (about 10L) from the portable fuel container back to the fuel tank, using the “clean” hand pump.



MV Triton Fuel Tank Cleaning Procedure

Detailed instructions

Step [7] - To prevent dust from entering the fuel tank, cover the fuel tank holes with vinyl sheet, cam lock and rubber bands.



Step [8] – To gather contamination to one side. shake the fuel tank.





Two-person operation to thoroughly rinse and bring the contamination to the fuel pump side.

Step [9] - Repeat the procedures from [4] to [8] twice, then perform steps [4] and [5] again. Once complete, move to step [10].


MITSUBISHI
MOTORS
Drive your Ambition