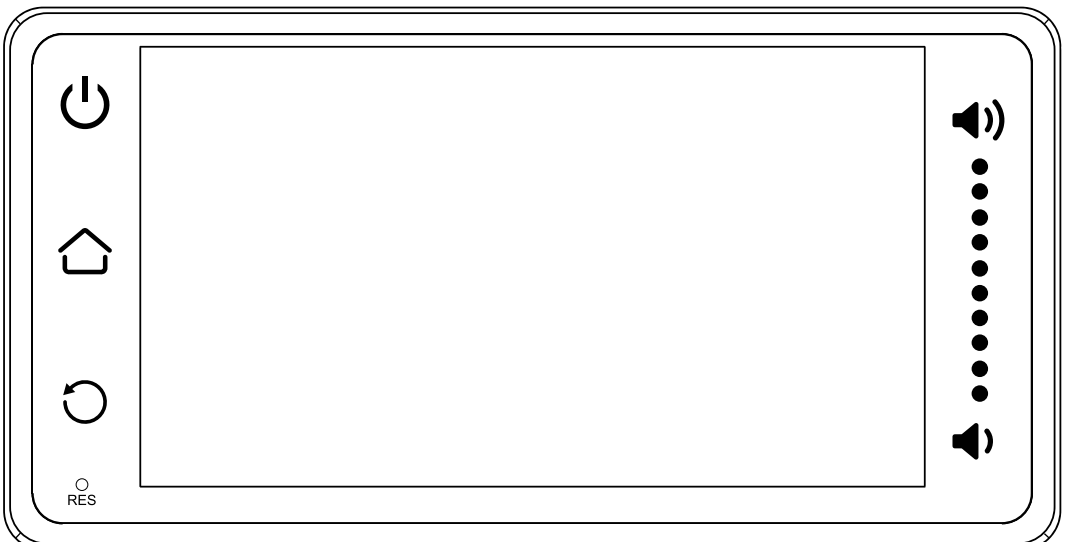


Mi-DISPLAY User Manual

AU600034

COPYRIGHT NOTE

The product and the information contained herein is subject to change without prior notification. This manual may not, in whole or in part, be reproduced or transmitted in any form either electronically or mechanically, including photocopying and recording, without the express written consent of Directed Electronics.

© 2021 - Directed Electronics. All rights reserved.

CONTENTS

INTRODUCTION **7**
PREFACE
OVERVIEW 7
BEFORE USE **8**
USAGE NOTES 8
SAFETY NOTICE 9
QUICK START GUIDE **11**
MI-DISPLAY SMARTPHONE CONNECTION 11
GETTING STARTED **12**
POWER ON/OFF 12
UNIT CONTROLS 12
TOUCH SCREEN OPERATION 12
STEERING WHEEL CONTROLS 13
MENU CONTROLS **14**
HOME MENU 14
FLOATING MENU OPTIONS 14
INITIAL SETTINGS **15**
CLOCK AND DATE SETTINGS 15
CONNECTION **17**
BLUETOOTH PAIRING 17
USB CONNECTION 18
OPERATION **19**
AM/FM RADIO MENU 19
DAB+ RADIO 20
DAB+ MAIN MENU 20
BLUETOOTH PHONE 21
RECEIVING A CALL 21
IN-CALL 21
MAKING A CALL 22
OTHER PHONE FUNCTIONS 23
PHONE SETTINGS MENU 23
SETUP MENU 24
MI-DISPLAY SMARTPHONE CONNECTION 25

CONTENTS

BLUETOOTH AUDIO STREAMING	30
USB PLAYBACK	31
REVERSE CAMERA	33
SETTINGS	**34**
SYSTEM	34
MEDIA	34
DEVICE	36
ACCESSIBILITY	36
ADVANCED OPTIONS	36
REFERENCE	**37**
MAINTENANCE	38
FURTHER INFORMATION	38
TROUBLESHOOTING	**39**

INTRODUCTION

PREFACE

Your **Mi-DISPLAY** Multimedia unit has been designed and engineered in Australia to the highest standards utilising premium components. It also features a high quality 7" Capacitive Touch-Screen anti-glare display that will ensure many years of reliable operation.

OVERVIEW

This user manual offers important operating information about the **Mi-DISPLAY** multimedia unit, and detailed use of the basic functions and displays.

BEFORE USE

USAGE NOTES

- During operation, ensure that the vehicle is not stationary in a garage or other confined area with poor ventilation while the engine is running. Otherwise, gas poisoning may result.
- For safety, the driver is not to operate this product while the vehicle is moving. The driver should also minimize as much as possible the time spent viewing the screen. Being distracted by the screen may result in an accident.
- Do not turn the volume up to the extent that you cannot hear sounds outside the vehicle while driving. Driving without being able to hear sounds outside the vehicle may result in an accident.
- Do not disassemble or modify the product. Doing so may lead to malfunction, smoke, or fire.
- Avoid relying on this product for guidance to emergency facilities (hospitals, fire departments, police stations, etc.). Contact such emergency facilities directly.
- When operating, ensure that the vehicle is stopped in a safe area in which stopping is permitted.
- Continued usage of this product without the motor or engine running may deplete the vehicle's battery, meaning that the motor or engine may not be able to start. Ensure this product is used while the motor or engine is running.
- If you have parked the vehicle for a long time in hot or cold weather, wait until the temperature inside the vehicle has returned to normal before operating the product.
- The following phenomena are characteristic of LCD screens. They do not indicate a malfunction.
  – Small black dots or bright dots (red, blue, green) on the screen.
  – Slow screen movement during cold weather.
  – The screen sometimes being dark in hot weather.
  – The picture quality, colour tones, and brightness vary depending on the viewing angle.
- If you apply a commercially-available LCD protective film or the like on the screen, it may interfere with touch panel operation.
- If you operate the touch panel with a sharp object (pen tip, finger nail, etc.), the screen may be scratched and this product may be damaged, leading to incorrect operation.

- Operating the touch panel with gloves on may result in incorrect operation.
- Some operations are restricted while the vehicle is moving. The driver should refrain from operating this product while the vehicle is moving. First stop the vehicle in a safe location, then operate this product.

SAFETY NOTICE

This product features a number of pictorial indications as well as points concerning handling to ensure you can use the product correctly and in a safe manner, as well as prevent injury or damage to yourself, other users, or property.

⚠ WARNING

This indicates details regarding handling of the product that, if ignored, could be expected to result in death or serious injury.

⚠ CAUTION

This indicates details regarding handling of the product that, if ignored, could be expected to result in personal injury or property loss.

⚠ WARNING

- **The driver should not stare at the images on the screen while driving.**
  Doing so may prevent the driver paying attention to safe driving, and lead to an accident.
- **The driver should not perform complicated operations while driving.**
  Doing so may prevent the driver paying attention to safe driving, and lead to an accident.
  Therefore, stop the vehicle in a safe location before performing such operations.
- **Do not use this product if a malfunction has occurred, such as when the screen does not light up or no sound is audible.**
  This may lead to accident, fire, or electric shock.
- **Ensure water or other foreign objects do not enter the product.**
  Otherwise, smoke, fire, electric shock, or malfunction may occur.

- **In the event of abnormalities such as smoke or a strange smell, stop using the product immediately, and consult with your Dealer.**
  Otherwise, an accident, fire, or electric shock may occur.
- **Do not disassemble or modify the product.**
  Doing so may lead to malfunction, fire, or electric shock.
- **During thunderstorms, do not touch the antenna or the front panel.**
  Doing so may lead to electrical shock from lightning


⚠ CAUTION

- **Do not block ventilation holes or heat sinks on the product.**
  Doing so may prevent heat from escaping from within the product, leading to fire or malfunction.

MI-DISPLAY SMARTPHONE CONNECTION

Access your favourite Navigation app along with other optimised vehicle apps while driving safely and legally.

APPLE SMARTPHONE

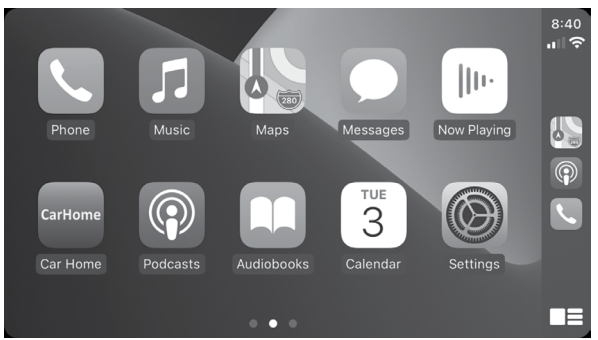

To connect your Apple Smartphone, simply connect the phone to the vehicle via a USB cable to the Smartphone USB port located at the bottom of the centre console, see page 18.

To exit **Mi-DISPLAY**, simply touch the CarHome icon to return to the unit's Home Screen.

ANDROID SMARTPHONE



To connect an Android Smartphone and use Bluetooth calling, **pair your phone to the unit via Bluetooth first** please also ensure you have installed the latest version of the Android Auto app from the Google Play store.

See page 17 for Bluetooth pairing instructions. Then simply connect the phone in to the vehicle via a USB cable to the Smartphone USB port located at the bottom of the centre console, see page 18.


To exit **Mi-DISPLAY**, simply touch the icon to return to the unit's **Home** menu.

GETTING STARTED

POWER ON/OFF

The unit is turned on when the power (or ignition) switch is set to the ACC or ON position and turned off when the power (or ignition) switch is set to the OFF position.

UNIT CONTROLS

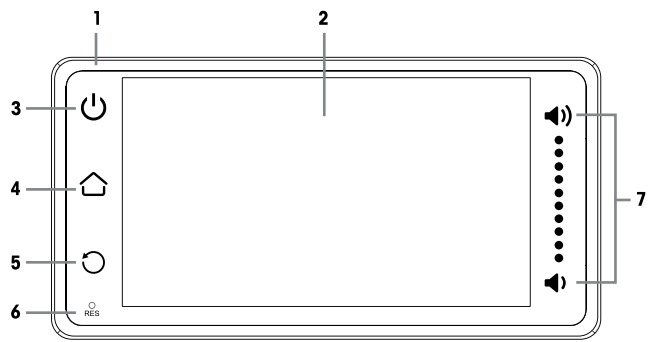

1. Main Unit

2. LCD Touch Screen

3. Power ON/OFF & Mute
Touch to mute the unit, touch again to unmute. Press and hold for 3 seconds to turn the unit off. When the unit is off, press briefly to turn the unit back on.

4. Home Button
Touch to return to the Home menu.

5. Back
Touch to return to the previous menu screen.

6. Reset
If the unit stops operating correctly, use a paper-clip or similar to press the button inside the hole to restart the unit.


7. Volume UP/DOWN
Touch to increase the unit volume
Touch to decrease the unit volume

TOUCH SCREEN OPERATION

To perform operations on the screen, you need to touch, touch and hold, or swipe to select an item, change a setting or change page.


TOUCH

Touch the screen gently to select an item on the screen.

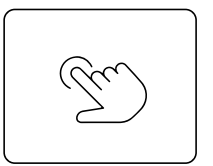


TOUCH AND HOLD

Touch the screen and keep your finger in place until the display changes or message is displayed.

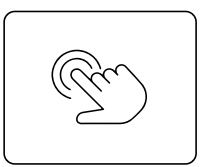


SWIPE

Slide your finger up/down or left/right to scroll through menus.

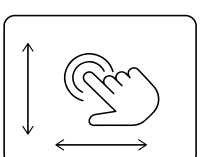

GETTING STARTED

STEERING WHEEL CONTROLS

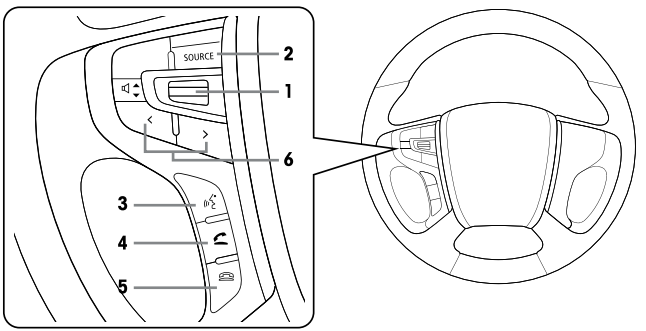

1. Volume UP/DOWN
Press up to increase the unit volume, press down to decrease the unit volume. Press and hold to adjust continuously.

2. Source
Press to switch between available sources. Press and hold to turn the unit OFF.

This function is available once a source has been selected rather than from the Home menu.

3. Voice Control
For phones connected using **Mi-DISPLAY**, press this button to activate voice commands.

4. Answer Button
Press this button to answer an incoming call.

5. Hang Up Button
Press this button to hang up an active phone call.

6. UP/DOWN Selection
Selects tracks, stations and functions (press). Rewind/fast forward/search (hold).

MENU CONTROLS

HOME MENU



1. Home
Within any menu, touch to return to this **Home** menu.

2. Clock display

3. Floating Menu
This useful option allows you to quickly access extra functions while remaining in your current menu screen.
- Touch the icon to activate the **Floating Menu**.
- You can also touch and hold the **Floating Menu** icon to drag and relocate it to your preferred position on the screen.

4. Bluetooth Status
Bluetooth icons indicate: 1) That the Bluetooth Car Kit is connected and 2) that Bluetooth audio streaming is connected.


5. Back
Touch to go back to the previous menu screen.

6. Current Source
Displays the current source playing. This could be Radio (AM/FM), DAB+, Mi **(Mi-DISPLAY)**, Bluetooth Audio or USB.

7. Source Selection
Touch to select your desired source from these options (if available):
- AM/FM Radio
- DAB+ Radio
- Bluetooth Audio
- Mi-DISPLAY Mi-DISPLAY Smartphone connection
- USB Audio/ Image playback

8. Settings
Touch to access the settings menu, see page 34.

FLOATING MENU OPTIONS

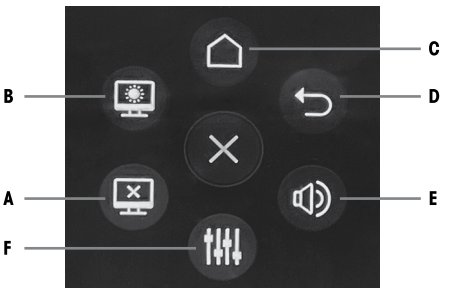

a) Screen Off
Touch to turn the screen off. Touch anywhere on the screen to turn back on.

b) Screen Brightness
Touch to bring up day and night brightness controls. The top slider adjusts the daytime screen brightness while the bottom slider adjusts the screen brightness at night. (Night-time brightness is activated when the headlights are activated).

c) Home
Touch to return to the Home menu.

d) Back
Touch to go back to the previous screen.

e) Volume
Touch to activate the on-screen volume control. You can then adjust the slider to your desired volume level.


f) Equaliser
Touch to open the equaliser. See page 34.

To close the Floating Menu, touch anywhere outside the menu, otherwise it will automatically close in 5 seconds.

INITIAL SETTINGS

CLOCK AND DATE SETTINGS

From the **Home** menu, select **Settings**.

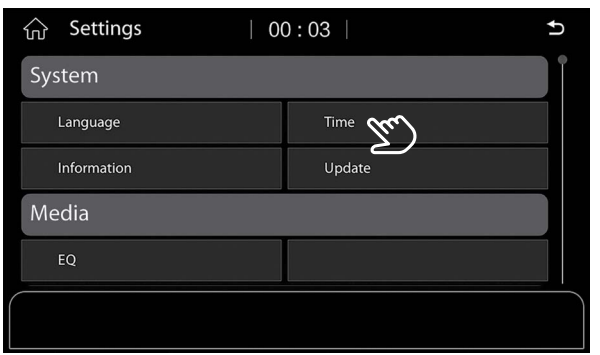


Then select **Time** from the System section of the Settings menu.

1. Select your preferred time format. The default setting is 24 hour format. To change to 12 hour time format, select **OFF**.

2. Select "Set Date & Time" to change the date.




Swipe on the Year, Month and Day to set the date. Then select **Time** to set the current time.

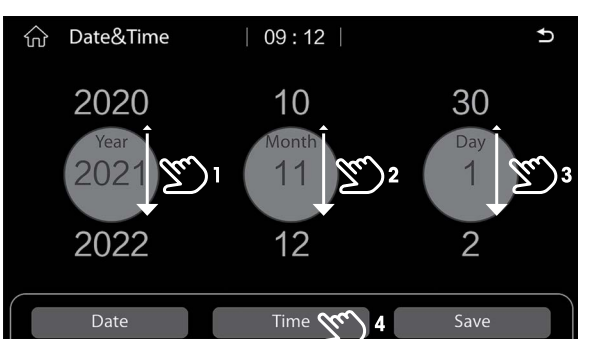

INITIAL SETTINGS

Swipe on Hour, Minute and Second to set the time. Then select **Save** to store the date and time settings. Select **Home** to return to the **Home** menu.

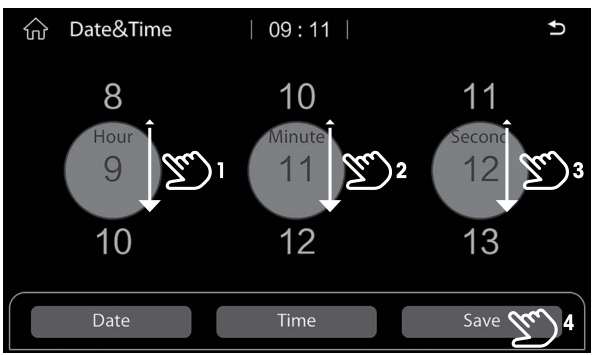


The clock will also automatically sync with your smartphone clock if it is connected via **Mi-DISPLAY**.

CONNECTION

BLUETOOTH PAIRING

To pair a Smartphone, please follow these steps.

1. From the home menu, select **Settings**.
2. Swipe upwards until **Bluetooth** is displayed within the **Device** menu and select it. The Bluetooth Settings menu is then displayed.

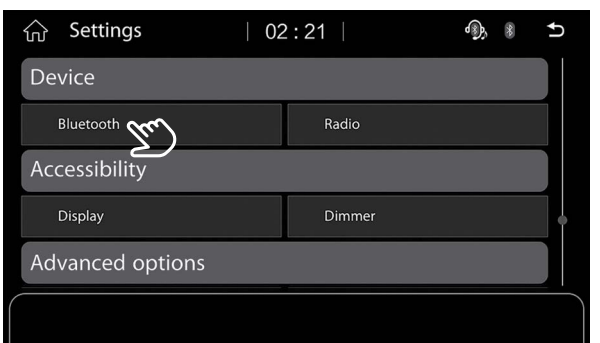

3. Open the **Bluetooth settings** menu on your Smartphone, ensure Bluetooth is on and leave this screen open for best results.

4. Select **Discover** within the unit's **Bluetooth Settings** menu.



5. When your phone name appears on the screen, select it.



CONNECTION


6. Touch **Pair** when "Are you sure you want to pair" is displayed
7. Your phone will then display a Pairing Request. The message will vary depending on your Smartphone brand and model.

   Select **Pair** or **OK** to accept.
8. Next a permission request will be made to allow Contacts, Favourites and Call History to be sync'd to the unit. Select **Allow** to maximise the inbuilt calling features of this unit.
9. Once **Paired** is displayed next to your device name, select the Home icon to return to the **Home menu**.

NOTE: Pairing can also be achieved by opening the Bluetooth connection on your Smartphone and searching for Triton, then following the regular phone pairing steps. The Visibility on the unit must be set to **ON**.

NOTE: The last phone paired with the vehicle will automatically reconnect for subsequent trips.


USB CONNECTION

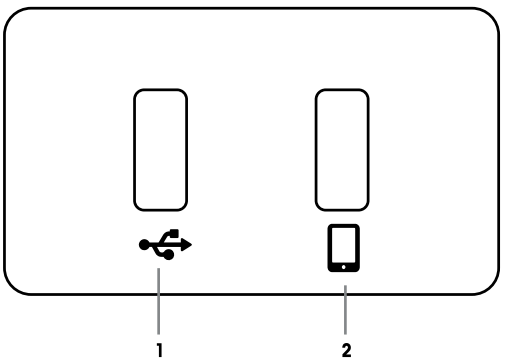

1. Use this USB connection point for USB media playback using devices such as thumb drives. You can connect a phone to this port for charging however **Mi-DISPLAY** functionality will be unavailable.
2. Use this port to connect your Apple or Android smartphone for **Mi-DISPLAY** functionality and charging. It can also be used for USB media playback.

OPERATION

AM/FM RADIO MENU

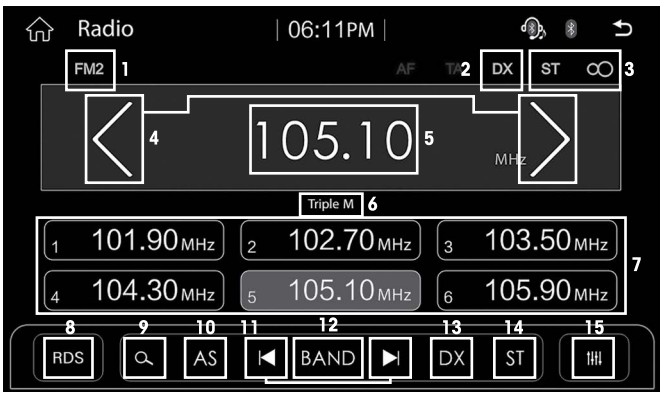

1. Band Display
The Radio features 3 x FM bands and 2 x AM bands allowing for a total of 18 FM stations and 12 AM stations to be stored in memory. To change bands, select **BAND** (see point 12 below).

2. DX/LOC Display
Please see point 13.

3. Stereo/Mono Display
In FM radio mode, ST is displayed if stereo reception is selected (14). The ∞ symbol is displayed when a stereo signal is being received.

4. Station Up/Down
Select either the back or forward arrow to auto search up or down to the next station. To manually tune to a station (for example a weaker station that is not discovered by auto searching), select and hold either the up or down arrow until the station number starts flashing. Then select the up or down arrows repeatedly until you tune in to your desired station. Touch and hold the up or down arrow again to exit manual tuning.

5. Station Display
Displays the current station.

6. RDS Station Name Display
Where available, Station Names will be displayed in this area. This function is available on FM bands only.

7. Preset Stations
Up to 18 FM preset stations and 12 AM preset stations can be stored on the unit. To select a preset, select the displayed station number.

To store the station in memory, choose an available preset location, select and hold for 2 seconds.

8. RDS
PTY: This function is not widely used in Australia and New Zealand. PTY allows you to search for FM stations based on their genre.

AF: Alternative Frequency. When activated and the FM signal becomes weak, the radio will search for a stronger station broadcasting the same content.

TA: Not current used in Australia and New Zealand.

9. Channel Scan
This function scans through all the Preset stations on the selected Band, pausing on each station for 5 seconds to allow you to listen to find the type of station you are after. To stop scanning, select the highlighted station to remain tuned to that station.

10. AS Auto Store
Select to Auto Store radio stations. The strongest stations will be stored in all three FM bands and two AM bands.

11. Preset Up/Down
Select the back or forward arrows to move to the previous or next preset station.

12. BAND
Select to cycle between Radio Bands: FM1→ FM2 → FM3 → AM1→ AM2

13. DX/LOC
Selects between LOC – Local and DX – Distance tuning. If you would prefer to Search or Auto Store just strong radio stations, change this setting to **LOC.**

14. ST
Stereo on/off. If you are experiencing poor FM reception, select to turn Stereo reception off.

15. Equaliser
Select to access the Equaliser menu – see page 34.

DAB+ RADIO

What is DAB?

DAB+ (DIGITAL AUDIO BROADCAST)


Digital radio is a broadcast format that offers exceptionally high quality sound, station information and a range of exciting features to enhance your listening experience:

- **Clearer sound.**
- **Genre specific stations including sports, classic, modern, country and many more.**
- **Stations are displayed by name and not frequency, making it easier to find your favourite stations**.

Digital radio is still subject to reception performance limitations due to environmental influences and distance from broadcast area. You may experience signal "drop outs" in very low lying areas such as valleys. You may also experience "drop outs" as you begin to move away from metropolitan areas. This is not a fault with your unit.

As the network grows, reception performance will improve. It is important to periodically scan for new DAB+ stations to enhance your Digital Radio experience.

DAB+ MAIN MENU

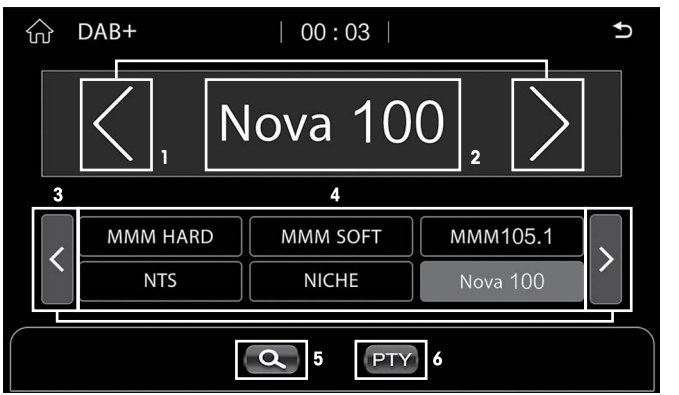

1. Station Up/Down
Step up/down to the next/previous stored station.

2. Station Display
Displays the current station call sign.

3. Station List Scroll
Use the back and forward arrows to search through all of the stored DAB+ stations. Six stations are displayed at a time in alphabetical order based on their call sign.

4. Station Selection List
Once your desired station is displayed in this section, select it to start listening.

5. Station Search
Select to search for and store all available DAB+ stations.

6. PTY
Select to filter stations by genre.

BLUETOOTH PHONE


RECEIVING A CALL

When there is an incoming call, the following screen is displayed.




1. Select the answer button to accept the call or use the steering wheel control, see page 13.
2. To reject a call, select the hangup button or use the steering wheel control, see page 13.

IN-CALL

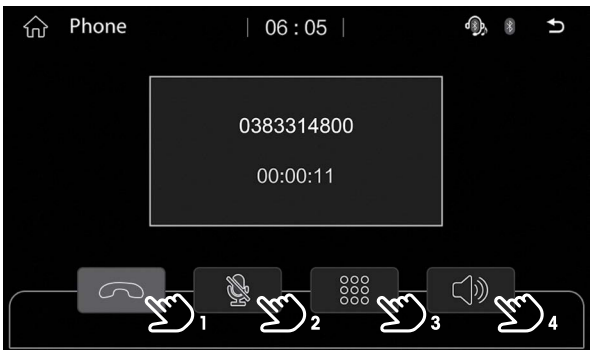

1. Select to hang up the call or use the steering wheel control, see page 13.
2. Select to mute the microphone during a call.
3. Displays the phone keyboard so numbers can be entered, for example, in phone menu systems.
4. Switch to phone speaker.

MAKING A CALL

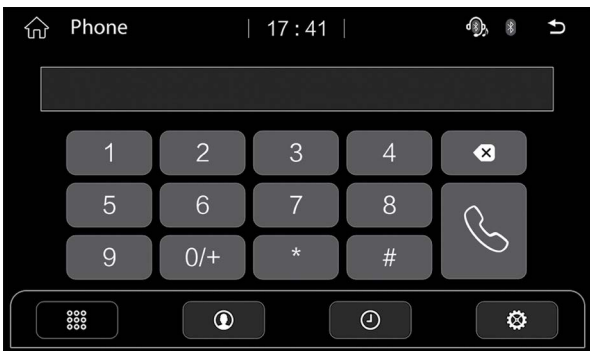

Use the keypad to enter the desired phone number or select the contact from your Phonebook or recent calls, see page 23.

Select to dial the number.



Hangup, Mute, Keyboard and Speaker functions work the same as per the incoming in-call functions.

OTHER PHONE FUNCTIONS

NOTE: To perform any Bluetooth functions, a Smartphone must be paired first. Please see Phone Pairing on page 17 for more information.



A. Dialled Number Display
Displays number being dialled.

B. On-screen phone keypad
Enter the number to be dialled.

C. Keypad
Return to keypad display.

D. Display Phonebook
Scroll through or search your phone book to find a stored contact.

E. Display Recent Calls
Displays recent calls. Select any previous call on the list to call that number.

F. Settings Menu
Use the settings menu to configure phone settings and pair your Smartphone.

PHONE SETTINGS MENU



The **Phone Settings Menu** features the following options:

ConnectedDev:
Displays the current phone that is paired with the unit (if no phone is paired, Unpaired is displayed).

AutoAnswer:
Set to on if you want calls to be answered automatically.

AutoLoadPbk:
Set to off if you don't want to load your phone contacts on to the unit when paired by Bluetooth.

LoadPbk:
Initiates syncing of your phone book if not already sync'd (note you need to allow access to your phonebook when pairing the phone for this function to work).

ClearPbk:
Select to clear your phone's phonebook from memory.

Setup:
Select to enter the Setup menu.

SETUP MENU



Visibility:
This setting controls whether the system's Bluetooth connection is visible to Bluetooth phones within range of the vehicle. By default, it is set to **ON** to allow initial phone pairing. Once a phone has been paired, Visibility is automatically switched **OFF** for security reasons.

To pair additional phones, you can search for them using the Discover function (see next page).

Bluetooth name:
This is the name of the unit that will be displayed on your Smartphone when searching and when it is paired with the unit. Touch this option to change the Bluetooth name via the on screen keyboard.

Local Address:
This displays the MAC Address of the unit.

Paired Devices:
Displays a list of phones that have been previously paired to the unit. From this menu you can:

- Check the current device's paired status
- Disconnect a currently paired device
- Delete a paired device so it will not automatically pair in the future.

Discover:
Touch this option to search for nearby Bluetooth Smartphones.

MI-DISPLAY SMARTPHONE CONNECTION


⚠ CAUTION

For reliable Smart Phone connection, ensure you only use genuine or certified USB cables.

NOTE: The **Mi-DISPLAY** USB connection not only provides an on-screen interface for your phone but will also charge it. Please note that available charge rate is 1A so depending on the number of functions being performed by the phone, for example Navigation and Audio Streaming, the charge rate will be reduced compared to charging while not operating **Mi-DISPLAY**.

NOTE: Some **Mi-DISPLAY** functions may not be compatible with your Smartphone model. For the latest information on Smartphone compatibility visit www.directed.com.au/midisplayhelp

Home Menu

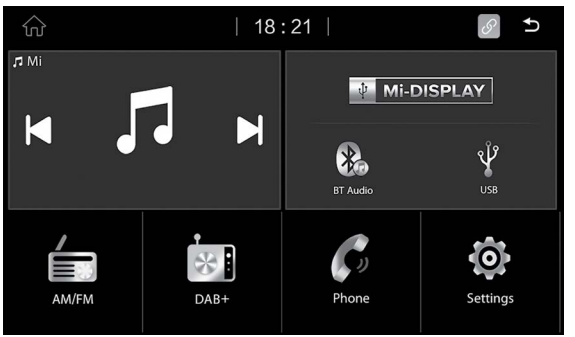

When a **Mi-DISPLAY** smart phone is connected, an icon is displayed on the **Home menu**. You can then select the **Mi-DISPLAY** icon Mi-DISPLAY to start **Mi-DISPLAY**.


Apple Phones

- **Mi-DISPLAY** will launch automatically when you connect your phone via USB. If you have previously exited **Mi-DISPLAY** or **Mi-DISPLAY** does not launch automatically, select the **Mi-DISPLAY** icon on the **Home menu**.
- Once launched, approved vehicle use apps will be displayed. Swipe left or right to scroll through the apps.




1. Select **CarHome** to exit **Mi-DISPLAY**. If you a playing an audio source, that source will keep playing even though you are returning to the unit's Home Menu. To stop playback, simply change the source.
2. If there is more than one screen of apps available, it will be indicated here.

3. Vehicle settings are available by selecting the settings icon.

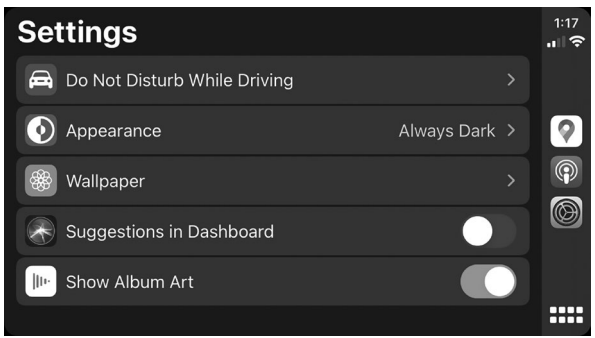

4. The screen layout can be changed via the **Mi-DISPLAY** interface by selecting this icon.

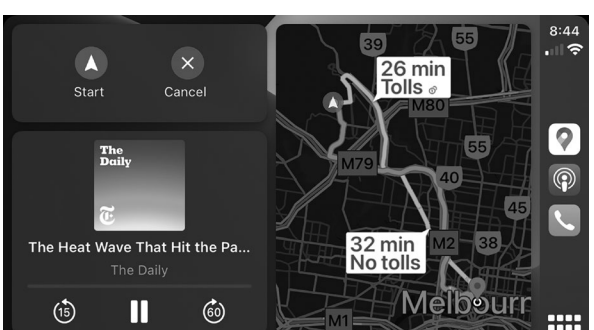


NOTE: Bluetooth connection is cancelled when the phone is connected to the USB input terminal and phone and audio player functions can be accessed via the **Mi-DISPLAY** interface.

NOTE: To use voice commands, use the steering wheel control, see page 13.

Android Phones

- **Mi-DISPLAY** will launch automatically on compatible phones when you connect via USB. If you have previously exited **Mi-DISPLAY** or **Mi-DISPLAY** does not launch automatically, select the **Mi-DISPLAY** icon on the **Home menu**.
- Once launched, approved vehicle use apps will be displayed. Swipe up or down to scroll through the apps.

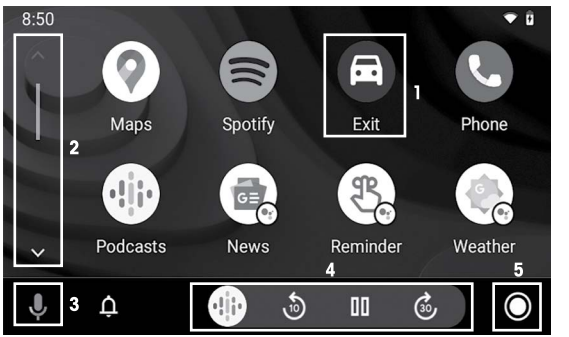


1. Select **Exit** to exit **Mi-DISPLAY**. If you a playing an audio source, that source will keep playing even though you are returning to the unit's Home Menu. To stop playback, simply change the source.
2. If there is more than one screen of apps available, it will be indicated here.
3. Select microphone and hold to perform voice commands. You can also use the steering wheel control to perform this function.
4. Current media playback app is displayed at the bottom of the screen including play/pause and forward/back controls.

5. Select ◉ to return to the Android **Mi-DISPLAY** Home screen.



Mi-DISPLAY settings can be adjusted using the settings menu.

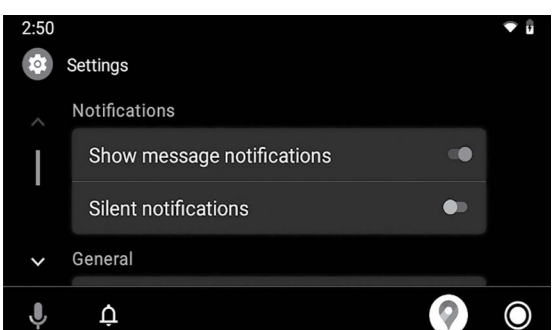

Android Connection troubleshooting

To ensure reliable **Mi-DISPLAY** operation.

- Make sure you are running the latest version of the Android Operating System on your device.
- Ensure that you have the Android Auto App installed on your phone and it is updated to the latest version. Open the settings within the app to select the settings most suited to your requirements.
- If you disconnect the reconnect your phone via USB while system is running, you may get an error. In this case, try restarting your phone.
- If the unit has multiple Paired Devices, ensure that the phone being used for **Mi-DISPLAY** is also the phone that is connected to the unit via Bluetooth.
- Certain voice assistant functions may lead to echo in phone calls. It is recommended that you turn off voice assistant functionality when using **Mi-DISPLAY**. Please consult your phone manufacturer's instructions for assistance in doing this.


BLUETOOTH AUDIO STREAMING

When paired with Bluetooth, audio from your smartphone can be played through the unit. Simply select the **BT Audio** source from the **Home Menu** then start the audio source on your phone – for example your preferred music app, podcast or streaming radio service etc.

NOTE: If the phone is connected to the unit via **Mi-DISPLAY** and you are listening to an audio source in this way, the audio playback will continue even after exiting **Mi-DISPLAY** so Bluetooth Audio streaming will not be required.

Depending on the audio source, the unit will display the Song/Artist/Album information, Podcast details or streaming audio service.

The Bluetooth Audio interface also offers previous/next track control and pause/play functions.

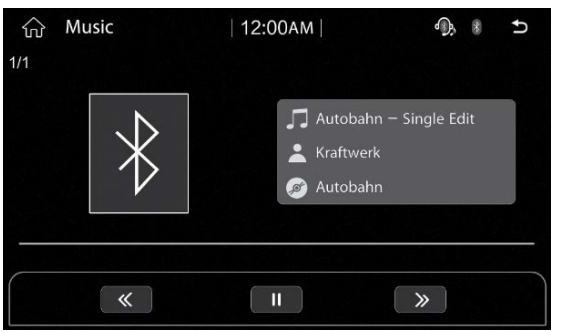

USB PLAYBACK

When a USB drive is inserted into the USB port in the console, you can play compatible Audio, and Image files on the unit. Video playback is unavailable.

Depending on the contents of the USB drive, files will be played automatically when the USB drive is inserted in the following order: Audio ⟶ Photos.

Audio Files

When the USB drive is inserted, the first audio file on the drive will start playing and the unit will display the following media control menu.



A. On-screen numeric keypad
Touch to bring up the keypad then enter your desired track number if known.

B. MP3 Art display
If the MP3 file is embedded with Album Art, it will be displayed here.

C. Track information
Title, Artist and Album information is displayed for the audio file currently playing.

D. File Type Playback Menu
For USB drives that contain mixed file types, this menu allows you to select which file type you would like to play. See page 32.

E. Previous Track

F. Scan back
Allows you to move back through the file at 2, 4 or 8x the speed.

G. Play/Pause


H. Scan Forward
Allows you to move back through the file at 2, 4 or 8x the speed.

I. Next Track

J. EQ
Opens the EQ menu. See page 34.


File Type Playback Menu

Music

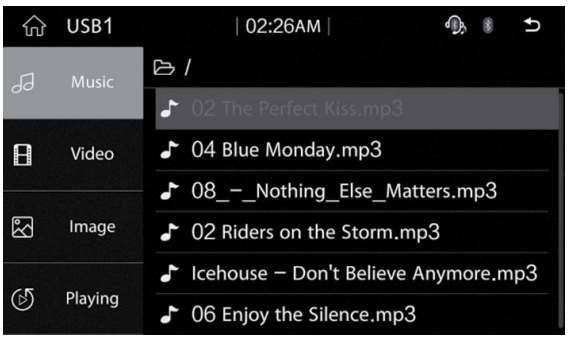

This menu allows you to select different folders and scroll through and select your desired playback file.

Images

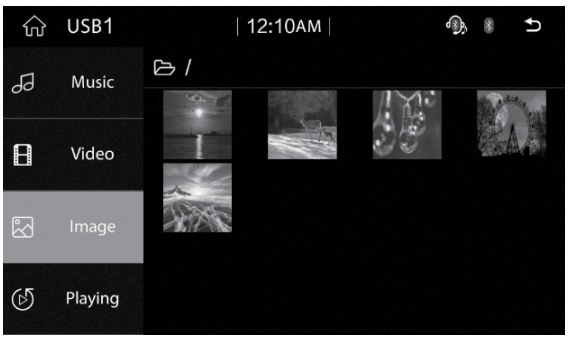

This menu allows you to select different folders and scroll through and select your desired image file.

If multiple files are stored in the USB, once you select the first image, you can touch to forward or back arrows to scroll through the images or press the play icon to view an automatic slideshow. You can even continue to listen to audio files from the USB while viewing images.

NOTE: Video playback is not available on this unit.

REVERSE CAMERA


The rear view screen from the connected camera is displayed when you shift the gear to the reverse (R) position.

By default, audio playback continues when reverse is selected. To disable audio playback when reverse is selected, turn **Rear View Mute ON** in the **Advanced options** menu, page 36, to mute the unit's audio when reversing.

- For details about viewing the screen from the connected camera, refer to the owner's manual supplied with your vehicle.

SETTINGS

The settings menu allows you to configure the system to suit your personal preferences.

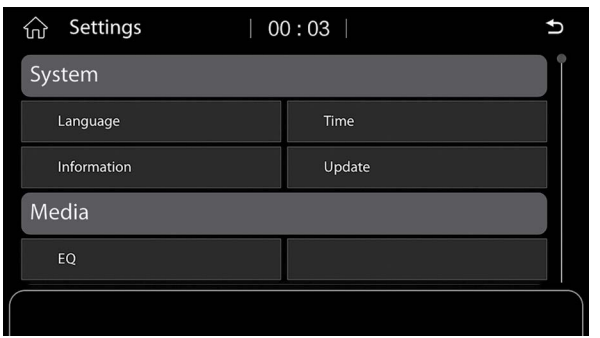

The Settings menu is divided up in to five sections:

SYSTEM

Language

Scroll through and select your desired on-screen Language.

Time

This menu allows you to set the Date and Time.

NOTE: The date and time will be automatically set when you connect a Smartphone via **Mi-DISPLAY**.

Information

Displays system version and Licence information.


Update

Allows user to initiate Software Updates should they become available from your Dealer in the future.

MEDIA

EQ

The Equaliser allows you to adjust the unit's sound settings.

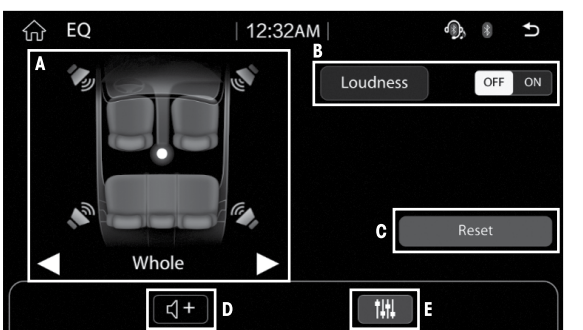

A. Balance and Fader

Select the white dot within the vehicle seating area and slide it to adjust the fader (front/rear) and balance (left/right) of the speaker output. Alternately you can use the arrows at the bottom to select pre-defined settings.

B. Loudness Control

Turn this on to increase the bass and treble output of the system.

NOTE: Depending on the audio material you are playing, songs with heavy bass may cause distortion in the speakers. If this is the case, prolonged playback at high volumes may cause speaker damage.

C. Reset

Restore to factory settings.

D. Speaker Position Menu

Returns to the Speaker Position Menu from the Sound Adjustment Menu

E. Sound Adjustment Menu



This menu allows you to accurately adjust the amount of bass, midrange and treble output to tailor your listening experience to your music taste.

Touch the corresponding slider dot to adjust each individual frequency band (60Hz, 150Hz, 400Hz, 1KHz, 3KHz, 7KHz, 15KHz & 20KHz).

Alternately you can select from the following pre-set equaliser settings using the arrows:

Classic ⟶ Rock ⟶ Jazz ⟶ Electric ⟶ Pop ⟶ Soft ⟶ Standard ⟶ Custom

SETTINGS

DEVICE

Bluetooth

Provides access to the Bluetooth Settings menu (see page 23).

Radio

Allows the Tuner to be configured for different countries.

ACCESSIBILITY

Display

Allows adjustment of Brightness/Contrast/Hue and Saturation of the unit's display screen.

Dimmer

This menu allows you to adjust the backlight level of the unit – so in effect how bright the screen is.

1. Backlight level (Day)
   Adjusts the screen brightness
2. Backlight level (Night)
   Adjusts the screen brightness for Night Driving. This setting is triggered when the headlights are turned on or the screen is dimmed via the floating menu.

ADVANCED OPTIONS

Advanced

1. Floating Menu (Dock) ON/OFF. This allows you to disable the Floating Menu if you do not wish to use this feature
2. Auto play (card/USB) ON/OFF. This allows you to turn off auto play of files when you insert a USB drive.
3. Headlamp Detect ON/OFF. Allows you to disable auto dimming if the display screen when the headlights are turned on.
4. Key Sound ON/OFF. Allows you to activate a beep tone to be played when the unit controls are touched.
5. Touch Sound ON/OFF. Allows you to activate a beep tone whenever the touch screen controls are used.
6. DivX ON/OFF. Not available.
7. Automatic entry module. Not used
8. Rear View Mute. Turn ON to mute the unit's audio when reversing to reduce distraction.

Themes

Allows you to select from 6 different background themes for the unit.

Factory

1. Password Reset. Dealer use only.
2. Setting. Dealer use only
3. Reset. It the unit is not operating properly, select Reset to restore the unit to factory settings.

MAINTENANCE

⚠ Caution on cleaning the product

Do not use benzine, paint thinners, anti-static agents, or other chemical wipes. They could scratch the screen.

Recommended cleaning method:

Gently wipe the screen and monitor panel with a soft, dry cloth.

Moisture condensation

Moisture may condense inside the product in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the product may malfunction. If it happens, leave the product turned on for a few hours until the moisture evaporates.

FURTHER INFORMATION

Notes on using Bluetooth devices

- Some Bluetooth devices may not connect to this product depending on the Bluetooth version of the device.
- Connecting conditions may vary depending on the environment.
- Avoid using a Bluetooth device if it might affect driving safety.

USB playback

Playable files on a USB device

- This product can play MP3/WMA/AAC/FLAC/WAV files stored in a USB mass storage class device.
- Make sure all important data has been backed up to avoid losing it.

Notes on using a USB device:

- This product may not play back files stored a USB device properly when using a USB extension cable.
- USB devices equipped with special functions such as data security functions cannot be used with this product.
- Do not use a USB memory which has been divided into 2 or more partitions.
- Depending on the shape of the USB device and connection port, some USB devices may not be attached properly or the connection might be loose.
- This product may not recognize a memory card inserted into the USB card reader.

TROUBLESHOOTING

- When connecting with a USB cable, use a USB 2.0 cable that is compatible with your Smartphone.
- Avoid using a USB device if it might affect driving safety.
- Electrostatic shock at connecting a USB device may cause abnormal playback of the device. If this happens, disconnect the USB device then reset this product and the USB device (if it can be reset).
- Operation and power supply may not work as intended for some USB devices.
- Do not leave a USB device in the car, or expose it to direct sunlight or high temperatures to prevent deformation and damage to the device.

TROUBLESHOOTING

What appears to be trouble is not always serious.

Check the following points before calling your Dealer.

- For operations with the external components, refer also to the instructions supplied with the adapters used for connection (as well as the instructions supplied with the external components).

GENERAL

No sound comes out of the speakers.

- Adjust the volume to the optimum level.

The product does not work properly.

- Switch the power switch (or ignition) of the car off then on. If this does not work, press the reset button, see page 12. Otherwise contact your vehicle Dealer

BLUETOOTH

Bluetooth connection

The Bluetooth device does not detect the unit.

- Turn off, then turn on the Bluetooth device.
- Turn off, then turn on the unit.

The product does not pair with the Bluetooth device.

- When the device is connected via USB cable, disconnect it.
- Turn off, then turn on the Bluetooth device.
- When the connected Bluetooth device is used for Android **Mi-DISPLAY**, pairing is not allowed.

The device is disconnected automatically or the device cannot be connected.

- When an Apple phone compatible with **Mi-DISPLAY** is connected to the USB input terminal, it cannot be connected via Bluetooth. Use the phone and audio player function on the **Mi-DISPLAY** screen, see page 25.
- When an Android phone compatible with **Mi-DISPLAY** is connected to the USB input terminal, the device is connected via Bluetooth automatically, and the Bluetooth mobile phone currently connected is disconnected.

APPS VIA MI-DISPLAY

MI-DISPLAY does not operate.

- Check the connected device is compatible with **Mi-DISPLAY** at www.directed.com.au/midisplayhelp

Check also that the USB cable used is compatible is genuine or certified by your phone manufacturer.

- Disconnect the device, then connect it again.
- Check that there are no restriction functions activated for the connected phone.

App (such as map) does not work correctly.

- You cannot use some Apps when reception status of the connected device is poor. This is not a malfunction of the product.

PHONE CONNECTED VIA BLUETOOTH

Phone sound quality is poor.

- Reduce the distance between the unit and the Bluetooth mobile phone.
- Move the car to a place where you can get a better signal reception.

USB

While playing a track, sound is sometimes interrupted.

- The files have not been properly recorded into the USB device. Record the files again, and retry.

Tracks are not played back as you have intended them to play.

- The playback order may differ depending on the USB device.

FM/AM

Static noise while listening to the radio.

- The antenna may not be connected or the connection may be loose. Contact your Vehicle Dealer.

DIGITAL RADIO - DAB

Cannot receive a service.

- Your area is not covered by the service. Use the DAB+ source in an area which provides DAB service.

BLUETOOTH AUDIO

The connected audio player cannot be controlled.

- Check whether the connected audio player supports AVRCP (Audio Video Remote ControlProfile).

The sound is interrupted or skipped while using a Bluetooth audio player.

- Reduce the distance between the product and the Bluetooth audio player.
- Disconnect the device connected for Bluetooth phone.
- Turn off, then turn on the product. – When the sound is not yet restored, connect the player again.

• Apple is a trademark of Apple Inc., registered in the U.S. and other countries.
• Android and Android Auto are trademarks of Google Inc.
• The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

DIRECTED

All Images, Information and Content are Copyright © 2021
Directed Electronics Australia Pty Ltd.
All Rights Reserved.

www.directed.com.au | www.directed.co.nz