
0. Preparation for installing the software

0-1. Operation on the “HOME” screen

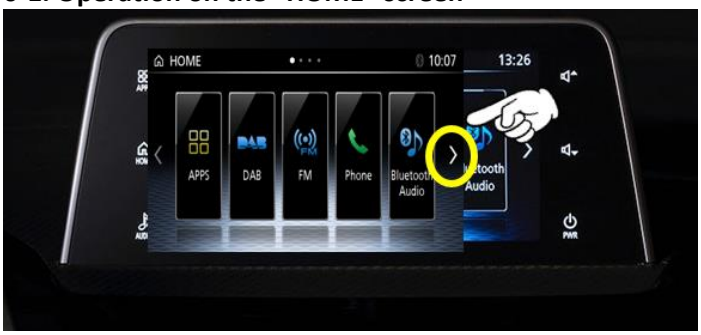

Push the [>] button.

The SDA will then display the 2nd page.



Push the [Settings] button.

The SDA will then display the “Settings” screen.

0-2. Operation on "Settings" screen.



Push the [Information] tab.

The SDA will then display the "Information" screen.

0-3. Operation on "Information" tab in "Settings" screen.



Check the contents of "Version Information".

Please update Software, according to the following procedure, once you have confirmed that the software version is listed under “Previous” in this Hotline Fix.

1. Install software on the Smartphone Link Display Audio


1-1. Operation on "HOME" screen.



Push and hold the [PWR] button for 5 seconds.

The SDA will then display the “Off” screen.

1-2. Operation on "Off" screen.

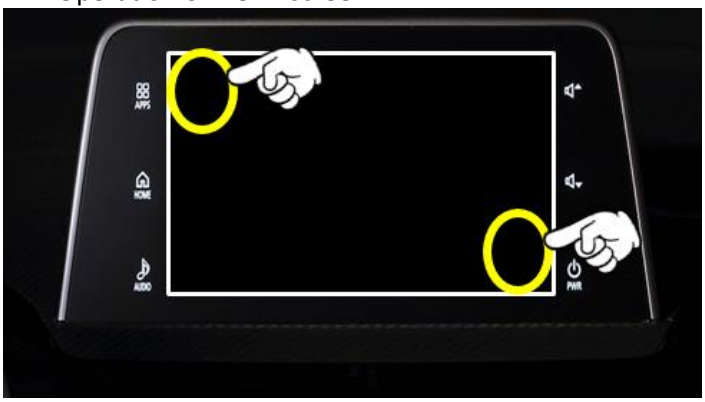


Push and hold the Left upper side of the screen.

A “Beep” will be heard.

After the “Beep”, Push the Right lower side of the screen.

The SDA will then display the "Service Menu" screen.

1-3. Operation on "Service menu" screen.

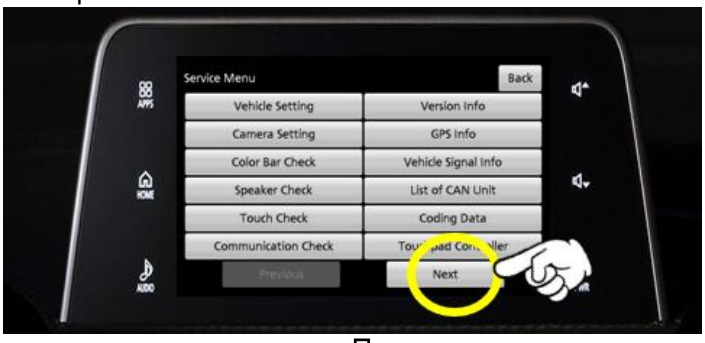



Push the [Next] button on "Service Menu" screen.

The SDA will then display the 2nd page.

Note: Please ensure the USB is connected before proceeding.

Push the [SW Update] button in the Service Menu

The SDA will display the “SW Update” screen.

2. Update Software and Reset the SDA.

2-1. Operation on "SW Update" screen.



Push the [Update] button.

The SDA will then start the update of the software.

Note: The update button will be greyed out if the attached USB device does not contain valid software or the software is already at the latest version

Note: Do not disconnect the USB during the update process.

2-2. Operation on "HOME" screen.



After the system restarts, the SDA will display the "HOME" screen.

Push the [>] button.

The SDA will then display the 2nd page.

2-3. Operation on "HOME" screen.



Push the [Settings] button.

The SDA will then display the “Settings” screen.

2. Update Software and Reset the SDA.

2-4. Operation on "Settings" screen.




Push the [System] tab.

Push the [>] button on "System Menu" screen.

The SDA will then display the 2nd page.

2-5. Operation on [System] tab in "Settings" screen.

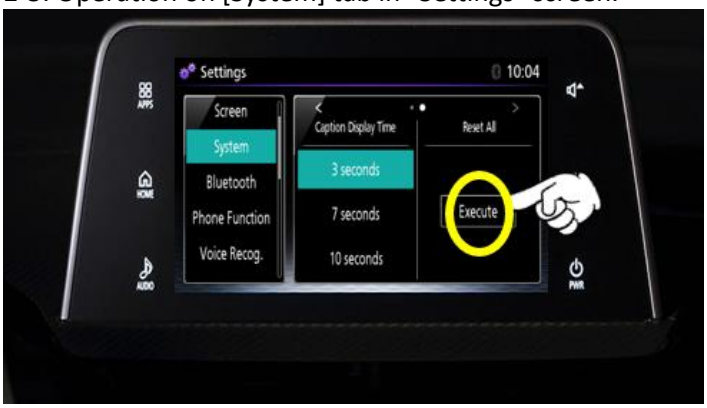

Push the [Execute] button on "Reset All" Menu.

Note: “Execute” function deletes all of the customer’s settings. Please obtain the customer’s consent before proceeding.



The SDA will then move to the "Reset the System?" screen.

Press the [Yes] button and the SDA will begin “All Reset” function.

3. Confirm software version.（"Settings" Screen）


3-1. Operation on "HOME" screen.



Push the [Settings] button on the 2nd page of the "HOME" screen.

The SDA will then display the “Settings” screen.

3-2. Operation on "Settings" screen.

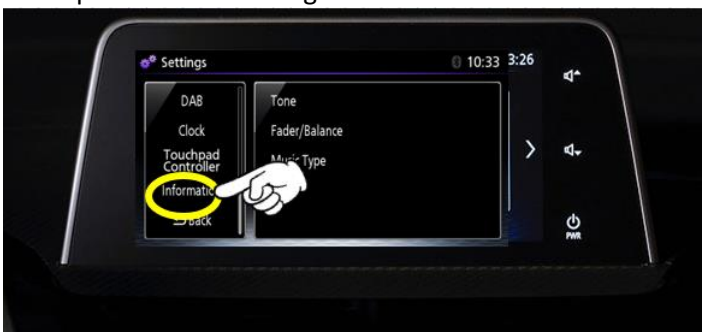

Push the [Information] tab.

The SDA will the display the "Information" screen

3-3. Operation on "Information" tab in "Settings" screen.




Check the contents of “Software Version” information.

If the S/W Version is now “O”, the software update has completed successfully.

4. Confirm software version.（"Service menu" Screen）

4-1. Operation on "Screen Off" screen. (On any screen, Push and hold the “PWR“ button for 5 seconds.)

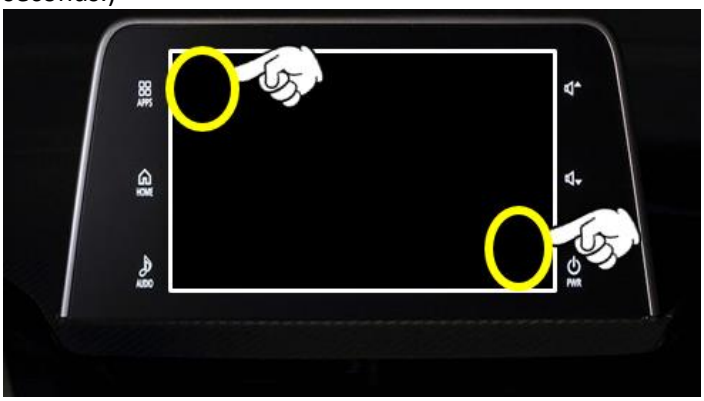


Push and hold the upper left corner of the “Off” Screen, for 5 seconds.

The SDA will then output a “beep”.

After the beep, press the lower right corner of the screen.

The SDA will then display the “Service Menu” screen.

4-2. Operation on "Service Menu" screen.

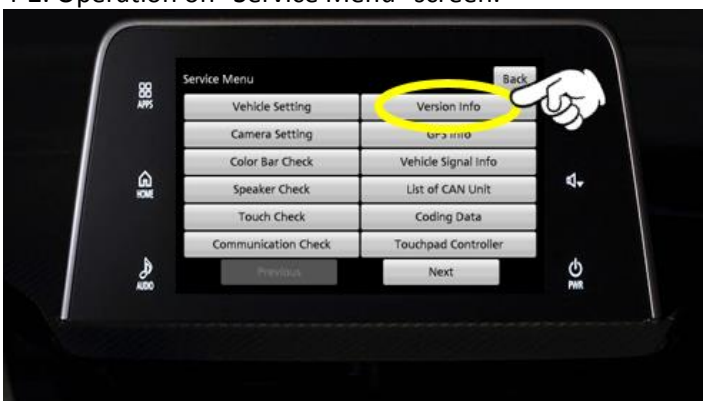

Press the [Version Info] button on "Service Menu" screen.

The SDA will then display the "Version Info" screen.

4-3. Operation on "Version Info" screen.



Press the [Next] button on "Version info" screen.



Confirm software version. If the version is the same as below, the software update has completed successfully.

S/W Ver.
2.4.0106.0600