

AIR-S26

Passive
installation
subwoofer



AIR series has been created as a series of installation-dedicated speakers, backed up with various mounting hardware options for ease and versatility of set-up.


Installation subwoofers benefit from an interior-friendly form factor, complete with several neat mounting options, including wall or ceiling placement.

AIR-S26 is a subcompact subwoofer tailor-made to bring a smooth and deep low-frequency reinforcement into settings where space is critical and visual low profile is a must. It is based on two 6,5" high excursion woofers and has an improved vent design to eliminate the possibility of the slightest noises even when listened to at a very close range.


Additionally, AIR-S26 can be mounted onto the wall using the rear or side mounting points.




DIMENSIONS

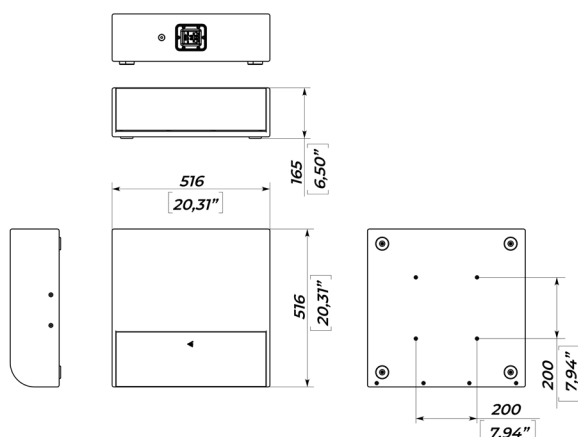

ACCESSORIES

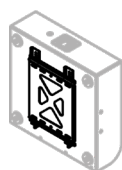


AIR-WB
Wall mounting
for AIR-S26



AIR-CB-26
Ceiling mounting
for AIR-S26

AMPLIFICATION

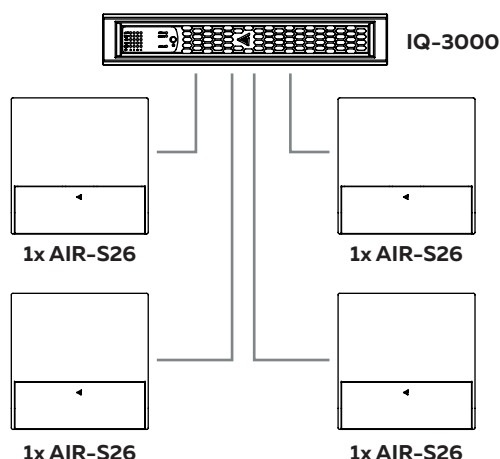

SPECIFICATIONS

Frequency Response (-10dB)	41 - 200 Hz
Max SPL ¹	130,5 dB
Sensitivity (1W/1m)	94 dB
LF driver	2 x 6,5", 1,75" VC
Impedance	4 Ohm
Nominal power ²	300 W
Connectors	Phoenix
Dimensions (W x H x D)	516 x 165 x 516 mm 20,3" x 6,5" x 20,3"
Weight net / shipping	13,9 kg / 14,9 kg 30,6 lbs / 32,8 lbs
Mounting	VESA 200 x 200 AIR-CB-26 ceiling mounting points M10 safety mounting point
Weather protection	IP54 rated
Enclosure material	Plywood, wear-resistant paint
Speaker protection	Steel grill, acoustically transparent backing

¹ - pink noise, filtered according to AES 2 - 2012, crest factor 12 dB

² - based on transducer power measured according to AES 2 - 2012

CONNECTIONS

Signal +	+ terminal
Signal -	- terminal
HPF frequency, no less than	45 Hz
HPF order, no less than	18 dB/oct
Recommended amplifier power	300 - 600 W on nominal impedance

SAFETY INSTRUCTIONS

1. Keep liquids, direct sunlight, open flames, and heat sources away from the speaker system to prevent damage or failure.
2. Avoid using the system with damaged connectors or cables to prevent electrical shock or fire hazards.
3. Ensure the speaker is securely positioned on a stable surface (floor, stage, or wall).
4. On angled or slippery surfaces, secure the system to prevent movement caused by vibration.
5. Limit exposure to sound levels above 90 dB to prevent potential hearing damage.
6. Use a high-pass filter (HPF) to eliminate low, non-audible frequencies and avoid speaker damage and sound distortion.
7. Do not exceed the input power ratings specified to ensure safe and reliable operation of the speaker system.



AIR SERIES

DATASHEET