

xantech®

MODEL

283D


Blink-IR™ Designer Emitter

INSTALLATION INSTRUCTIONS




DESCRIPTION

The 283D Blink-IR Designer Emitter contains a small Infrared LED housed in a miniature, designer styled, black appearing, injection molded plastic shell. Unlike other emitters, the 283D emits visible red light in addition to IR (infrared) control signals when activated by IR commands sent to it by IR receivers or other Xantech controllers. The 283D is designed to be installed directly on the IR sensor window of the controlled device.

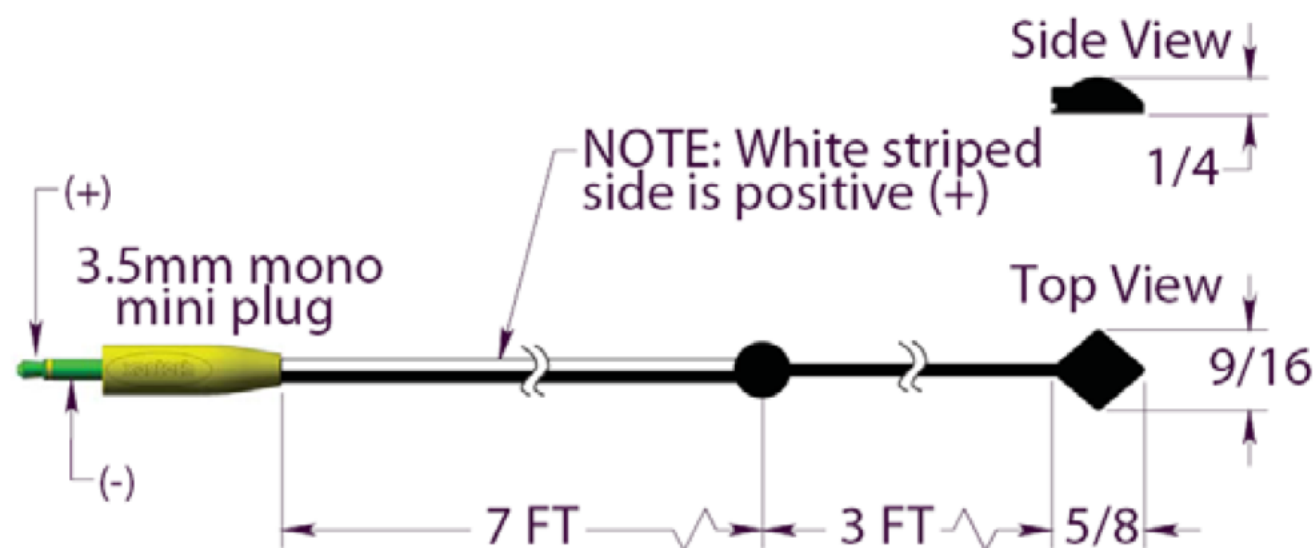

BLACK (IR OPAQUE) EMITTER SHIELD

- An **optional** shield, available from Xantech as model **28DES**, fits over the emitter head and the sensor window of the controlled component. It prevents unwanted external IR signals from passing through or leaking past it.

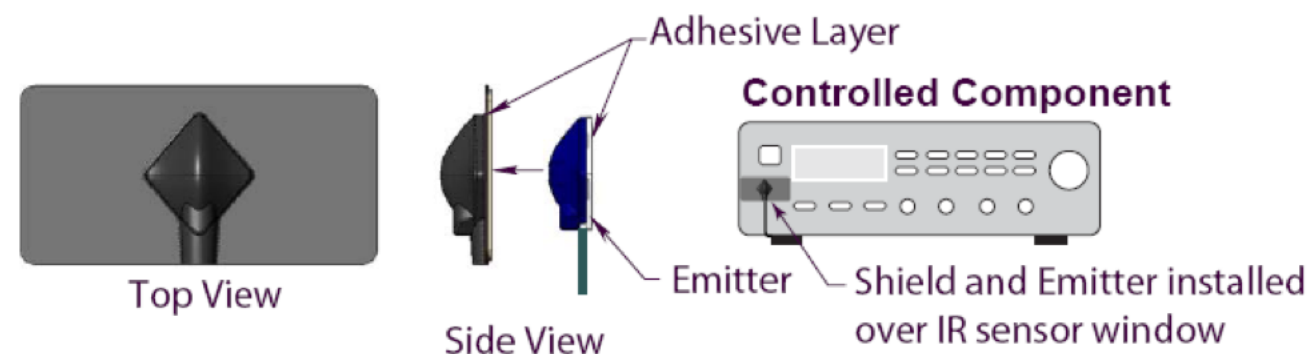

- Use the 28DES when you want the equipment to respond only to the 283D, such as in zone controlled systems.

CONNECTING THE EMITTERS

- Simply insert the mono mini plug of the 283D emitter into the "EMITTERS" or "OUT" jacks on any of the Xantech Connecting Blocks or Controllers.
- CAUTION: DO NOT plug emitters into the IN/OUT or HIGH OUT jacks on the 790-00 and 791-44 Connecting Blocks.** To do so will destroy the emitters!
- The 283D visible emitter will also indicate the presence of stray IR or RF interference by randomly blinking when no IR control signal is being sent. Reposition the IR receiver of the interfering source to eliminate or reduce the random blinking. The more the random blinking is reduced, the better the system will function.

