

# Remove and Install Front Wheel - Stark VARG

Video link: <https://www.youtube.com/watch?v=dymHVOIRNpg>

Source video: Remove and Install Front Wheel - Stark VARG by Stark Future Official

Applicable models: MX

## Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the source video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

## Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

## Removal Procedure

### 1. Prepare access to the Front Wheel

Remove the surrounding hardware needed to expose the Front Wheel and its clamping or axle points.

Keep the removed fasteners organized in sequence so reassembly matches the video.



Loosen wheel axle lock nut

## 2. Remove the visible retaining hardware for the Front Wheel

Remove the visible Front Wheel fasteners in the order shown and support the part as it comes free.


Support the component as the last fastener is removed.



## 3. Release any bracket, clip, or coupling attached to the Front Wheel

Free any bracket, clip, spacer, linkage, or connector that still ties the Front Wheel to the bike.

Note the orientation of these supporting pieces before setting them aside.

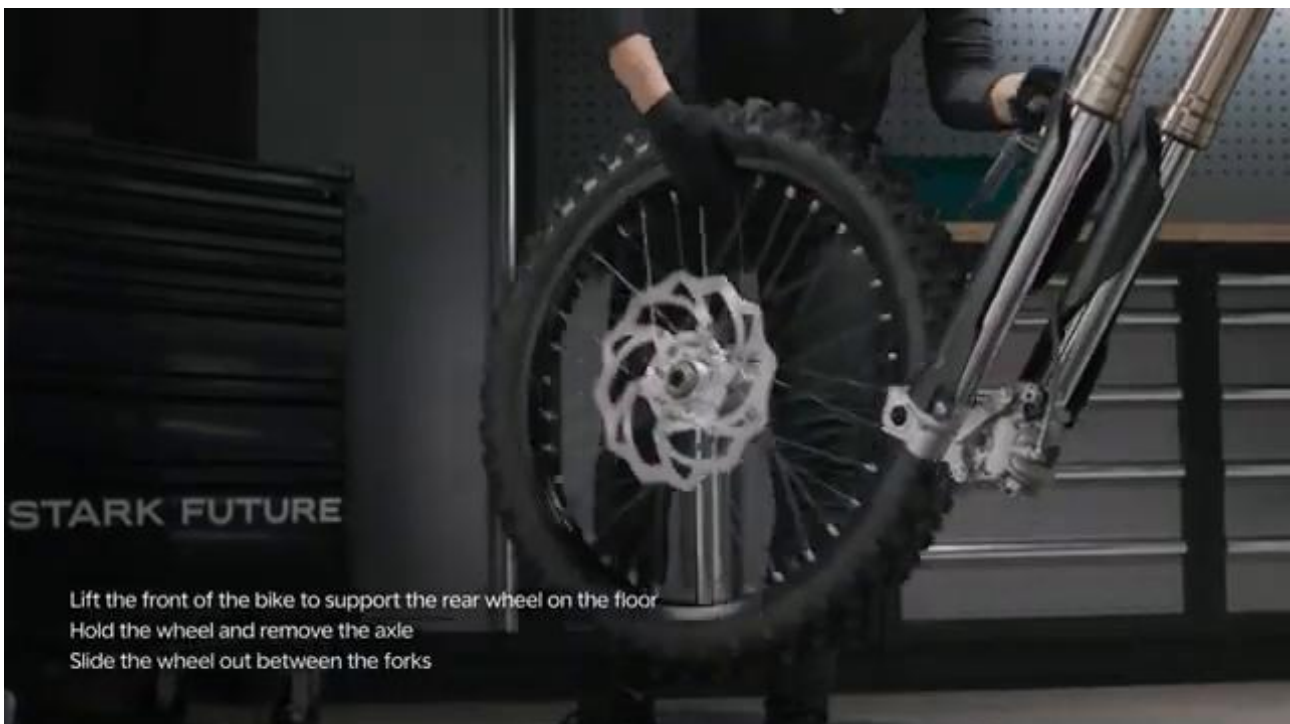

#### 4. Remove the Front Wheel from the bike

Slide the Front Wheel free from the bike once the clamping hardware and support pieces are released.

Inspect the removed part and the mounting points before reassembly.



## Installation Procedure

### 5. Position the Front Wheel for installation

Return the Front Wheel to its mounting position, align the fork holes with the wheel hub, and start the axle lock nut by hand.

Hold the wheel in place until the axle and lock nut are seated correctly.



## 6. Reconnect or refit the support pieces for the Front Wheel

Seat the axle and pre-tighten the right fork axle clamp bolts while the wheel is held in alignment.

Tighten the right fork axle clamp bolts to **5 Nm**.



## 7. Install the retaining hardware for the Front Wheel

Install and tighten the front wheel axle lock bolt once the axle is fully seated.

Tighten the front wheel axle lock bolt to **35 Nm**.





## 8. Verify the completed installation of the Front Wheel

Loosen the right fork axle clamp bolts, spin the wheel by hand a few times, and squeeze the brake to let the fork legs settle naturally.

Tighten all fork axle clamp bolts to **15 Nm** and verify the wheel rotates freely before returning the bike to service.



## Torque Summary

| Component                               | Torque |
|-----------------------------------------|--------|
| Tighten the right fork axle clamp bolts | 5 Nm   |
| Tighten the front wheel axle lock bolt  | 35 Nm  |
| Tighten all fork axle clamp bolts       | 15 Nm  |

Verified torque items:

- Tighten the right fork axle clamp bolts: **5 Nm** from Stark technical manual 09.001.01 Remove and install front wheel.
- Tighten the front wheel axle lock bolt: **35 Nm** from the official Stark VARG owner manual torque table.
- Tighten all fork axle clamp bolts: **15 Nm** from Stark technical manual 09.001.01 Remove and install front wheel.

## **Critical Checks Before Riding**

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.