

Remove and Install Rocker Arm - Stark VARG

Video link: <https://www.youtube.com/watch?v=SCClqTlzyI0>

Source video: Remove and Install Rocker Arm - Stark VARG by Stark Future Official

Applicable models: MX

Scope

This guide follows the same step-by-step workshop structure as the MX tutorials, but it is derived as a visual sequence from the official Stark Future ASMR video. Because the source video does not provide usable captions or narration, the procedure is documented through curated screenshots and concise action guidance.

Preparation

- Place the bike on a stable stand or work area before starting the procedure.
- Prepare the correct tools for the fasteners, clips, brackets, and components shown in the video.
- Keep removed hardware organized in sequence so reassembly follows the same order as the video.
- Have a torque wrench ready for any tightening steps that specify a torque value.

Removal Procedure

1. Prepare access to the Rocker Arm

Remove or move aside the surrounding part, cover, or hardware needed to reach the Rocker Arm.

Keep the removed fasteners organized in sequence so reassembly matches the video.



2. Remove the visible retaining hardware for the Rocker Arm

Remove the bolts, screws, nuts, or clips that directly secure the Rocker Arm.

Support the component as the last fastener is removed.



3. Release any bracket, clip, or coupling attached to the Rocker Arm

Free any bracket, clip, spacer, linkage, or connector that still ties the Rocker Arm to the bike.

Note the orientation of these supporting pieces before setting them aside.



4. Remove the Rocker Arm from the bike

Lift, slide, or guide the Rocker Arm out of its mounting position once the retaining hardware is removed.

Inspect the removed part and the mounting points before reassembly.



Installation Procedure

5. Position the Rocker Arm for installation

Return the Rocker Arm to its mounting position and align the holes, tabs, or locating surfaces.


Hold the component in place until the first retaining hardware is started.



6. Reconnect or refit the support pieces for the Rocker Arm

Reinstall any bracket, clip, spacer, linkage, or coupling associated with the Rocker Arm.

Make sure each supporting piece is seated correctly before final tightening.

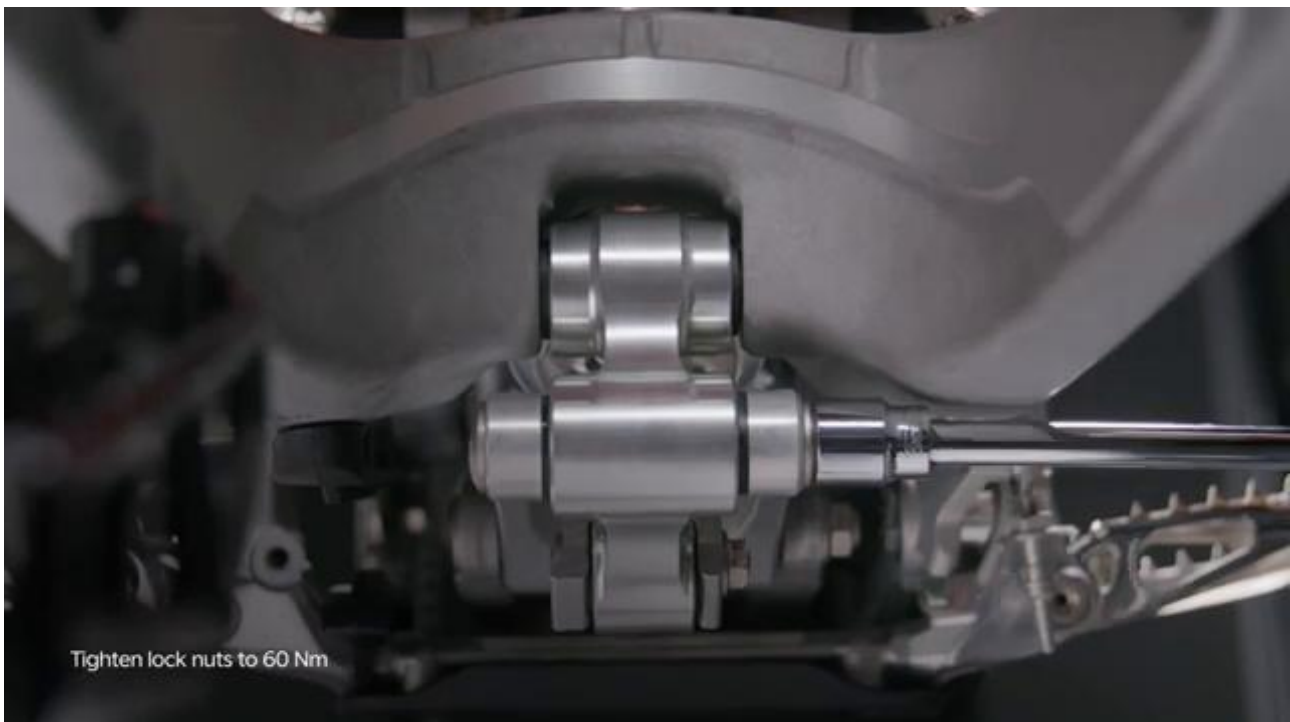

7. Install the retaining hardware for the Rocker Arm

Install the main retaining hardware for the Rocker Arm by hand first, then tighten it evenly.

Check that the component remains aligned while the hardware is brought fully home.

Tighten the rocker arm reverse lock nut to **5 Nm**.

Tighten the rocker arm main shaft to **60 Nm**.

Tighten the rocker arm shaft lids to **5 Nm**.


Tighten the rocker arm lock nut to **60 Nm**.



8. Verify the completed installation of the Rocker Arm

Inspect the final position of the Rocker Arm and confirm that all hardware, clips, and surrounding parts are back in place.

Check the component for correct fit and movement before returning the bike to service.

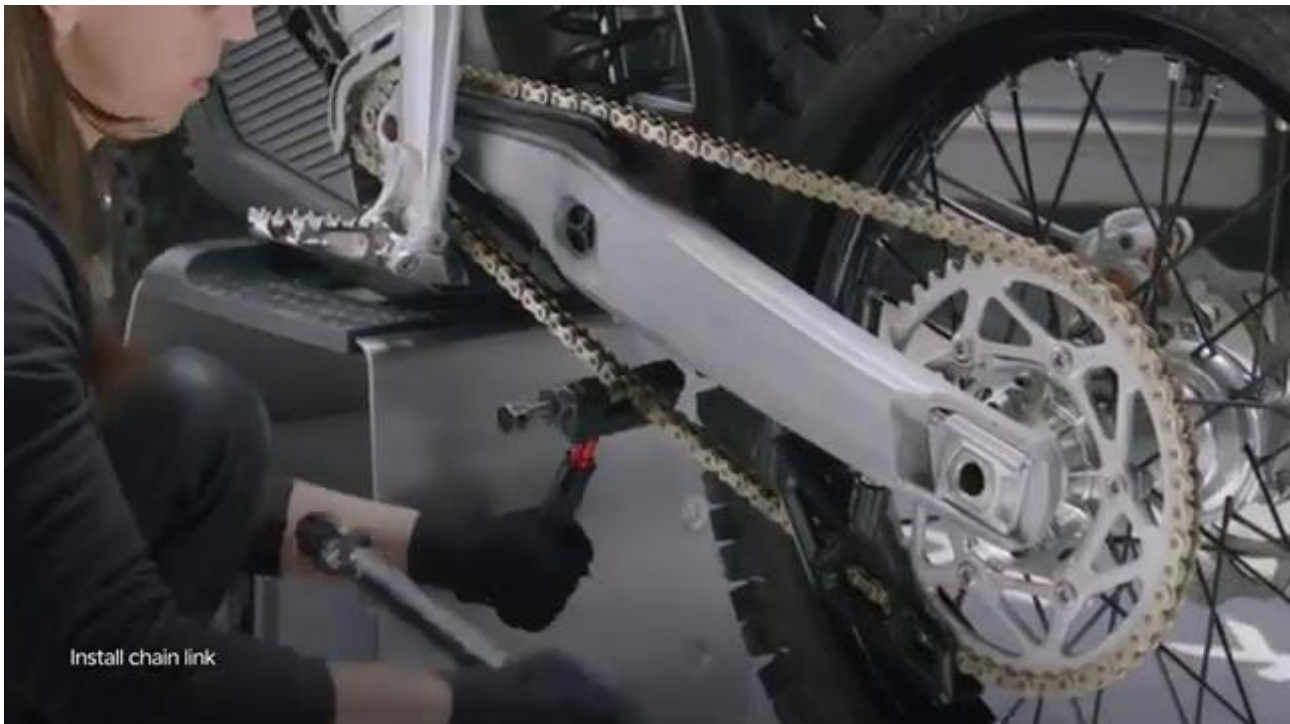

Torque Summary

Component	Torque
Tighten the rocker arm reverse lock nut	5 Nm
Tighten the rocker arm main shaft	60 Nm
Tighten the rocker arm shaft lids	5 Nm
Tighten the rocker arm lock nut	60 Nm

Verified torque items:

- Tighten the rocker arm reverse lock nut: **5 Nm** from the official Stark VARG owner manual torque table.
- Tighten the rocker arm main shaft: **60 Nm** from the official Stark VARG owner manual torque table.
- Tighten the rocker arm shaft lids: **5 Nm** from the official Stark VARG owner manual torque table.
- Tighten the rocker arm lock nut: **60 Nm** from the official Stark VARG owner manual torque table.

Critical Checks Before Riding

- Confirm the serviced component is fully seated and all fasteners are tightened in the correct order.
- Recheck all torque-critical hardware before riding.
- Make sure all routed cables, clips, brackets, and surrounding parts are returned to their original positions.
- Inspect the bike visually for any missing hardware before returning it to service.