Maintenance Procedure No. MP674


Page 1 of 2

TASK DESCRIPTION				
INSPECT TANDEM SHUTTER MAGNET VALVE				
BUILDER'S OR VENDOR'S MAINTENANCE INSTRUCTIONS				
MPI LOCOMOTIVE MAINTENANCE MANUAL, SECTION 6				
SPECIAL TOOLS REQUIRED:				
RELATED MAINTENANCE PROCEDURES MODIFICATIONS, POINTERS, ETC.				
SAFETY PRECAUTIONS:				
SAFETY PRECAUTIONS: CONTRACTOR TO ASSUME RESPONSIBILITY FOR SAFETY RULES AND COMPLIANCE.				

PROCEDURE

- 1. Inspect the electrical connections for tightness.
- 2. Inspect the air connections for leaks.
- 3. Verify shutter operation by manually operating shutter test valve (labeled below), mounted on the jacket water expansion tank on the accessory rack. This ball valve, placed in the operating position, will allow air pressure to close the shutters.
- 4. Observe exhausted air from the test valve when the test valve is rotated clockwise to the closed position to open the shutters.

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY:
REVISION 1	August 2009	TITLE: Manager, Rail Equipment

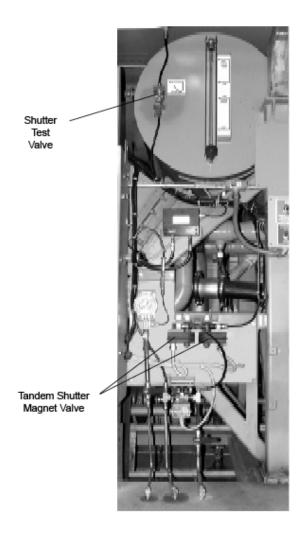

DATE OF FIRST ISSUE	September 2007	AUTHORIZED BY:
REVISION 1	August 2009	TITLE: Manager, Rail Equipment