Oxilon

ISO 9001:2015 Certified Company

Certificate No.: Q-205000228009

Certification & Inspection
Certificate No.: CE-10043

General Information and Operating Manual






DLX 53 SHFP Manual CE

General Information & Operating Manual
Dual Fuel Burner (DLX 53 SHFP)


Specification criteria for Duel Fuel burner : -

Burner model	: DLX 53 SHFP
Burner type	: MonoBlock Type
Burner Ratting	: “CE” Ratting as per European standard
Burner capacity	: 105 - 530 Kw/hr.
Burner capacity	: 90,300 - 4,55,800 Kcal/hr.
Gas flow N.Gas	: 10.5 - 53 Nm3/hr.
Gas flow L.P.G	: 8 - 40 Kg/hr.
Oil flow (Pyrolysis oil)	: 9 - 45 Ltr/hr
Electrical connection	: Single Phase 230 V, Three Phase 415 V.
Flame monitoring	: Multi fuel flame sensor
Flame dimensions	: Flame length : 850 min. - 1400 max. Flame dia : 200 min. - 310 max.
Back pressure	: Up to 7 Mbar depend on operating load

Performance Curves / Back Pressure Graphs - " DLX 53 SHFP" Burner

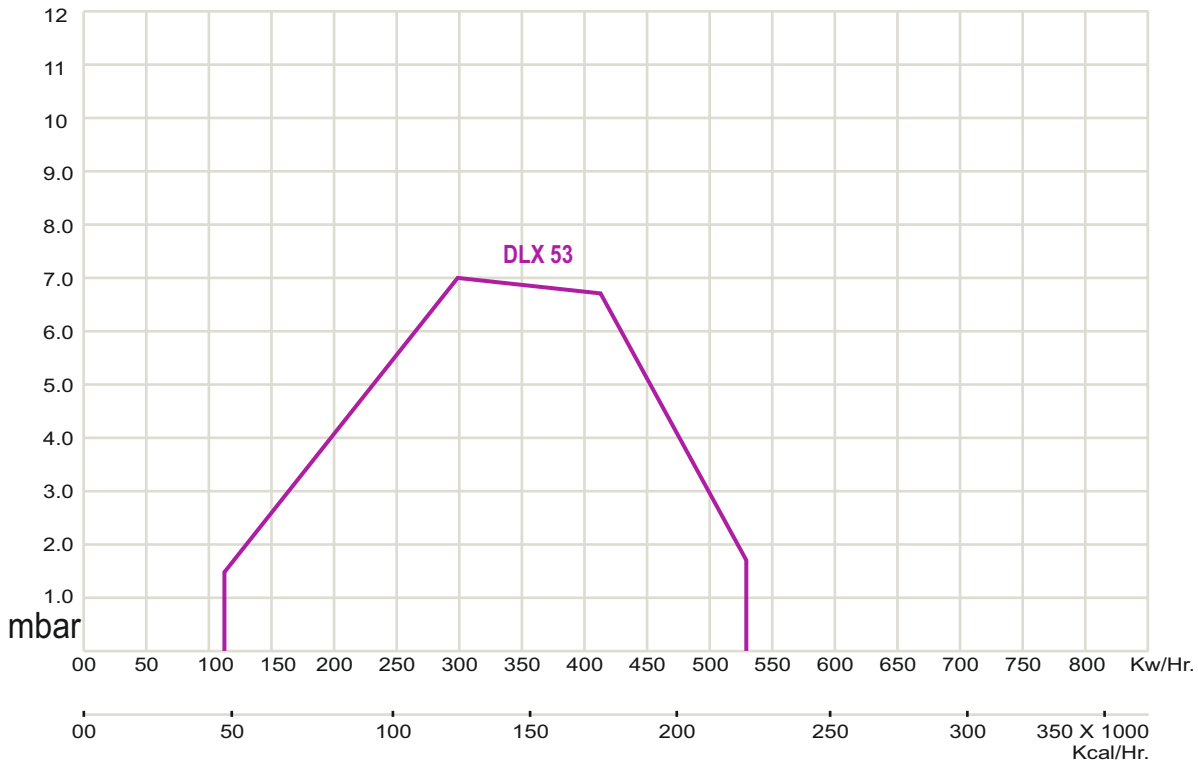


Mounting Dimensions :-

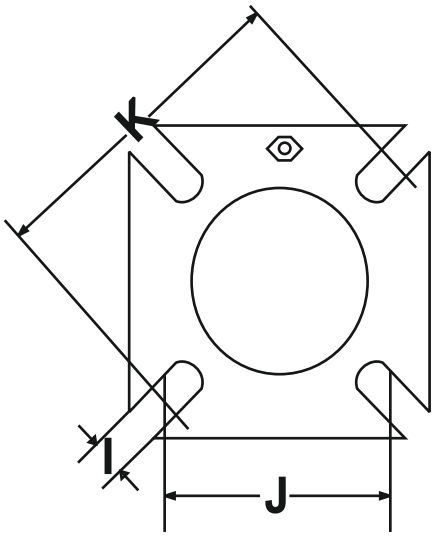

K (PCD)	I	J
220 - 290	15	155 - 205

Inner Assembly Setting - Ignition Electrodes :-

Setting of Ignition Electrodes

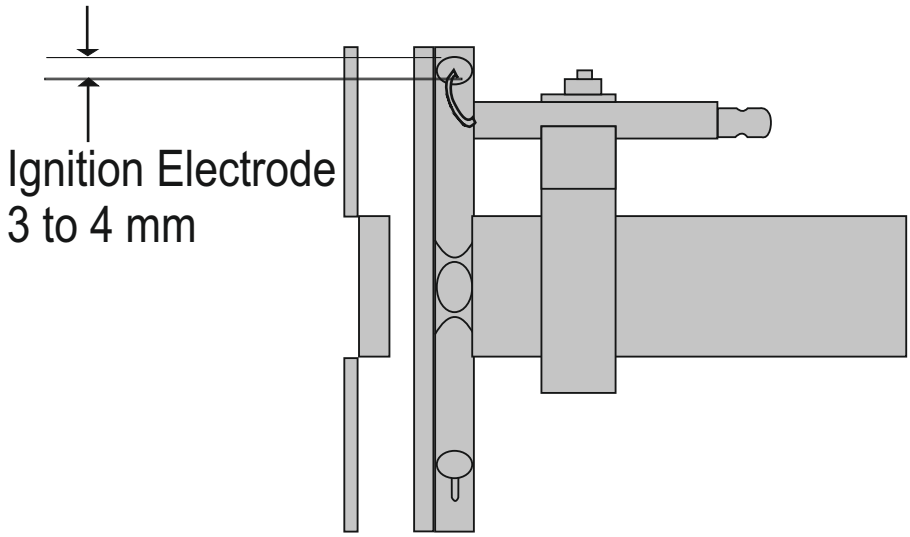

Setting of Gas Valve

To set the gas values of gas valve bloc, please see the setting points indicated with arrow in the picture.

Set point



SV 1 :- Low Valve
SV 2 :- High Valve

Setting of valve with screw driver :-
To increase the flow - rotate + side
To decrease the flow - rotate - side
Total 8 turns setting range



SV 1 :- Low Valve
SV 2 :- High Valve

Setting of valve with 4 mm L.N. key :-
Remove the cap at the bottom of valve
To increase the flow - rotate + side
To decrease the flow - rotate - side
Total half turns setting range

Set point - Remove cap

Setting of Gas Valve

To set the gas values of gas valve bloc, please see the setting points indicated with arrow in the picture.

Gas Pressure Setting



SV 1 :- Low Valve
SV 2 :- High Valve

Setting of valve with screw driver :-

To increase the flow - rotate + side

To decrease the flow - rotate - side

Diagram : Seperate Panel	**Power :** Three Phase	**Created by :**	Hemant Patel
Fuel : GAS/OIL	**Sequence Controler :** SQ DUAL	**Pass by :**	Vinod Yadav
Stage : Single Stge Operation	**Servomotor :** N/A	**Scale :**	
Blower : Indirect Blower	**PID :** N/A	**Date :**	31-12-2025
Model : DLX 53 SHFP	**Sequence controller timing :** - 30 Second	**Rivision :**	


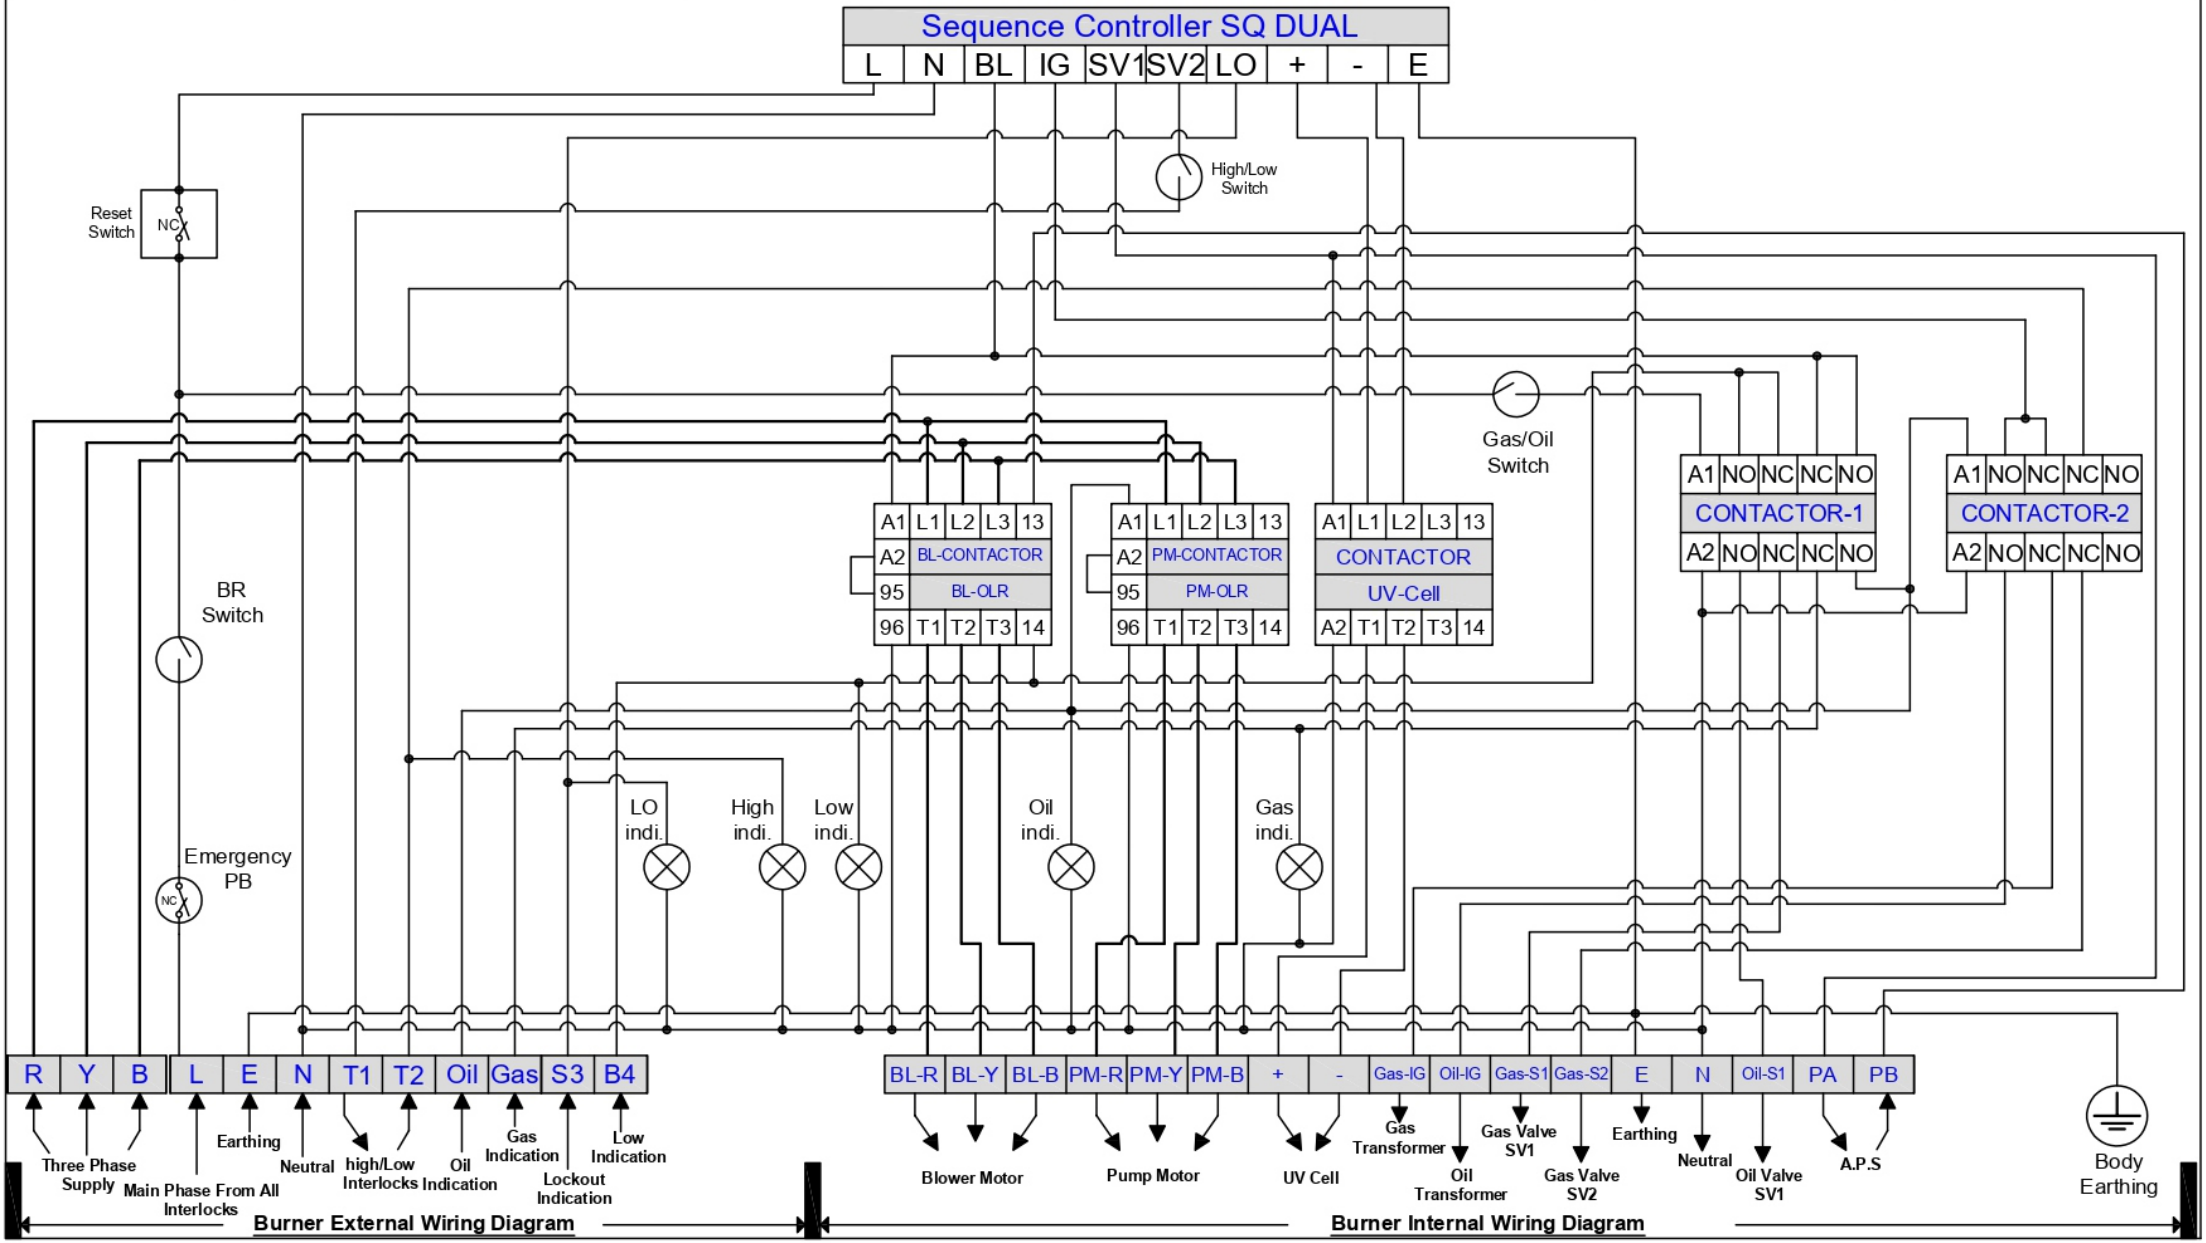


Diagram : Junction Box Mounted On Burner	**Power :** Three Phase	**Created by :**	Hemant Patel
Fuel : Dual Fuel	**Sequence Controler :-**	**Pass by :**	Vinod Yadav
Stage : Two Stage Operation	**Servomotor :** N/A	**Scale :**	
Blower : Indirect Blower	**PID :** N/A	**Date :**	15-12-2025
Model : DLX 53 SHFP	**Sequence controller timing :** -	**Rivision :**	

Wiring Diagram Of Junction Box Mounted On Burner

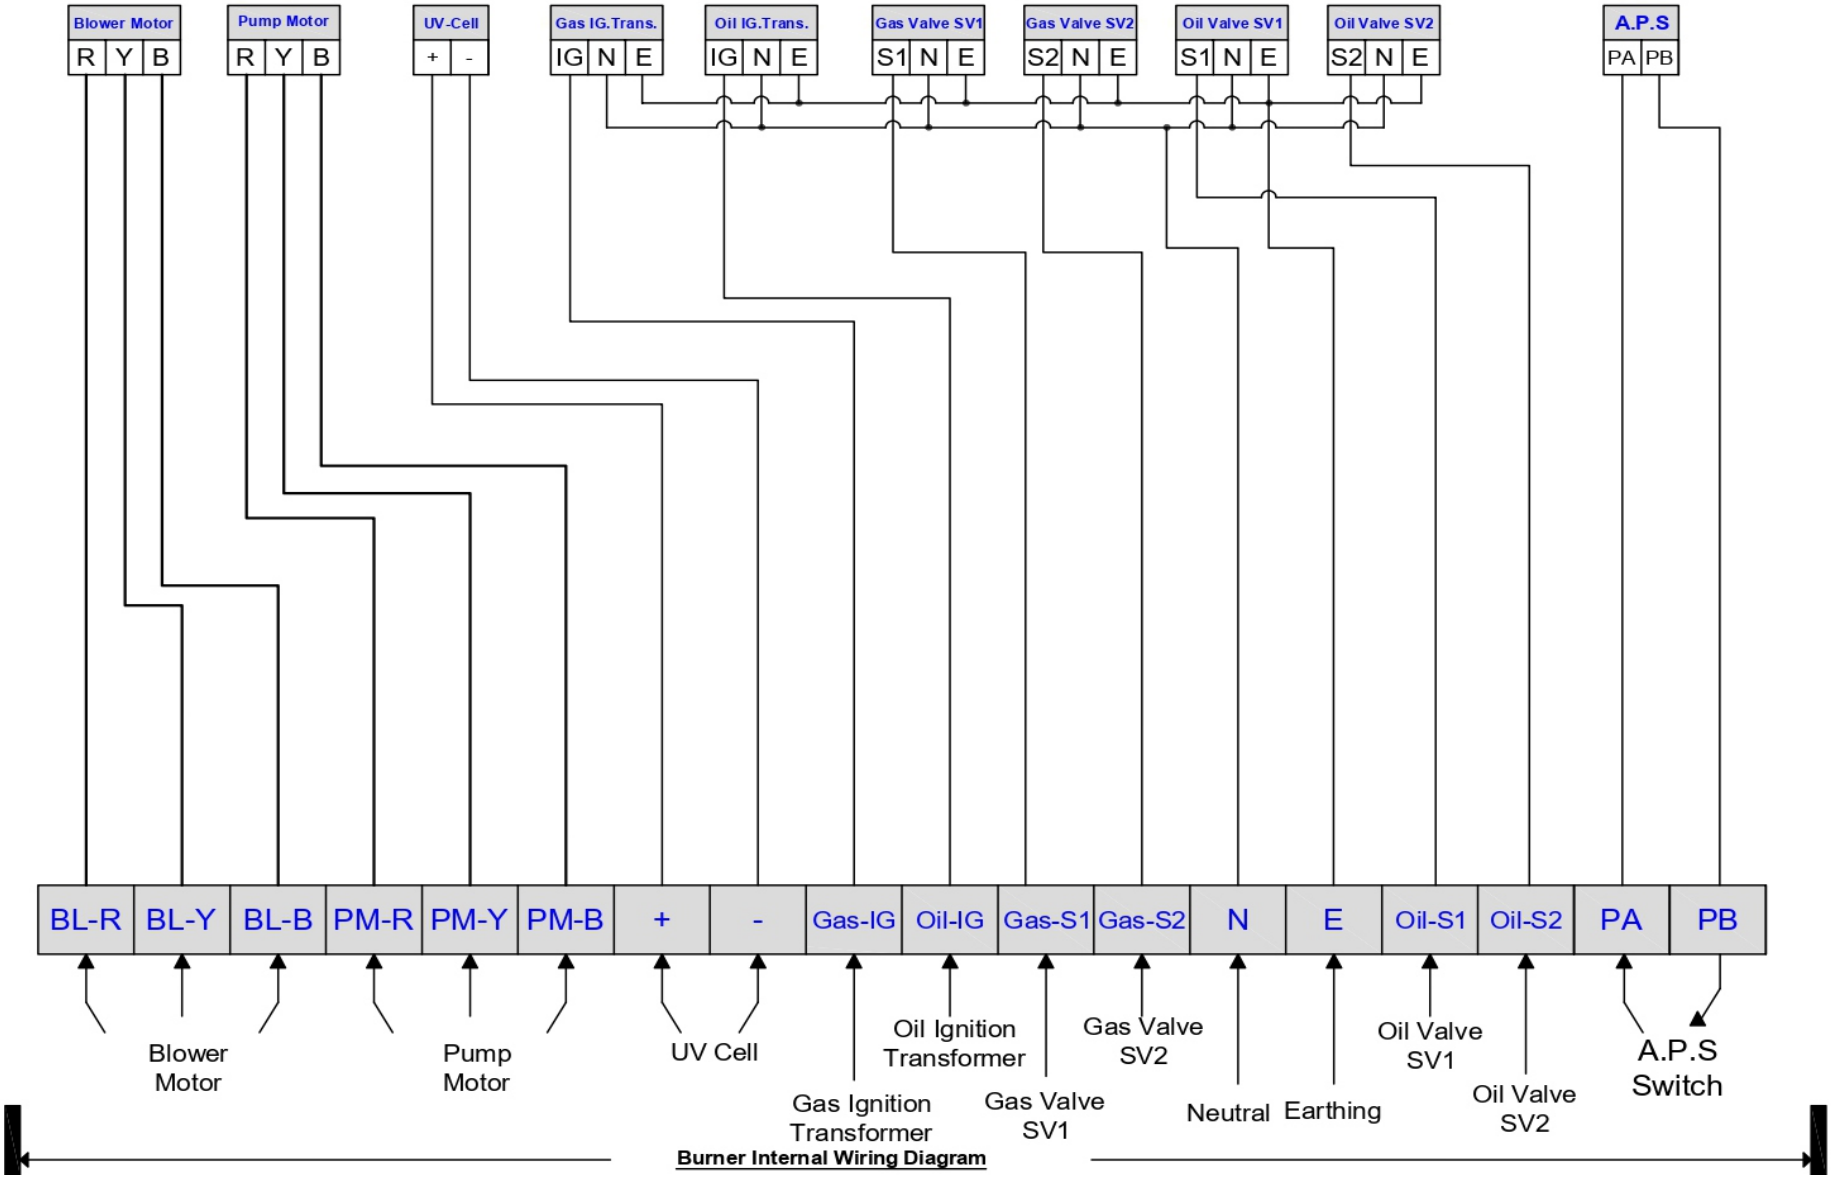

NOZZLE TABLE

Pump pressure bar

Gph	8			9			10			11			12			13			14			15		
	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h
0,40	1,33	16	13	1,41	17	14	1,49	18	15	1,56	18	16	1,63	19	17	1,70	20	17	1,76	21	18	1,82	21	18
0,50	1,66	20	17	1,76	21	18	1,86	22	19	1,95	23	20	2,04	24	21	2,12	25	22	2,20	26	22	2,28	27	23
0,60	2,00	24	20	2,12	25	22	2,23	26	23	2,34	28	24	2,45	29	25	2,55	30	26	2,64	31	27	2,73	32	28
0,65	2,16	26	22	2,29	27	23	2,42	29	25	2,54	30	26	2,65	31	27	2,75	33	28	2,86	34	29	2,96	35	30
0,75	2,49	29	25	2,65	31	27	2,79	33	28	2,93	35	30	3,08	36	31	3,18	38	32	3,30	39	34	3,42	40	35
0,85	2,83	33	29	3,00	36	31	3,16	37	32	3,32	39	34	3,47	41	35	3,61	43	37	3,74	44	38	3,87	46	39
1,00	3,33	39	34	3,53	42	36	3,72	44	38	3,90	46	40	4,08	48	42	4,24	50	43	4,40	52	45	4,56	54	46
1,10	3,66	43	37	3,88	46	39	4,09	48	42	4,29	51	44	4,48	53	46	4,67	55	48	4,84	57	49	5,01	59	51
1,20	3,99	47	41	4,24	50	43	4,47	53	46	4,68	55	48	4,89	58	50	5,09	60	52	5,29	63	54	5,47	65	56
1,25	4,16	49	42	4,40	52	45	4,65	55	47	4,88	58	50	5,10	60	52	5,30	63	54	5,51	65	56	5,70	68	58
1,35	4,49	53	46	4,76	56	48	5,02	59	51	5,27	62	54	5,50	65	56	5,73	68	58	5,95	70	61	6,15	73	63
1,50	4,98	59	51	5,29	63	54	5,58	66	57	5,85	69	60	6,11	72	62	6,36	75	65	6,60	78	67	6,83	81	70
1,65	5,49	65	56	5,82	69	59	6,14	73	63	6,44	76	66	6,73	80	69	7,00	83	71	7,27	86	74	7,52	89	77
1,75	5,82	69	59	6,18	73	63	6,51	77	66	6,83	81	70	7,14	85	73	7,42	88	76	7,71	91	79	7,97	94	81
2,00	6,65	79	68	7,06	84	72	7,45	88	76	7,81	93	80	8,18	97	83	8,49	101	86	8,81	104	90	9,12	108	93
2,25	7,49	89	76	7,94	94	81	8,38	99	85	8,78	104	89	9,18	109	94	9,55	113	97	9,91	117	101	10,26	122	105
2,50	8,32	99	85	8,82	105	90	9,31	110	95	9,76	116	99	10,19	121	104	10,61	126	108	11,01	130	112	11,39	135	116
2,75	9,15	108	93	9,71	115	99	10,24	121	104	10,73	127	109	11,21	133	114	11,67	138	119	12,11	144	123	12,53	148	128
3,00	9,98	118	102	10,59	126	108	11,16	132	114	11,71	139	119	12,23	145	125	12,73	151	130	13,21	157	135	13,67	162	139
3,50	11,65	138	119	12,35	146	126	13,03	154	133	13,66	162	139	14,27	169	145	14,85	176	151	15,42	183	157	15,95	189	163
4,00	13,31	158	136	14,12	167	144	14,89	176	152	15,62	185	159	16,31	193	166	16,97	201	173	17,62	209	180	18,23	216	186
4,50	14,97	177	153	15,88	188	162	16,75	198	171	17,57	208	179	18,35	217	187	19,10	226	195	19,82	235	202	20,51	243	209
5,00	16,64	197	170	17,65	209	180	18,62	221	190	19,52	231	199	20,39	242	208	21,22	251	216	22,03	261	225	22,79	270	232
5,50	18,30	217	187	19,42	230	198	20,48	243	209	21,47	255	219	22,43	266	229	23,34	277	238	24,23	287	247	25,07	297	256
6,00	19,97	237	204	21,18	251	216	22,34	265	228	23,42	278	239	24,47	290	249	25,46	302	260	26,43	313	269	27,49	326	280
6,50	21,63	256	220	22,94	272	234	24,20	287	247	25,37	301	259	26,51	314	270	27,58	327	281	28,63	339	292	29,63	351	302
7,00	23,29	276	237	24,71	293	252	26,06	309	266	27,33	324	279	28,55	338	291	29,70	352	303	30,84	366	314	31,91	378	325
7,50	24,96	296	254	26,47	314	270	27,92	331	285	29,28	347	298	30,59	363	312	31,83	377	324	33,04	392	337	34,19	405	349
8,00	26,62	316	271	28,24	335	288	29,79	353	304	31,23	370	318	32,63	387	333	33,95	403	346	35,25	418	359	36,47	432	372
8,50	28,28	335	288	30,00	356	306	31,65	375	323	33,18	393	338	34,66	411	353	36,07	428	368	37,45	444	382	38,74	459	395
9,00	29,95	355	305	31,77	377	324	33,59	398	342	35,14	417	358	36,71	435	374	38,19	453	389	39,65	470	404	41,02	486	418

The table applies to oil with a viscosity of 4,4 mm^2/s (cSt) with density 830 kg/m^3.

BURNER WITH PREHEATER

Consider that on preheating the oil quantity is reduced by 5-20% depending on.

- Rise in temperature at the nozzle
- Design of nozzle
- Capacity (high capacity - small difference)

NOZZLE TABLE

Pump pressure bar

Gph	10			11			12			13			14			15			16			17		
	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h
1,00	3,72	44	38	3,90	46	40	4,08	48	42	4,24	50	43	4,40	52	45	4,56	54	46	4,71	56	48	4,85	57	49
1,10	4,09	48	42	4,29	51	44	4,48	53	46	4,67	55	48	4,84	57	49	5,01	59	51	5,18	61	53	5,34	63	54
1,20	4,47	53	46	4,68	55	48	4,89	58	50	5,09	60	52	5,29	63	54	5,47	65	56	5,65	67	58	5,82	69	59
1,25	4,65	55	47	4,88	58	50	5,10	60	52	5,30	63	54	5,51	65	56	5,70	68	58	5,89	70	60	6,07	72	62
1,35	5,02	59	51	5,27	62	54	5,50	65	56	5,73	68	58	5,95	70	61	6,15	73	63	6,36	75	65	6,55	78	67
1,50	5,58	66	57	5,85	69	60	6,11	72	62	6,36	75	65	6,60	78	67	6,83	81	70	7,06	84	72	7,27	86	74
1,65	6,14	73	63	6,44	76	66	6,73	80	69	7,00	83	71	7,27	86	74	7,52	89	77	7,77	92	79	8,01	95	82
1,75	6,51	77	66	6,83	81	70	7,14	85	73	7,42	88	76	7,71	91	79	7,97	95	81	8,24	98	84	8,49	101	87
2,00	7,45	88	76	7,81	93	80	8,16	97	83	8,49	101	87	8,81	104	90	9,12	108	93	9,42	112	96	9,71	115	99
2,25	8,38	99	85	8,78	104	90	9,18	109	94	9,55	113	97	9,91	118	101	10,26	122	105	10,60	126	108	10,92	130	111
2,50	9,31	110	95	9,76	116	100	10,19	121	104	10,61	126	108	11,01	131	112	11,39	135	116	11,77	140	120	12,13	144	124
2,75	10,24	121	104	10,73	127	109	11,21	133	114	11,67	138	119	12,11	144	123	12,53	149	128	12,95	154	132	13,35	158	136
3,00	11,16	132	114	11,71	139	119	12,23	145	125	12,73	151	130	13,21	157	135	13,67	162	139	14,13	168	144	14,56	173	148
3,50	13,03	154	133	13,66	162	139	14,27	169	146	14,85	176	151	15,42	183	157	15,95	189	163	16,49	196	168	16,99	201	173
4,00	14,89	176	152	15,62	185	159	16,31	193	166	16,97	201	173	17,62	209	180	18,23	216	186	18,84	223	192	19,42	230	198
4,50	16,75	199	171	17,57	208	179	18,35	218	187	19,10	226	195	19,82	235	202	20,51	243	209	21,20	251	216	21,84	259	223
5,00	18,62	220	190	19,52	231	199	20,39	242	208	21,22	252	216	22,03	261	225	22,79	270	232	23,55	279	240	24,27	288	247
5,50	20,48	243	209	21,47	255	219	22,43	266	229	23,34	277	238	24,23	287	247	25,07	297	256	25,91	307	264	26,70	317	272
6,00	22,34	265	228	23,42	278	239	24,47	290	250	25,46	302	260	26,43	313	270	27,49	326	280	28,27	335	288	29,13	345	297
6,50	24,20	287	247	25,37	301	259	26,51	314	270	27,58	327	281	28,63	340	292	29,63	351	302	30,62	363	312	31,55	374	322
7,00	26,06	309	266	27,33	324	279	28,55	339	291	29,70	352	303	30,84	366	314	31,91	378	325	32,98	391	336	33,98	403	347
7,50	27,92	331	285	29,28	347	299	30,59	363	312	31,83	377	325	3,04	392	337	34,19	405	349	35,33	419	360	36,41	432	371
8,00	29,79	353	304	31,23	370	318	32,63	387	333	33,95	403	346	35,25	418	359	36,47	433	372	37,69	447	384	38,80	460	396
8,50	31,65	375	323	33,18	393	338	34,66	411	353	36,07	428	368	37,45	444	382	38,74	459	395	40,04	475	408	41,26	489	421
9,00	33,59	398	343	35,14	417	358	63,71	435	374	38,19	453	389	39,65	470	404	41,02	486	418	42,40	503	432	43,69	518	446
9,50	35,37	419	361	37,09	440	378	38,74	549	395	40,31	478	411	41,85	496	427	43,30	514	442	44,75	531	456	46,11	547	470
10,00	37,23	441	380	39,04	463	398	40,78	484	416	42,44	503	433	44,06	523	449	45,58	541	465	47,11	559	480	47,11	559	480
11,00	40,96	486	418	42,94	509	438	44,86	532	457	46,68	554	476	48,46	575	494	50,14	595	511	51,82	615	528	53,40	633	545
12,00	44,68	530	456	46,85	556	478	48,94	580	499	50,92	604	519	52,87	627	539	54,70	648	558	56,53	670	576	58,25	691	594
14,00	52,12	618	531	54,65	648	557	57,10	677	582	59,41	705	606	62,68	732	629	63,81	757	651	65,95	778	669	67,96	806	693
16,00	59,57	706	607	62,46	741	637	65,26	774	666	67,90	805	692	70,49	836	719	72,93	865	744	75,38	894	769	77,67	921	792
18,00	67,02	795	683	70,27	833	717	73,41	871	749	76,39	906	779	79,30	940	809	82,05	973	837	84,80	1006	865	87,38	1036	891
20,00	74,47	883	759	78,08	926	796	81,57	967	832	84,87	1007	865	88,11	1045	899	91,17	1081	930	94,22	1117	961	97,09	1151	990
22,00	81,91	971	835	85,89	1019	876	89,73	1064	915	93,36	1107	952	96,92	1149	988	100,28	1189	1023	103,64	1229	1057	106,79	1267	1089
24,00	89,36	1060	911	93,70	1111	956	97,88	1161	998	101,85	1208	1039	105,74	1254	1078	109,40	1297	1116	113,06	1341	1153	116,50	1382	1188
26,00	96,81	1148	987	101,50	1204	1035	106,04	1258	1081	110,33	1308	1125	114,55	1359	1168	118,52	1406	1209	122,49	1453	1249	126,21	1497	1287

The table applies to oil with a viscosity of 4,4 mm^2/s (cSt) with density 830 kg/m^3.

171 505 40 00-01

NOZZLE TABLE

Pump pressure bar

Gph	18			19			20			21			22			23			24			25		
	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h	kg/h	kW	Mcal/h
1,00	4,99	59	51	5,13	61	52	5,26	62	54	5,40	64	55	5,53	66	56	5,65	67	58	5,77	68	59	5,89	70	60
1,10	5,49	65	56	5,64	67	57	5,79	69	59	5,93	70	60	6,07	72	62	6,21	74	63	6,34	75	65	6,47	77	66
1,20	5,99	71	61	6,16	73	63	6,32	75	64	6,47	77	66	6,62	78	67	6,77	80	69	6,92	82	71	7,06	84	72
1,25	6,24	74	64	6,41	76	65	6,58	78	67	6,74	80	69	6,90	82	70	7,05	84	72	7,21	85	73	7,35	87	75
1,35	6,74	80	69	6,93	82	71	7,11	84	72	7,28	86	74	7,45	88	76	7,62	90	78	7,78	92	79	7,94	94	81
1,50	7,48	89	76	7,69	91	78	7,89	93	80	8,08	96	82	8,27	98	84	8,46	100	86	8,64	102	88	8,82	105	90
1,65	8,24	98	84	8,47	100	86	8,69	103	89	8,90	105	91	9,11	108	93	9,31	110	95	9,51	113	97	9,71	115	99
1,75	8,78	104	90	8,98	106	92	9,21	109	94	9,44	112	96	9,66	115	98	9,88	117	101	10,09	120	103	10,30	122	105
2,00	9,99	118	102	10,26	122	105	10,53	125	107	10,79	128	110	11,04	131	113	11,29	134	115	11,53	137	118	11,77	140	120
2,25	11,24	133	115	11,55	137	118	11,85	140	121	12,14	144	124	12,43	147	127	12,70	151	129	12,98	154	132	13,25	157	135
2,50	12,48	148	127	12,83	152	131	13,16	156	134	13,49	160	138	13,81	164	141	14,12	167	144	14,42	171	147	14,72	175	150
2,75	13,73	163	140	14,11	167	144	14,48	171	148	14,84	176	151	15,19	180	155	15,53	184	158	15,86	188	162	16,19	192	165
3,00	14,98	178	153	15,39	182	157	15,79	187	161	16,18	192	165	16,18	192	165	16,93	201	173	17,30	205	176	17,65	209	180
3,50	17,48	207	178	17,96	213	183	18,43	218	188	18,89	224	193	19,33	229	197	19,77	234	202	20,19	239	206	20,61	244	210
4,00	19,98	237	204	20,53	243	209	21,06	250	215	21,59	256	220	22,10	262	225	22,59	268	230	23,08	274	235	23,56	279	240
4,50	22,47	266	229	23,09	274	235	23,69	281	242	24,28	288	248	24,85	295	253	25,41	301	259	25,96	308	265	26,49	314	270
5,00	24,97	296	255	25,65	304	262	26,33	312	268	26,98	320	275	27,61	327	282	28,24	335	288	28,84	342	294	29,44	349	300
5,50	27,47	326	280	28,22	335	288	28,96	343	295	29,68	352	303	30,38	360	310	31,06	368	317	31,73	376	324	32,38	384	330
6,00	29,97	355	306	30,79	365	314	31,59	374	322	32,38	384	330	33,14	393	338	33,89	402	346	34,62	411	353	35,33	419	360
6,50	32,46	385	331	33,35	395	340	34,22	406	349	35,07	416	358	35,90	426	366	36,70	435	374	37,49	445	382	38,26	454	390
7,00	34,96	415	356	35,92	426	366	36,86	437	376	37,77	448	385	38,56	457	393	39,53	469	403	40,38	479	412	41,21	489	420
7,50	37,46	444	382	38,49	456	3992	39,49	468	403	40,47	480	413	41,42	491	422	42,35	504	434	43,26	513	441	44,16	524	450
8,00	39,96	474	407	41,05	487	419	42,12	499	429	43,17	512	440	44,19	524	451	45,18	536	461	46,15	547	471	47,10	559	480
8,50	42,45	503	433	43,62	517	445	44,75	531	456	45,87	544	468	46,95	557	479	48,00	569	489	49,03	581	500	50,05	594	510
9,00	44,95	533	458	46,18	548	471	47,39	562	483	48,57	576	495	49,71	589	507	50,83	603	518	51,92	616	529	52,99	628	540
9,50	47,45	563	484	48,75	578	497	50,02	593	510	51,26	608	523	52,47	622	535	53,65	636	547	54,80	650	559	55,93	663	570
10,00	49,94	592	509	51,32	609	523	52,66	624	537	53,96	640	550	55,23	655	563	56,47	670	576	57,69	684	588	58,88	698	600
11,00	54,94	652	560	56,45	669	576	57,92	687	591	59,36	704	605	60,76	721	620	62,12	737	633	63,46	753	647	64,77	768	660
12,00	59,93	711	611	61,58	730	628	63,19	749	644	64,76	768	660	66,28	786	676	67,77	804	691	69,23	821	706	70,66	838	721
14,00	69,92	829	713	71,84	852	733	73,72	874	752	75,55	896	770	77,33	917	789	79,07	938	806	80,77	958	824	82,43	978	841
16,00	79,91	948	815	82,11	974	837	84,25	999	859	86,34	1024	880	88,37	1048	901	90,36	1072	921	92,30	1095	941	94,20	1117	961

The table applies to oil with a viscosity of 4,4 mm^2/s (cSt) with density 830 kg/m^3.

Sequence Controller

* **Operation and Controlling cycle of Dual fuel Modulating burner controller :-**

- Fuel selection via fuel selector switch..
- Power supplied through all safety interlocks.
- Oil pre-heater waiting cycle up to set temperature achieved
- Blower pre-purge timing cycle - 50 seconds- Air pressure proving stage
- Safety ignition timing - 5 seconds
- Ignition valve safety time - 5 seconds
- Main valve modulation signal time - 10 seconds

* **Safety shutdown occurs on :-**

- Malfunction of the burner controller
- Failure to ignite the pilot burner or main burner
- Loss of flame during run period
- Opening of air flow switch during pre-purge,start-up, run and post-purge period
- Flame signal detection during standby or pre purge period

General Instructions :-

General Instructions :-

The installer of oil burner should be acquainted with regulations and standards.
The installation, mounting and adjustment should be made with the greatest care and the correct oil should be used.

Mounting Instructions :-

Burner should be mounted in prominent position to the oven or boiler to avoid mis-handling. Mounting plate should be fitted with insulation packing sheet to isolate the burner from the machine surface heat. Proper size bolts only to be used.

User Instructions :-

The user should be throughly instructed in the function of the oil burner and the whole installation. The supplier must instruct the user.

Inspection & Maintenance :-

Daily inspection is advisable.

Start up the burner :-

After the burner has been fitted to the boiler / oven and the electric connection, the leakage control, the venting and electric function test have been carried out, the burner will be ready for start up.
Study the sections dealing with adjustments of combustion air and oil leakage. Before starting the burner, bleed the air in the pump through the gauge port. Fill the piping with light oil to facilitate the pump priming. Start the burner and check the pump feeding pressure. In case the pump priming does not take place during the first pre-purging, due to a fuel pressure drop in the pump, reset the sequence controller and restart the burner.
when power the burner, the control box feeds at the same time the ignition transformer and the burners blower motor, which will run a prepurging of the combustion chamber for about 13 seconds. At the end of the prepurging, the control box opens the fuel pump solenoid valve and the burner ignites. After a safety interval of 5 seconds and a correct ignition, the control box turns off the ignition transformer. In case of faulty ignition, the control box switches the burner into safety condition within 10 seconds. In such a case the manual rearming of the burner shall not take place before 30 seconds are elapsed from the burners safety shutdown.
the fuel pump pressure must keep 12 bar for diesel and 8 bar for kerosene.
Please check the oil return pipe for open end or return to oil line before oil filter.
Please do not allow the oil pump working without oil for more than three minutes.

Commissioning of installation :-

Check the following items after the burner installation
Electric power to the burner

- Oil line pipes are sealed and no leakage
- The type of fuel, which must be suitable for burner
- Connection to the oven / boiler interlocks

Start the burner, check the flame, adjust air and pump pressure as per load requirement.

Service :-

Service should only be carried out by qualified personnel. Replacement parts should be of the same make and approved by the same authorities as the original. If the burner is converted to fire another oil quality it must be re-Commissioned.

Handing over of the installation :-

1. Make repeated start attempts to ensure that the adjustments function.
2. Check that all protective covers and measurement nipples are mounted and fastened.
3. Instruct the persons in charge of the operation on the service and maintenance of the installation and what to do should any troubles occur.
4. Inspection and service must only be carried out by authorized people.

Functional Troubles, Fault Location :-

Trouble free operation is dependant on three factors : electricity, oil and air supply. Should there be any changes in the ratio between these three factors there is a risk of break downs. Most break downs are caused by simple faults. Before calling service engineer, the following should therefore be checked.

- Is the oil burner control switch in “ON” position ?
- Is the oil cock open ?
- Are all fuses in order and the current switched on ?
- Are the temperature controllers correctly set ?
- Is the system blower in operating position and not locked-out ?
- Is there a supply of fresh air to the installation ?
- Clean the oil filter regularly to avoid chocking.

FAULT LOCATION

BURNER FAILS TO START

Situation	Possible causes	Remedies
Motor runs Burner pre-purges Flame occurs Burner locks out	Flame instability	
	Incorrect head settings	Check nozzle to burner head dimension and electrode position
	Low oil pressure	Check oil pressure
	Excess air	Adjust air damper
	Photocell not seeing light	Check that photocell is clean and unobstructed
	Photocell failed	Confirm with new photocell
	Control faulty	Confirm with new control. (NB. it is advisable to change the photocell if also changing control)
Motor runs Burner pre-purges No flame occurs Burner locks out	False light	Check that photocell is not seeing ambient light
	No spark	Check that H.T. leads are sound and are not arcing other than at electrode gap
	No oil	Check oil supply to burner - check that pump is not airlocked
		Check operation of magnetic valve

BURNER FAILS TO START AFTER NORMAL OPERATION

Burner fails to start Lamp not lit	Fuse has blown	Check or replace fuse if necessary. Check reason for failure
	Appliance thermostat has not reset	Adjust thermostat
	Appliance overheat device has operated	Reset overheat device. Find reason for its operation and rectify
	Control relay or photocell defective	Check by replacement
Motor runs Burner runs to lockout	No oil being delivered	Check that tank, oil lines, fire valve, pump and nozzle are all in good order
	Excessive flue draught is preventing flame establishment	Rectify condition
	No spark	Check ignition transformer. Check electrode gap and porcelain

DELAYED IGNITION, BURNERS STARTS VIOLENTLY

Burner pulsates on start-up only with hot flue	Excessive draught	Adjust the burner
Burner pulsates on start-up	Nozzle partly blocked	Replace nozzle
	Oil pressure too low	Check and adjust
	Flue blocked or damaged	Check and rectify
	Fan slipping on shaft	Check and retighten
	Pump coupling loose or worn	Check and replace
Burner starts violently	Delayed ignition	Check the electrode adjustment, see diagram
		Check electrodes for damage
		Check H.T. leads for damage and disconnection

OXILON PRIVATE LIMITED

Add: C-1/6128, Road No.61, Sachin GIDC,
Sachin- 394230 SURAT (GUJ.) INDIA.

Sales 1: **+91-9033824772**
Sales 2: **+91-9904628455**
Customer care: **+91-9228855679**

Email: sales@oxilonburners.com
Website: www.oxilonburners.com