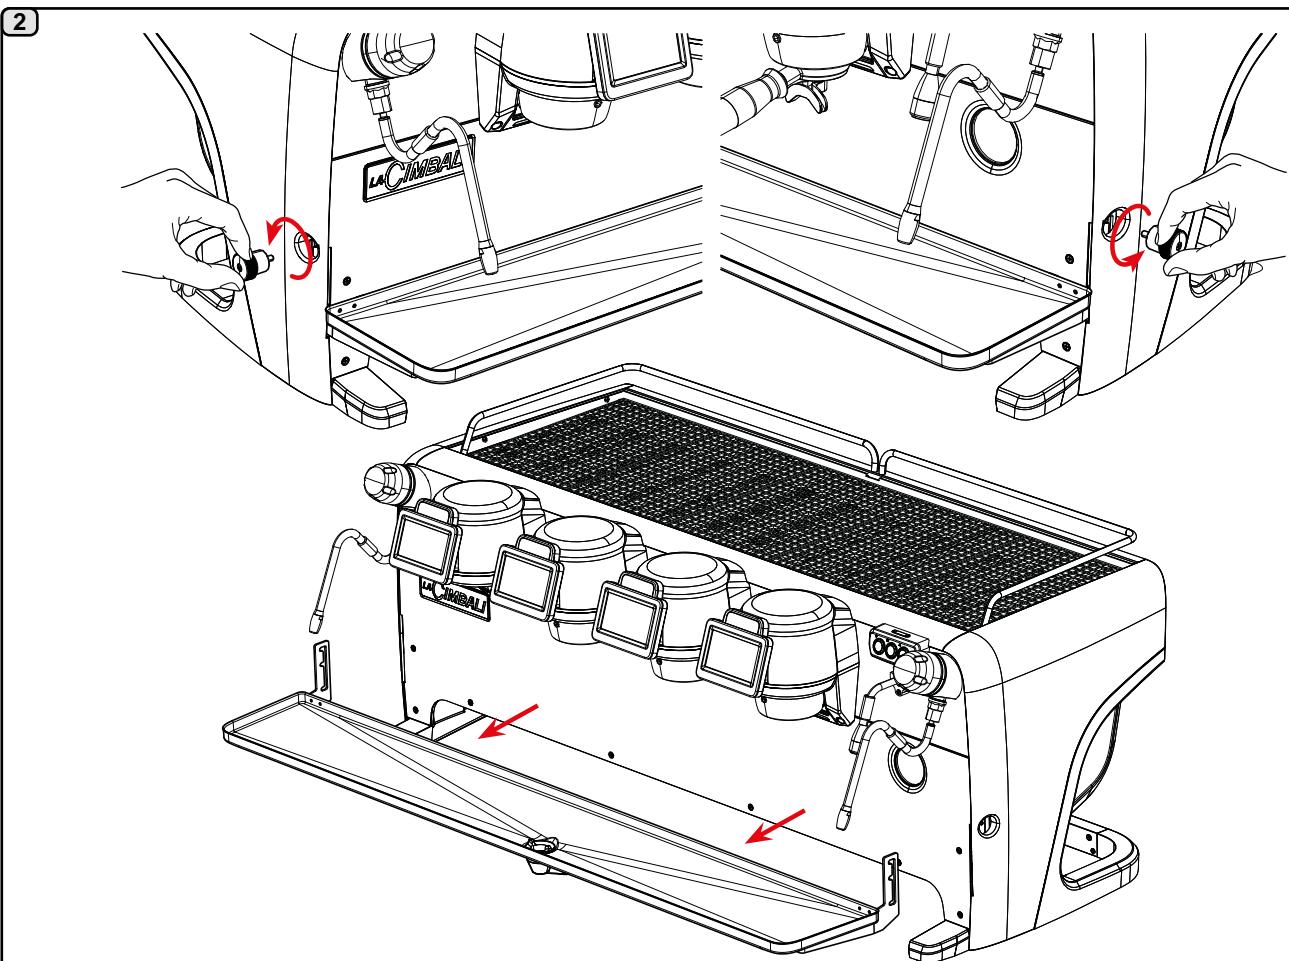
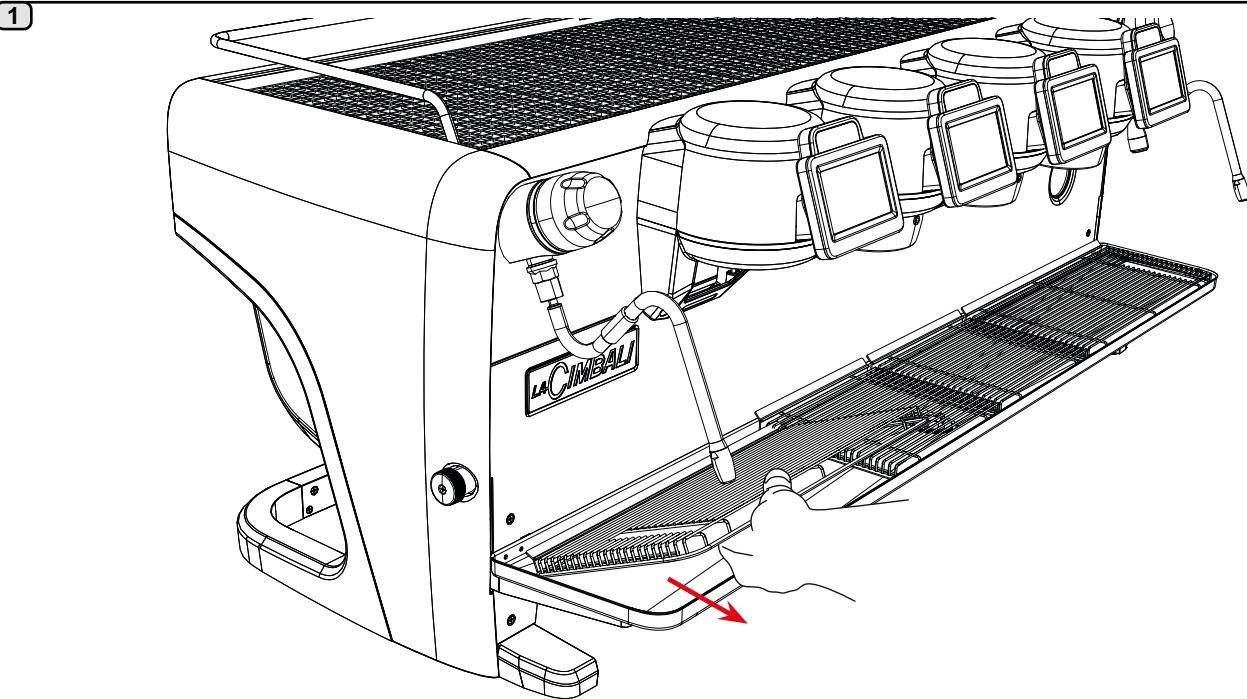


**4. DISMANTLING AND ADJUSTMENTS**

**ALL OPERATIONS MUST BE PERFORMED WITH THE MACHINE SWITCHED OFF AND COLD.  
ALWAYS USE THE NECESSARY SAFETY EQUIPMENT (SHOES/GLOVES).**

English





English

**4.1 Basin**

**4.2 Cup warmer**

English



English

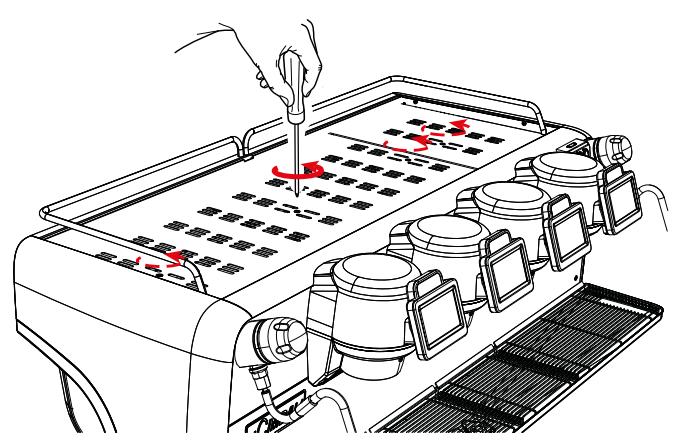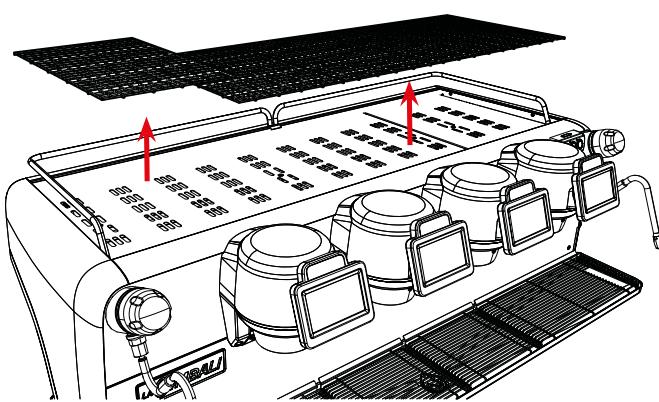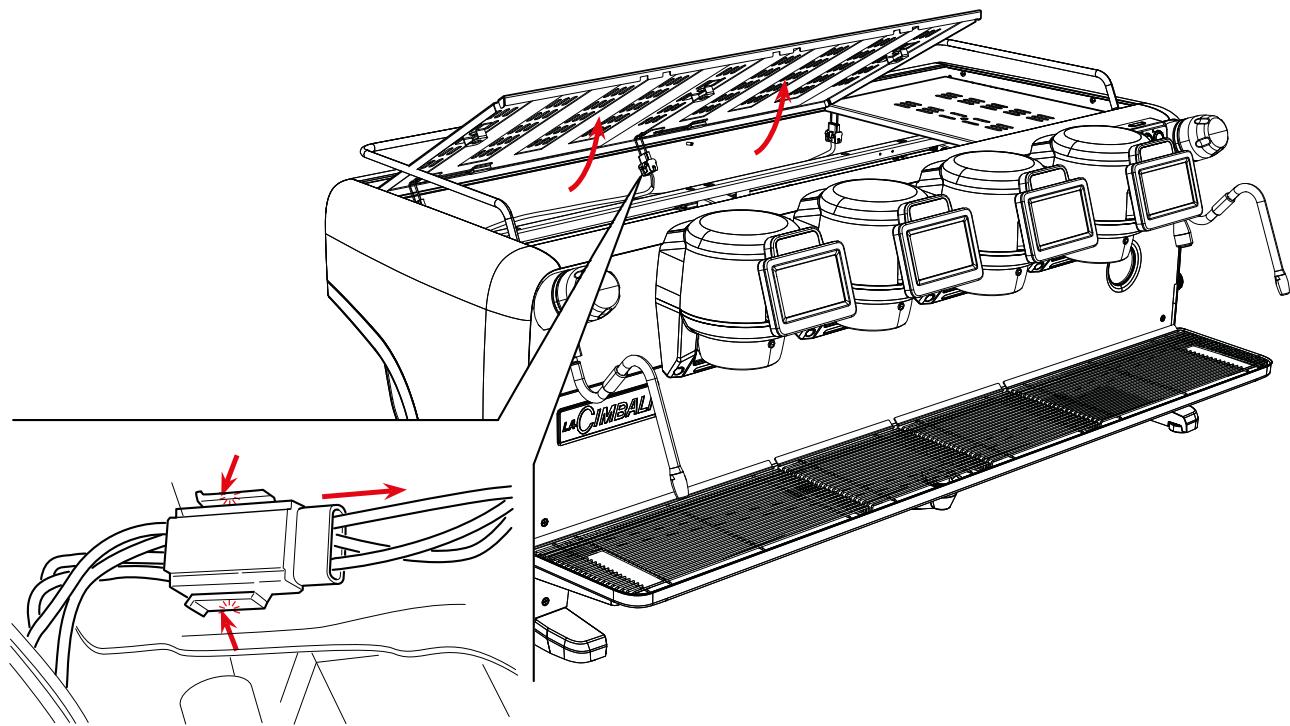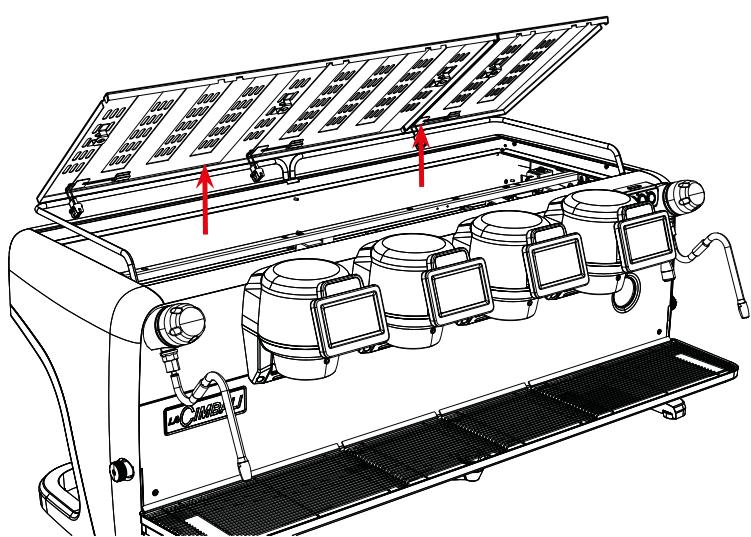**1****2****3**

**4.3 Stainless steel front panel**

English

English

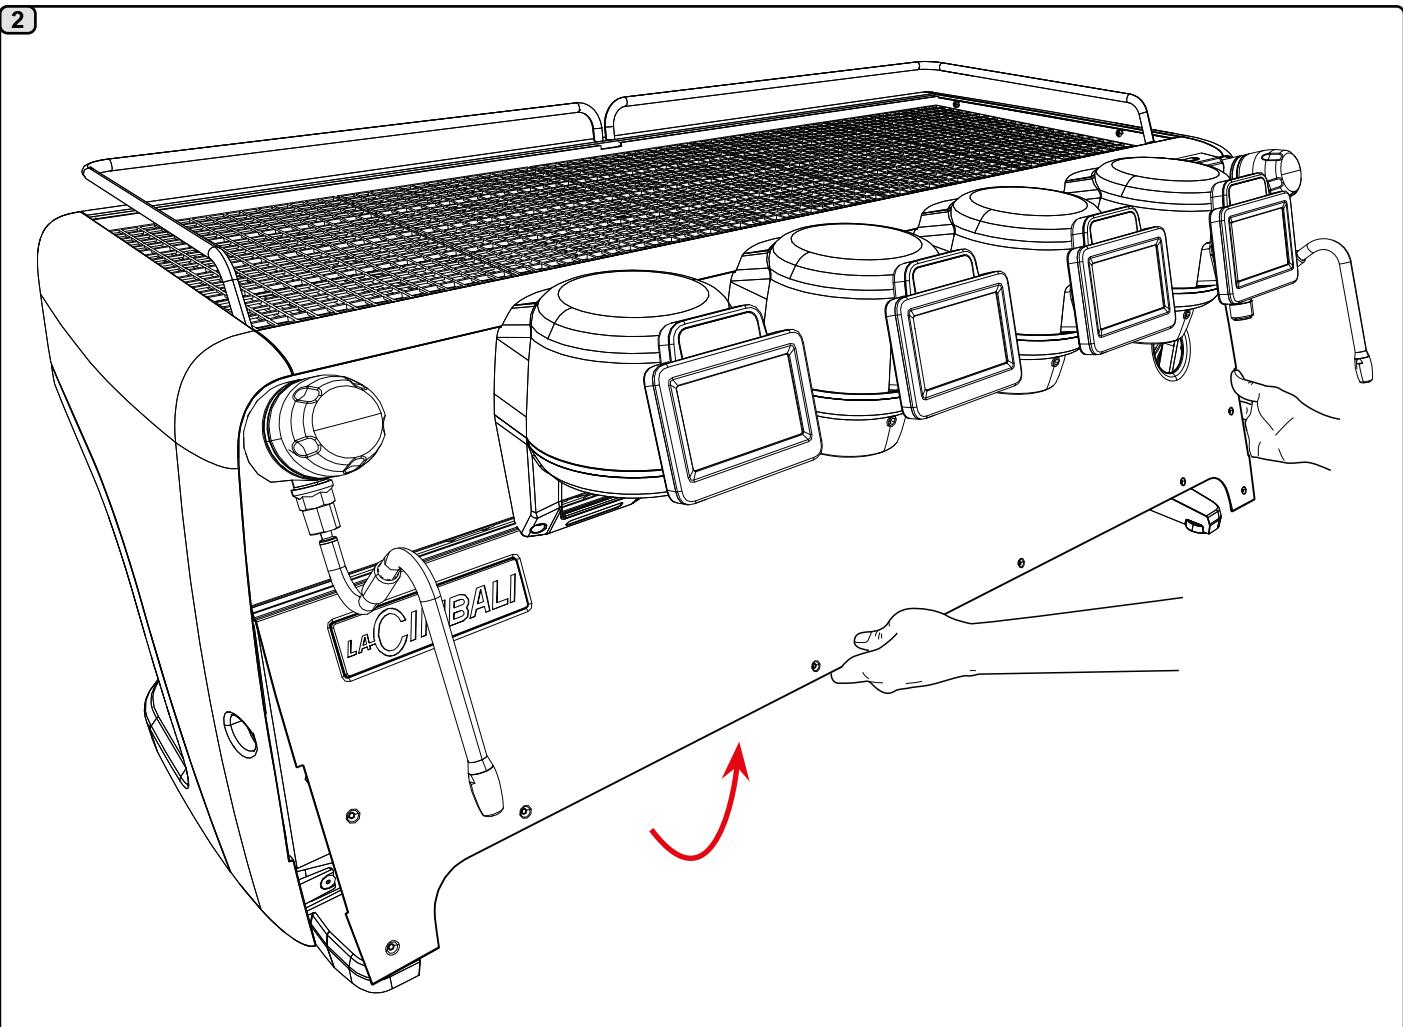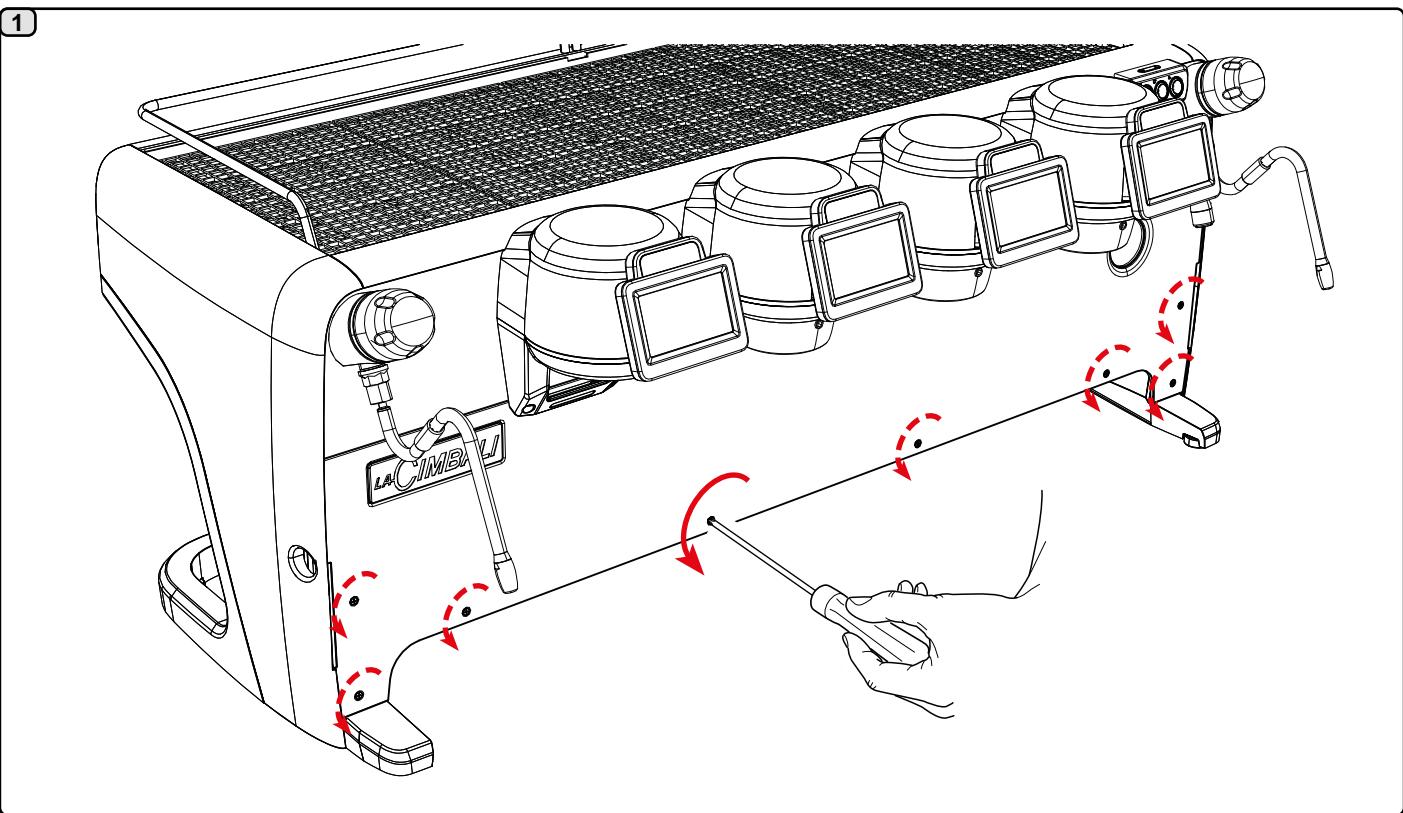


#### 4.4 Rear panel

Disassembly of the rear panel must be carried out only after having removed the cup warmer.


English

English


1

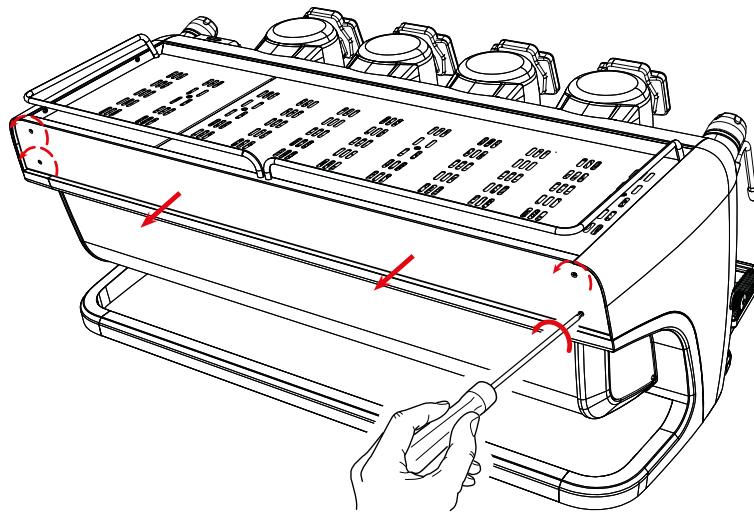

2

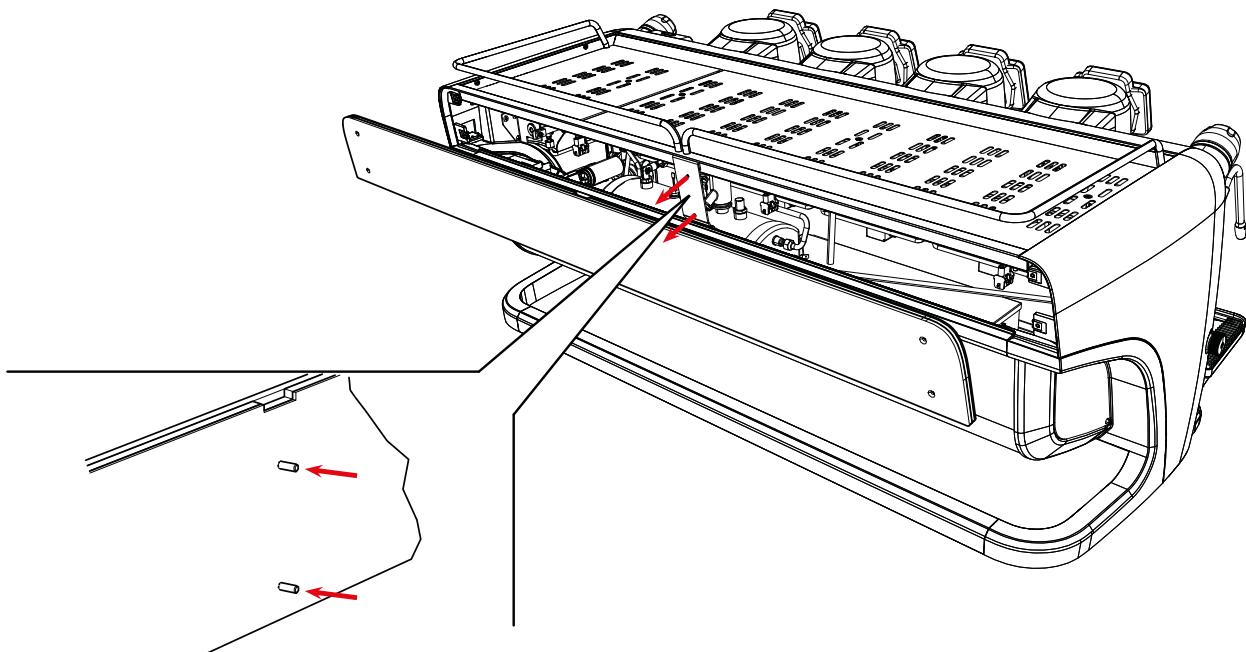

3

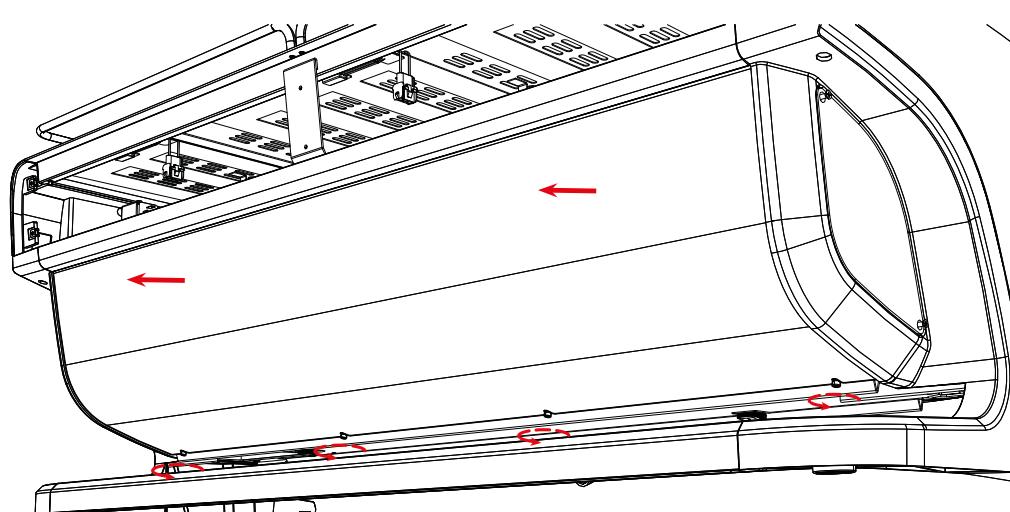


## 4.5 Dismantling of the panels

Disassembly of the panels must be carried out only after having removed the cup warmer.

### FRONT PANEL

English



English

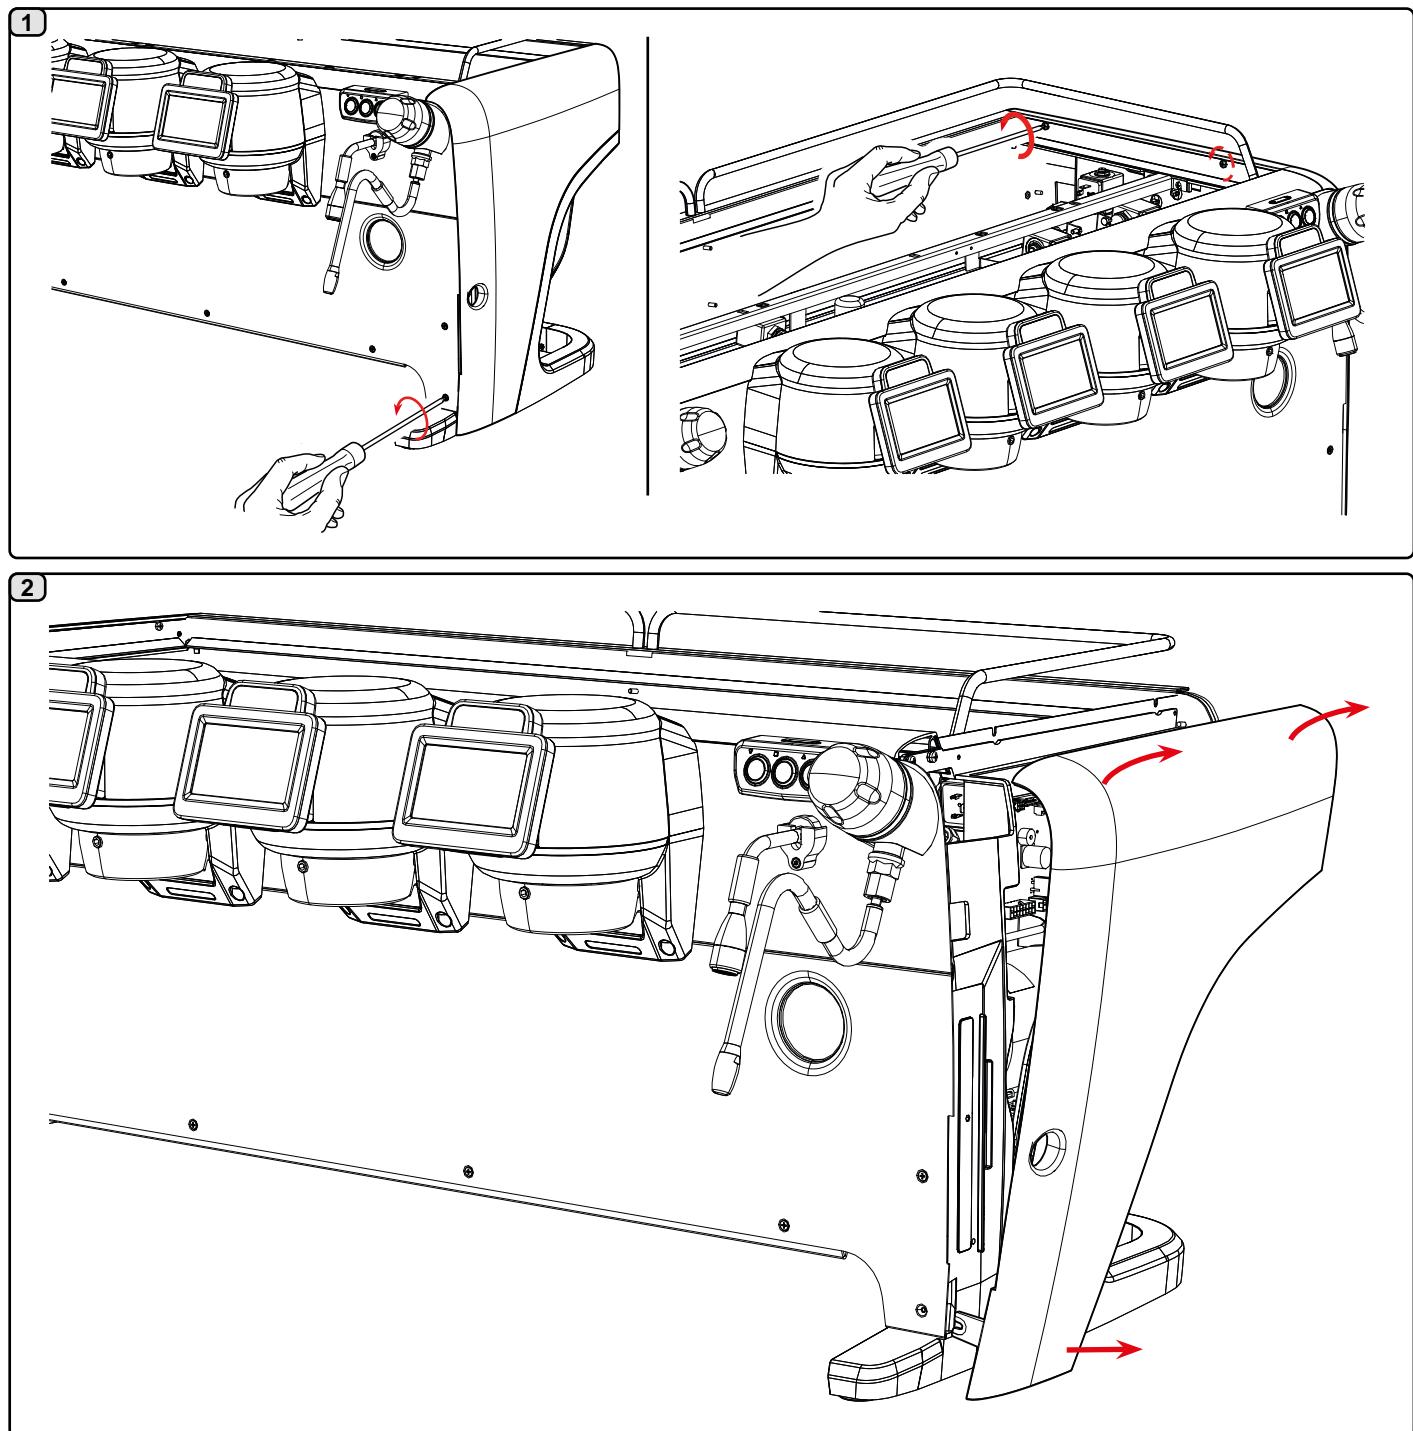

## SIDE PANEL WITH LED

English


English

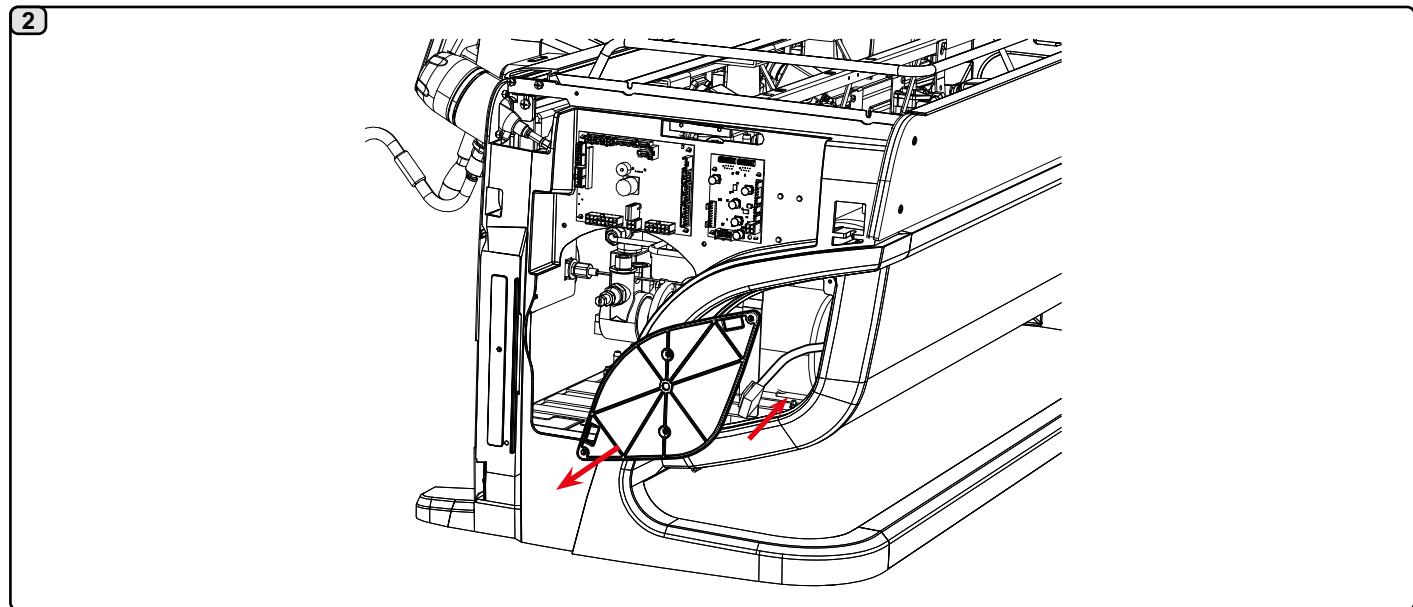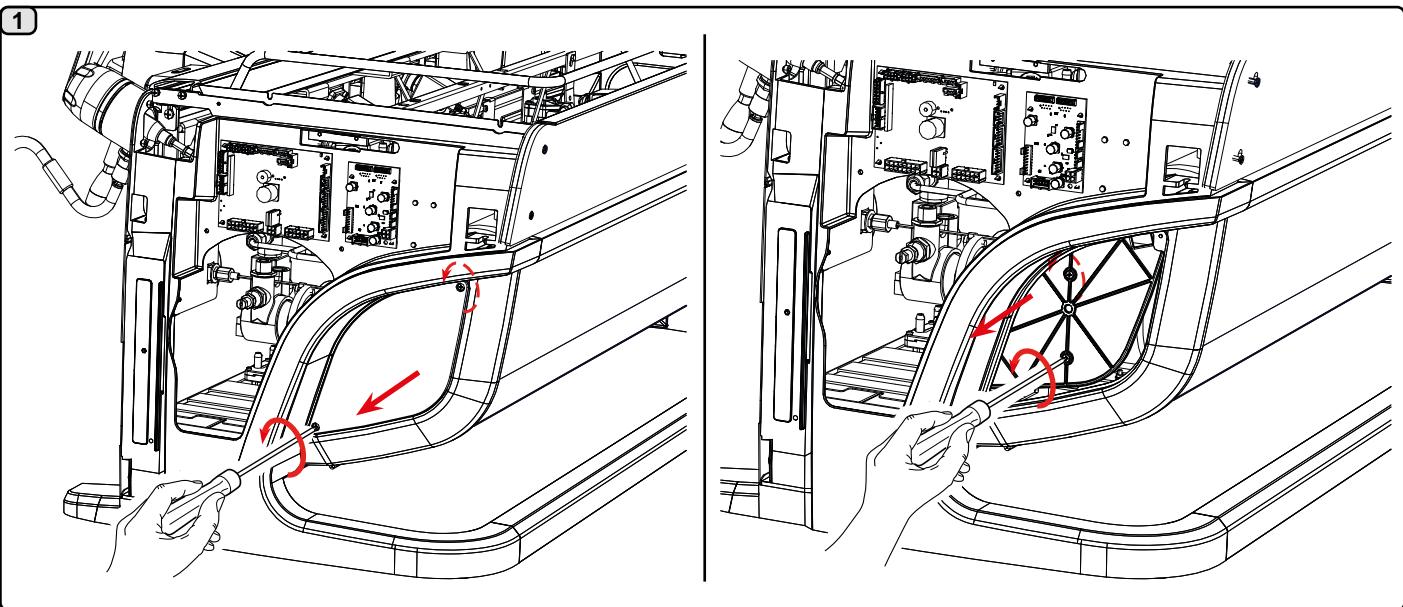

**4.6 Draining the boiler**

English

English

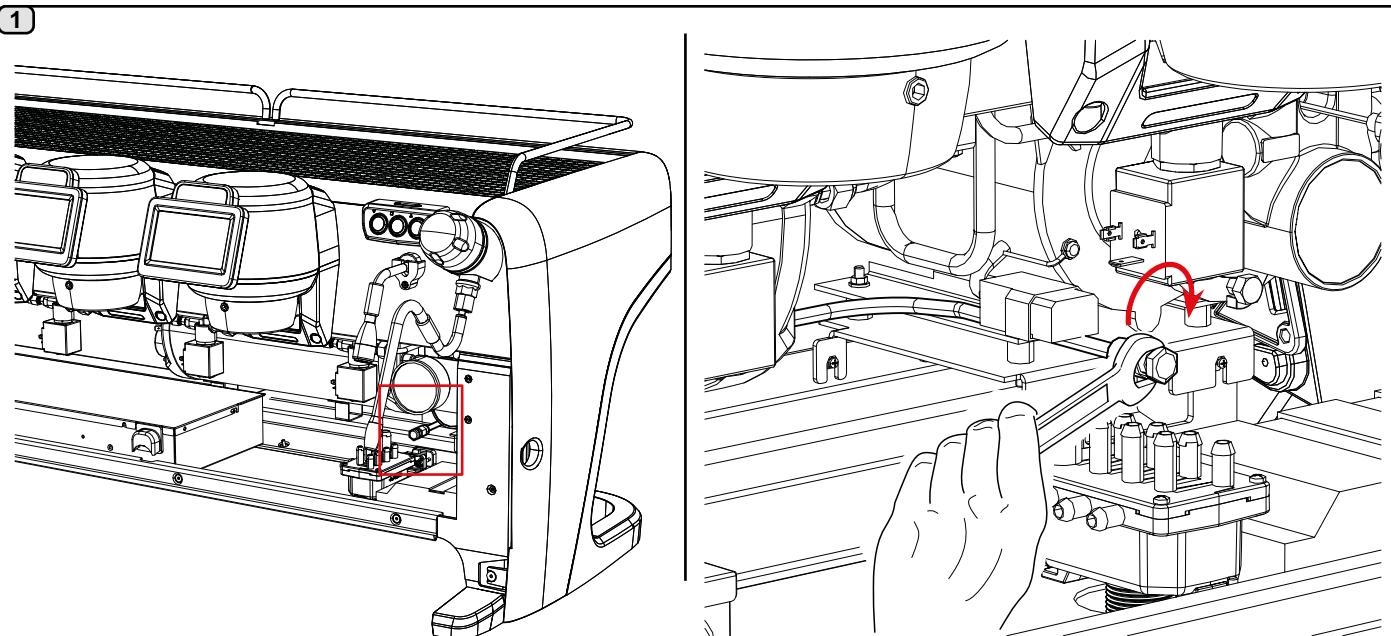



Remove the drain plug and turn the nut in the direction shown in the image

#### 4.7 Removing the boiler heating element

Disassembly of the heating element must only be carried out after having emptied the boiler.

English


English

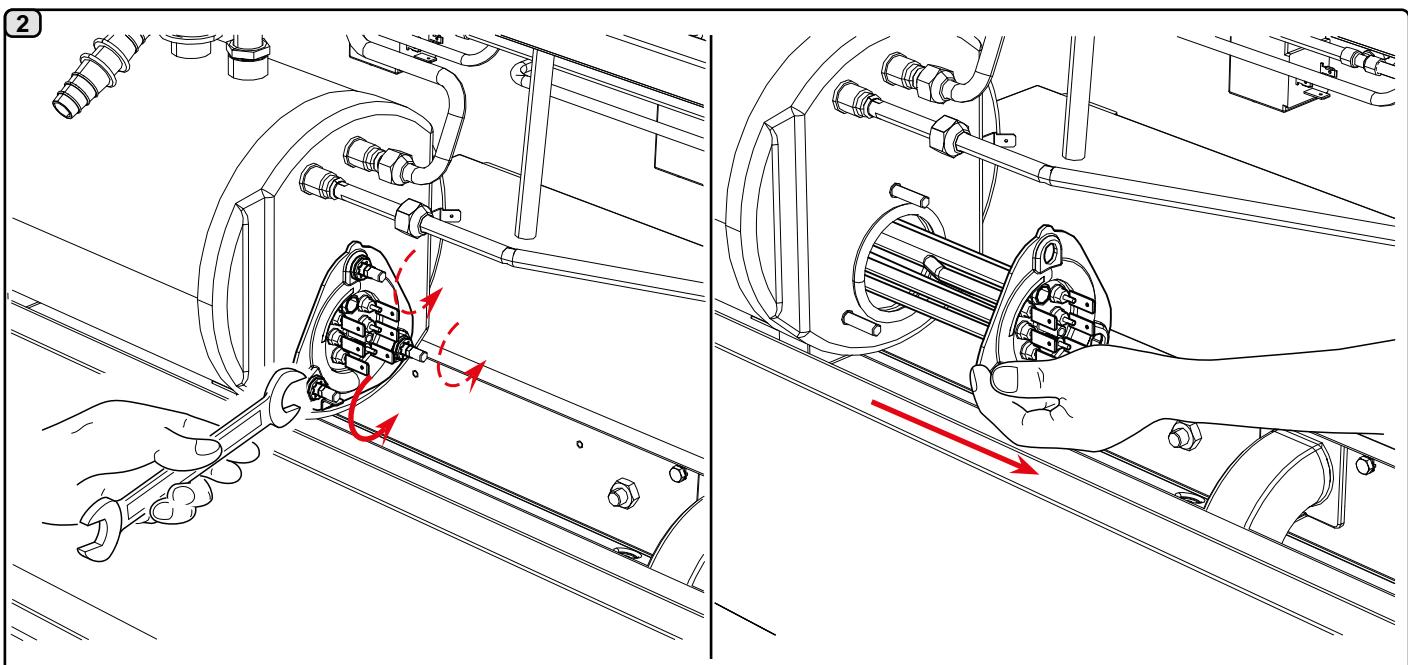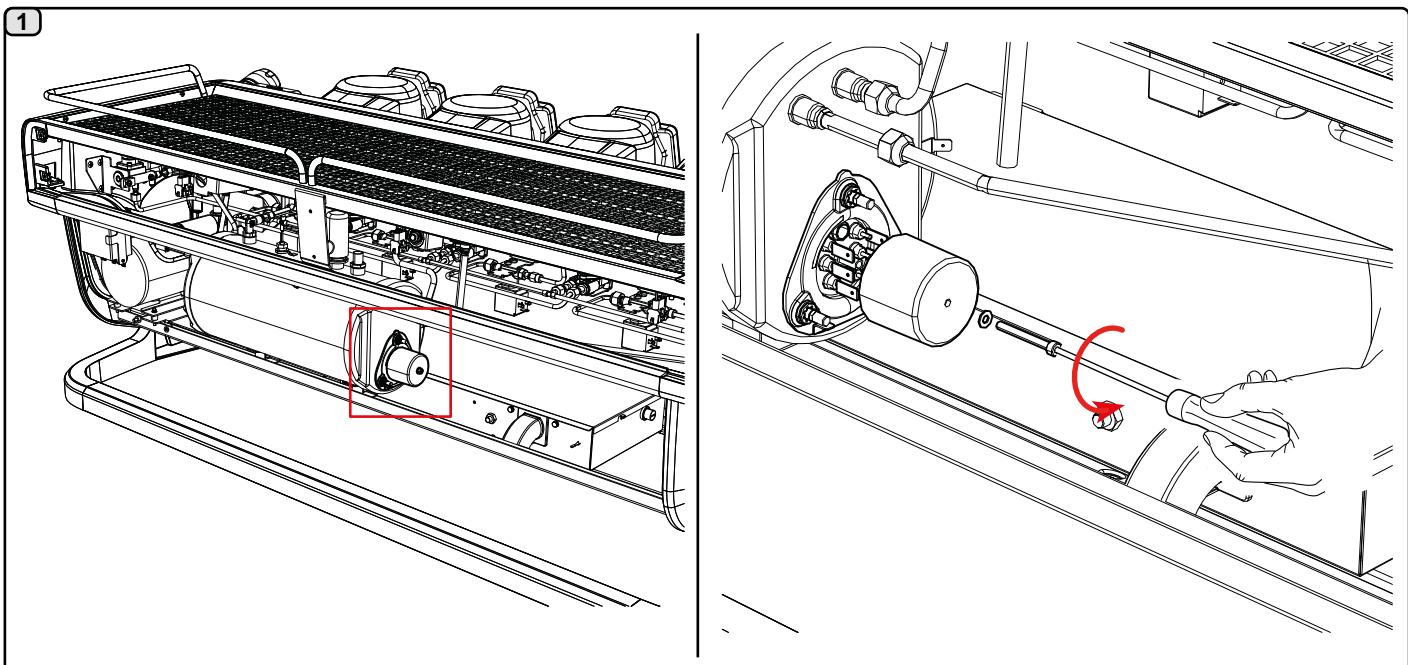

**4.8. Coffee boiler**

English



English

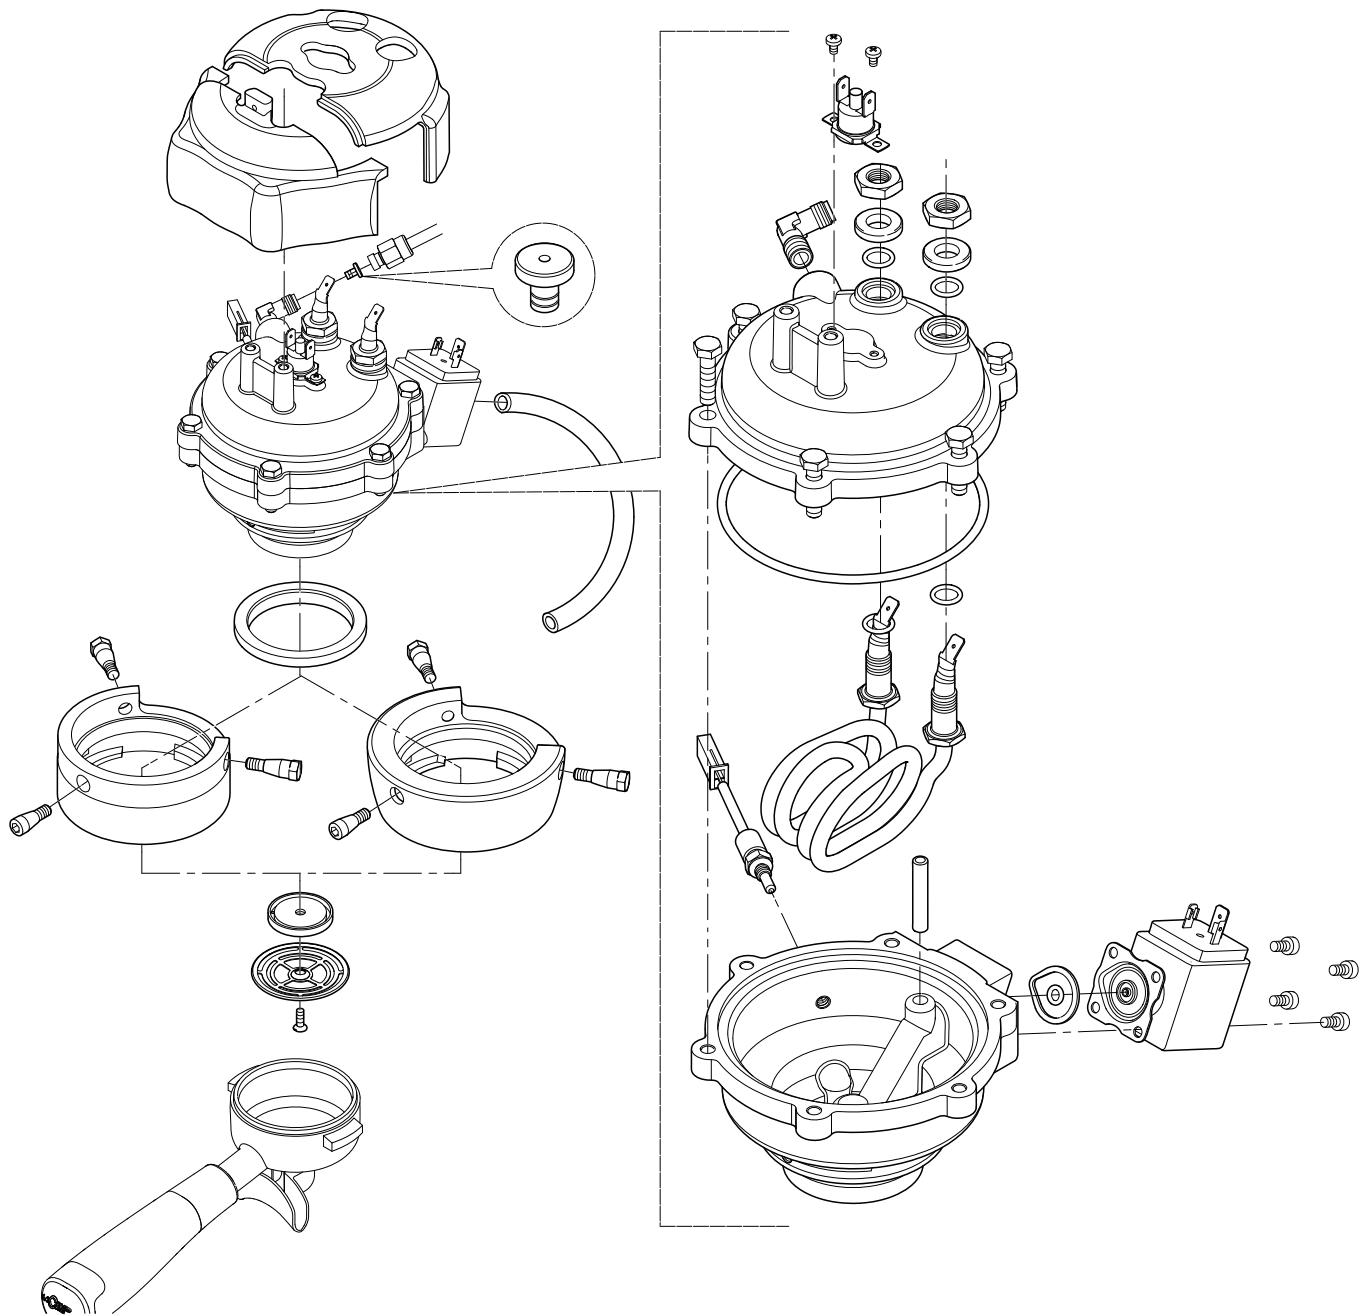

**4.9 Electrical unit**

English





English

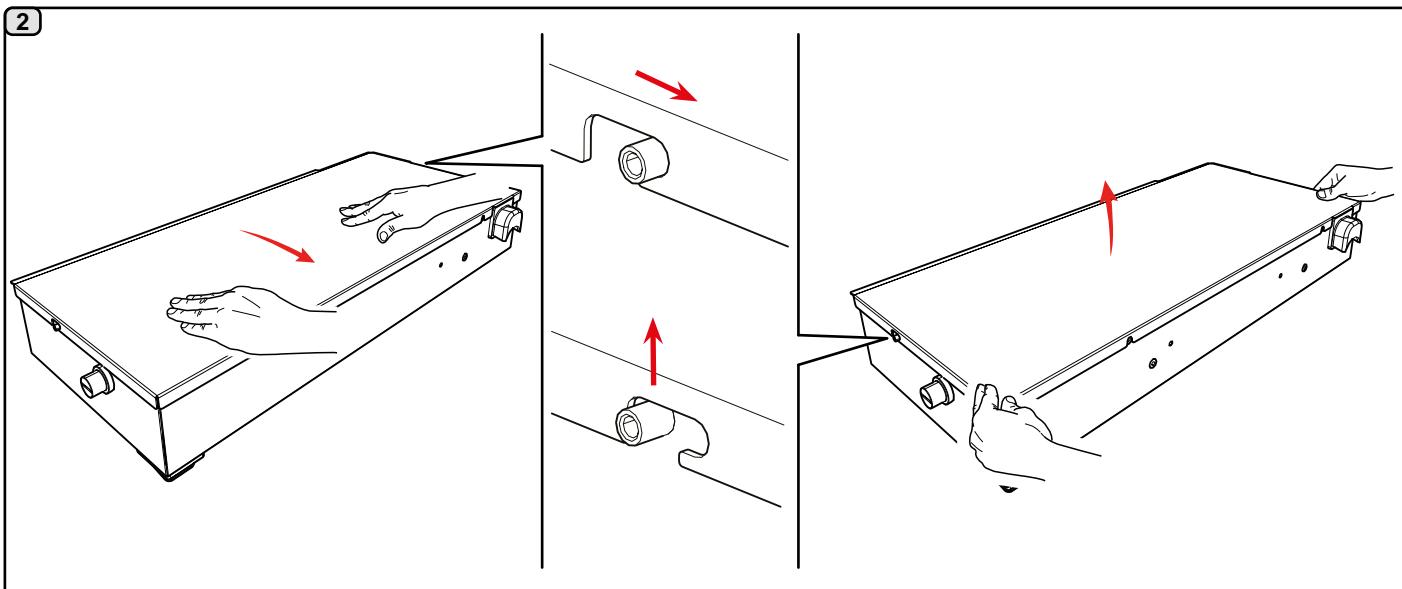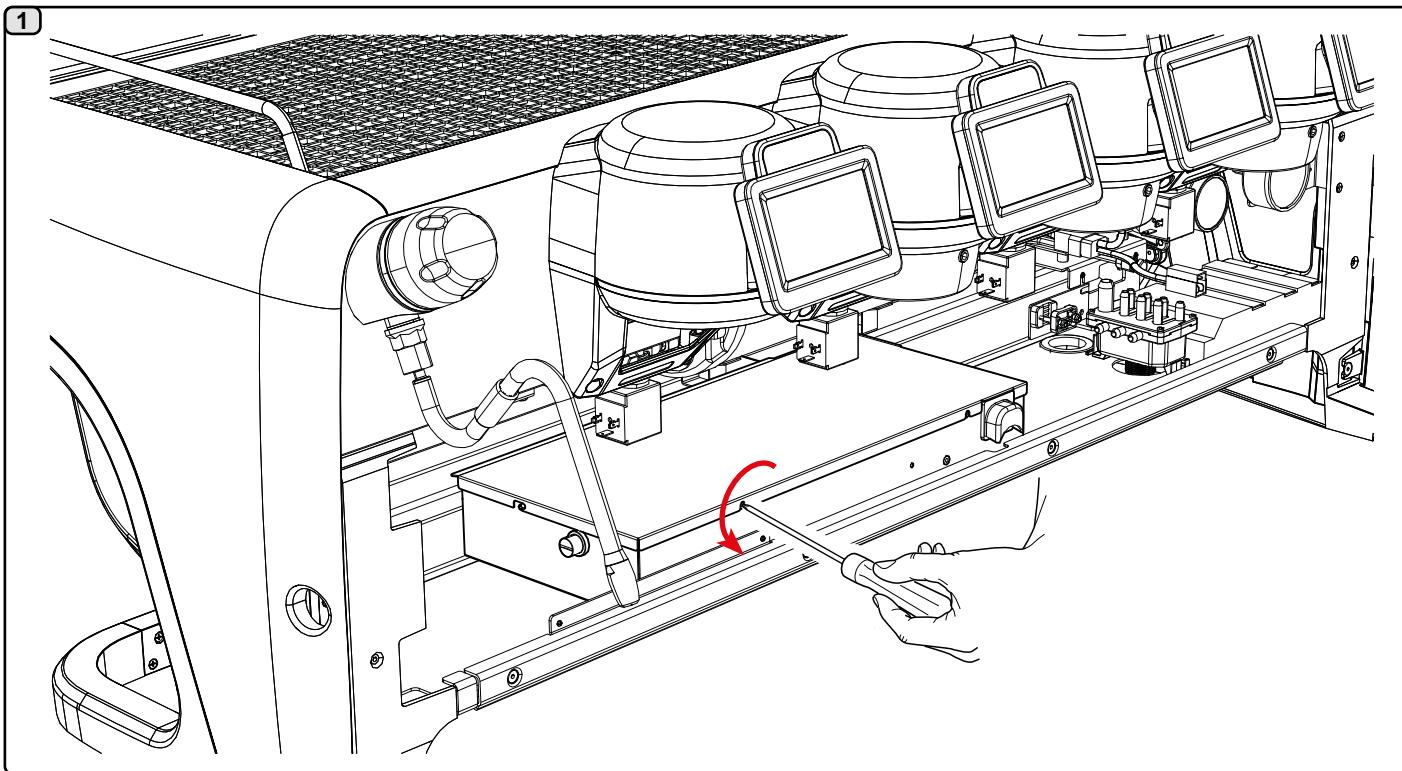

**4.10 Safety thermostat**

English

English

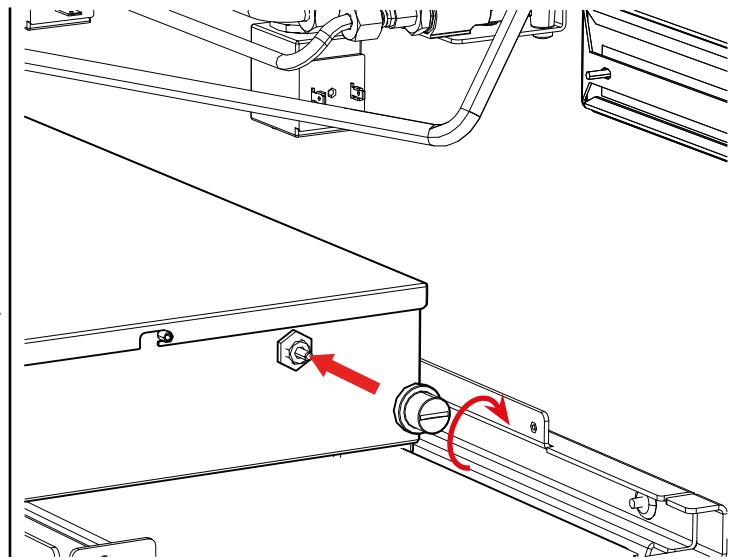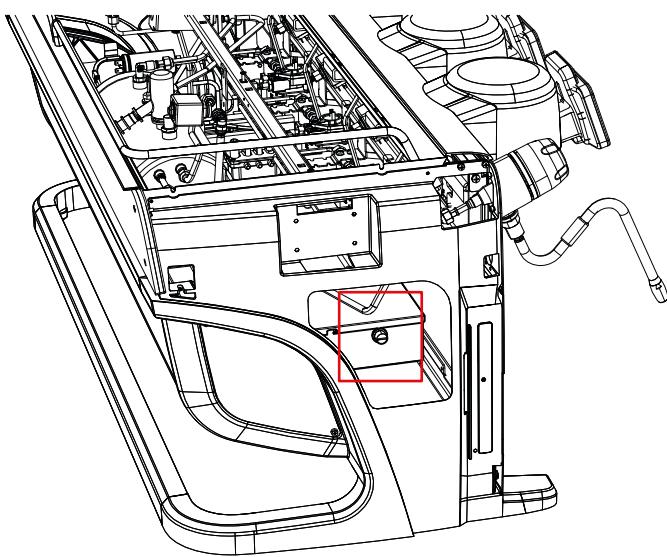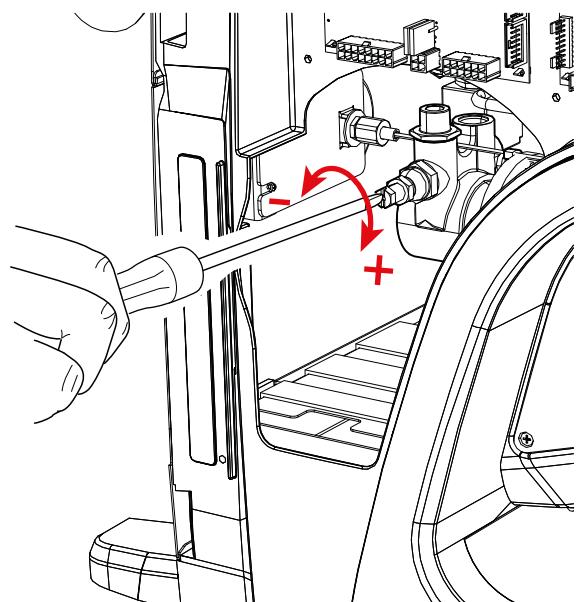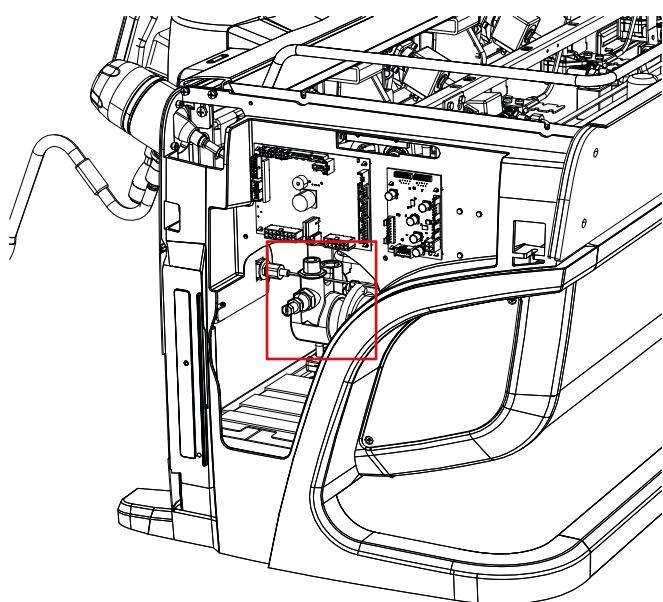**4.11 Volumetric pump**

**4.12 Battery**

English

English

