

Uboot 升级说明

1.app_config.h 配置为双备份升级

```
#define CONFIG_DOUBLE_BANK_ENABLE //双备份方式升级
```

```
#ifndef CONFIG_DOUBLE_BANK_ENABLE
```


```
#define CONFIG_SUPPORT_DOUBLE_UBOOT //开启双 uboot 架构支持
```

```
#endif
```


2.download.bat 文件中加入-update-files-with-uboot 参数，如：

```
isd_download.exe isd_config.ini -gen2 -tonorflash -dev wl83 -boot 0x103000 -div1 -wait 300  
-uboot uboot.boot -app app.bin cfg_tool.bin -res %AUDIO_RES% %UI_RES% cfg %MEDIA_RES%  
-reboot 50 %UPDATE_FILES% -extend-bin %EXFLASH_FILES% -output-ufw jl_isd.ufw  
-update-files-with-uboot
```

3.双击《生成升级固件.bat》文件，选择升级方式 2，按回车

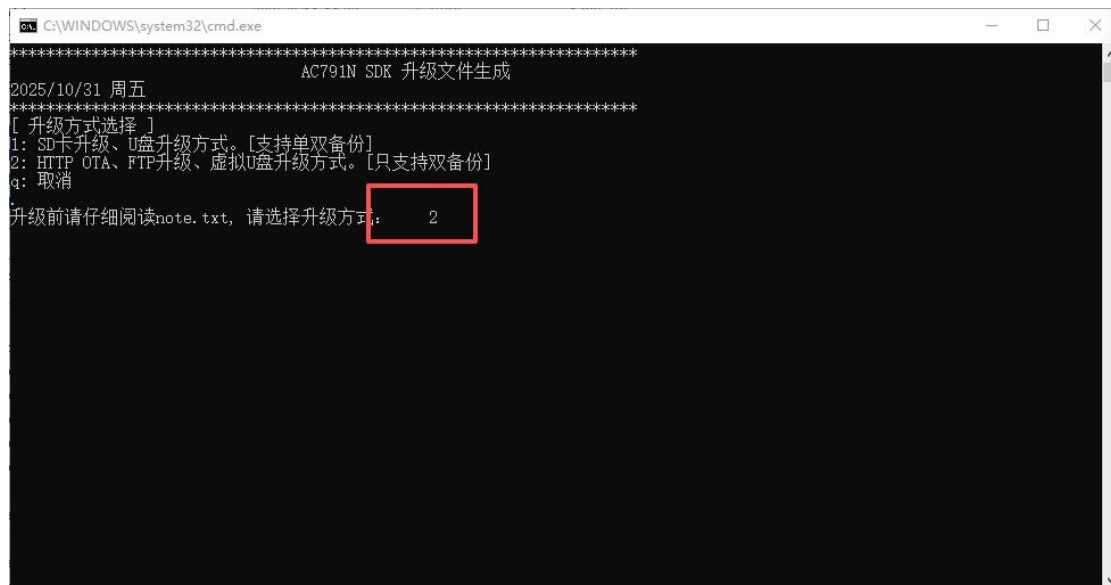

4.再 tools/upgrade 中生成 update-ota.ufw，uboot 文件已经打包到 ufw 中，直接用于升级即可。

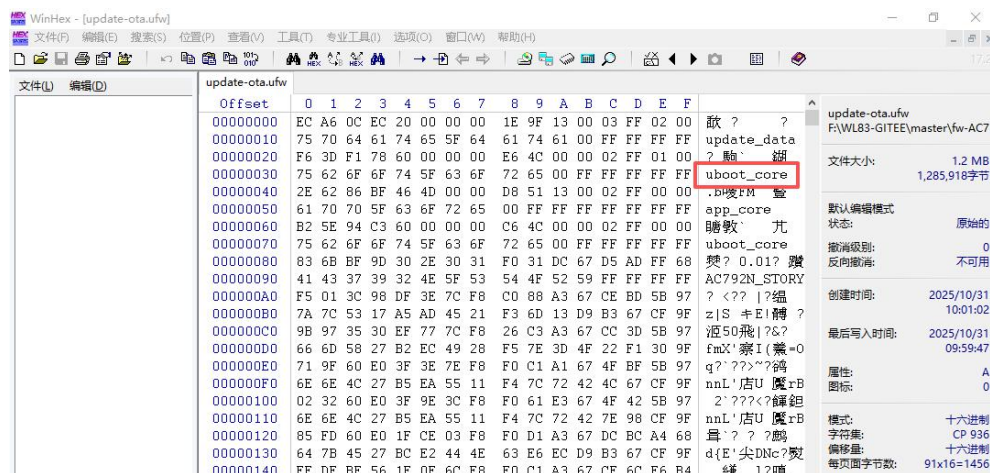

5.如果只想单独升级 UBOOT，则设置如下

(1) download.bat 配置

[illegible]

(2) 重新生成 update-ota.ufw, 大概在 20KB 左右

(3) 升级打印

```
00:00:10.364][Info]: [UPDATE]reserved_zone_file_dual_bank_pasive_update_init: current_app_start_addr = 0x20020,
update_app_start_addr = 0x40a020
00:00:10.366][Info]: [UPDATE]find local head, name: app_area_head
00:00:10.366][Info]: [UPDATE]Find local ext reserved zone: USER
00:00:10.367][Info]: [UPDATE]Find local ext reserved zone: PROFILE
00:00:10.368][Info]: [UPDATE]not reserved zone , ignore: uboot_core
00:00:10.369][Info]: [UPDATE]find update area: uboot_core
00:00:10.369][Info]: [UPDATE]boot name: uboot_core, len: 0x4cec

00:00:10.370][update[uboot_core] // 0%
00:00:10.383][RCV FIN]
00:00:10.474][update[uboot_core] >> 20%
00:00:10.482][update[uboot_core] >> 41%
00:00:10.490][update[uboot_core] >> 62%
00:00:10.491][download success.
00:00:10.491][ret close normal
00:00:10.499][update[uboot_core] >> 83%
00:00:10.505][update[uboot_core] >> 100%
00:00:10.505][Info]: [UPDATE]boot verify addr:0x10000
00:00:10.506][Info]: [UPDATE]uboot verify addr: 0x100c0
00:00:10.506][Info]: [UPDATE]check uboot bank crc OK
00:00:10.511][Info]: [UPDATE]check uboot header crc OK
00:00:10.512][Info]: [UPDATE]boot area B verify OK
00:00:10.513][Info]: [UPDATE]update boot area A
00:00:10.513][Info]: [UPDATE]copy_data_internal:0 10000 4cec
00:00:10.644][Info]: [UPDATE]boot verify addr:0x0
00:00:10.645][Info]: [UPDATE]uboot verify addr: 0xc0
00:00:10.645][Info]: [UPDATE]check uboot bank crc OK
00:00:10.650][Info]: [UPDATE]check uboot header crc OK
00:00:10.651][Info]: [UPDATE]boot area A verify OK
```