
1/13/25, 10:34 PM Local DB Insert

You are here: IoT Gateway User Guide > Projects and triggers > Trigger actions reference > Local DB Insert

Topic updated on September 21, 2023

Local DB Insert

The Local DB Insert action inserts a row into a local database table.

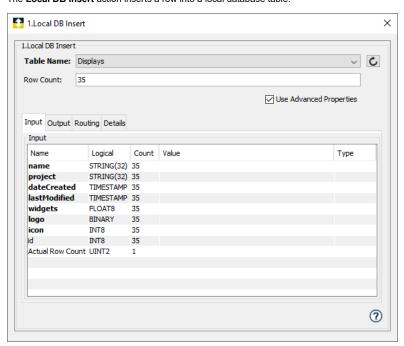

Parameter descriptions

Parameter Description

Table

The name of the local database table selected to insert rows. The table name will be available from a drop-down list. To insert multiple

rows, click on the Use Advanced Properties and follow the procedure below.

Select the Use Advanced Properties to view the advanced properties. The following table describes the advanced properties parameters:

Parameter Description

Row Count Enter the row count to be inserted. The value is a number in between 1 and 10000.

Input tab

The Input tab will have one row per column in the database table, where each row is identified by the table column name.

Parameter Description

Table Column Name Optional. The table column name.

Actual Row Count Appears when the Row Count is greater than 1. Indicates one row gets updated at a time.

Output tab

Parameter Description

Error Message Optional. Used to provide information if the query fails.

Related topics

Local Database

Transaction

About Telit | Contact Us | Legal Notices | Terms of Service | Privacy Policy

Copyright © 2025, Telit IoT Solutions Holding Ltd.. All rights reserved.