


EN




BOSCH

BUILT-IN INDUCTION HOB INSTALLATION AND OPERATION INSTRUCTION

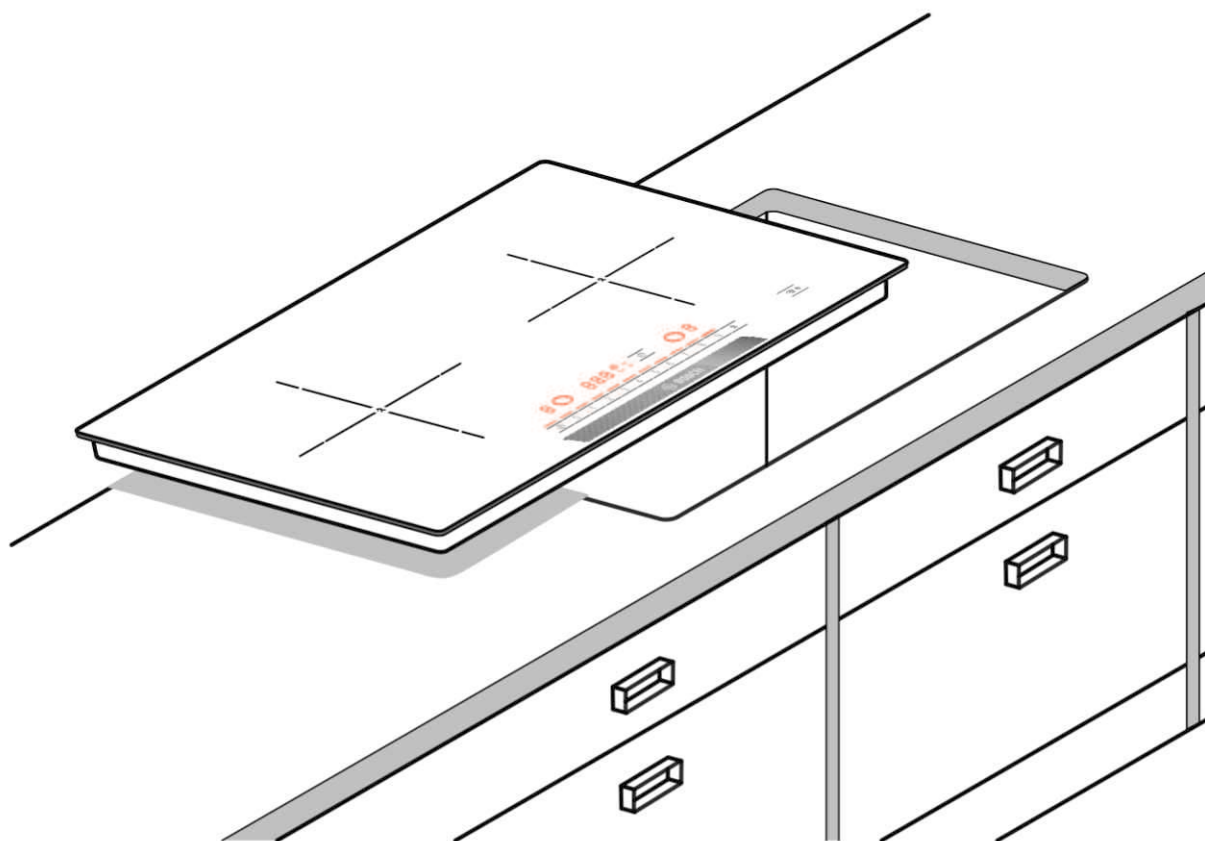

PMI968MS
PMI723BHK



Preface

Thank you for choosing Bosch cooking appliances.

Please read this user manual carefully before you use the product.

Any defects and losses caused by ignoring the mentioned items and cautions in the operation and installation instruction are not covered by our warranty and any liability. Please keep all document in a safe place for future reference. If you have any doubt, please contact our local customer service centre or dealer.



Contents

4

Safety Information

Safety instructions - - - - -	6
Causes of damage - - - - -	9

Environmental Protection

Advice on saving energy - - - - -	10
-----------------------------------	----

Installation Instructions

Preparing the kitchen cabinet - - - - -	12
Important notes - - - - -	13
Installing and connecting the induction hob - - - - -	14

Induction Cooking

Advantages of induction cooking - - - - -	15
Suitable pans - - - - -	15

Operation instructions

Getting familiar with your new hob - - - - -	17
Residual heat indicator - - - - -	20
Programming the induction hob - - - - -	20
Switching the hob on and off - - - - -	20
Adjusting the hotplate - - - - -	21
Cooking table - - - - -	22
The Powerboost function - - - - -	24
Restrictions when using the Powerboost function	24
How to activate it - - - - -	24
How to deactivate it - - - - -	24
Timer function - - - - -	25
Switching off the hotplate automatically - - - - -	25
Interlink function - - - - -	27
Activate the cooker hood's interlink binding - - - - -	27
Switch the interlink function on and off - - - - -	28
Basic settings - - - - -	29
Accessing the basic settings - - - - -	30
Automatic off function - - - - -	31

Contents

5

Operation instructions

Maintenance and cleaning - - - - - 32

Induction hob - - - - - 32

Induction hob surround - - - - - 32

Troubleshooting - - - - - 33

Normal noise while the appliance is working - - - 34

Customer service

Friendly reminders - - - - - 35

Attention:

Our company reserves the right of final explanation of all the contents in the Operation and Installation Instruction manual. The contents of this user manual are subject to change without prior notice.

- Read this user manual carefully before you use the product and keep it in a safe place.
- If the appliance is given to another person, please hand over this user manual as well.
- Please inspect the appliance after removing it from the packaging, if you find the built-in induction hob is visibly damaged, do not use it, please contact your local Bosch Home Appliances Customer Service Centre immediately.

Safety Instructions

- This product is designed for domestic use only, it is suitable for food preparation in the kitchen only.
- Safe operation:

To use this appliance safely, adults and children who, as a result of the following conditions, are not capable of using this appliance, should not do so without the guidance or supervision of a responsible person:


- Patient with physical, sensory or mental disability
- Lack of experience or knowledge
- Please supervise the children to ensure they do not play with the appliance.
- Avoid overheating the oil

Overheated oil can ignite and cause a fire!

Keep a constant watch when cooking;
In the event that the oil catches fire, never use water to put it off, switch off the induction hob immediately;
You may put off the fire quickly by covering the cookware with a cover or dish.

- Do not control the induction hob with an external timer or an independent remote control system.

Safety Instructions

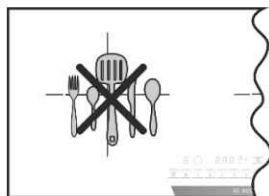

■ Beware of high temperature

Risk of burns!

Do not touch the hot areas of the induction hob.

The induction hob continues to heat up while cooking, it is imperative that children below 8 years old keep away from this appliance, unless being supervised by a family member.

The residual heat indicator tells you if the hotplates have cooled down (See "Residual heat indicator" section).

It may cause a fire!

Never place flammable objects on the induction hob.

If there is a drawer below the induction hob, this should not be used to store any flammable objects.

■ Keep the hotplates and pan bases dry

Risk of injuries!

If there is any liquid between the pan bases and the hotplates, this could generate steam pressure while the induction hob is in use, this could cause the pan to shake abnormally.

Always ensure that the hotplates and pan bases are dry.

■ Cracks in the induction hob

Risk of electrocution! Disconnect the appliance if there is a crack in the glass surface of the induction hob to prevent an electric shock. Contact local Bosch Home Appliances Customer Service Centre.

■ The hotplate heats up but the visual indication does not work

Risk of burns! Disconnect the hotplate if the indicator does not work. Contact local Bosch Home Appliances Customer Service Centre.

■ Do not place metal objects on the induction hob

Risk of burns! Do not place cutlery, lids or other metal objects on the surface of induction hob as they can heat up.



Safety Instructions

■ The cooling fan

This induction hob is fitted with a fan at the lower section.

Risk of malfunction! If a drawer is fitted under the induction hob, do not keep small objects or paper in it, as if these small objects or paper are picked up, they could damage the cooling fan or affect the cooling system.

Please note: There should be a minimum distance of 2 cm between the drawer contents and the cooling fan.

■ Improper repairs

Risk of electrocution! Improper repairs can be dangerous.

Repairs may only be carried out by technicians from or authorised by Bosch Home Appliances Customer Service Centre.

■ Power cable

If you found the power cable of the induction hob is damaged, it must be replaced with specified power cable or that bought from the customer service centre of the manufacturer, the replacement of power cable must be carried out by qualified personnel from the manufacturer or its maintenance department or equivalent.

The power cable of the appliance must not touch the hot areas of the induction hob as the cable insulation and induction hob can be damaged.

Although this induction hob complies with current safety regulations and electromagnetic compatibility regulations, people with a pacemaker should not use this appliance.

It is impossible to guarantee that all such devices found on the market comply with current safety regulations and electromagnetic compatibility regulations, and that dangerous interference will not occur. It is also possible that people with other types of device, such as hearing aid, could experience some discomfort.

■ Switching the induction hob off

Always switch off the induction hob using the main switch of the control panel after each use.

Do not wait until the hob switches off automatically when the pan is removed.

Causes of damage



■ The base of the pans

The rough bases of pans may scratch the induction hob.

When the induction hob is switched on, avoid leaving empty pans on the hotplates. These may cause damage.

■ Hot pans

Never place hot pan on the control panel, the indicator area or the induction hob surround.


■ Salt, sugar and sand

Salt, sugar and sand may scratch the Ceramic glass control panel of the induction hob.

Do not place these objects near this appliance or use the Ceramic glass control panel of the induction hob as work surface.

■ Hard and sharp objects

Hard or sharp objects may cause damage if they fall onto the induction hob.

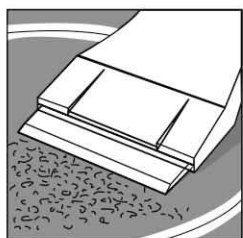

■ Spilt food

Sugar and other similar products may damage the induction hob. These products should be removed immediately using a glass scraper.

■ Unsuitable cleaning products

Unsuitable cleaning products may cause metal discoloration and damage on cookware. Contact Bosch Home Appliances Customer Service Centre if you have any doubt on suitable cleaning products.

■ Plastic and foil


Aluminium foil and plastic containers will melt if placed on the hot areas of the induction hob.








■ Environmentally-friendly waste disposal


After you have unpacked this appliance, please dispose of the packaging materials via environmentally-friendly means to conserve an ideal environment.

Advice on saving energy

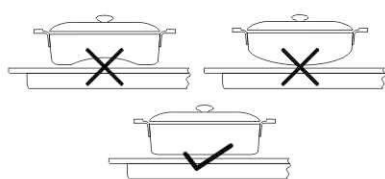

- Use a pan with thick flat base. Curved bases increase energy consumption.
Place a ruler on the base of the pan, if there are no gaps, the base of the pan is completely flat.
- The diameter of the base of the pan should fit the size of the hotplate.
Check if the cookware manufacturer has indicated the upper diameter of the pan. Generally, this is greater than the diameter of the base of the pan.
- If the diameter of the pan does not fit the diameter of the hotplate, we recommend to use a pan which is larger than the size of the hotplate, otherwise energy will be lost while using the induction hob.
- Choose pans which are the right size for the amount of food to be prepared. A large pan which is half full will consume a lot of energy.
- Always centre the pan on the hotplate and always cover the pan with the matching lid. Cooking without using the lid will consume more energy.
- Cook using small amounts of water. This will save energy and will also help green vegetables retain their vitamins and minerals.
- During cooking, food such as stews, soups may spill out of the cookware.
Therefore we advise to heat this type of food gently, selecting a suitable power rating and stirring the contents before and during cooking.
- We recommend not to place pans that have been used on a gas hob on the induction hob (The flame can deform the flatness of bottom). In case you have to use them, please check that bottom is flat.

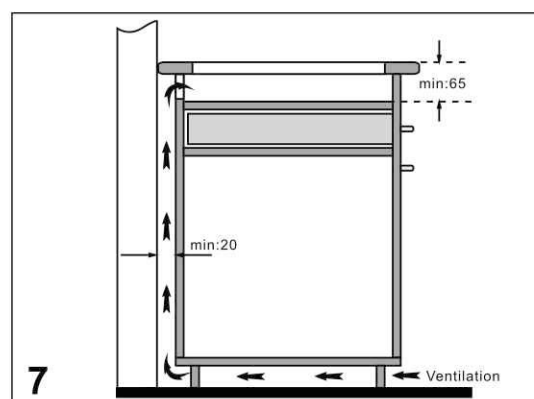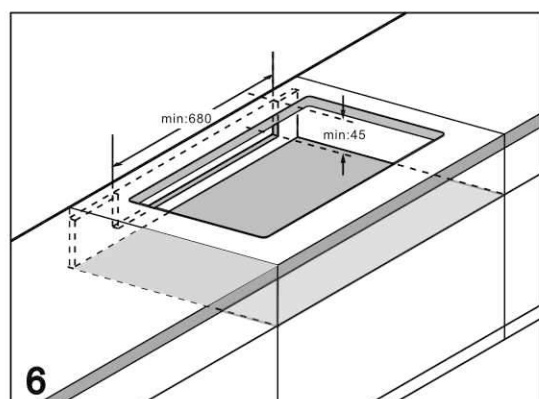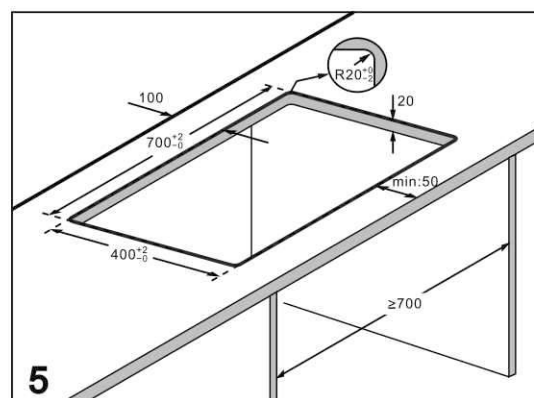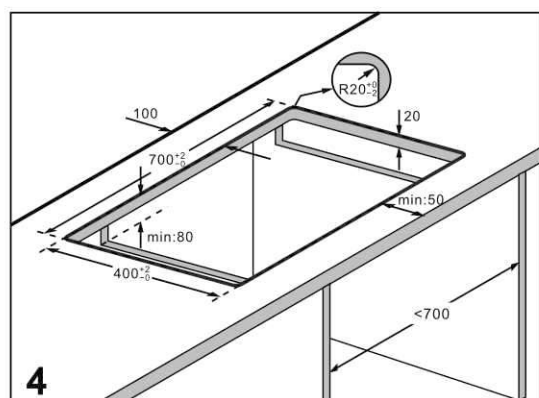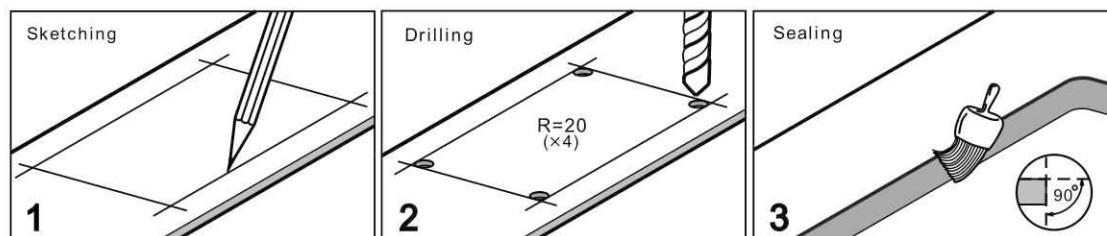

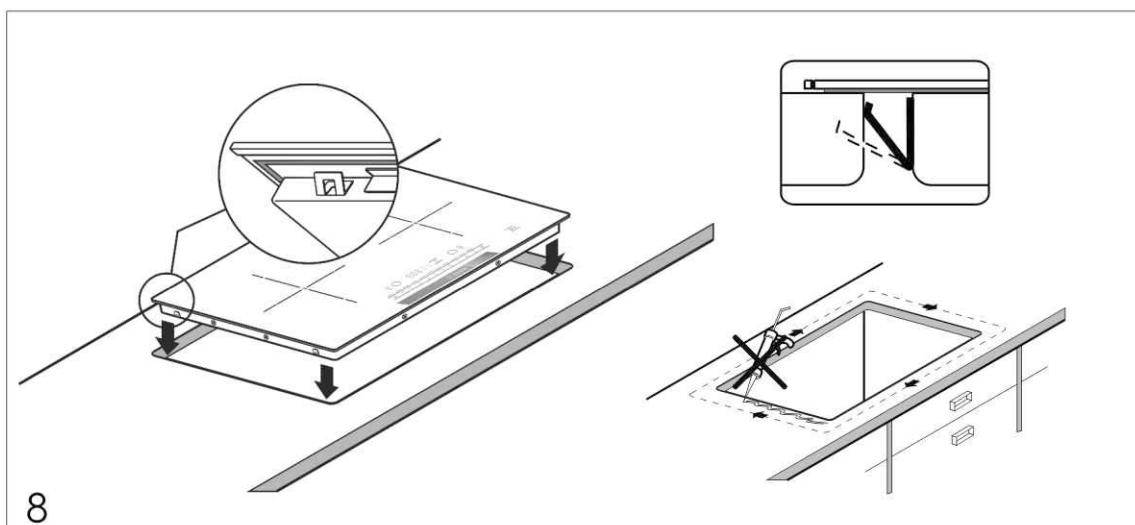

Preparing the kitchen cabinet ■ The worktop should be flat, horizontal and firm. An aperture should be cut before the appliance is installed.

Remove any shavings, as these can affect the operation of the electrical components. When the cutting has been completed, the kitchen cabinet's stability should be checked again.

- Wooden worktop which have been cut should be sealed so that they are heat resistant and so that they do not swell when moist.
- The kitchen cabinet to be fitted must resist temperatures of up to 90°C.
- The gap between the aperture and the side wall must be at least: 40 mm.
It is not recommended that the induction hob be placed between two side walls but, if this is the case, a gap of at least 200 mm should also be left on one side.
- If the induction hob is installed above a sterilizer there must be a gap of 70 mm from the top of worktop to the top of the sterilizer.
- If the induction hob is installed above a drawer, the minimum worktop thickness around the hob must be 20mm.


- If the gap between the two side panels of the kitchen cabinet is less than 700 mm, an aperture must be cut 80mm from the top of worktop between the two side panels (See picture 4).
- Take the hob ventilation into consideration:
 - A 680 mm wide and 45 mm high aperture must be cut at the top section at the back of the kitchen cabinet (See picture 6).
 - There must be a gap of 20 mm between the back of the kitchen cabinet and the kitchen wall (See picture 7).
 - If the induction hob is installed above a drawer, allow a gap of 65 mm between the drawer and the top section of the hob.

Important notes

- As there are sealing strips below the induction hob's control panel, there is no need to seal the induction hob and worktop with silicone sealant (See picture 8).
- The installation must be carried out by technicians from or authorised by Bosch Home Appliances Customer Service Centre, the manufacturer shall not be liable for any injury and damage caused as a result of improper installation.
- Only an authorised technician is able to connect the appliance. The guidelines set out by the electricity provider must be followed.
- This appliance should only be used with an earthed connection.
- Using this appliance without an earth connection or after it has been incorrectly installed may, in very rare cases, cause serious harm.
- The manufacturer accepts no responsibility for any malfunction or damage which is caused by incorrect electrical installation.
- The power cable must be positioned so that it does not touch any of the hot parts of the induction hob.
- Do not install the induction hob on top of a fridge, washing machine or similar appliances.
- Any alteration on the internal device of this appliance must be carried out by technicians from or authorised by Bosch Home Appliances Customer Service Centre.



Installing and connecting the induction hob

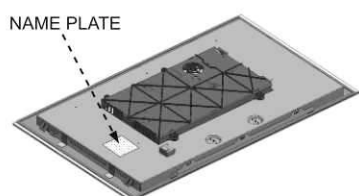

Connection diagram
220V-240V~50/60HZ



- See the Name Plate (See picture on the left) for the voltage.
- Connection diagram (See picture on the left)
 1. Brown
 2. Blue
 3. Green and Yellow
- Make sure the electrical circuit, socket and fuse at user's house complied with the required 16A electrical installation.
- The power cable must be connected to the right socket.
- Do not trap the power cable during installation and do not guide it over sharp edges.
- Removing the induction hob


Disconnect the appliance from the power supply.

Push out the induction hob from below

Advantages of induction cooking

- Induction cooking involves a radical change to the traditional method of heating, as the heat is generated directly in the pan. For this reason, it offers a number of advantages:
 - Greater speed in cooking and frying.
 - Reduced energy consumption.
 - Cleaner and easier to use; Spilt food does not burn as much on the induction hob.
 - Cooking control and safety; The induction hob supplies or cuts off the heat as soon as the controls are operated. The induction hotplate stops supplying heat if the pan is removed before the power has been switched off.

Suitable pans

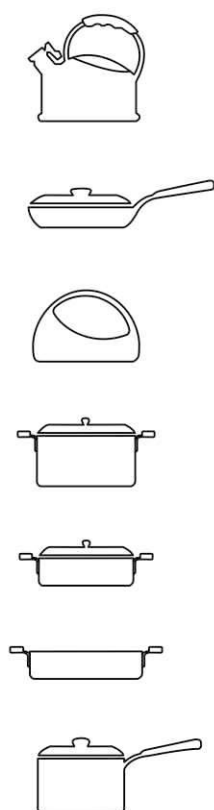

- Please use the special induction hob cookware with the material and size that meet the requirements.
- Ferromagnetic pans are the only pans which are suitable for induction cooking (Pans as shown are recommended).

They are not more than 26 cm, the diameter of the cookware base for left hotplate must not less than 14 cm and not less than 10 cm for the right hotplate, it depends on the pan base material, which can be made of:


 - Enamelled steel
 - Cast iron
 - Specially designed cookware for induction cooking made from special stainless steel
- Other pans are available for induction cooking. Pans made of composite materials are available for induction cooking, However, this could affect their effective diameters, you must check if the effective diameter of pan base and ferromagnetic area meet the requirement, otherwise, the hotplate is unable to identify the pan or may affect the cooking effect, thus, it is not recommended to use pans made of composite materials.
- Checking pans using a magnet.

To find out whether the pans are suitable, check that they are attracted to a magnet.

Please note that, some pans are made of materials like copper and are unsuitable for induction cooking regardless of they are attracted to a magnet or not. Pan manufacturers will usually indicate if their pans are suitable for induction cooking.



Suitable pans

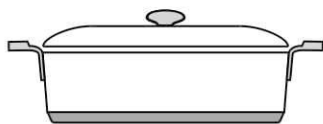

■ Unsuitable pans.

Never use pans made of the following materials:

- Glass
- Earthenware
- Copper
- Aluminium

■ Characteristics of the base of pan

The characteristics of the base of pan can affect the evenness of the heating.

Pans made of heat-diffusing materials can distribute the heat evenly, saving time and energy.

■ No pan or incorrect pan size

If no pan is placed on the hotplate, or the pan is not made of a suitable material or it is not a suitable size, the heat setting indicator of the induction hob will flash.

Place a suitable pan on the hotplate to stop the indicator from flashing.


If there is a delay of more than 90 seconds, the hotplate will switch off automatically.



■ Empty pans or pans with a thin base

Do not heat empty pans and do not use pans with thin bases. Although your induction hob is equipped with an internal safety system, empty cookware can heat up so quickly that the "Automatic Off" function does not have time to react and a very high temperature may be reached.

The base of the pan could melt and damage the induction hob's surface. If this happens, do not touch the pan, switch off the hotplate. If it does not work after cooling, contact your local Bosch Home Appliances Customer Service Centre or distributor.

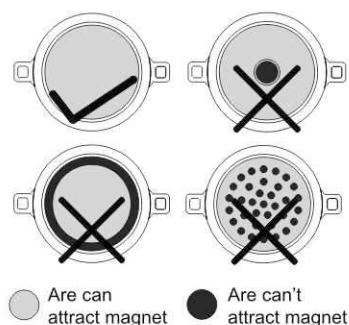


■ Pan detection

Each hotplate has a pan detection device to detect the minimum diameter, and the minimum diameter varies according to the pan base material. Thus, you are recommended to use a pan which matches the diameter of the hotplate.


As the base material of some pans are not completely ferromagnetic, please use the magnet in the package to determine if the size of the ferromagnetic part has met the requirements specified in this user manual.

Getting familiar with your new hob

■ Top view of product

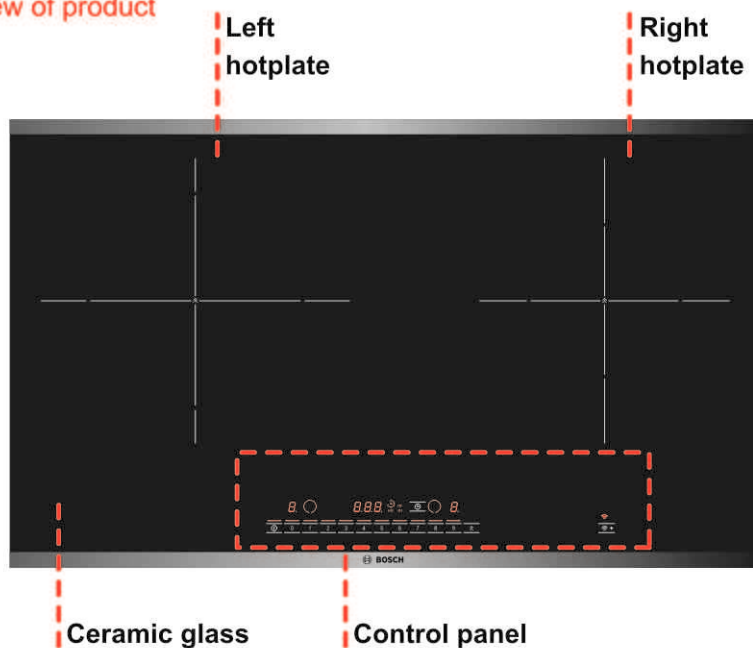


■ Control Panel

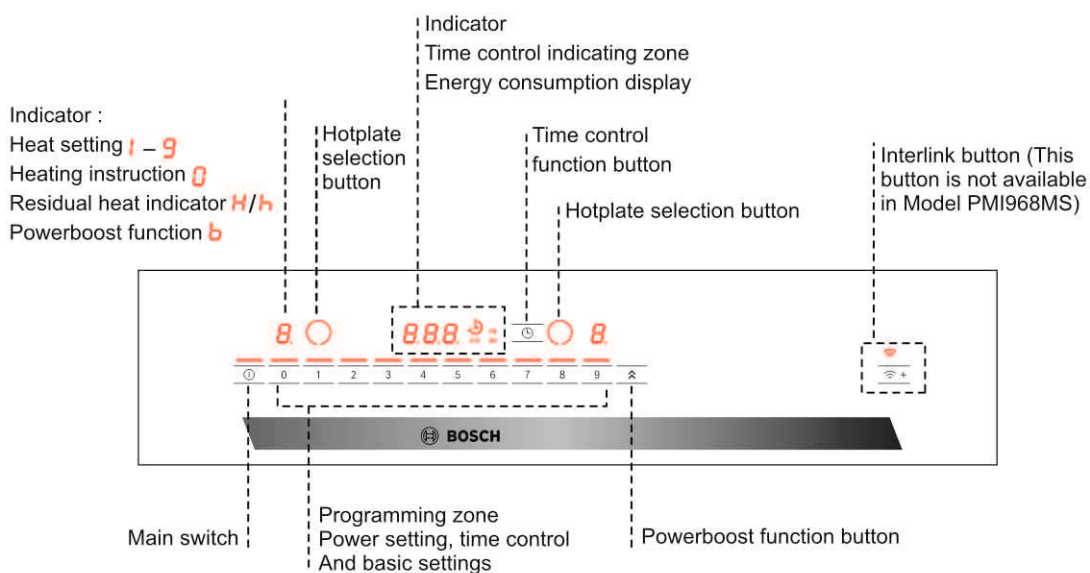

Getting familiar with your new hob

■ Induction hob

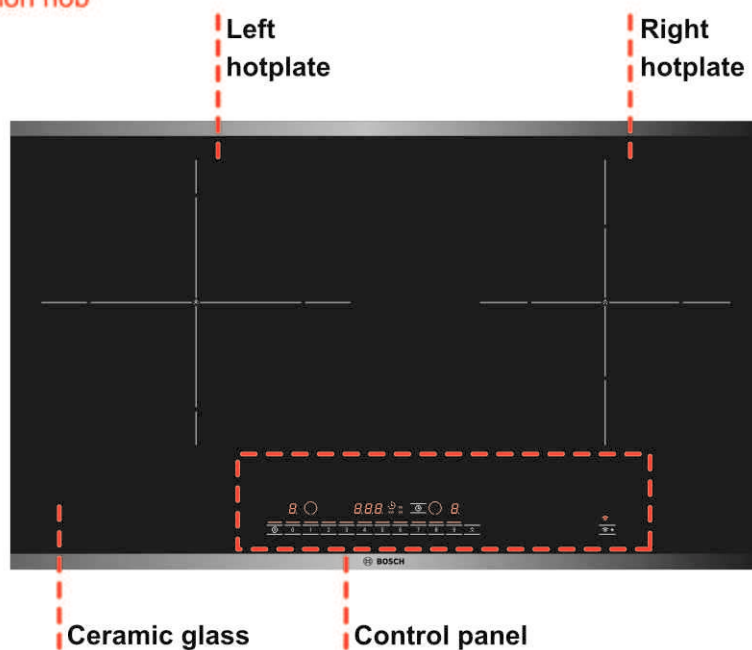

■ Cooking zones

This hob has two hotplates.

■ Effective cooking zones

The area within these two internal crosses are the effective cooking zones.

■ Central position

You can ascertain whether the pan has been placed at the centre of the hotplate according to the extended line of the crosses.

Please use pans which are suitable for induction cooking, read the section on “Suitable pans” for further details.

Operation Instruction

19

Getting familiar with your new hob

Product code	PMI968MS PMI723BHK
Specification	
Product Appearance	
Product model	CS35-PMI968TI (Black) CS35-PMI723BTI (White)
Working voltage	220 V - 240 V~
Frequency	50/60 Hz
Left hotplate rated power (kW)	3.3 (Rated power)/2.2 (Level 9)
Right hotplate rated power (kW)	1.8 (Rated power)/1.4 (Level 9)
Total rated power (kW)	3.6
Dimension (W x D x H) mm	760 x 450 x 56
Height above installation table (mm)	6
Size of aperture (W x D) mm	700 x 400 Round corner 4 x R20
Minimum thickness worktop where an aperture was cut mm	20
Installation method	EasyFix installation spring clip
Net weight (kg)	8.9
Gross weight (kg)	12
Panel	Ceramic glass

Getting familiar with your new hob

Residual heat indicator

- The hob has a residual heat indicator for each hotplate to show the hotplate which are still hot. Avoid touching the hotplate when this indicator is on.

Although the hob is switched off, the indicator will stay lit while the hotplate is hot.

When the pan is removed before the hotplate is turned off, the **H/h** indicator and the selected heat setting will be displayed alternately. **H** will be on when the temperature is very high, a while later **h** will be on, this indicates that the temperature has gone down, the residual heat indicator will go off after the induction hob has cooled down completely.

Programming the induction hob

Switching the hob on and off

- Switch the hob on and off using the main switch on the control panel.

- **To switch on**

Press the ① symbol. A beep sounds.

The bar shaped indicator above ① lights up, the indicator of the hotplate lights up, and the hob is ready.

- **To switch off**

Press the ① symbol until the bar shaped indicator above the main switch and the hotplates indicator go off. A beep sounds.

The residual heat indicator will go off after the induction hob has cooled down completely.

- **Note**


The hob will be switched off automatically when all hotplates have been switched off for some time.

Adjusting the hotplate

- The required heat setting can be adjusted at the programming zone
Heat setting 1 = minimum
Heat setting 9 = maximum

- **Adjusting the heat setting:**

1. Press the selection button of the induction hob, the heating setting indicator  of the selected hotplate lights up.
2. Within next 10 seconds, select the required heat setting at the programming zone, the corresponding power rating (Kilowatts) will be shown simultaneously in power display zone.

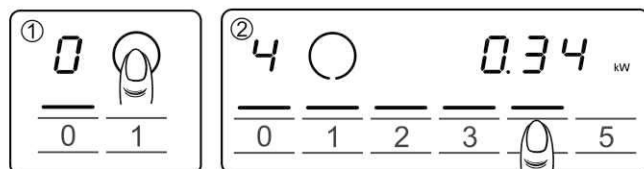

3. To change the heat setting:
Select the hotplate that need to adjust heat setting and touch the heat setting at the programming zone lightly, the bar shaped indicator above the heat setting lights up, while the corresponding power rating will be shown at the power indicator zone for 10 seconds.

Warning:

The selected heat setting will flash if no pan is placed on the hotplate. After a certain time, the hotplate will switch off.

- **Switching off the hotplate**

Select the hotplate and then press the heat setting  at the programming zone, the hotplate will be switched off and the residual heat indicator lights up.

Cooking table

- Some examples are given in the following table.

The cooking times varies depended on the type, weight and taste of the food being cooked. We suggest to do a pre- heating at heat setting 9 or at Powerboost for a few minutes before selecting the following heat settings.

	Slow cooking level recommended after pre-heating	Duration of cooking in minutes
Melting***		
Chocolate, butter, honey	1–2	–
Gelatin	1–2	–
Heating and keeping warm***		
Vegetable and pulse stew (e.g. lentils)	1–2	–
Milk**	1–2	–
Sausages boiled in water**	3–4	–
Defrosting and heating		
Frozen spinach	2–3	5–15 min
Frozen goulash	2–3	20–30 min
Simmering, bringing to the boil over a low heat		
Potato dumplings	4–5*	20–30 min
Fish	4–5*	10–15 min
White sauces, e.g. béchamel	1–2	3–6 min
Emulsions, e.g. Béarnaise, Hollandaise	3–4	8–12 min
Boiling, steaming, sautéing		
Rice (with double the amount of water)	2–3	15–30 min
Rice pudding	2–3	25–35 min
Potatoes (unpeeled)	4–5	25–30 min
Potatoes (peeled in salted water)	4–5	15–25 min
Pasta	6–7*	6–10 min
Stew, soup	3–4	15–60 min
Vegetables (fresh)	2–3	10–20 min
Vegetables (frozen)	3–4	7–20 min
Stews (in pressure cooker)	4–5	–
Roasting		
sliced meat with soy sauce	4–5	50–60 min
Meat stews	4–5	60–100 min
Goulash	3–4	50–60 min

Cooking table

	Slow cooking level recommended after pre-heating	Duration of slow cooking in minutes
Pan-frying		
Fillets, with or without pastry or breadcrumb coating	6–7	6–10 min
Frozen fillets	6–7	8–12 min
Chops, with or without breadcrumb coating	6–7	8–12 min
Steak (3 cm thick)	7–8	8–12 min
Breast (2 cm thick)	5–6	10–20 min
Breast (frozen)	5–6	10–30 min
Whole fish and fish fillets (without breadcrumb coating)	5–6	8–20 min
Whole fish and fish fillets (breaded)	6–7	8–20 min
Frozen breaded fish, e.g. fish fingers	6–7	8–12 min
Prawns and shrimps	7–8	4–10 min
Frozen meals, e.g. sauté	6–7	6–10 min
Pancakes	6–7	fry individually
Omelet	3–4	fry individually
Fried eggs	5–6	3–6 min
Frying** (150 g – 200 g per portion in 1–2 l of oil)		
Frozen food, e.g. chips, chicken nuggets	8–9	fry in batches
Frozen croquettes	7–8	
Dumplings	7–8	
Meat, e.g. chicken pieces	6–7	
Fish (breaded or beer-battered)	6–7	
Green vegetables, mushrooms, (breaded or beer-battered, e.g. mushrooms)	6–7	
Sweet pastries, e.g. doughnuts, battered fruit	4–5	

* Pre-heating covered, then recommended level uncovered

** Uncovered

*** Without pre-heating



BOSCH


The powerboost function

- Using this function to heat the contents of the pan is faster than by using heat setting **9**.

This function allows you to increase the maximum power of induction heating.

Restrictions when using the Powerboost function

All hotplates come with this function. The Powerboost function will be available while the other hotplate is not working. (See picture) For example, if you want to activate this function on hotplate 1, hotplate 2 must be switched off, and vice versa. If this hotplate is not off, the alphabet **b** and heat setting **9** will flash alternately in the hotplate indicator; then it will return to heat setting **9** without activating the Powerboost function.

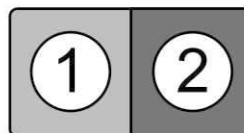

How to activate it

Follow the following steps:

1. Select the hotplate required to activate the Powerboost function.
2. Press the Powerboost function button  to activate the function, the corresponding power rating will be shown at the power indicator zone.

How to deactivate it

There are two options after selecting the required hotplate:

1. Select a lower heat setting at the programming zone, the bar shaped indicator will go off one by one until the heat setting on top.
2. Or press the Powerboost function button , the heat setting will decrease to **9**.


Timer function

Switching off the hotplate automatically

- This function is used to switch a hotplate off automatically.
- Setting the time for the required hotplate. The hotplate will switch off automatically once this time has elapsed.
- Follow the following steps to set the time:
 1. Select the hotplate and heat setting required and the corresponding power is displayed. Then press the power rating will disappear.


When setting the switch off automatically time, the and indicators on the time control display light up.

At this time, when the left hotplate is set to switch off automatically, the indicator lights up, when the right hotplate is set to switch off automatically, the indicator lights up.

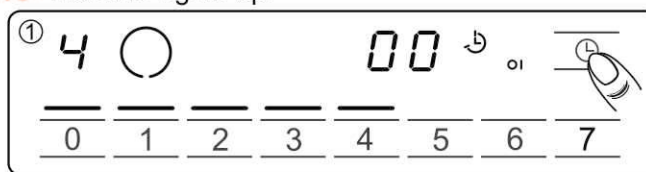

2. Select the required cooking time at the programming zone.

Touch the corresponding number lightly for the desired cooking time (The unit of time is minutes).

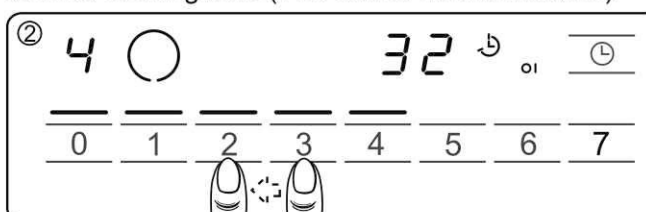

- After a few seconds, the programmed time will start to count down.
- The cooking time for the selected hotplate will be shown on display.
- If automatic switch off time were selected for both the left and right hotplates, the time control display will shown shorter cooking time 10 seconds after the selection.
- Press many times can switch and check the switch off time for both the left and right hotplates respectively.
- Once the time has elapsed
The hotplate stop heating once the time has elapsed, the warning beep sounds. will be displayed on the hotplate and will appear on the time program function display.
When is pressed, the indicators go out and beepstops.

Switching off the hotplate automatically

■ Correcting the time

Select the hotplate and then press  .
The cooking time can be modified at the programming zone.

■ Cancelling the automatic off function

Select the hotplate and press  .
Then select  at the programming zone,
indicators ( Or ) will go off.

■ Suggestions and warnings

Select a hotplate and ascertain to check the remaining cooking time.
Any cooking time can be programmed up to  minutes.
In the event of power cut, the automatic switch off function will lapse.

Interlink function

- This interlink function is only available for PMI723BHK, other models please skip this section.
- This appliance has an interlink function, other cooker hoods with interlink function can be switched on and off according to switching on and off, and the change in heating level of induction hobs during cooking, some cooker hoods can even adjust the airflow.
- **Note: This user manual provides example for cooker hood of the same brand only, as the cooker hood brands and models are not the same, their interlink function may vary (For further details , please refer to the user manual of cooker hood).**

Activate the cooker hood's interlink binding

- Activate the cooker hood interlink mode for the first time.

Note: Firstly, make sure this appliance and the cooker hood with interlink function are installed properly and with power supply connected.

1. Press and hold the  button of cooker hood for 3 seconds, the  of cooker hood flashes and tick 3 times to indicate waiting for setting.
2. Open the appliance, press and hold the  button until you enter the  alternate flash setting mode and, press and hold the  button for about 8 seconds until the appliance tick 3 times, the setting of the appliance is completed.
3. Wait until the cooker hood sound a long beep and the binding is successful, at this time, you have entered the interlink function for this appliance and the cooker hood , the display will flash .
4. Switch off the appliance and on again, the  is not displayed, now you can use the appliance under interlink function.



■ Note:

1. If there is a power failure or the power has been disconnected when the interlink function is working, the interlink function and the binding mode will remain unchanged once the power is reconnected.

2. After changing the cooker hood, repeat the above steps for interlink binding with the new cooker hood.

Switch the interlink function on and off

■ Switch on the interlink function:

After completing the binding, as long as the interlink is not switched off, every time you switch on the induction hob, it will enter the interlink mode directly, the interlink indicator lights up.

After the interlink function is activated, the cooker hood will be switched on automatically after this appliance was switched on, after the cooking is done and the appliance is switched off, the cooker hood will change from high speed to low speed, and will be switched off in 3 minutes.

■ Switch off the interlink function:

After the appliance was switched on, press  to switch off the interlink function, the cooker hood signal will disappear, the red interlink indicator will be off and the cooker hood can only be switched on and off manually.

Basic settings

- This appliance offers various basic settings. Some of these settings can be modified.

c2 Deactivating the beep Short beep to confirm that a symbol button has been pressed; Long beep to warn that an incorrect operation has been performed	0 Most beeps deactivated 1 Some beeps deactivated 2 All beeps activated*
c5 Hotplate automatic off function The hotplate is always switched off automatically once the time set on the timer has elapsed.	0 Automatic off deactivated* 1 Minute = Minimum time 99 Minutes = Maximum time
c6 Alarm duration of time programming function An alarm sounds once the period set on the timer elapses or after the time elapses for a hotplate to be automatically switched off.	1 10 seconds* 2 30 seconds 3 1 minute
c7 Power Management Function This limits the total power of the hob. There are 3 total power limit levels The default setting is maximum Power 3500 W	0 = Default value, total power 3500 W* 1 = 1000 W 2 = 2000 W 3 = 3000 W
c8 Restoring the default induction hob settings This clears all the customized settings	0 Customized settings 1 Restore default settings*

* Basic settings




BOSCH

Basic settings

Accessing the basic settings


- Follow the following steps:

1. Switch on the induction hob using the main switch.
2. Press  within the next 10 seconds until a beep sounds, the programming zone of the left hotplate will show  (See picture).

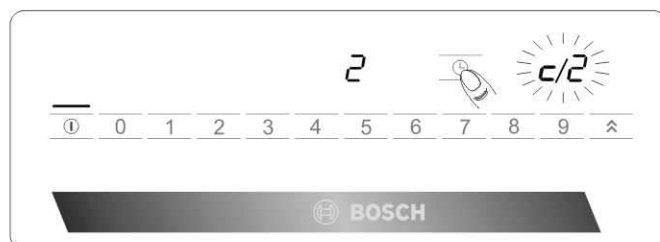

- Select the required setting

3. Press  a few times to search amongst basic settings until the indicator for the required setting is displayed.
4. Then select the required function at the programming zone. The new setting will appear on the time control display on top of the programming zone.

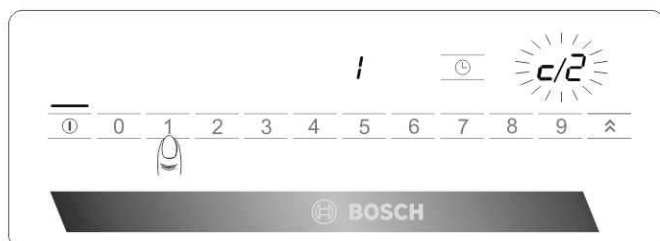

5. Press  and hold for 4 seconds until a beep sounds and the setting has been stored successfully.

Automatic off function

- If the hotplate is used for prolonged periods and without any modifications being made, the automatic switch off function will be activated (Heating time will be from 1 to 2 hours depend on the heat setting).

The hotplate will stop heating.

Indicators **F**, **B** and residual heat indicator **H/h** of the hotplate display will flash alternately.

The indicator goes off when any button is pressed.
The induction hob can be used.



Maintenance and cleaning

- In this section, we are going to guide you on how to maintain and clean your induction hob properly, so that it remain in the best working condition.

Induction hob

Cleaning

Clean the induction hob after each use. This will prevent spillages from burning.

- Only use cleaning products which are recommended for Ceramic glass. Please follow the instructions provided on the product packaging.

■ Never use:


- Abrasive products.
- Corrosive cleaning products, such as stain removers and oven spray.
- Aerosol sprays.
- Sponges which may scratch.
- High-pressure cleaners or steam cleaners.

■ Glass scrapers

Remove stubborn stains with a glass scraper.

1. Push out the blades of the scraper
2. Clean the surface of the induction hob with the blade.

Do not clean the surface of the induction hob with the scraper cover as this could scratch the surface. The blade is very sharp, beware of cuts. Keep in a safe place after use.

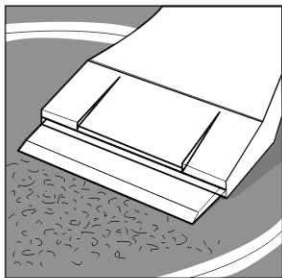

Induction hob surround

- **To prevent damage to the decorative strips of induction hob, please follow the following recommendations:**

- Only use slightly soapy warm water
- Never use sharp or abrasive products
- Do not use the glass scraper

Troubleshooting

- Malfunctions are generally caused by minor faults. Before contacting the Customer Service, make sure you have read the following.

Display	Malfunction	Measure
No indication	Power supply was disconnected The appliance has not been correctly connected Electronic system error	Use other electrical device to check if the power supply was disconnected. Check if the appliance has been connected correctly. If the checks above do not remedy the malfunction, contact the After Sales Service Centre.
 Flashes	The control panel is wet or an object is resting on it	Dry the control panel area or remove the object.
 number/  number/  number/	Electronic system error	Disconnect the induction hob from the mains. Wait a few seconds before reconnecting it. If the malfunction is not solved, contact the After Sales Service Centre.
	Internal error in the system	Disconnect the induction hob from the mains. Wait a few seconds before reconnecting it. If the malfunction is not solved, contact the After Sales Service Centre.
	Overheating of electronic system, corresponding hotplate has switched off	Wait until the electronic system has cooled down, then press any button. If the indication continues, contact the After Sales Service Centre.
	Overheating of electronic system, all hotplates have switched off	Wait until the electronic system has cooled down, then press any button. If the indication continues, contact the After Sales Service Centre.
	Voltage incorrect, outside normal operating limits	Please contact the local power supply board
	Hotplate overheated and was switched off to protect the hob	Wait until the hotplate has cooled down and switch on the hob again.

Do not place hot pans on the control panel.



BOSCH

Normal noise while the appliance is working

Induction heating technology is based on the creation of electromagnetic fields which enable heat to be generated directly on the base of the pan. Depending on the construction of the pan, these electromagnetic fields may produce certain noises or vibrations as detailed below:

- **A low buzzing noise, like a transformer**

This noise is produced when cooking with high power levels. It is the quantity of energy transferred from the induction hob to the pan which causes the noise. This noise will disappear or lessen as the power level is reduced.

- **A low whistle**

This noise is produced when the pan is empty. The noise disappears as soon as food or water is added to the pan.

- **Sizzling**

This noise is produced by pans made of composite materials. The noise is caused by the vibration of the contact surfaces. This noise comes from the cookware and may vary with the quantity of food and method of cooking.

- **High-pitched whistling**

This noise is mostly produced by pans made of composite materials whenever they are used at full heating power and at the same time on two hotplates. This whistling disappears or lessens when the power is reduced.

- **Noise from the fan**


For the electronic system to run properly, the induction hob must operate under controlled temperatures. Thus, the induction hob is fitted with a fan which starts working after detecting the temperatures at different power levels.

If the temperature detected is still too high, the fan will continue to work even after the induction hob has been switched off.

The noises described in this section are normal. They are part of induction heating technology and do not indicate a malfunction.

Friendly reminders

- Only technicians that have received professional training and have a qualification for hob maintenance may carry out maintenance of this appliance. Other unauthorised persons are not allowed to maintain the appliance to avoid serious consequences.
- When your hob is not working properly, before contacting our Customer Service, please refer to "Troubleshooting" section first. If technicians visit your house and find there is nothing wrong with your hob, you will have to pay the relevant cost, even if it is during the warranty period.
- If you cannot find solution to a problem, switch off the appliance and contact our Customer Service Centre.
- When you contact our Customer Service, please state the product code (E-Number), the manufacturing date (FD) and the serial number (Serial No.). These information can help us to eliminate unnecessary hassles and save you unnecessary cost. You will find this information on the nameplate of the induction hob.

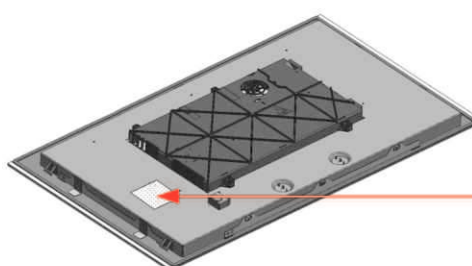

E-Number
FD
Serial No.

NAME PLATE

Material Number: 9000619360

Version: 03

Guarantee: The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.



BOSCH