## **Setting Code On/Off**



**Do Not Output Setting Content** 



**Output Setting Content** 

# **Return to Factory Default**



**Return to Factory Default** 

## **User Default Setting**



To Save Current Setting as User Default Setting



**Return to User Default Setting** 

## **Transmission Mode**





**Reading Mode** 



**Continual Mode** Mode **Reading Area** 



Auto-Sensor



**Full Area** 

**Manual Mode** 



**Center Area Only** 













**No Lighting** 





Always On



**No Aiming** 



**Low Frequency** 



**Intermediate Frequency** 



**High Frequency** 








**Good Read Prompt On** 



**Good Read Prompt Off** 





**Enter Data Encoding Format GBK** 



**Enter Data Encoding Format UTF8** 



#### **Enter Data Encoding Format AUTO**



**Output Data Encoding Format GBK** 



**Output Data Encoding Format UNICODE** 



**Output Data Encoding Format UTF8 Keyboard Language** 









Tax Invoice Mode Enable/Disable



**Enable Tax Invoice Mode** 



Disable Tax Invoice Mode

## Mirror Image Reversal



**Enter Mirror Image Reversal Mode** 



Withdraw Mirror Image Reversal Mode

#### **Black And White Reversal**





Disable1D Barcode Black and White Reversal







Disable 2D Barcode Black and White Reversal

Enable 2D Barcode Black and White Reversal

# **Enable/Disable Regular Barcode and Reverse Barcode**





\*Disable

Enable

**Read Version Information** 



Read Version Information <u>Prefix</u>





**Enable to Add Prefix** 

\*Disable to Add Prefix



Revise Prefix
Suffix





Disable to ASuffix



Note: Use two hexadecimal values for each prefix or suffix character, with a prefix or suffix of up to 15 characters

# **Terminator**



**Terminator Off** 



\*Add Terminator CR



**Add Terminator TAB** 



**Add Terminator CRLF** 

## **CODE ID**



**Enable to Add CODE ID** 



**Disable to Add CODE ID** 

### **Enable/Disable All Symbologies**



**Enable All Symbologies** 



**Disable All Symbologies** 



### **Barcode Rotation Function**



\*Enable 360° Rotate Reading



Disable 360° Rotate Reading

# **Reading Angle Intensify**







**Enable Angle Intensify** 







**EAN13** 

**Disable EAN8** 

\*Enable EAN8

**UPCA** 



\*Enable UPCA

UPCE0





\*Enable UPCE0

**Disable UPCE0** 



\*Enable UPCE1

**UPCE1** 

**Disable UPCE1** 



Code128



\*Enable Code128 Disable Code128

# Code39

Code93



\*Enable Code39



**Disable Code39** 



\*Enable Code93



**Disable Code93** 

**CodeBar** 



\*Enable CodeBai



**Disable CodeBar** 



\*Enable QR



Interleaved 2 of 5



Enable Interleaved 2 of 5



Disable QR

\*Disable Interleaved 2 of 5

### **Industrial 25**



**Enable Industrial 25** 



\*Disable Industrial 25





**Enable Matrix 2 of 5** 

# Matrix 2 of 5




\*Disable Matrix 2 of 5

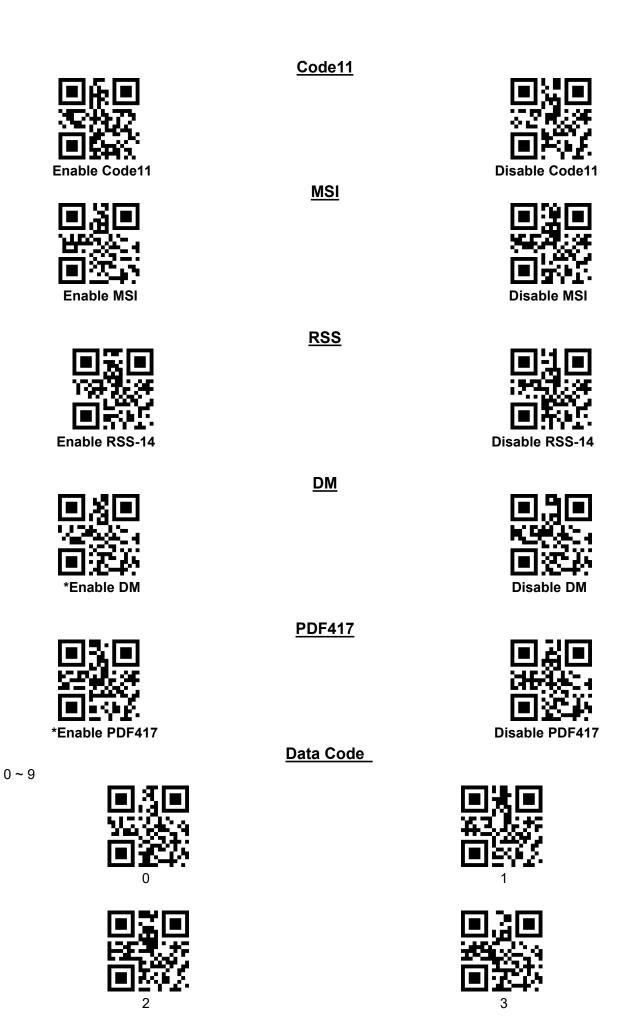

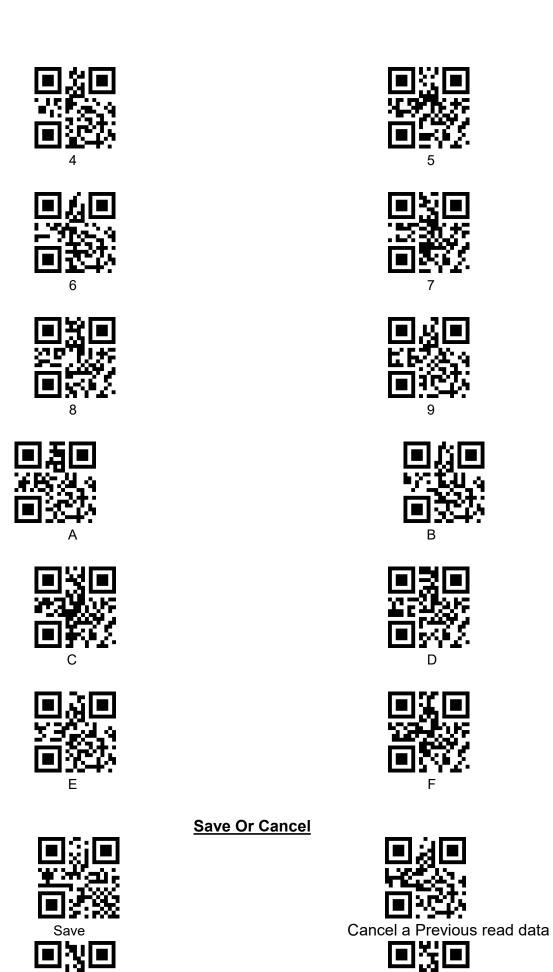

A – F



Cancel Revise Setting