

Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

Required Components

1. 	2. 	BOM 1. Just Play - Wednesday Dancing Toy 2. 3.5 mm Female Mono Cable 3. Needle and thread 4. (3x) AA batteries (included with toy) 5. Cable tie (small – around 15 cm) Refer to the Tool and Component List for purchasing details.
3. 	4. 	
5. 		

Required Tools

- Phillips Screwdriver
- Wire strippers
- Soldering iron and solder
- Drill and 1/8" drill bit
- Scissors
- Flush cutters

Required Personal Protective Equipment (PPE)

- Safety glasses

Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

Assembly Instructions

1. Using scissors, carefully remove the toy from its packaging without damaging it (we will be repackaging the toy after adapting).	
2. Open the Velcro portion on the back of the doll and find the thread holding together the stitching at the base of the Velcro.	

Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

3. Using scissors, remove the stitching that holds together the under portion of the dress and the back of the dress. Unstitch all the way to the end of the stitching past the cross section.

Make sure not to cut the fabric.



4. On the bottom of the feet remove the screws and pop the base of the foot off the doll.

*Note: keep track of the screws for later



Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

5. Slip the fabric loop over the upper plastic part of the shoe to expose the leg joint. <i>*Note: As you remove any stuffing from the feet, store it in a safe location for restuffing later.</i>	
6. Use a flat screwdriver to pop the black plastic portions over the white connection of each leg.	
7. Once the leg is free from the shoe, wiggle and gently bend it out of the bottom portion of the dress where we removed the stitching before. Do this for both legs.	

Switch Adapted Wednesday Dancing Toy


MAKER GUIDE

8. Lift the fabric portion of the doll over the main section of the body to expose the main plastic body of the doll.






9. Locate and remove the five screws along the body of the toy.

*Note: you will need to remove the zip-tie around the neck in order to access the last screw at the top of the body.

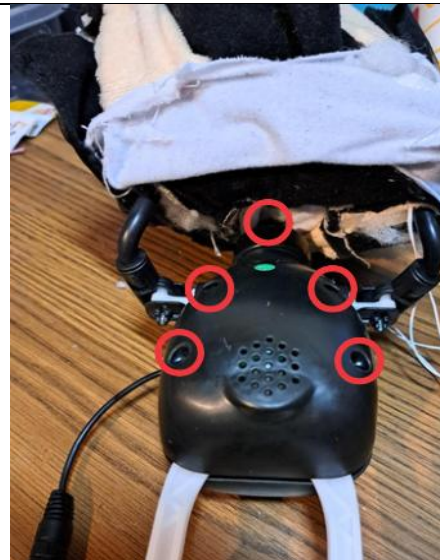

Switch Adapted Wednesday Dancing Toy


MAKER GUIDE

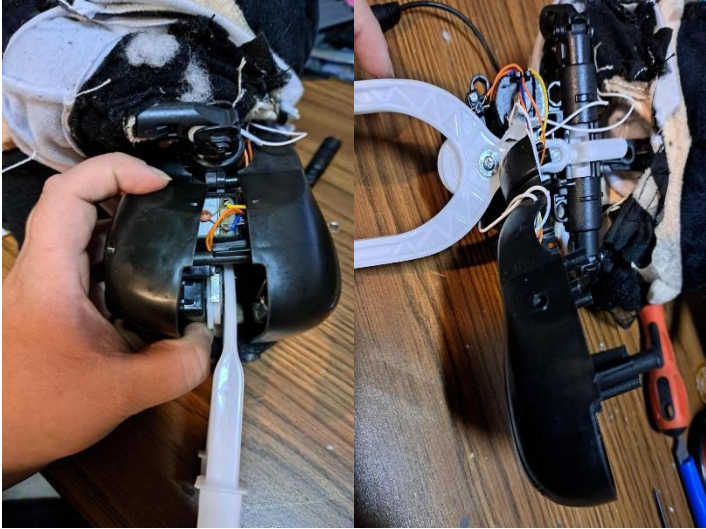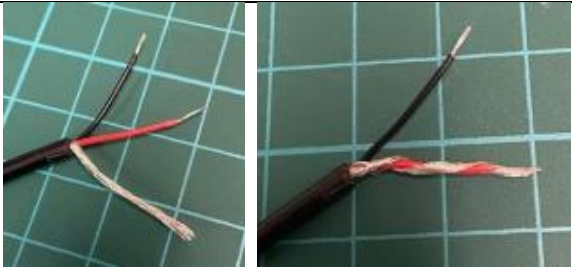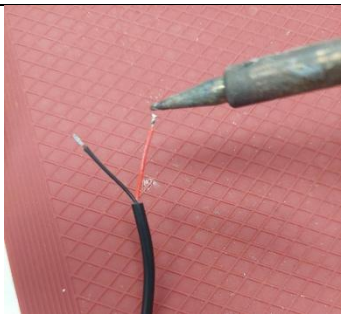10. Carefully separate the back half of the toy. Locate the back of the battery pack and the circuit board. In the space to the left of the battery pack drill a 1/8-inch hole in the plastic.	
11. Use wire strippers to strip approximately 2 cm off the outer wire casing, revealing two internal wires.	
12. <u>If there are 2 internal wires</u>, strip approximately 0.5 cm off each wire.	
13. <u>If there are three internal wires</u> (red, black, and exposed), strip off 0.5 cm of the red insulation and twist the red wire and exposed wire together. Strip 0.5 cm from the black wire.	
14. Melt a small amount of solder over the exposed ends of the wire.	


Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

15. Feed the cable through the drilled hole.

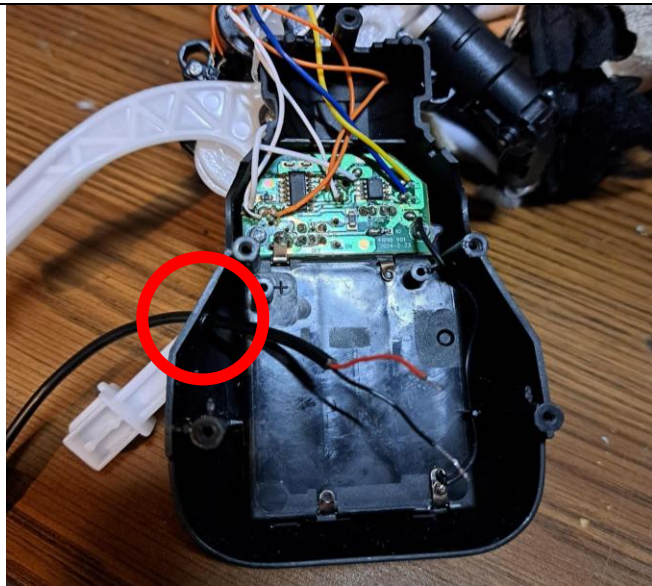

16. Looking at the board, locate the two places where we will solder the wires to.

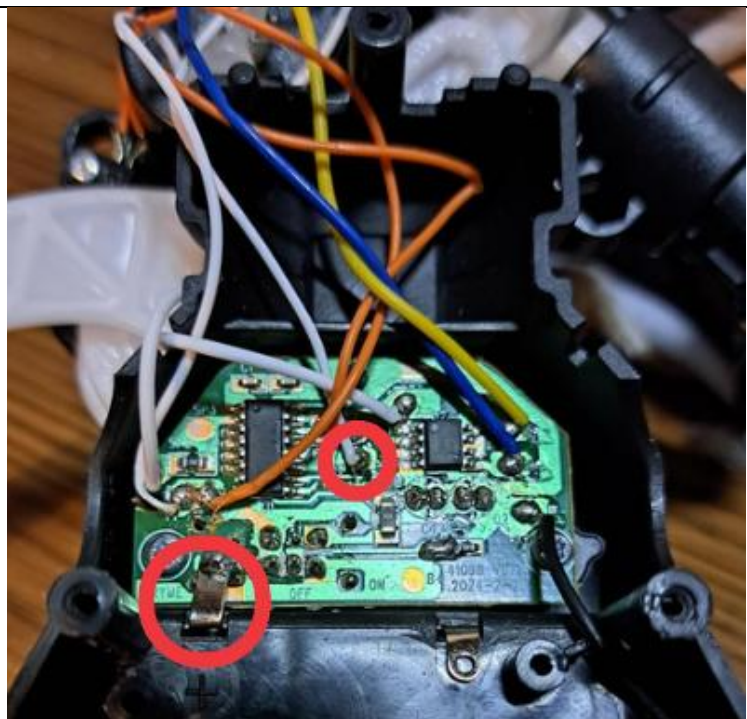


Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

17. Solder your exposed tin wire to each current point.

*Note: It does not matter which wire of the mono cable attaches to each of the 2 soldering points.

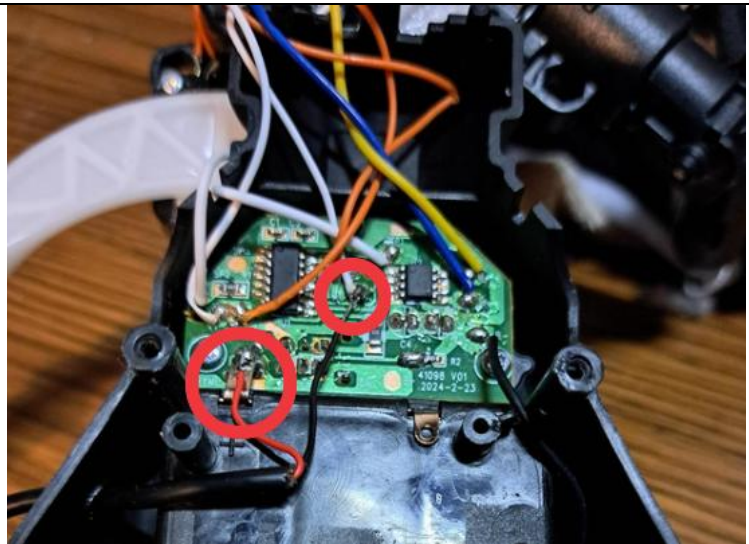


18. **It is now time to test the toy.** Insert batteries into the battery compartment and an assistive switch into the mono jack. The toy will activate when the assistive switch is pressed.

*Notes: If the toy does not turn on, please check the soldered connections. Also check if the batteries are working.

19. Attach a cable tie to the cable, on the inside of the black case- as close as possible to where it enters.

Tighten the cable tie as much as you can. Then cut the excess portion of the cable tie with the flush cutters.

This cable tie will serve as strain relieve, so that if the cable is pulled it won't break the solder connections.

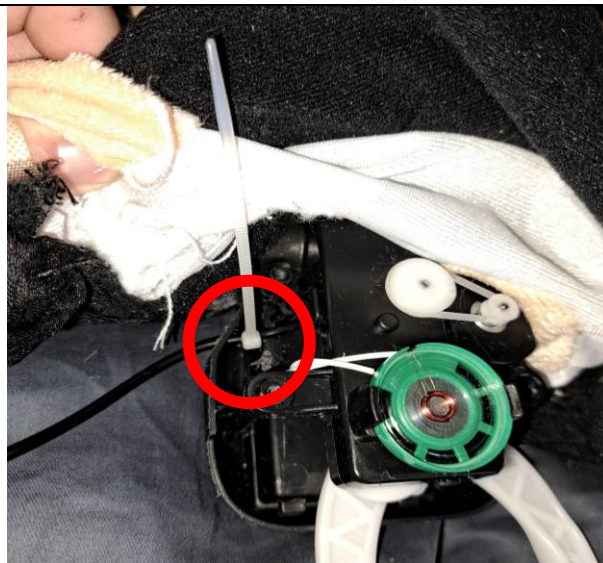

Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

20. Reassemble the body of the toy making sure the white bar on the body is fed through the black plastic loop on the head as you close the 2 plastic parts of the body.

*Note: Make sure the 2 white wires that run to the hand button are strung through the opening near the neck.



21. Re-screw the 5 body screws.



Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

22. Pull the fabric back down over the body of the toy and gently bend the plastic back through the leg holes.



23. Click the top of the feet back onto the base of the plastic legs.



24. Slip the stiff rings back over the tops of the feet and restuff the feet with the batting that was removed earlier.



Switch Adapted Wednesday Dancing Toy

MAKER GUIDE

25. Screw the bases of the feet back in place.



26. Using a needle and thread stitch the base of the dress back up.



27. Test the toy again. If it is still working properly, repackage the toy and the adapted toy is complete!

