

Switch Adapted Climbing Ducks Toy

MAKER GUIDE

Required Components

1. 	2. 	BOM 1. Amazon LED Electric Duck Climbing Stairs Toy 2. Mono jacks x2 3. 22 AWG Wire 4. 2 AA Batteries Refer to the Tool and Component List for purchasing details.
3. 	4. 	

Required Tools

- Phillips Screwdriver
- Soldering iron
- Wire stripper
- Flush cutter
- Drill and ¼ drill bit

Required Personal Protective Equipment (PPE)


- Safety Glasses

Switch Adapted Climbing Ducks Toy

MAKER GUIDE


Assembly Instructions

Step 1

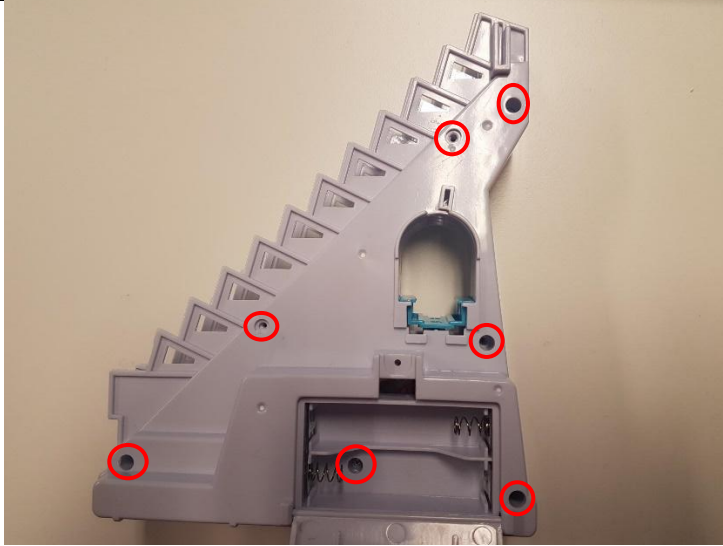

- Carefully remove toy from packaging, the toy will be put back in packaging (if possible) after it is adapted
- This toy has a lot of parts – ducks and a track that can be kept in the box
- Using a screwdriver, turn screws indicated in the red circles to open the toy – including the screw inside the battery compartment
- Set screws aside in a safe place

Step 2


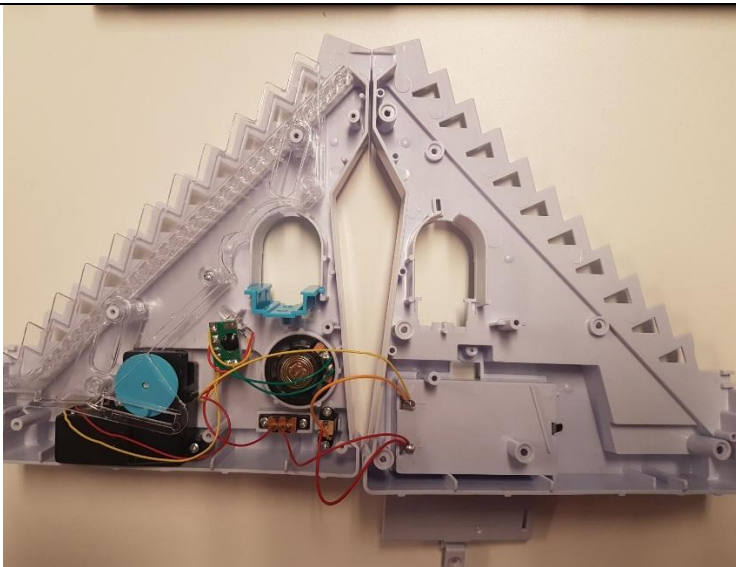


- After screws are undone, gently pull the toy into two halves. Be very careful while doing this as to not pull off any existing wires or connections
- If some parts move, just take note of how everything fits together but they can also be set aside while you work on the toy.


Switch Adapted Climbing Ducks Toy

MAKER GUIDE

Step 3

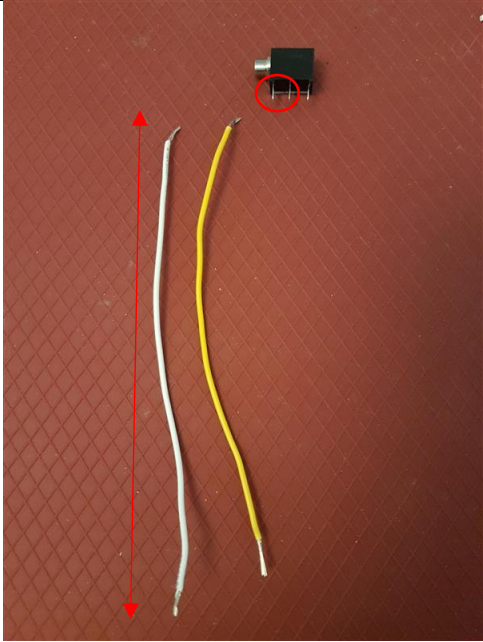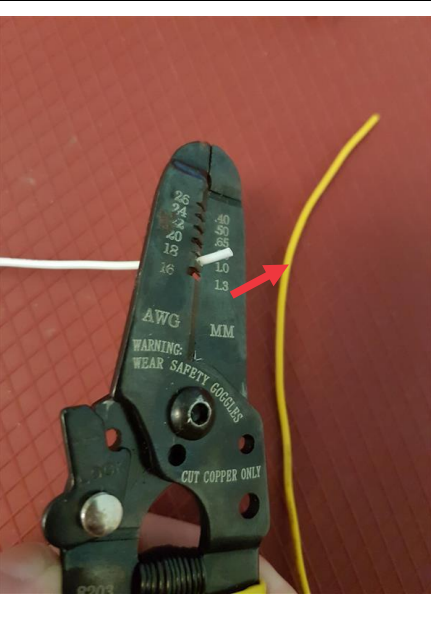	Next we will prepare the mono jack and wires.	
	Cut 2 pieces of wire each 8 cms in length	
	Strip both ends of both wires, leaving about .5 cm of exposed wire on each end	

Step 4

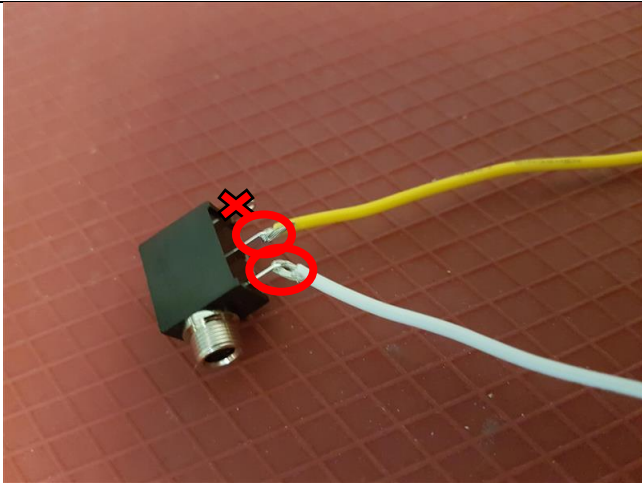	- Pick one wire, slide exposed wire into first metal arm on mono jack (the arm closest to the circular jack) - With second wire, slide one end of exposed wire into the middle metal arm on mono jack - Solder wire to mono jack
	Please Note: Check that you have the correct metal arms of mono jack, refer to picture

Switch Adapted Climbing Ducks Toy


MAKER GUIDE

Step 5



- Tin the ends of your wire. The best way to do this is cover the exposed wire end in solder.
- This will help you stick the wires to an existing spot where there is solder

Step 6

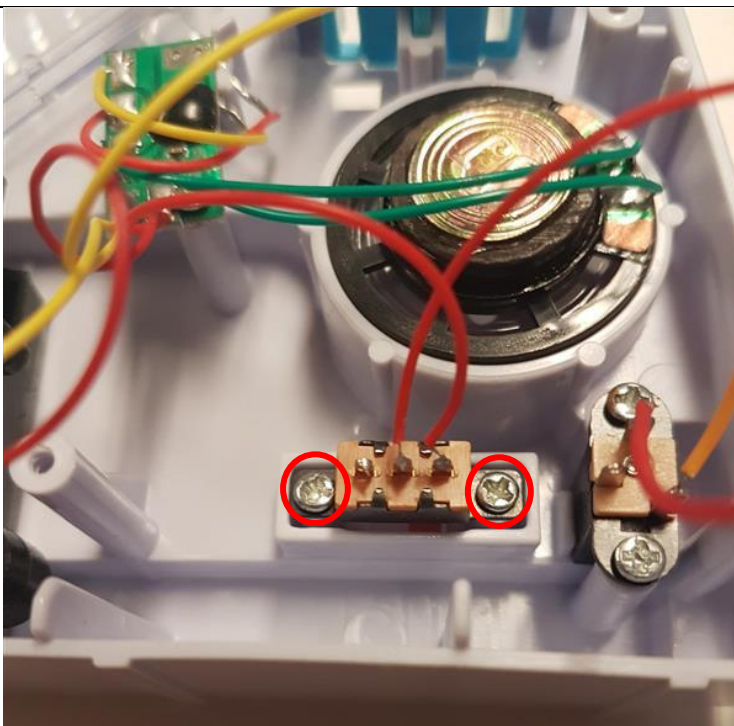


- Locate where the on/off switch is located. Undo the screws and gently pull the switch to give yourself space to work with it
- For this assembly, we are attaching our mono jack + wires to the same spots on the original switch

Switch Adapted Climbing Ducks Toy


MAKER GUIDE

Step 7

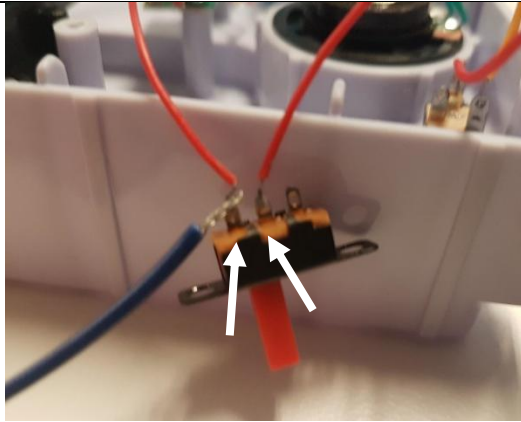

- Using the wires and mono jack you previously prepared, you will solder the ends of your new wire to where the current red wires are.
- You will have one new wire and one old wire coming from each spot indicated in the circles
- **Test your connections using an assistive switch.** Listen for the motor to start when the switch is activated.
Please note: you will need batteries to test

Step 8

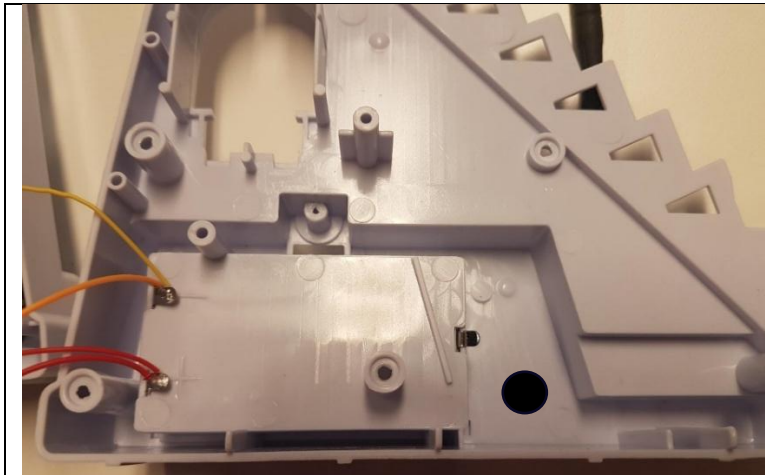

- Using a ¼ inch drill bit, drill a hole to the side of the battery compartment.
- Check that the mono jack end fits through the hole and that it does not interfere with any mechanism of the toy.
- Add the ring to the outside of the toy to hold the mono jack in place.

Step 9



- Reassemble the original switch to its original position, close the toy – checking that no wires are being pinched and the mechanics are moving.
- Reassemble by adding the screws to their original spots.

Test the toy again once reassembled.