


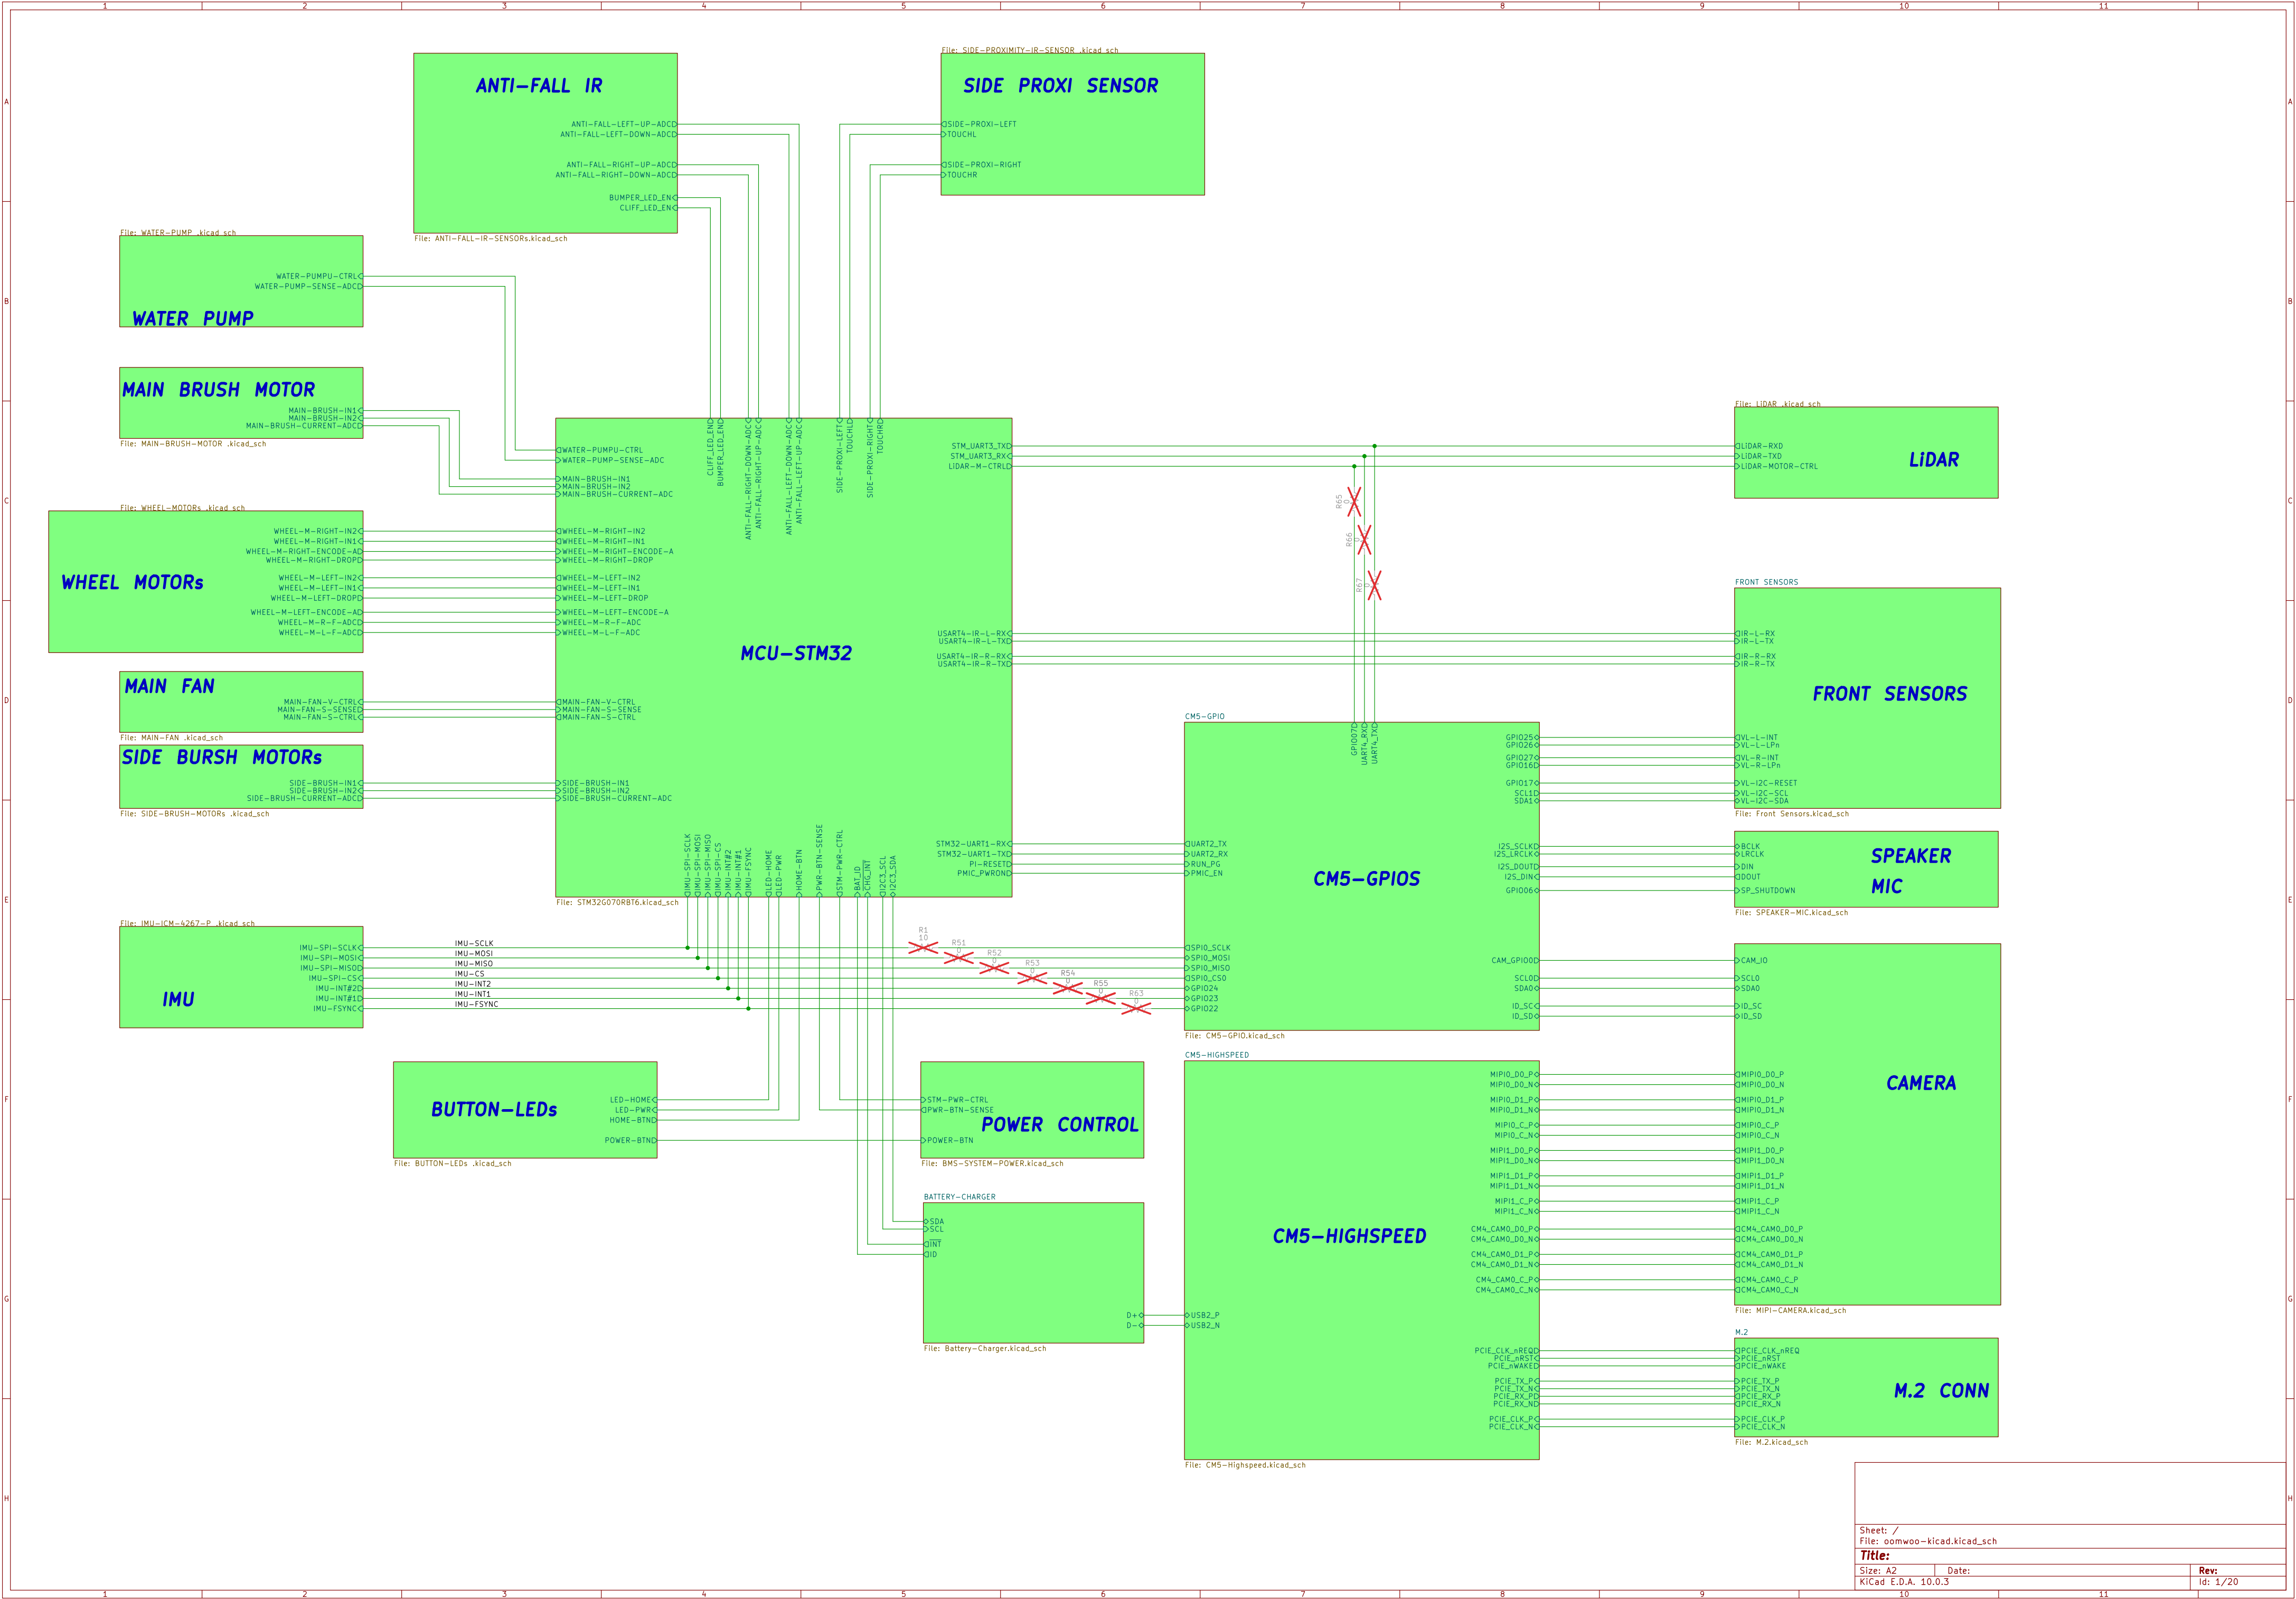
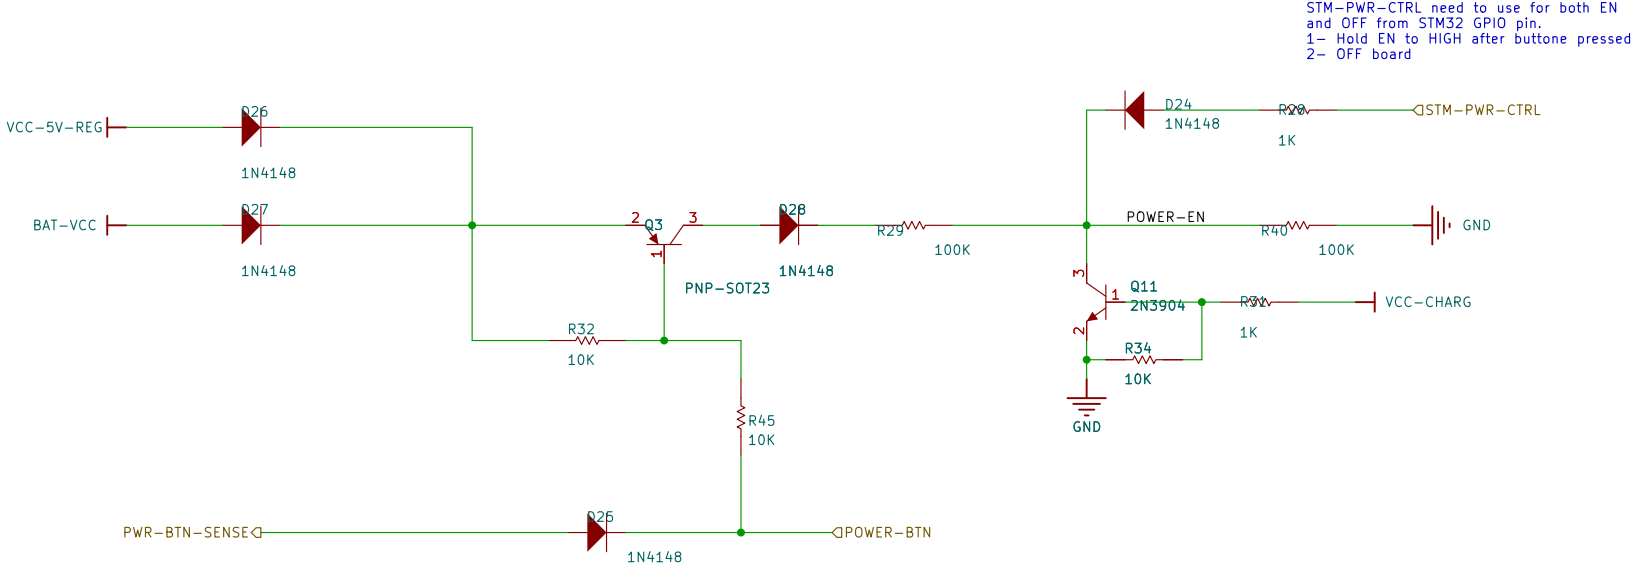
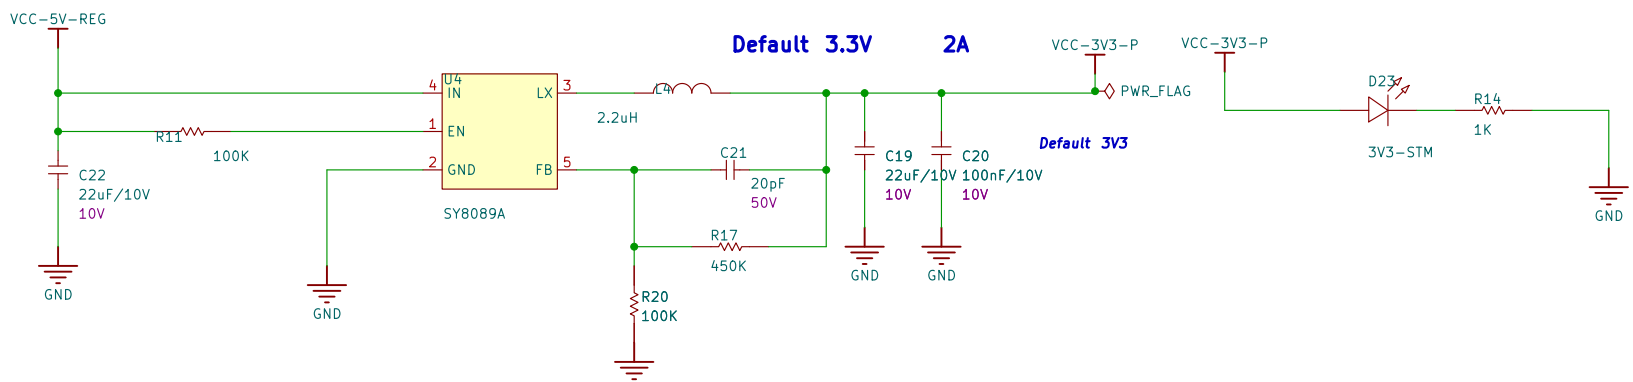


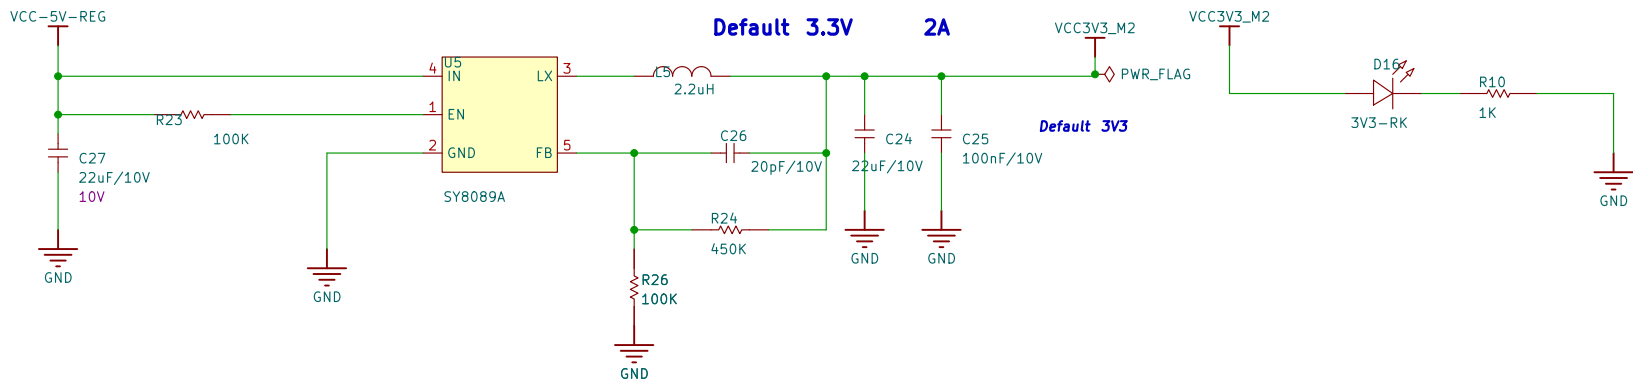

POWER MANAGMENT

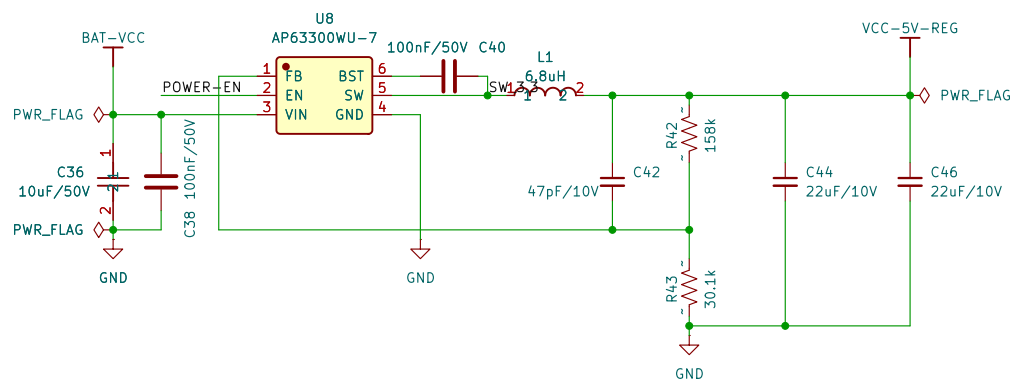


STM-PWR-CTRL need to use for both EN and OFF from STM32 GPIO pin.
1- Hold EN to HIGH after buttone pressed
2- OFF board

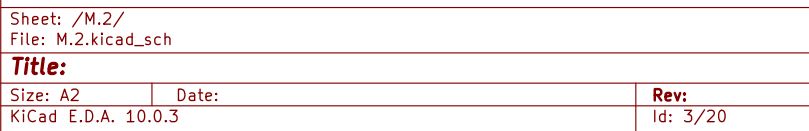



2x VL53L7CX

2 SET IR EMITTERS + IR RECEIVERS


ANTI FALL SENSORs

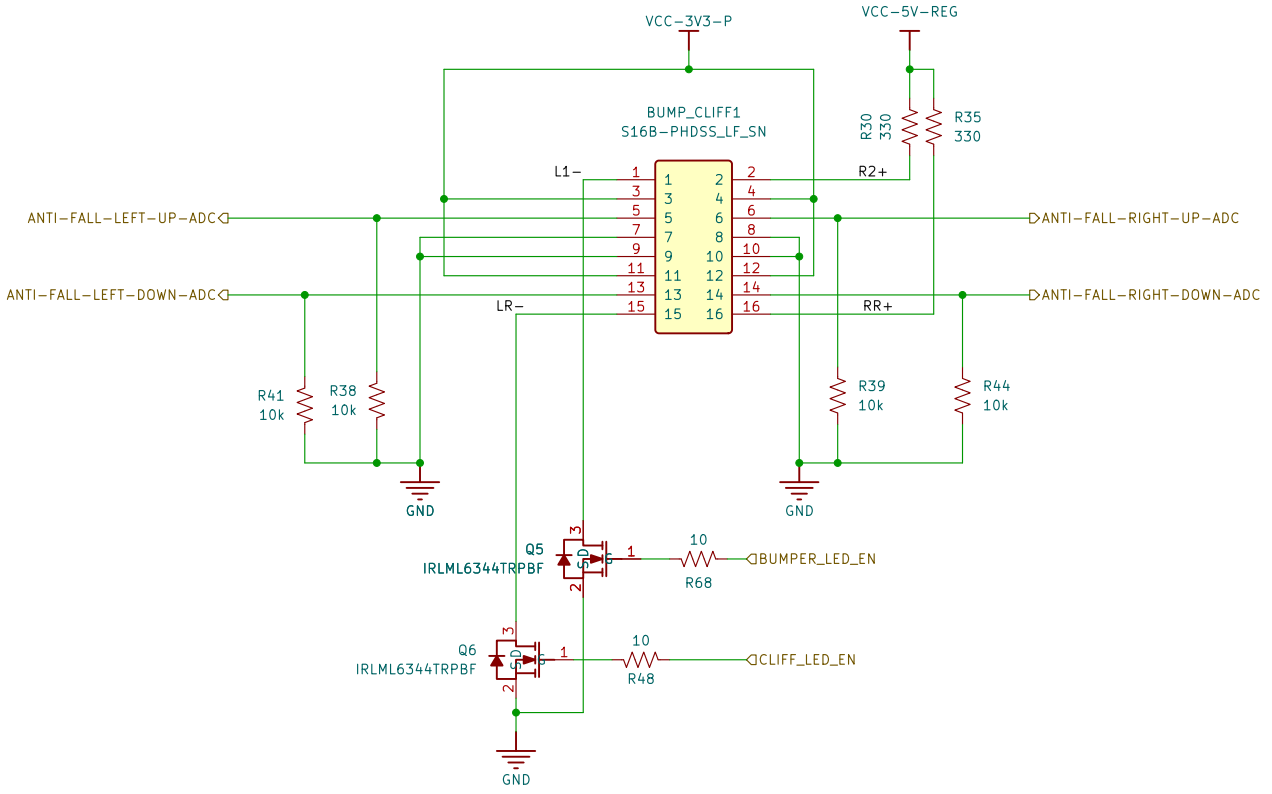


SIDE PROXI IR SENSORS

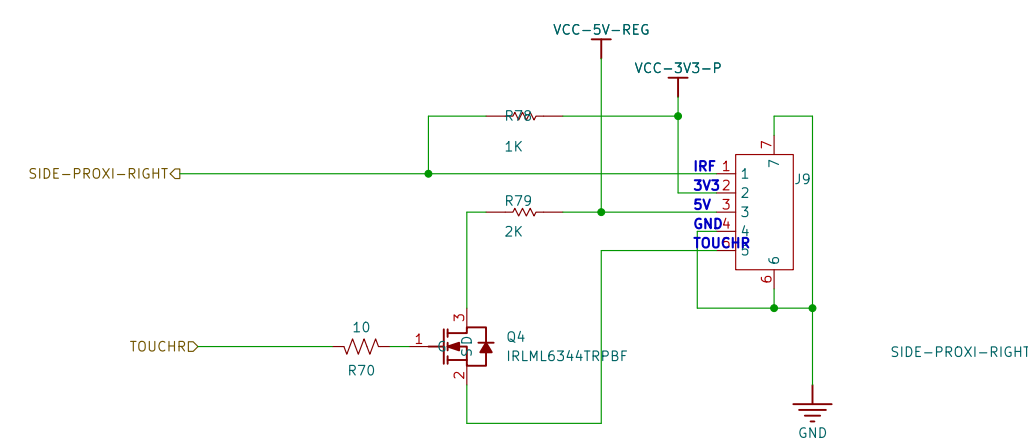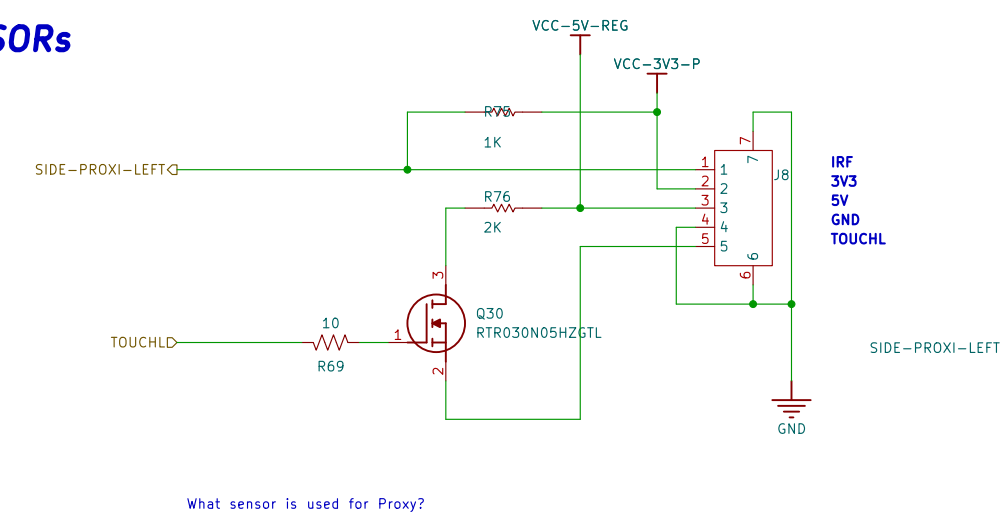


WATER PUMP MOTOR CONTROL

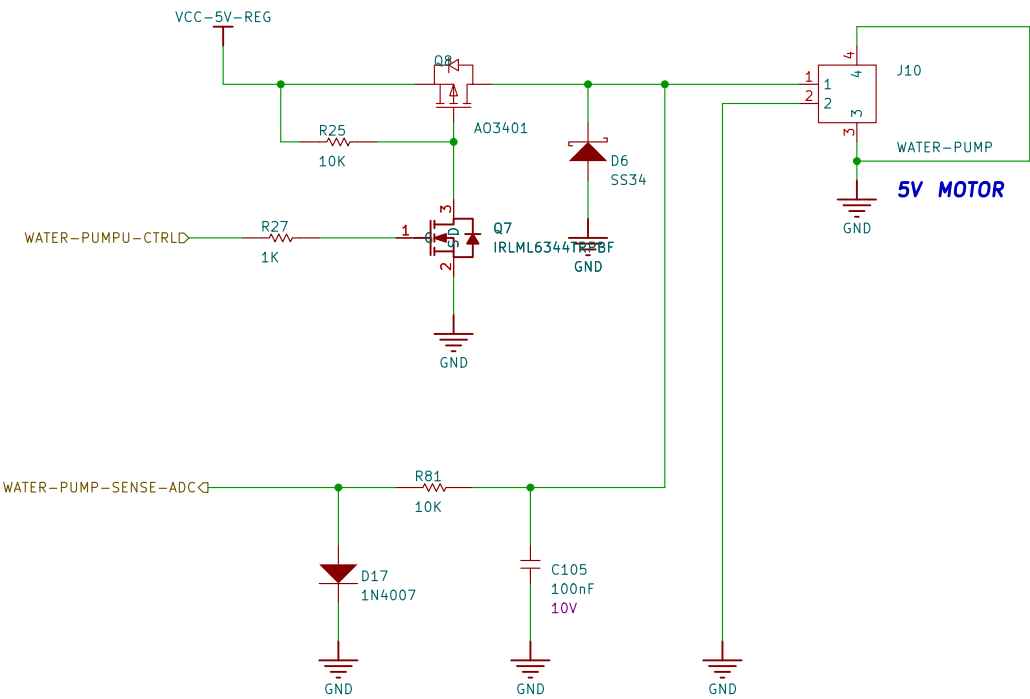


MAIN BRUSH MOTOR CONTROL

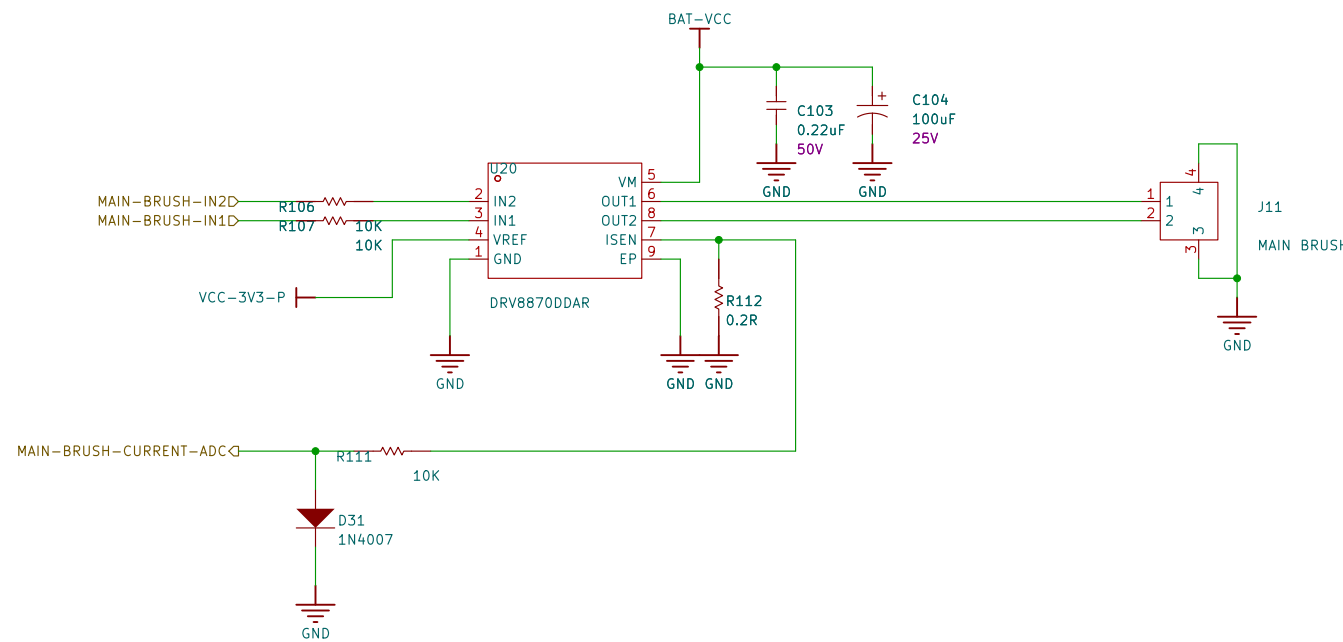


WHEEL MOTOR CONTROL

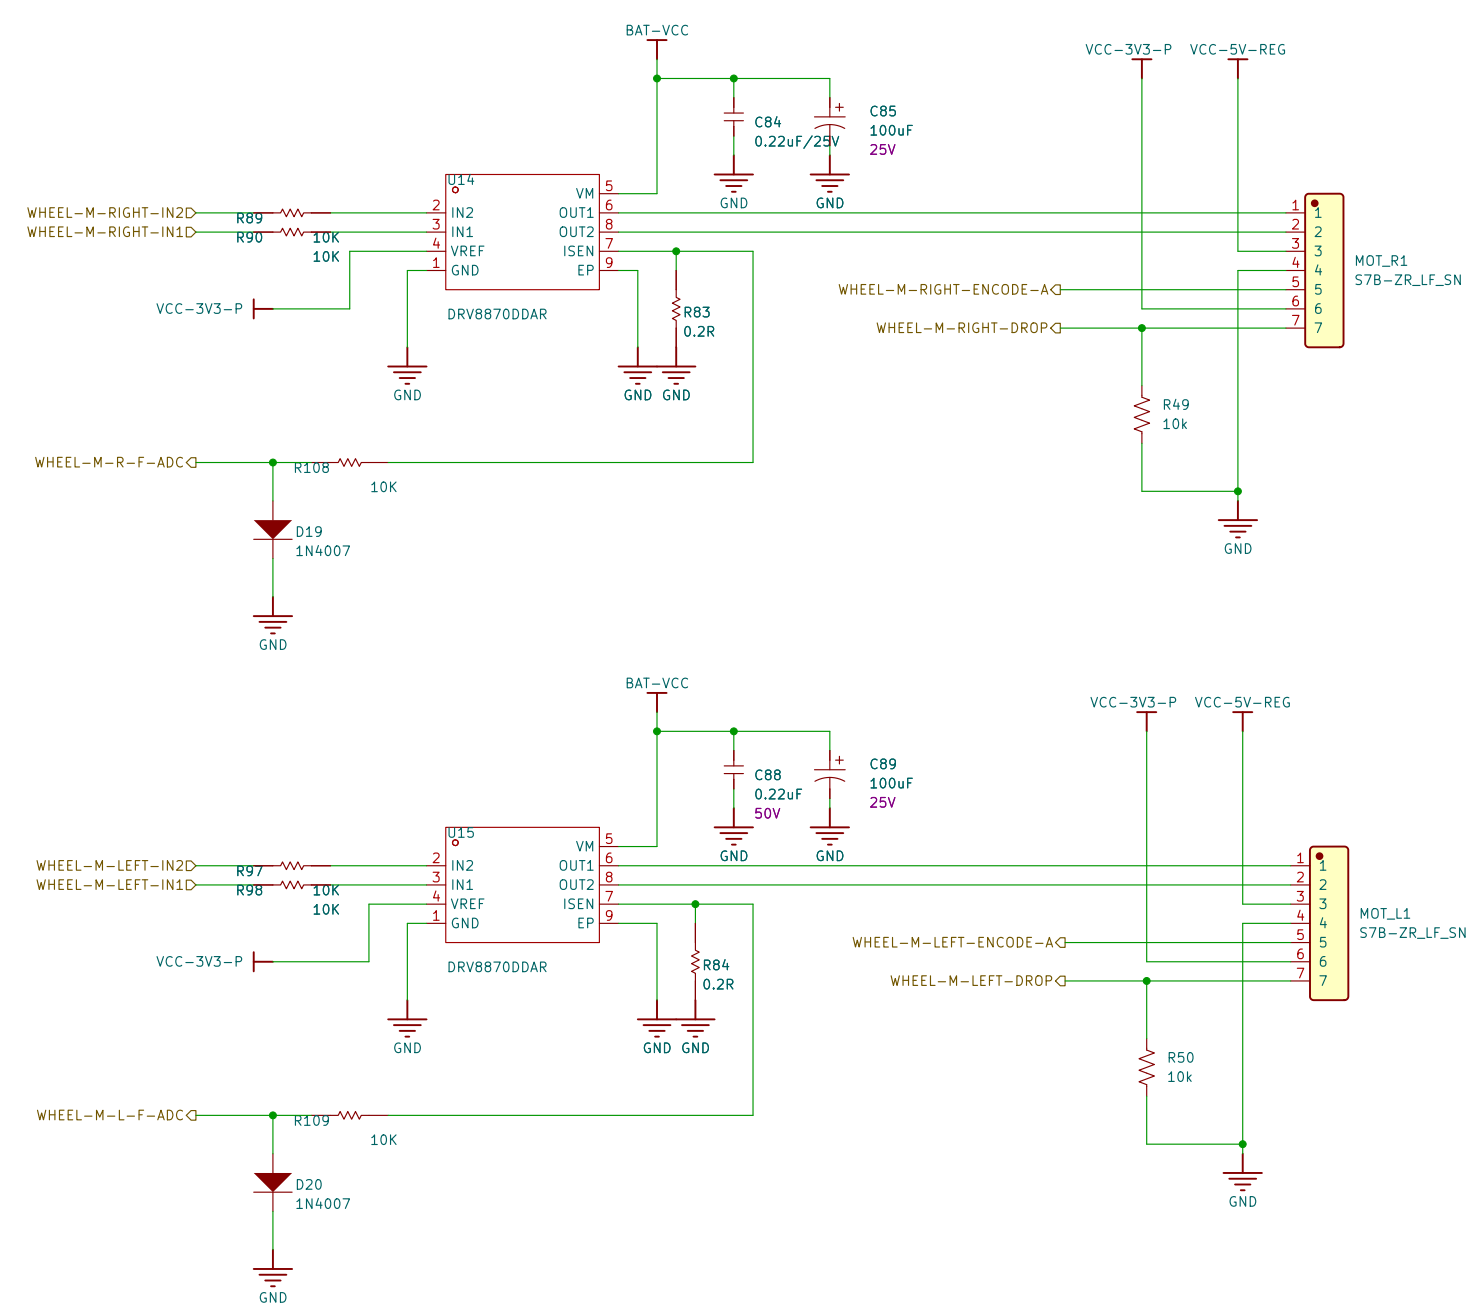


MAIN FAN CONTROL

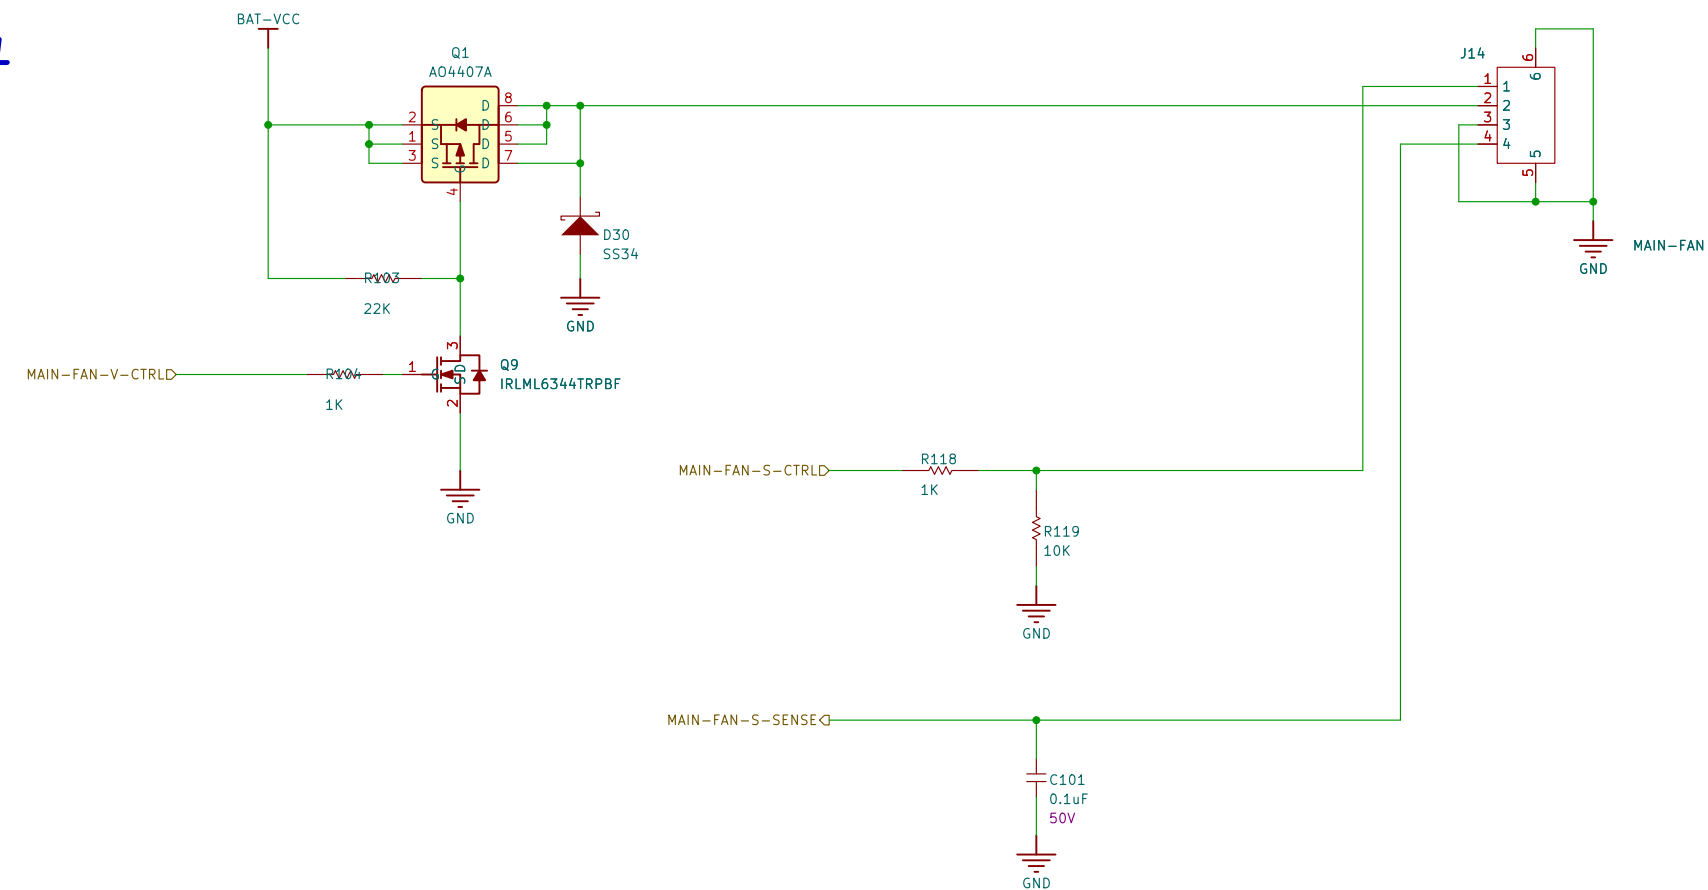



SIDE-BRUSH MOTOR CONTROL

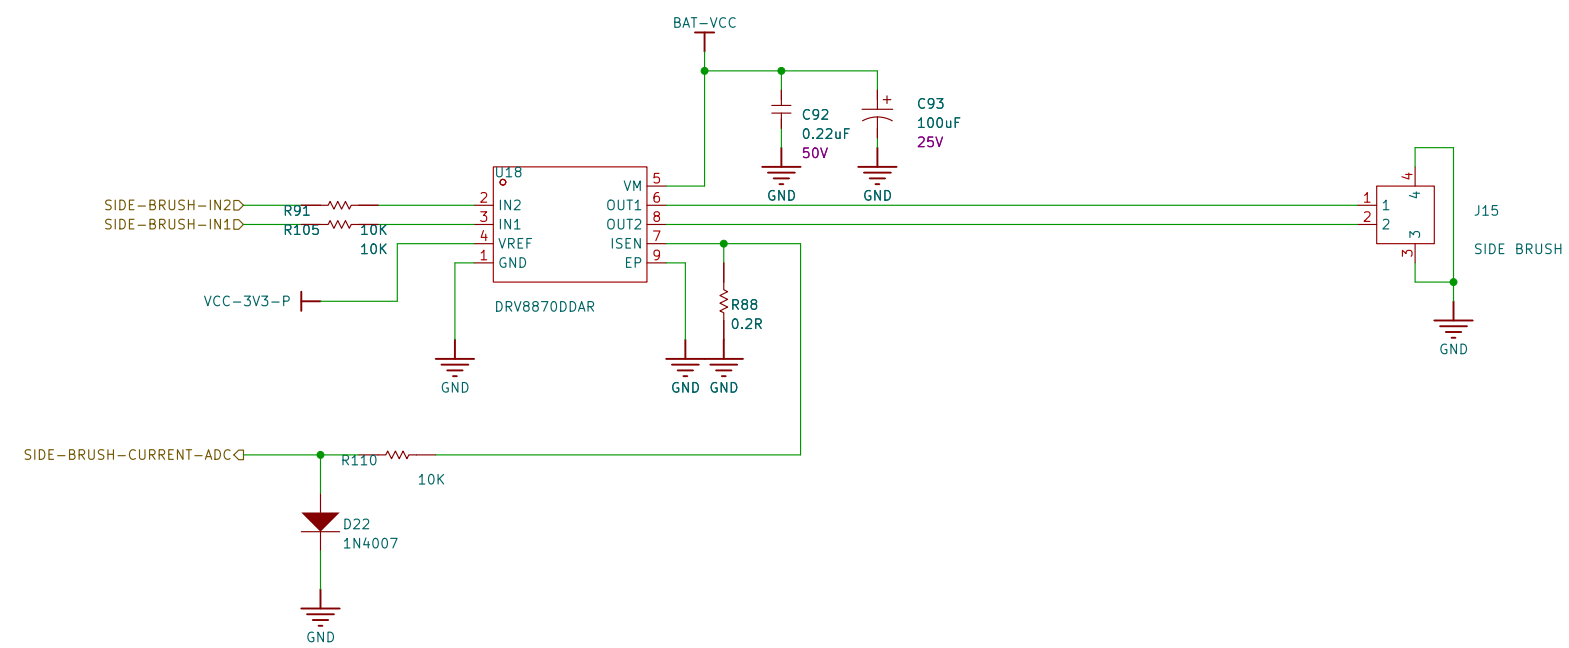

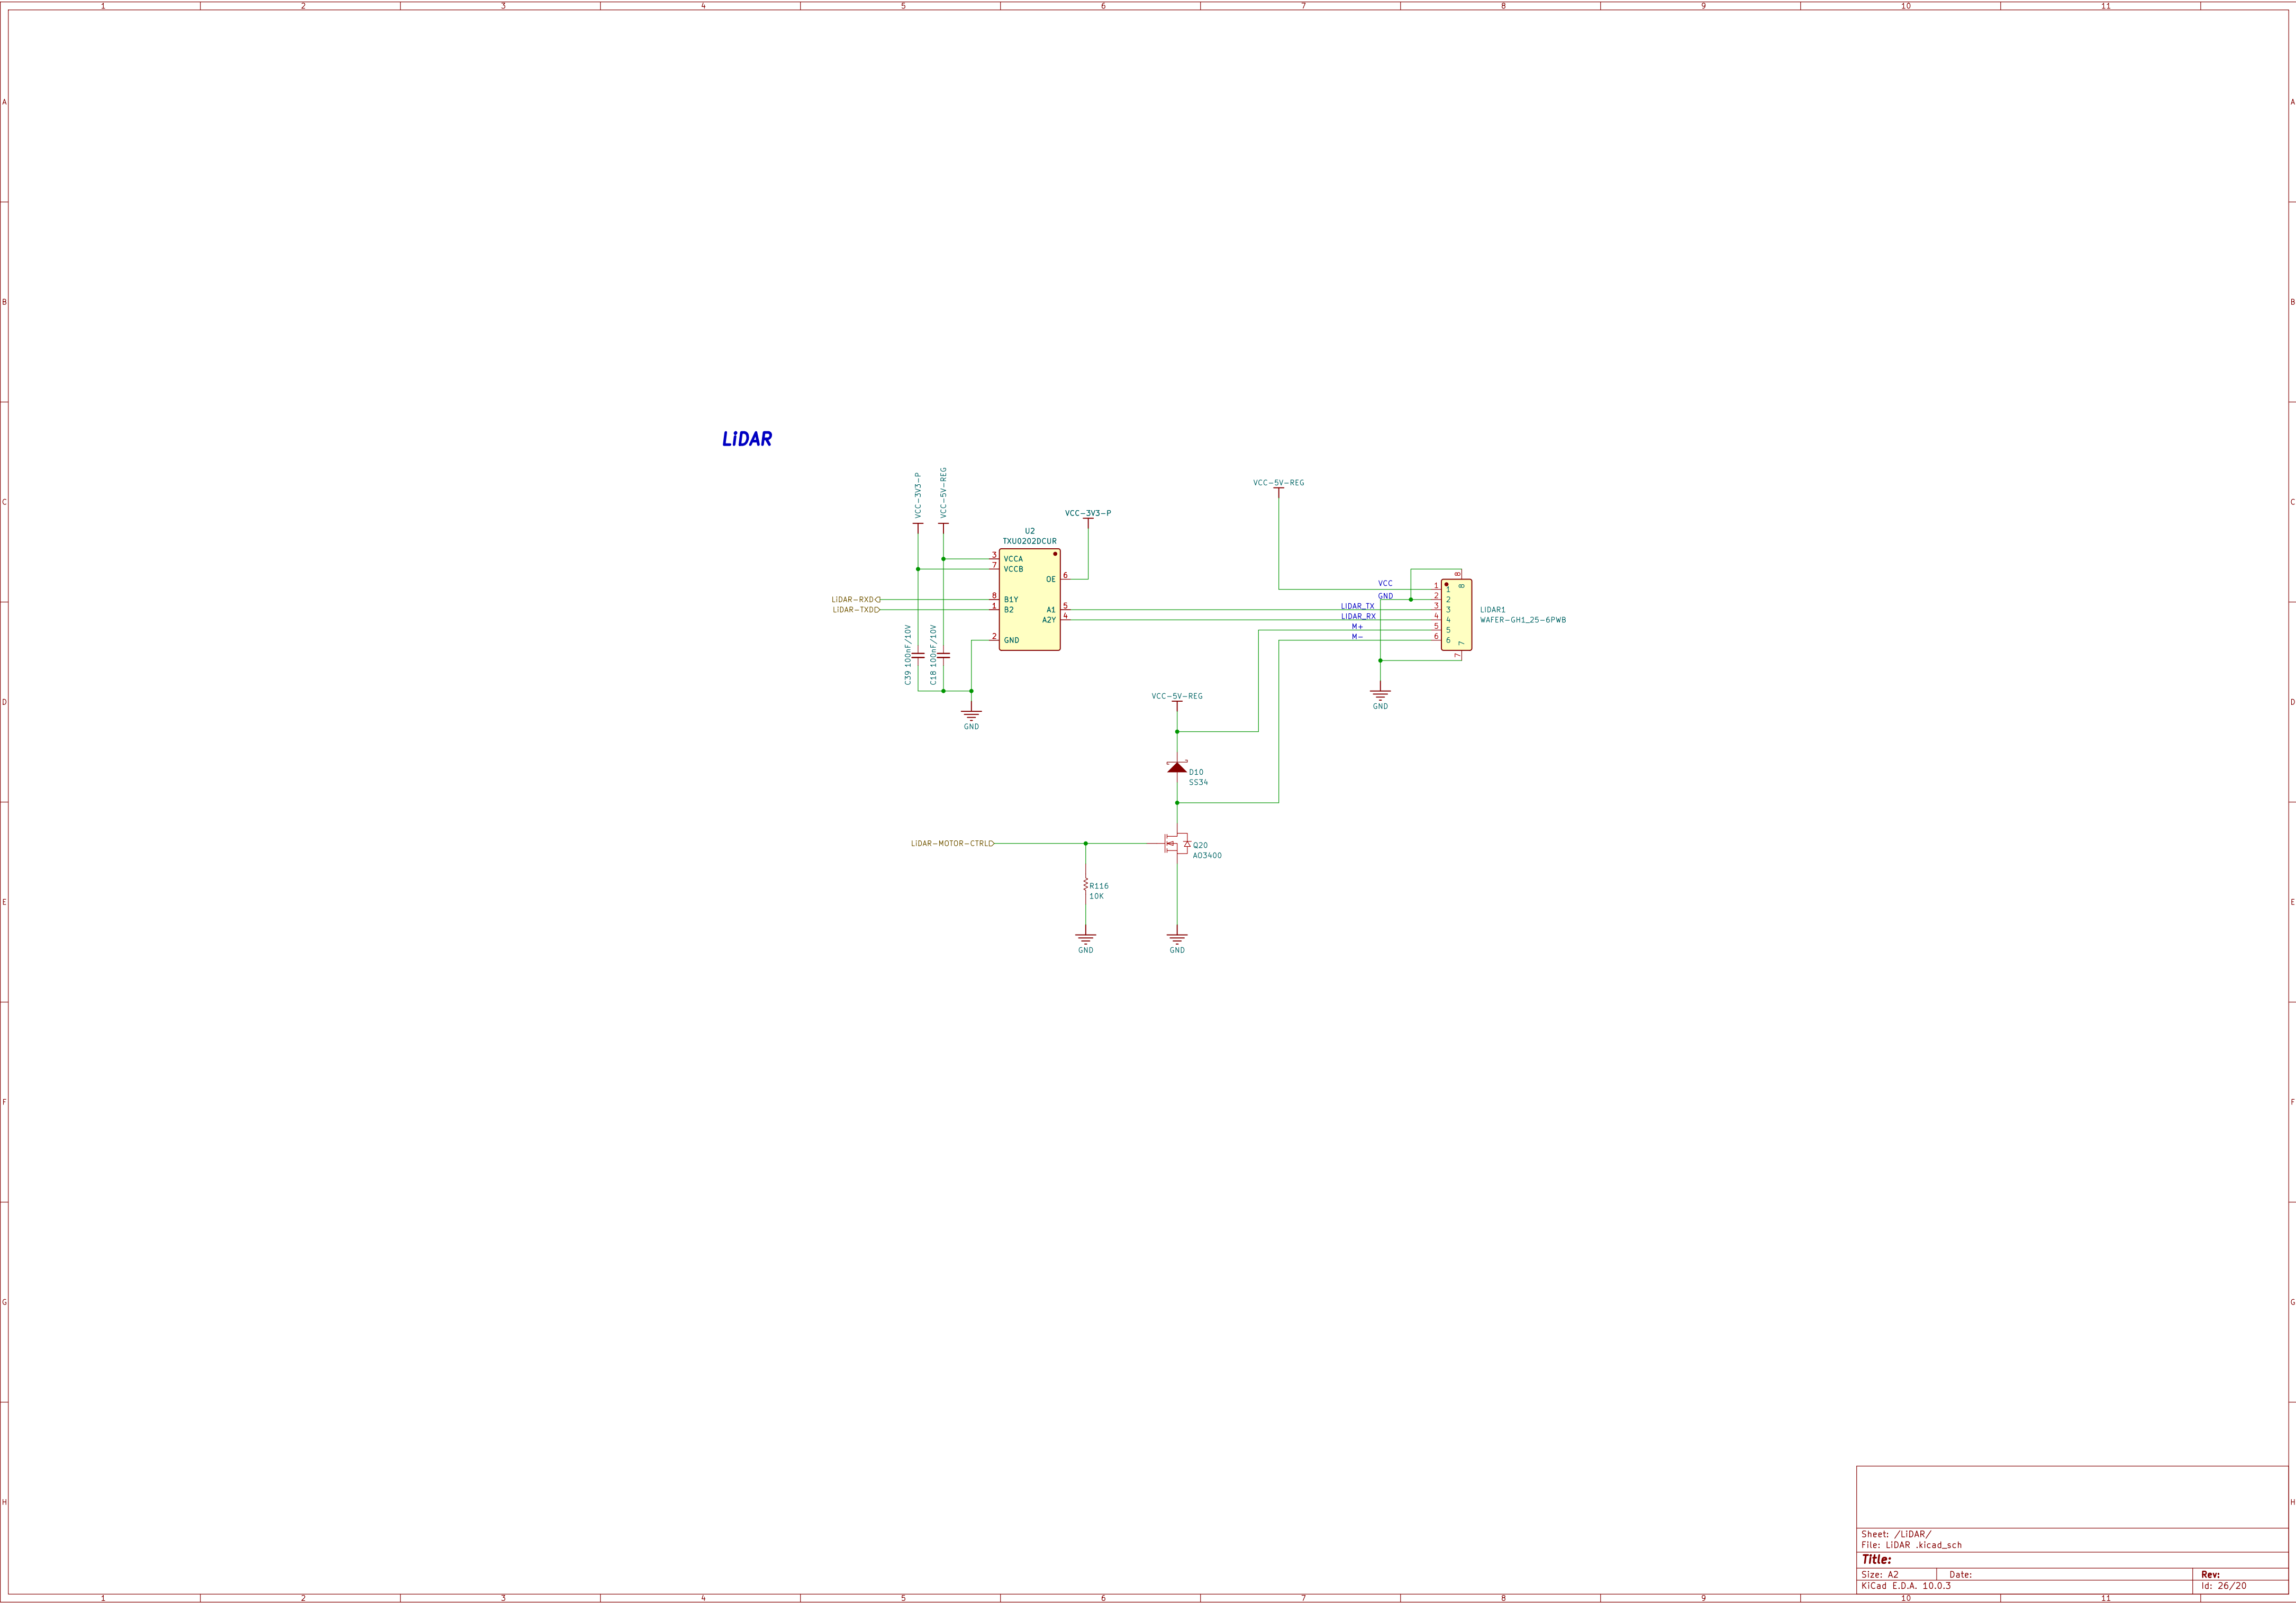


SPEAKER **MIC**


Microphone Input

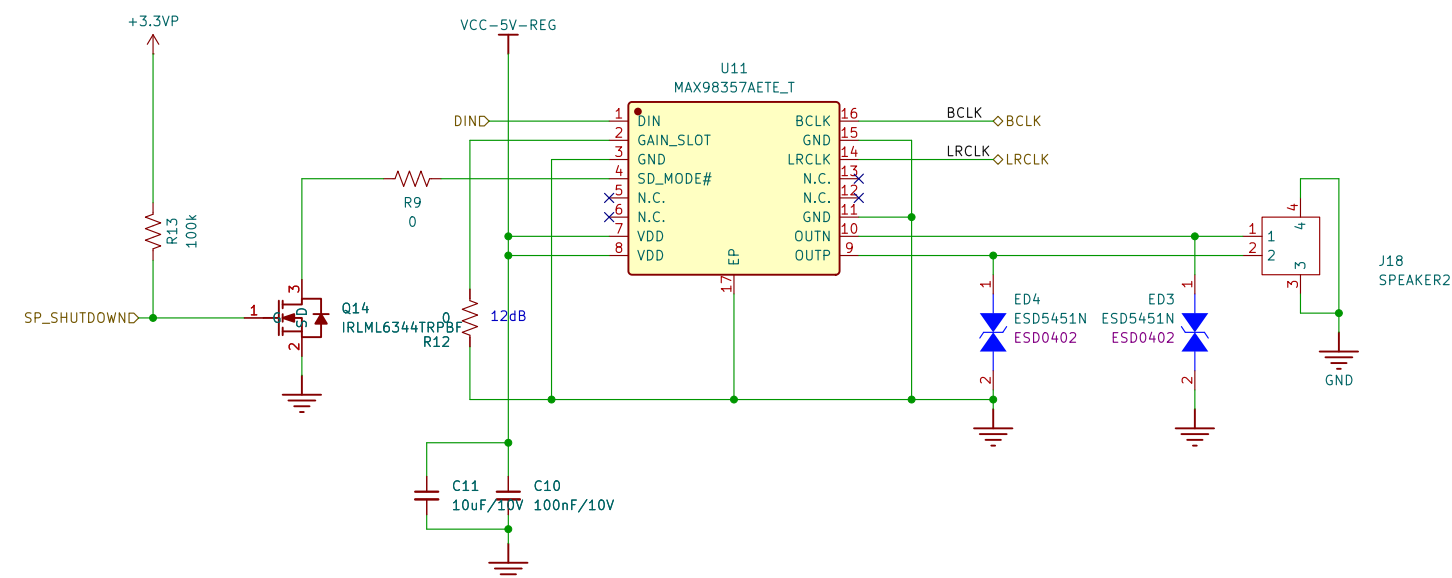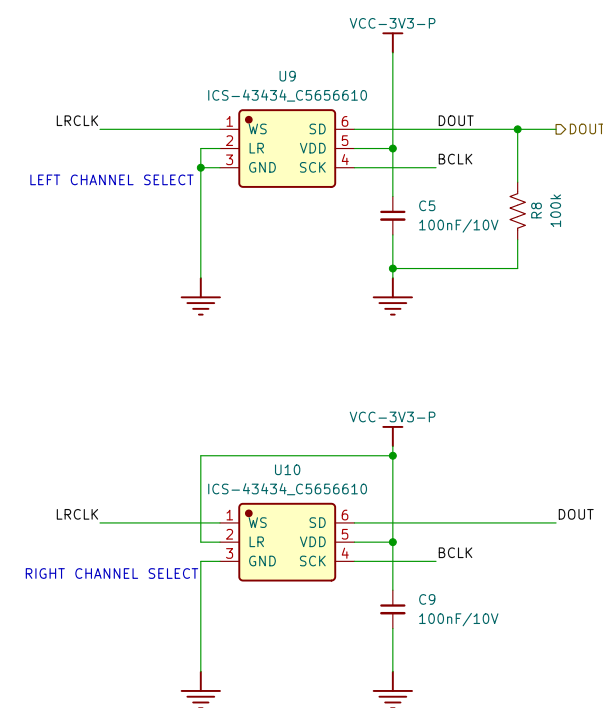


LEDs AND BUTTONs

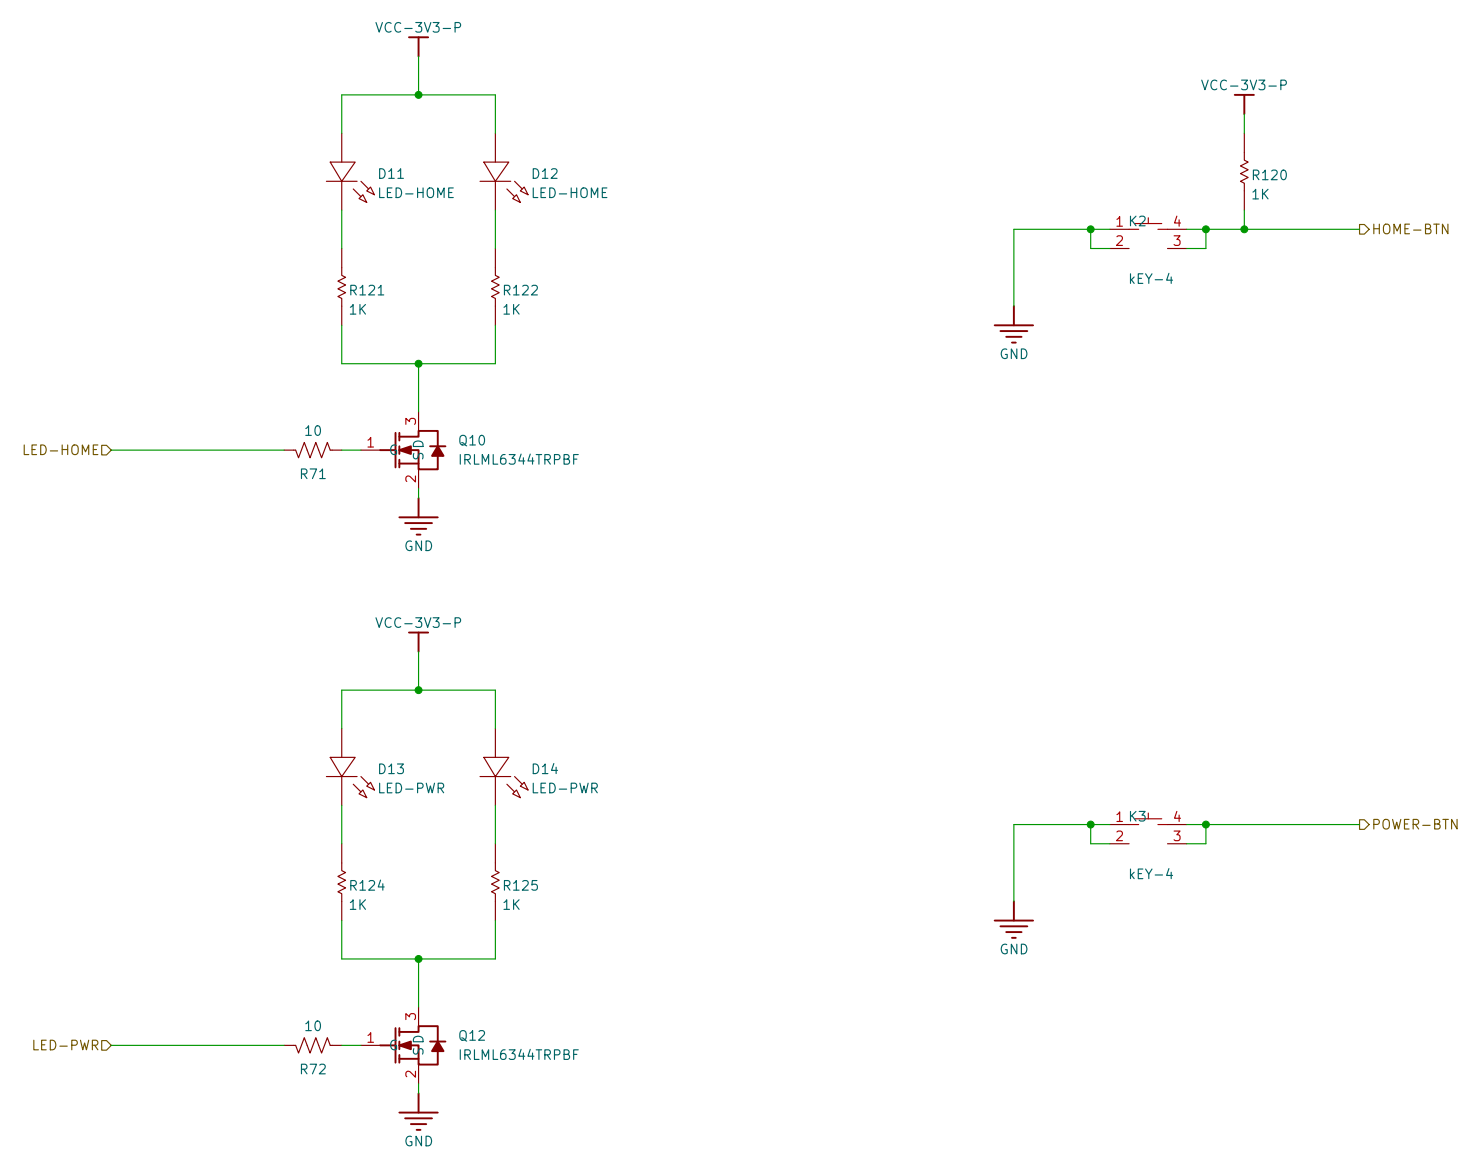


MIPI Cameras
2 lanes / camera

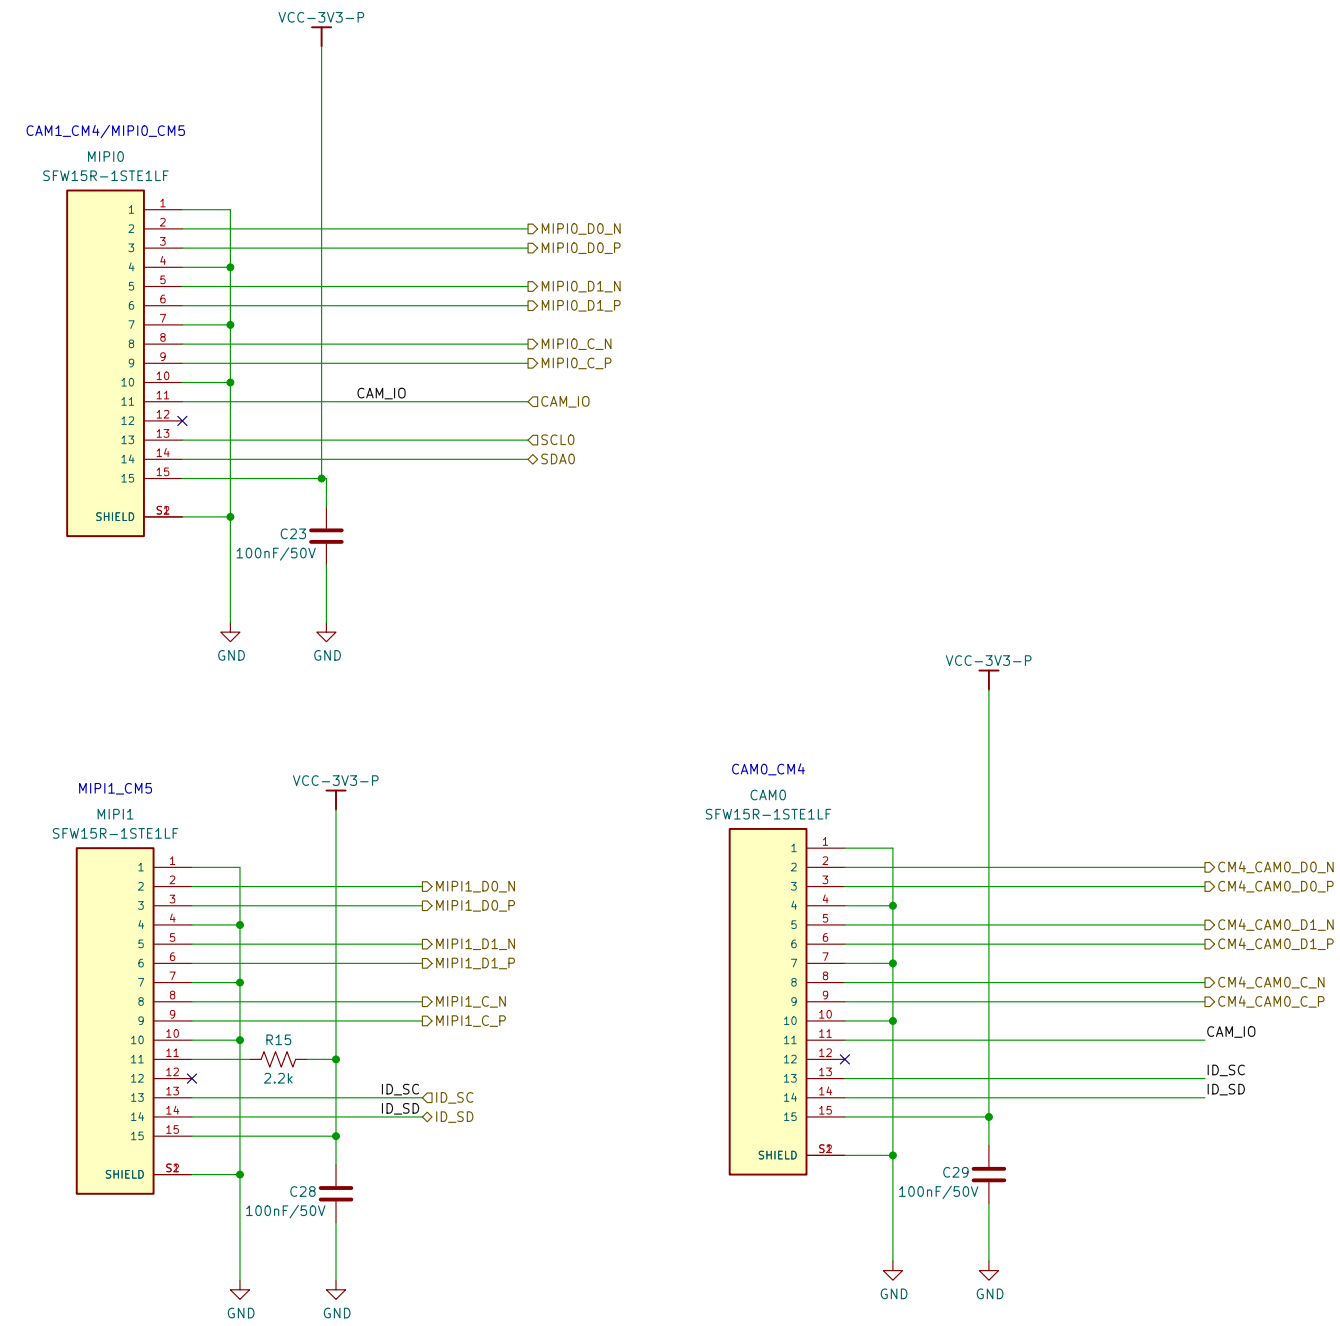


MCU STM32G473

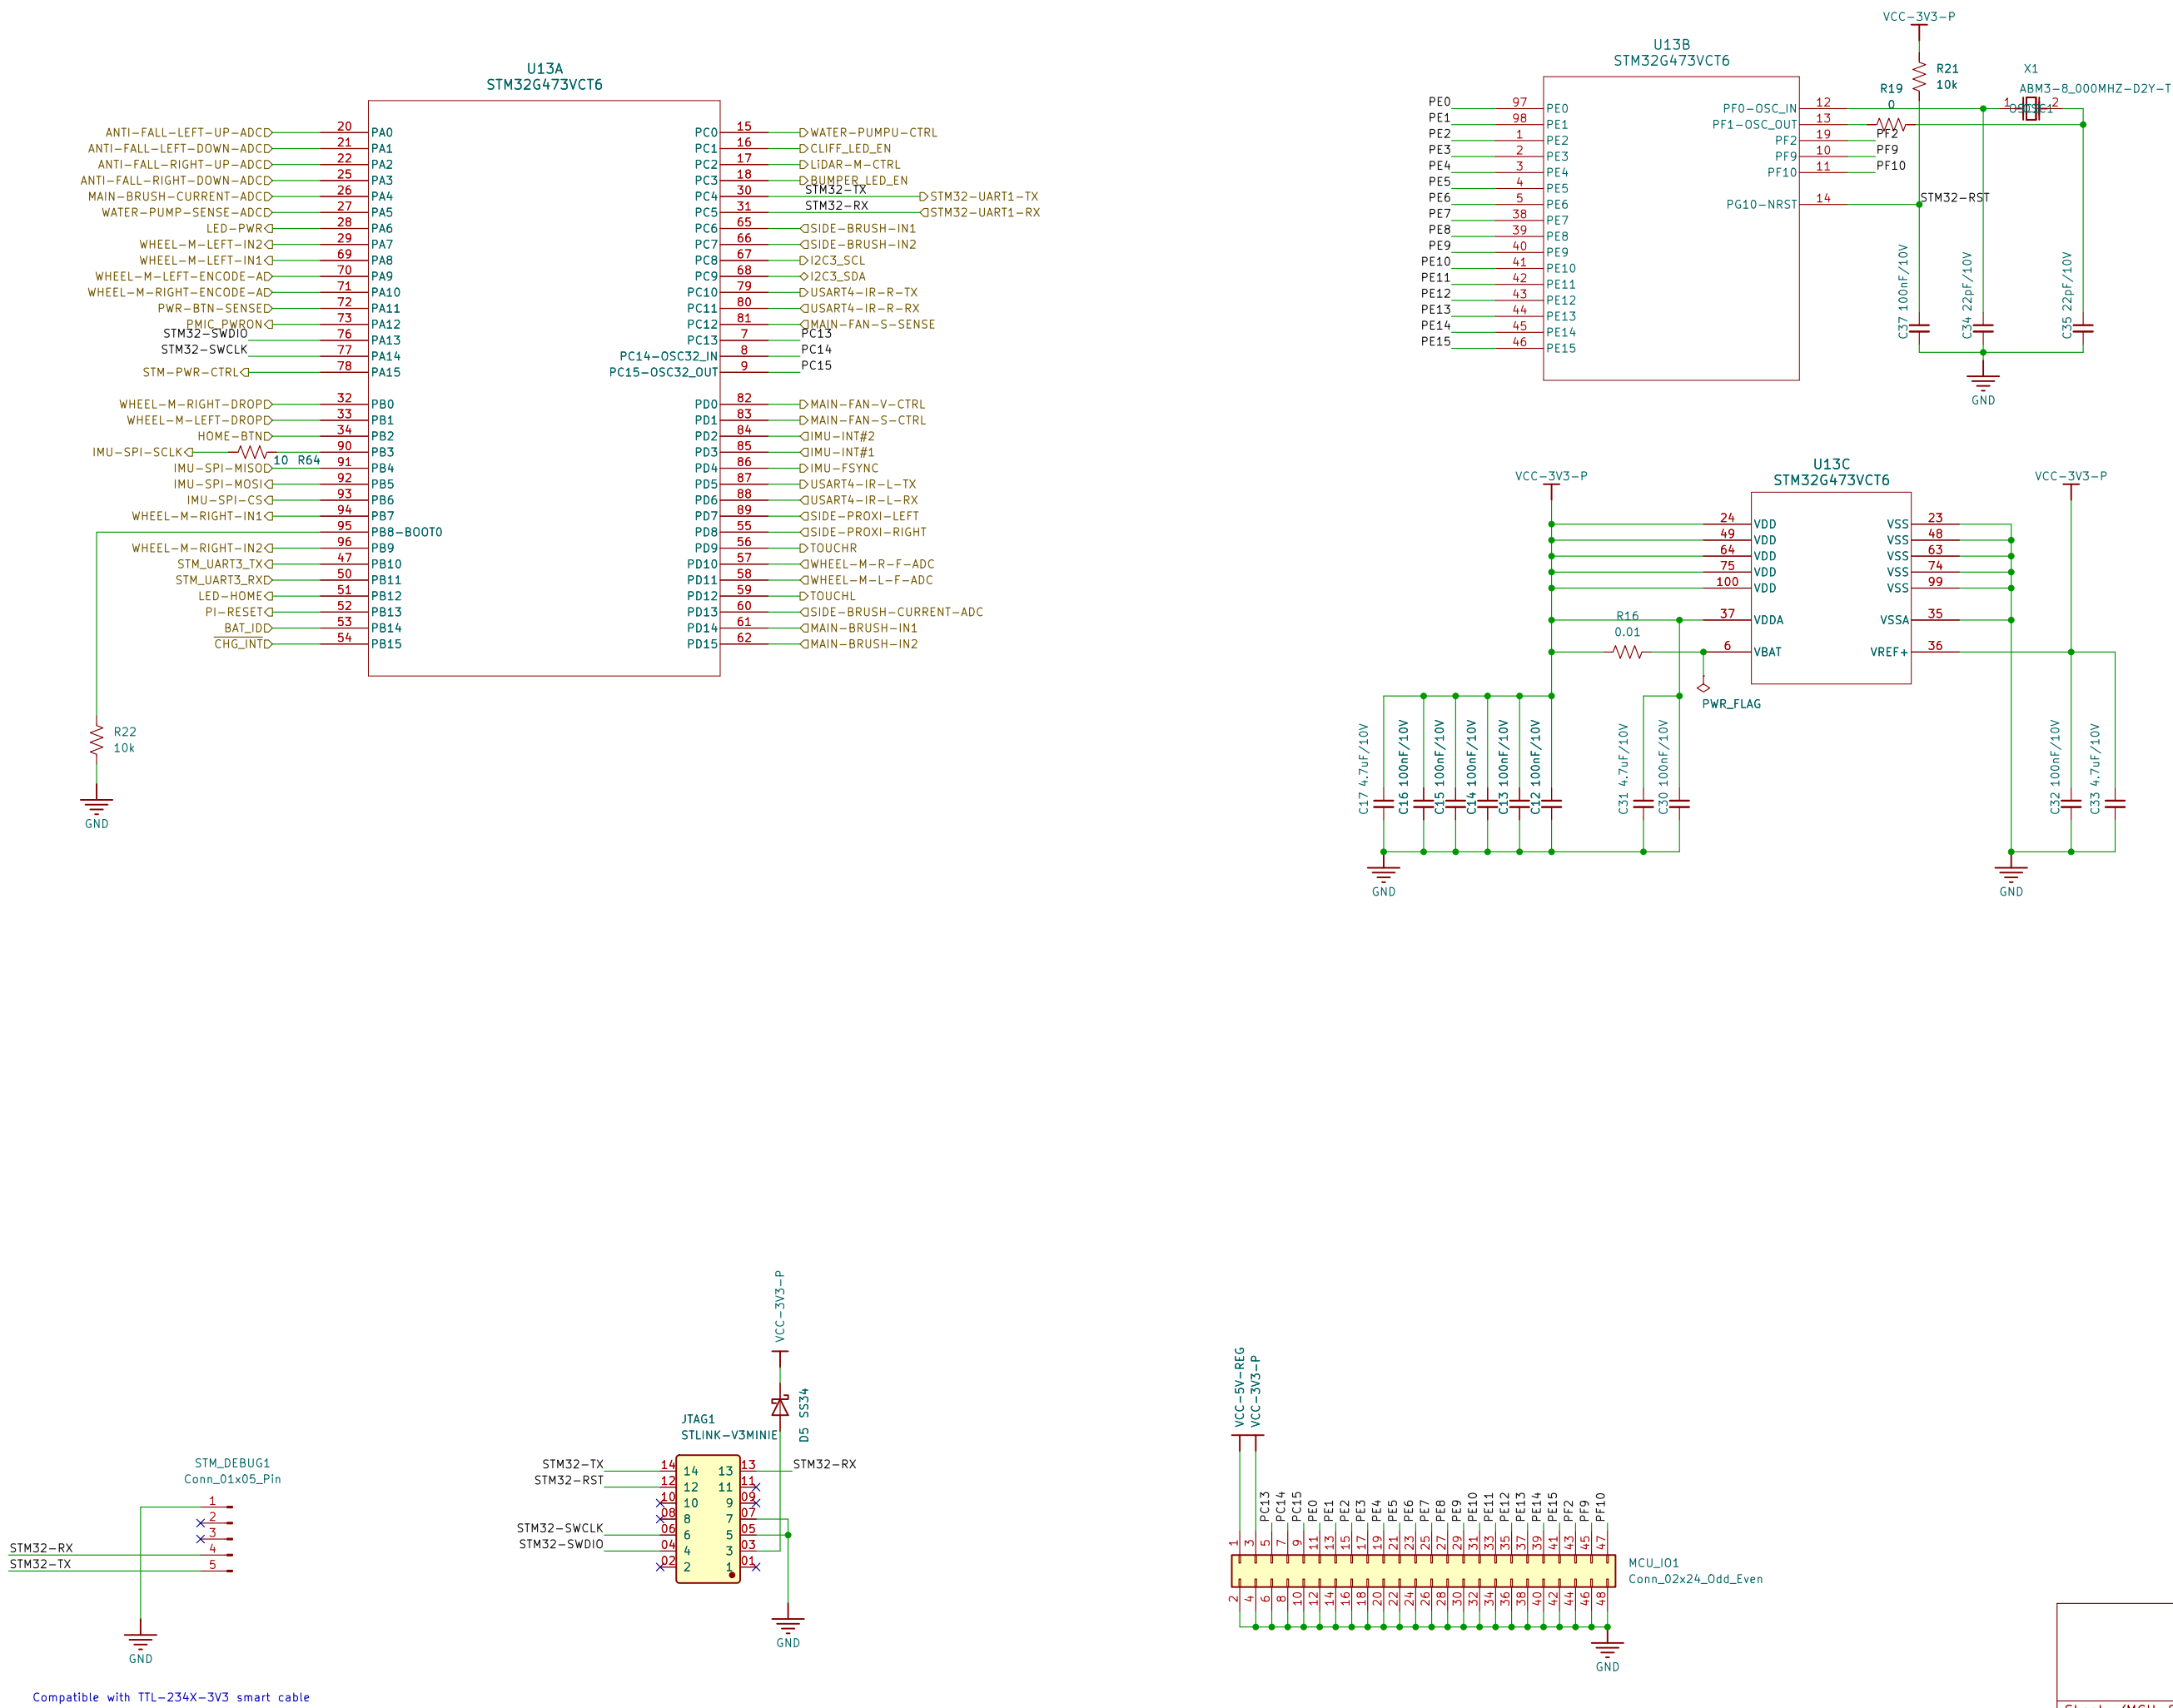


IMU-ICM-42607-P

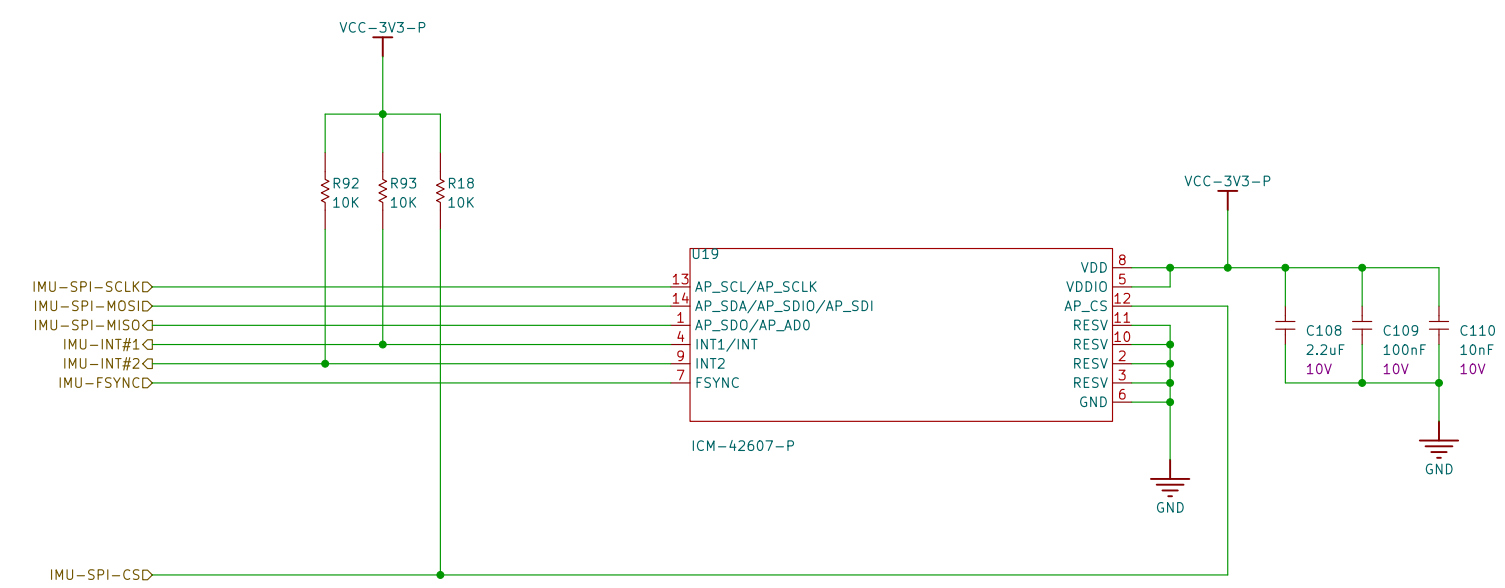

POWER DELIVERY

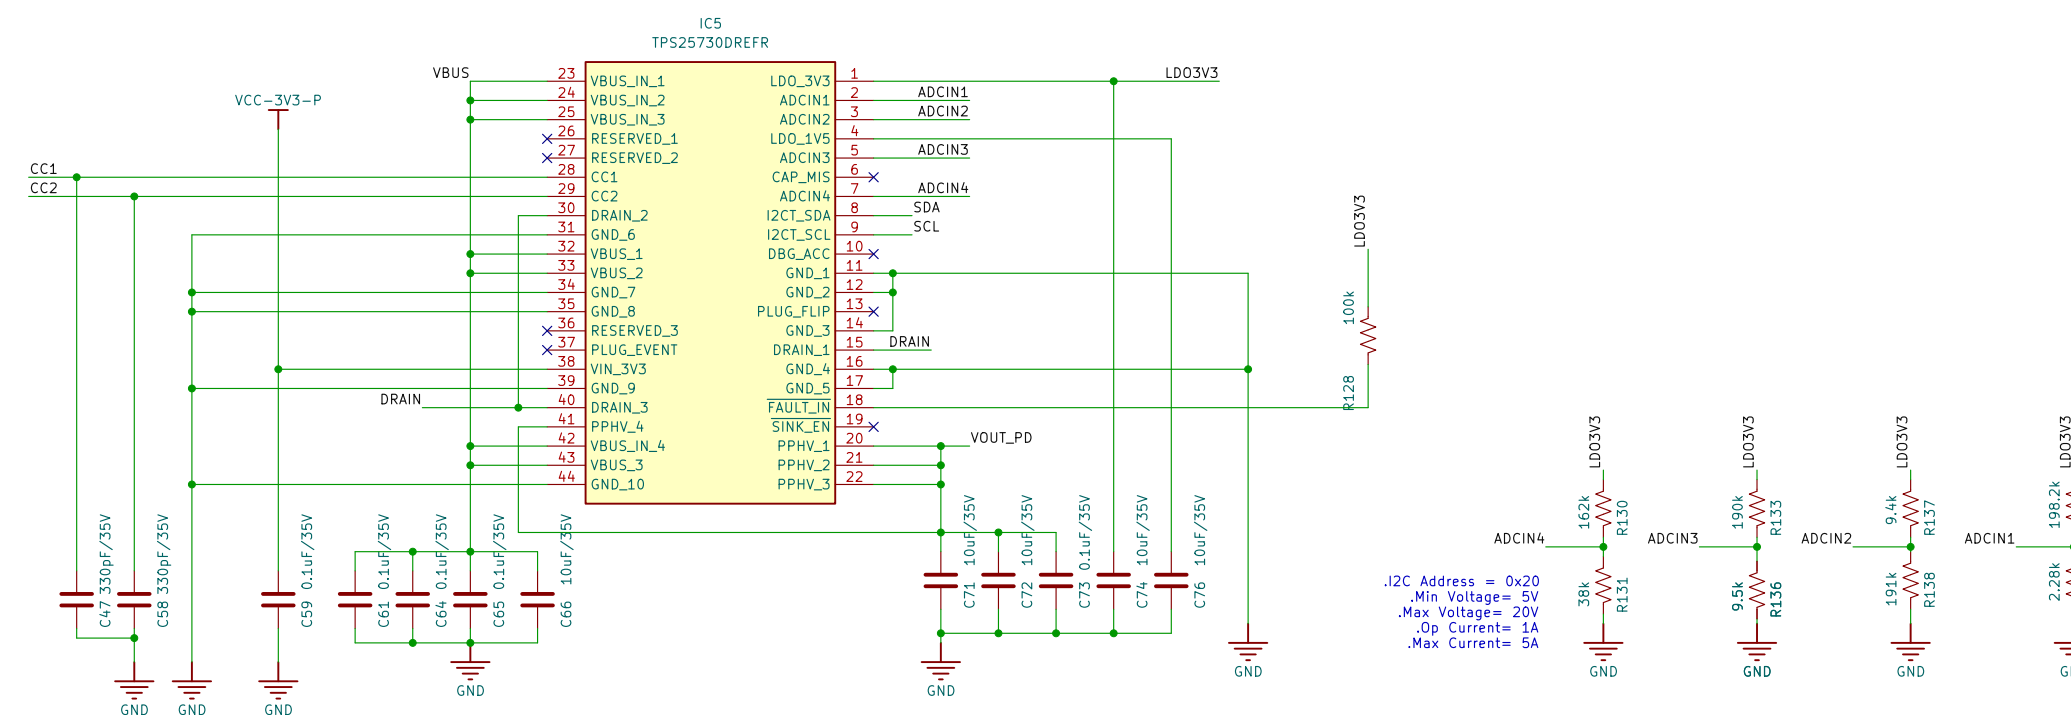


USB-C

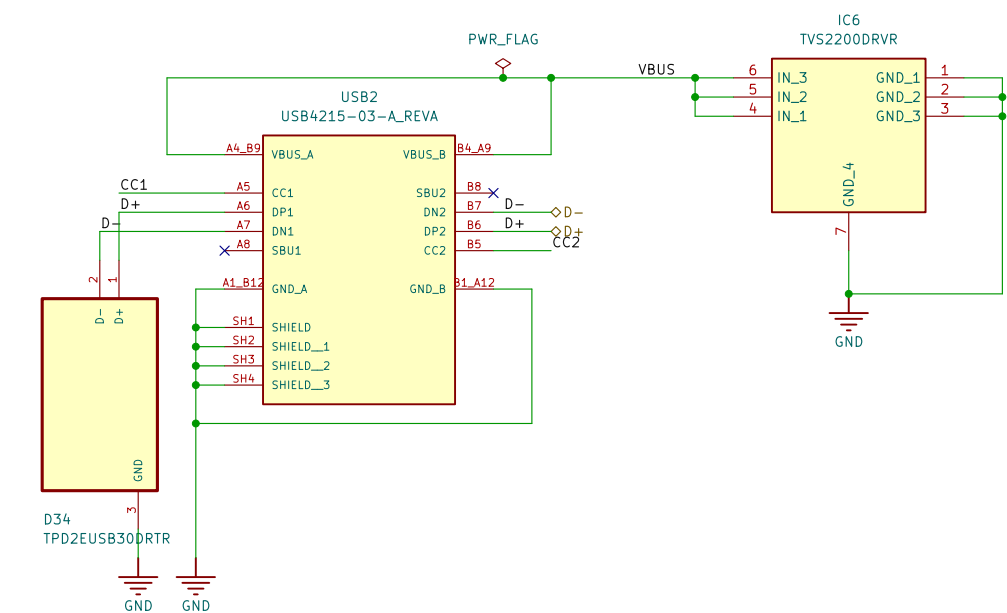

NOTE : D+ , D_ are connected to CM4/5

BATTERY CHARGER

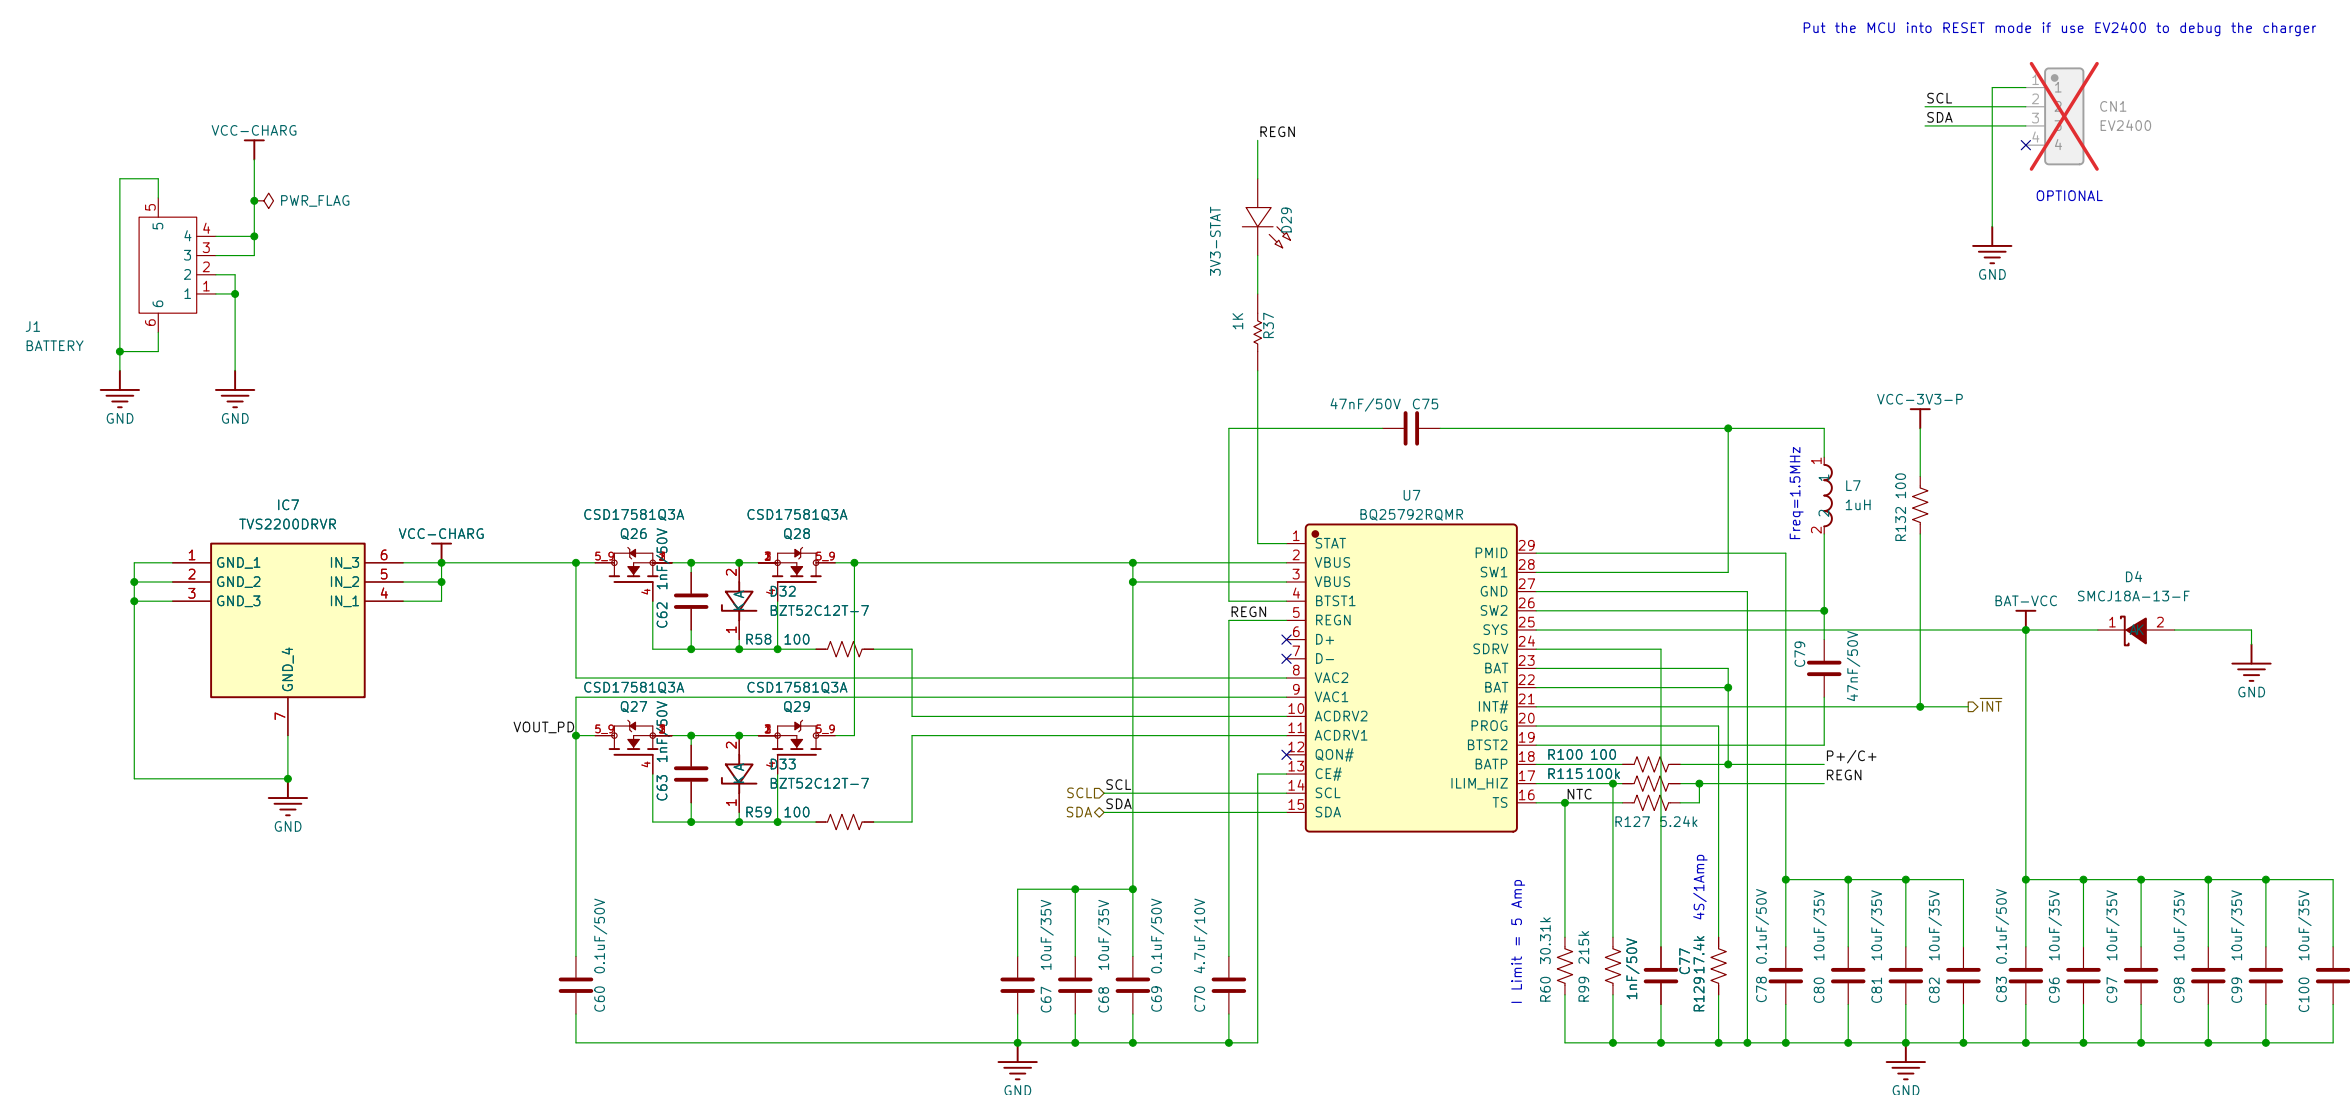

NOTE : SDA,SCL,nINT are connected to MCU

BATTERY CONNECTOR

