


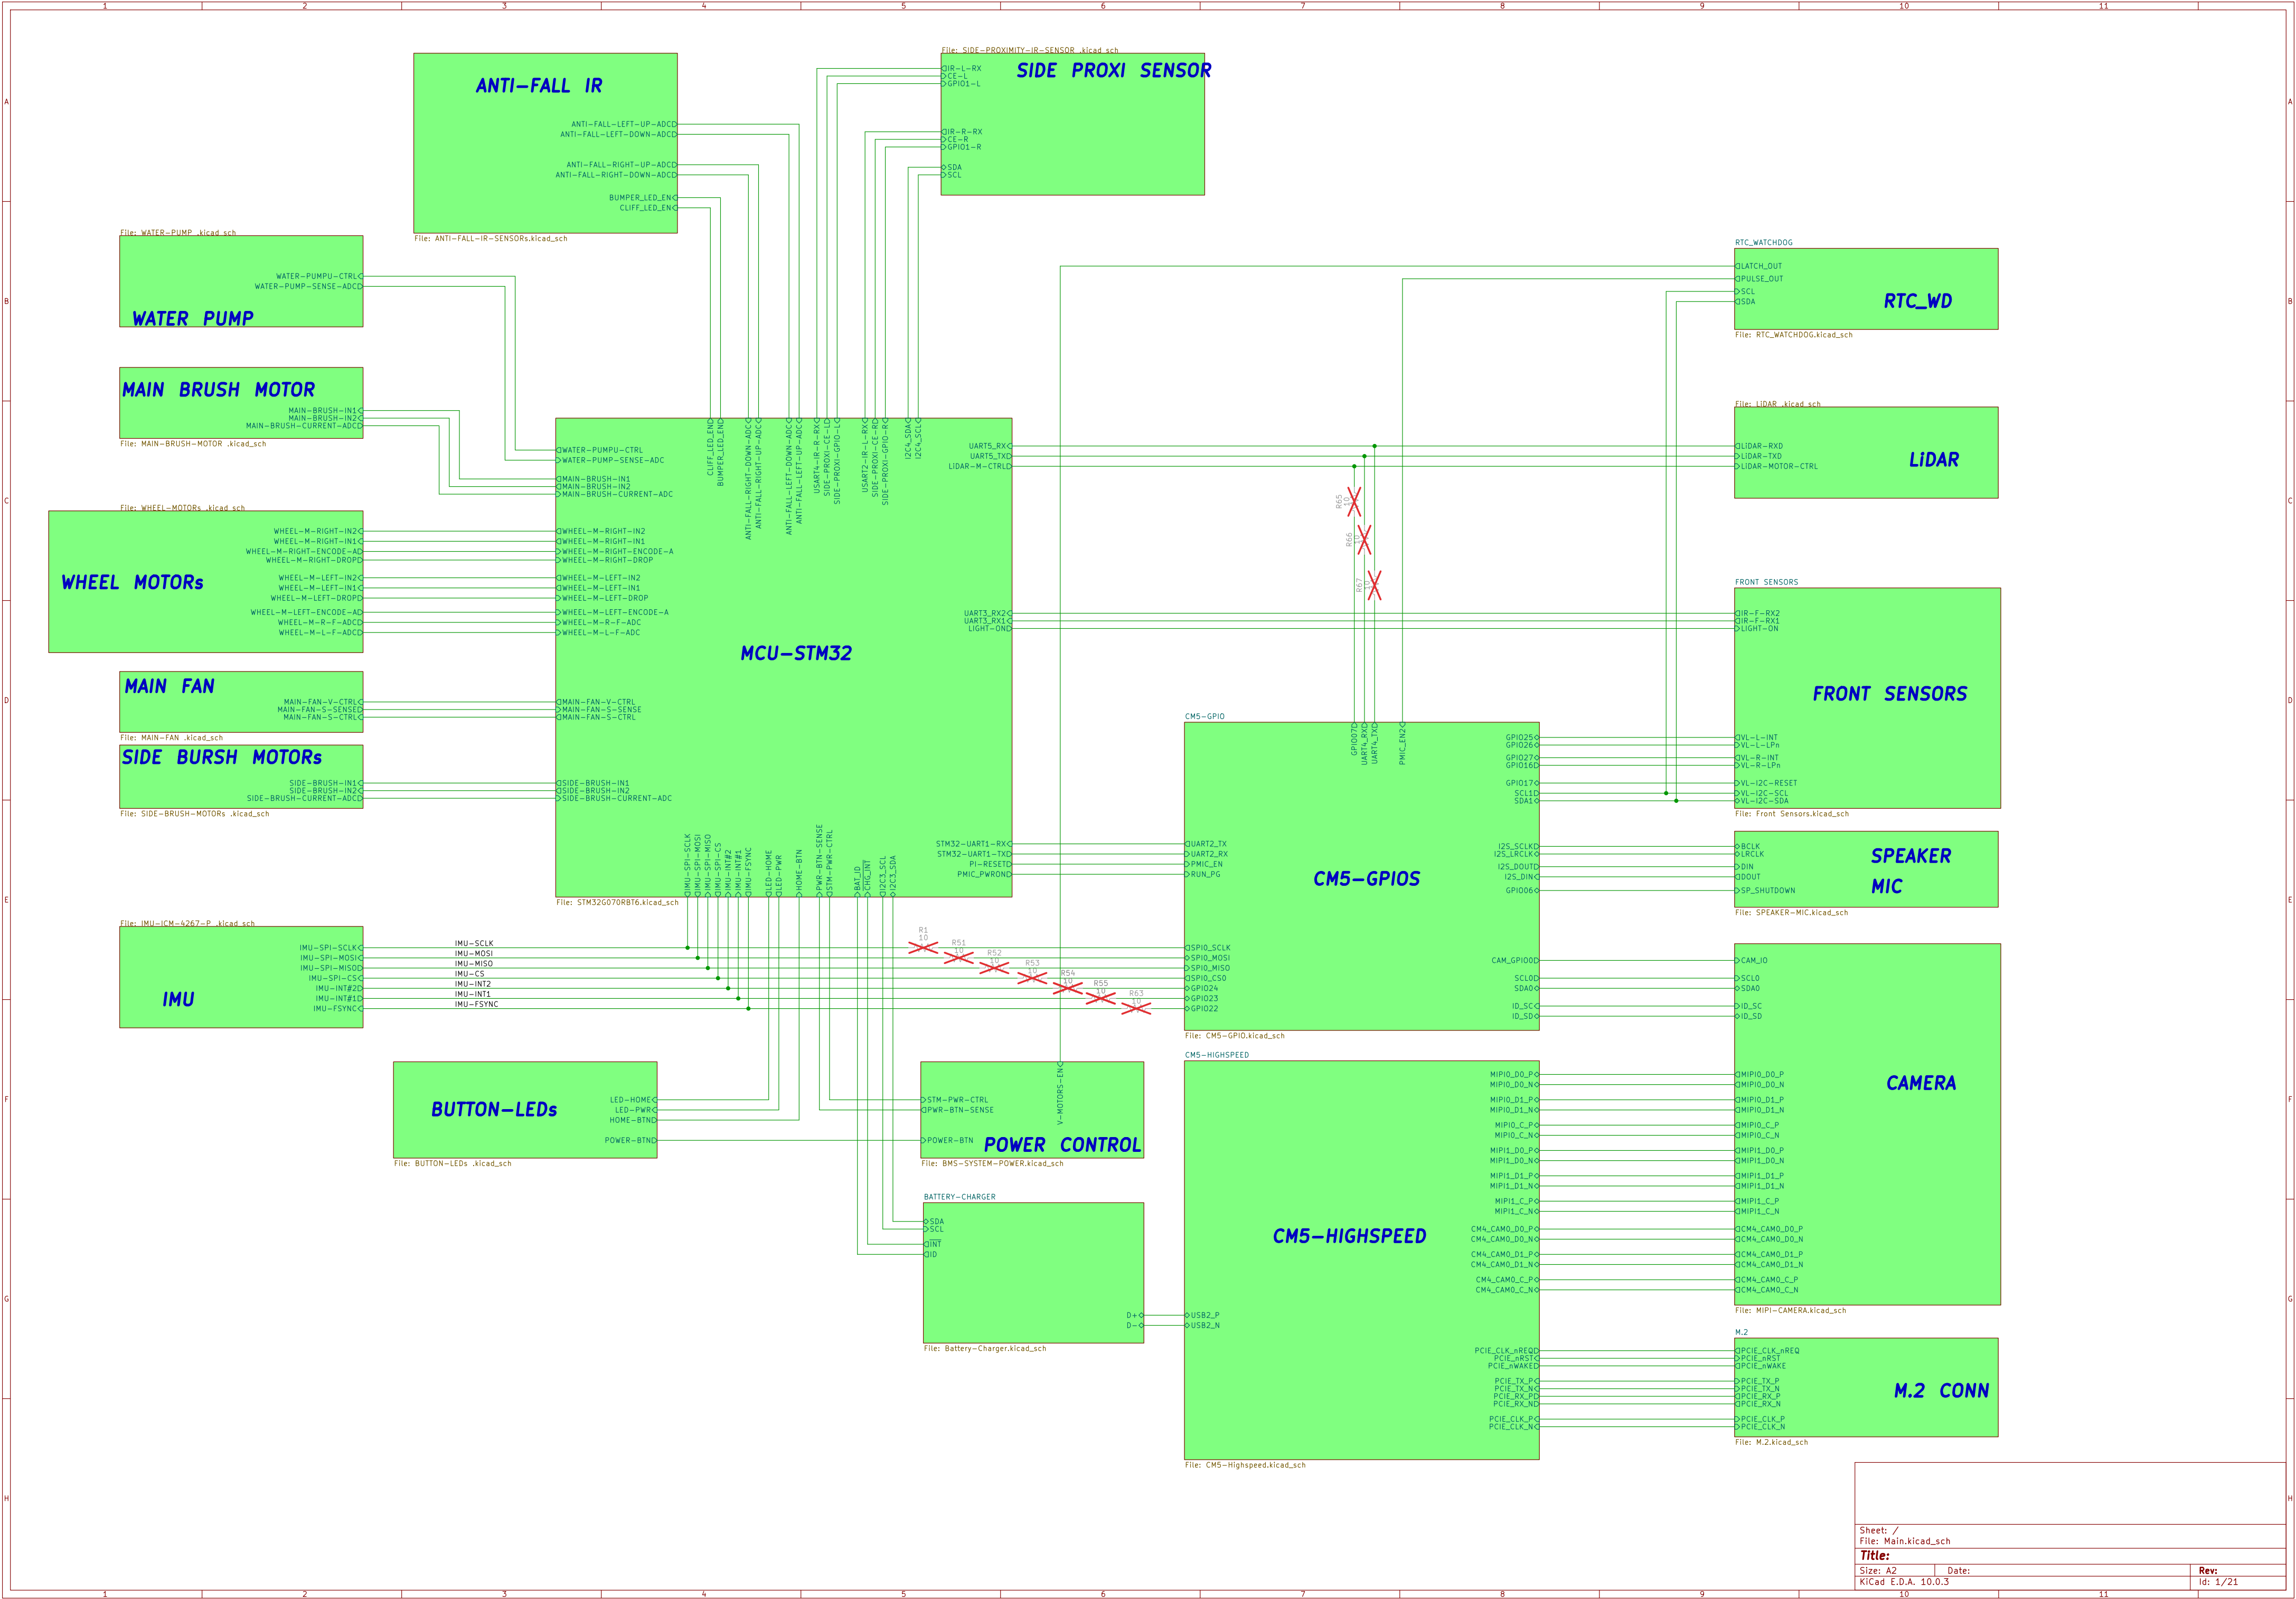
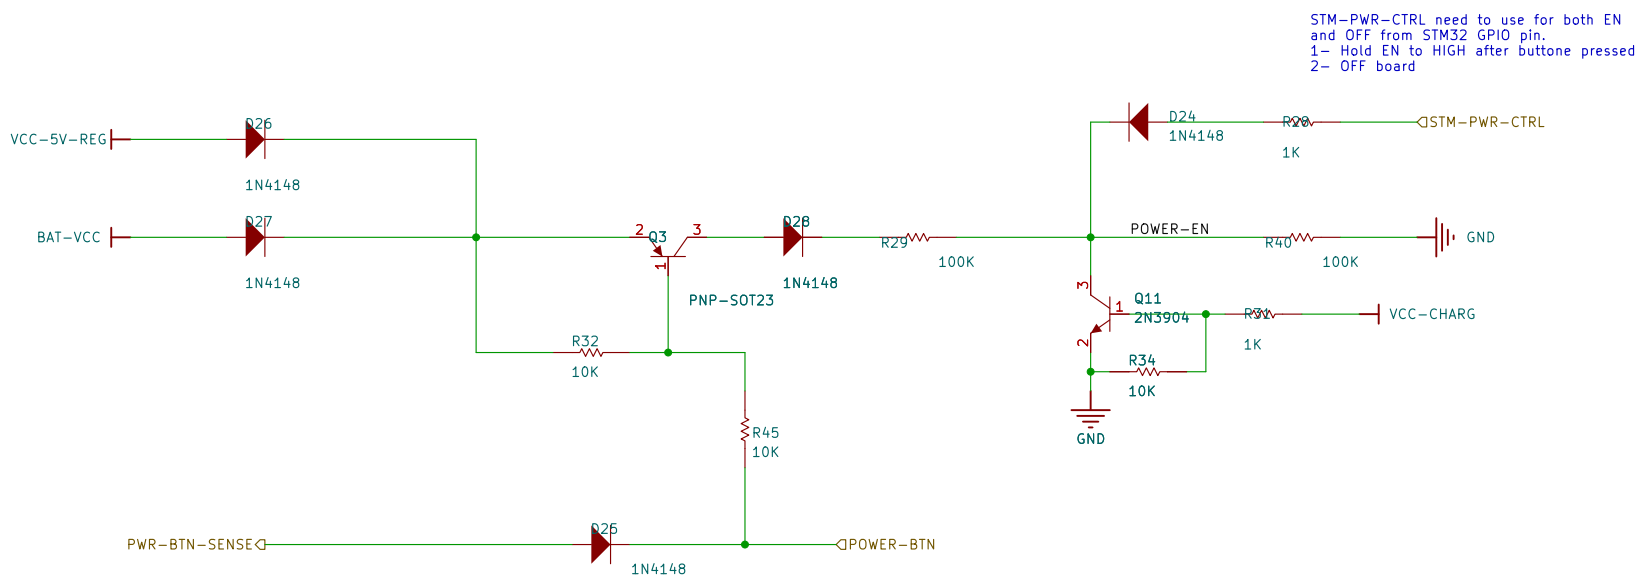
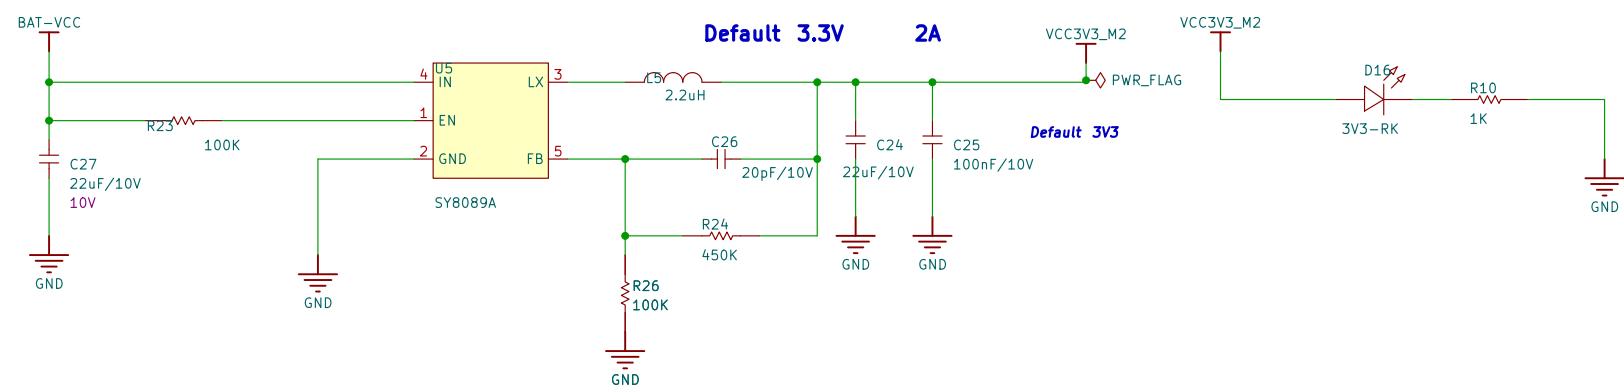


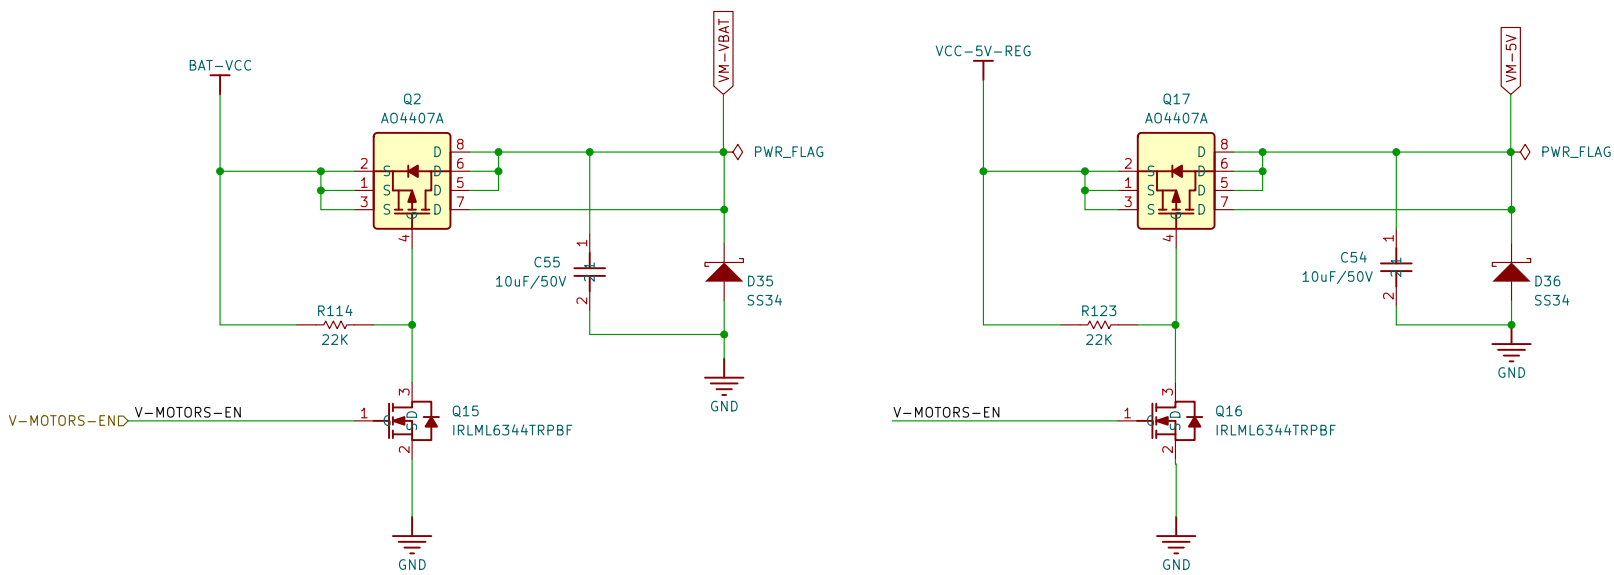





POWER MANAGMENT

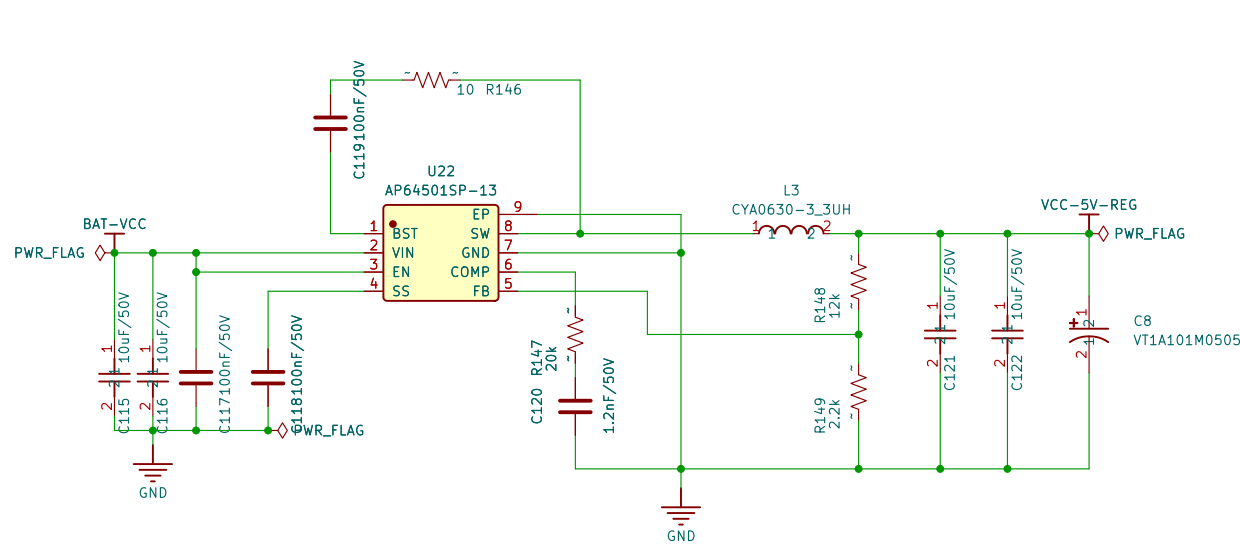


STM-PWR-CTRL need to use for both EN and OFF from STM32 GPIO pin.
1- Hold EN to HIGH after buttone pressed
2- OFF board

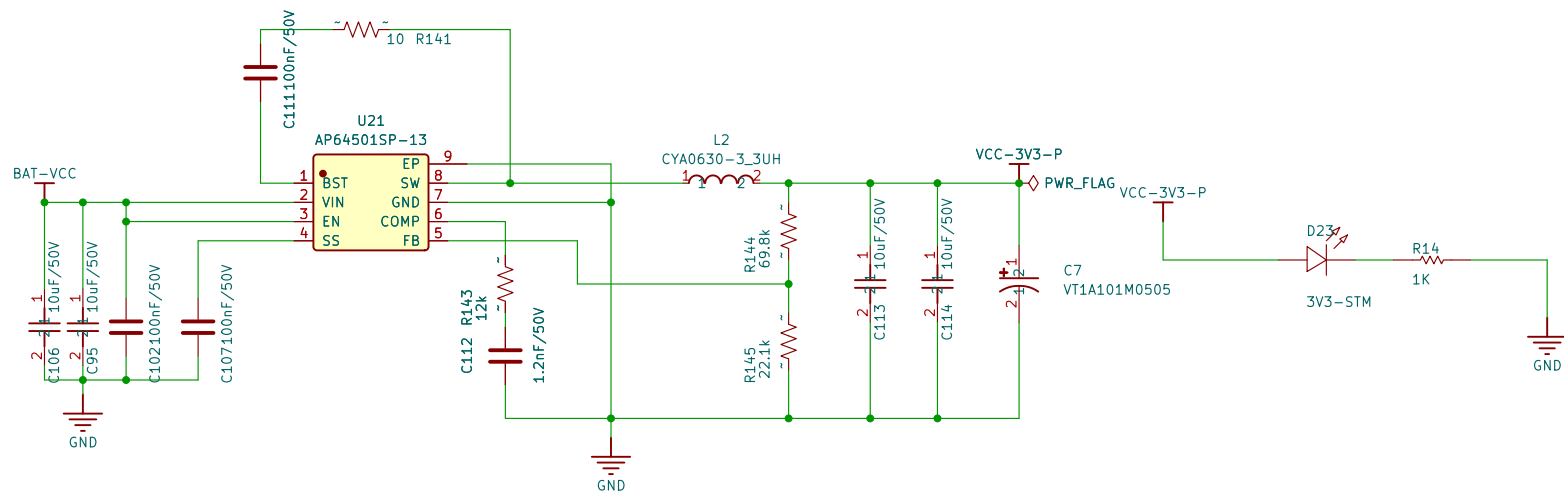


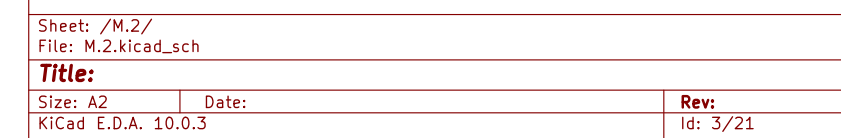

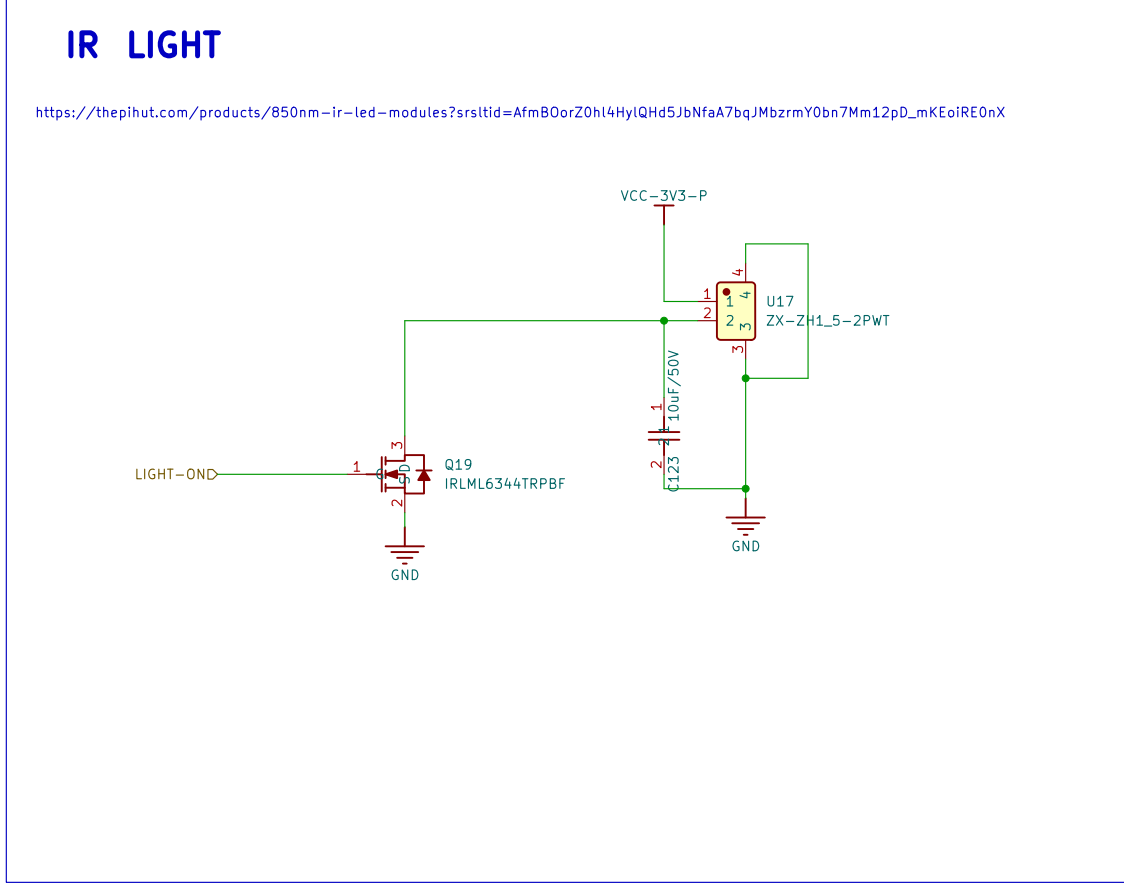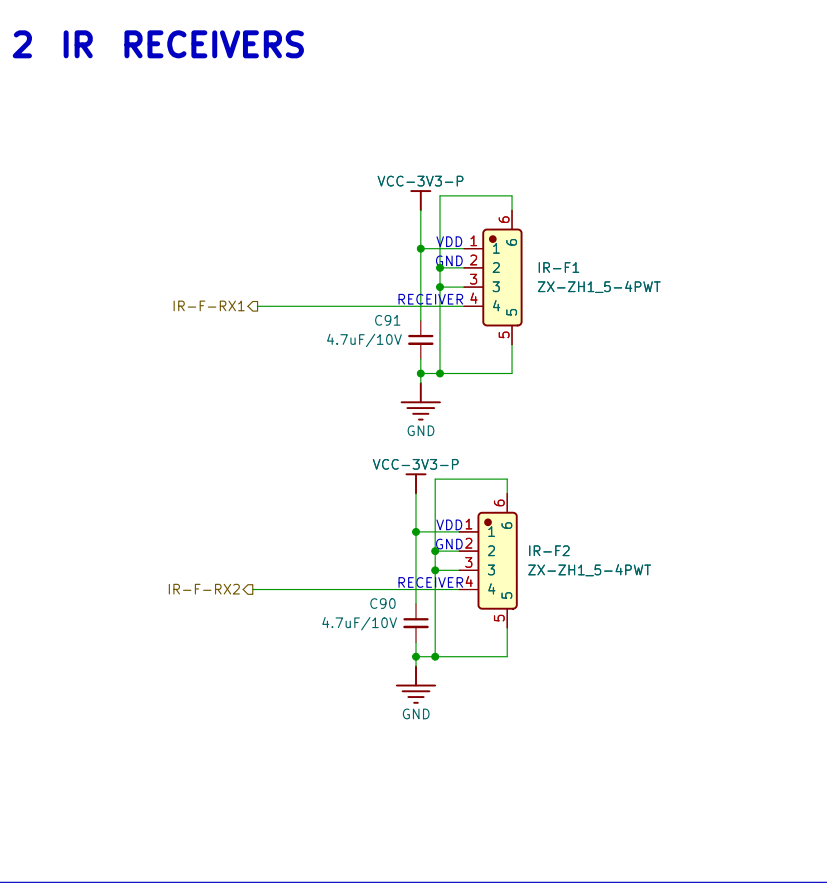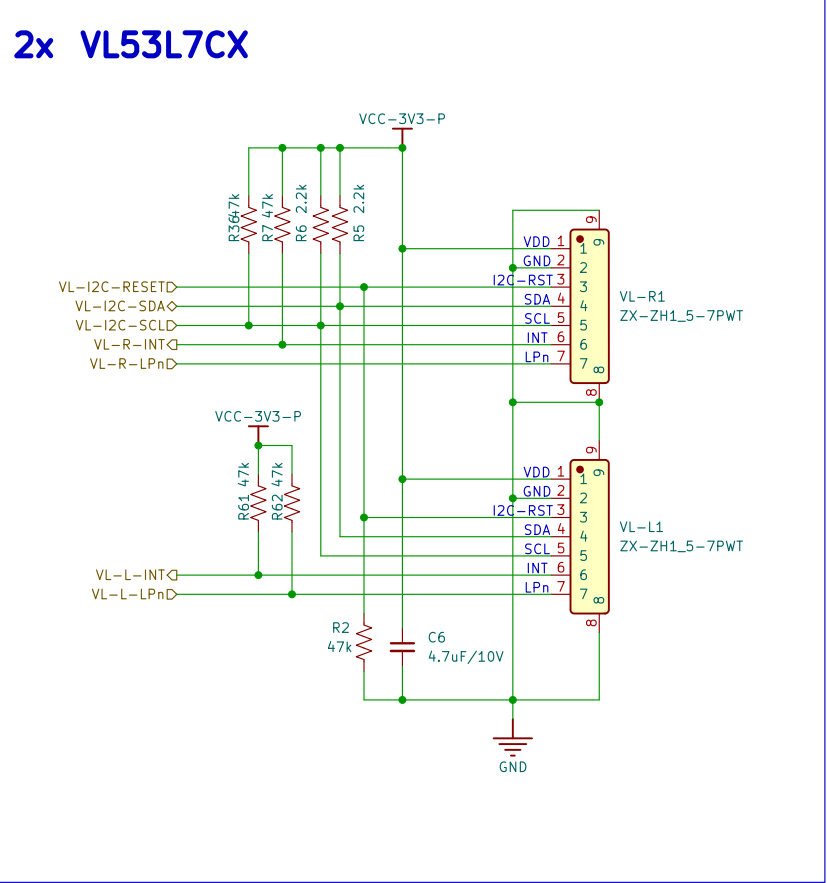


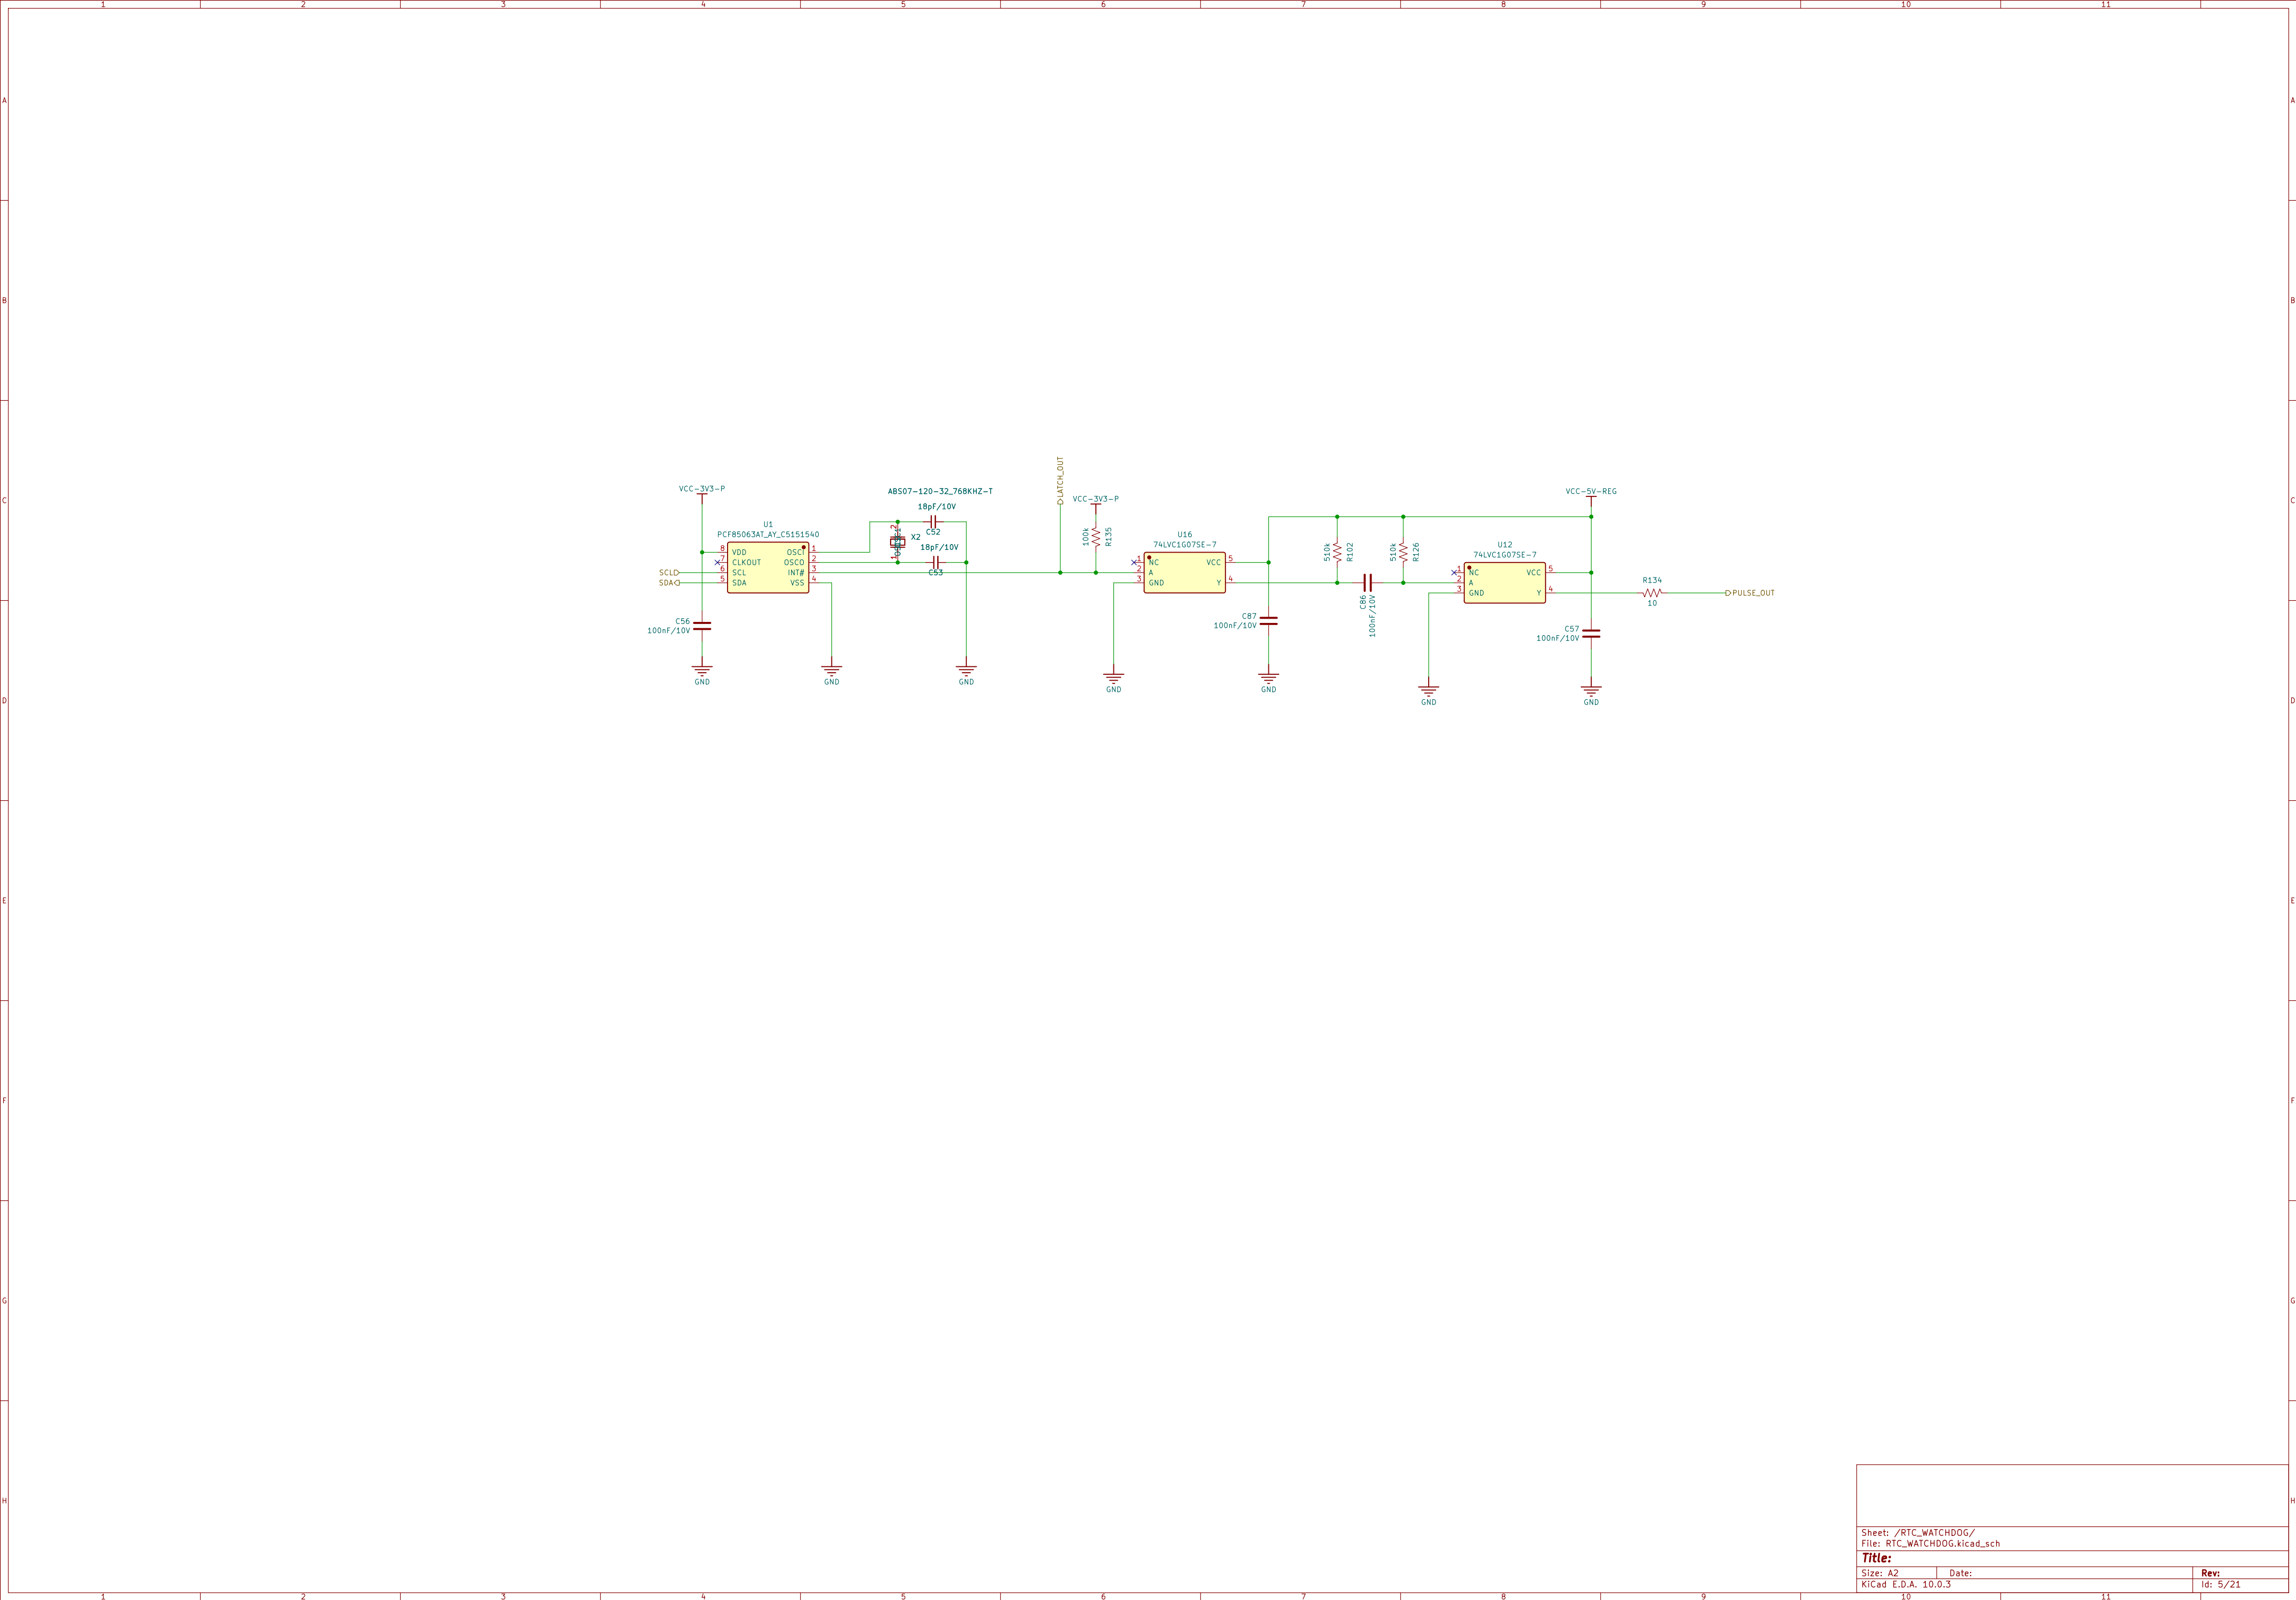


ANTI FALL SENSORS

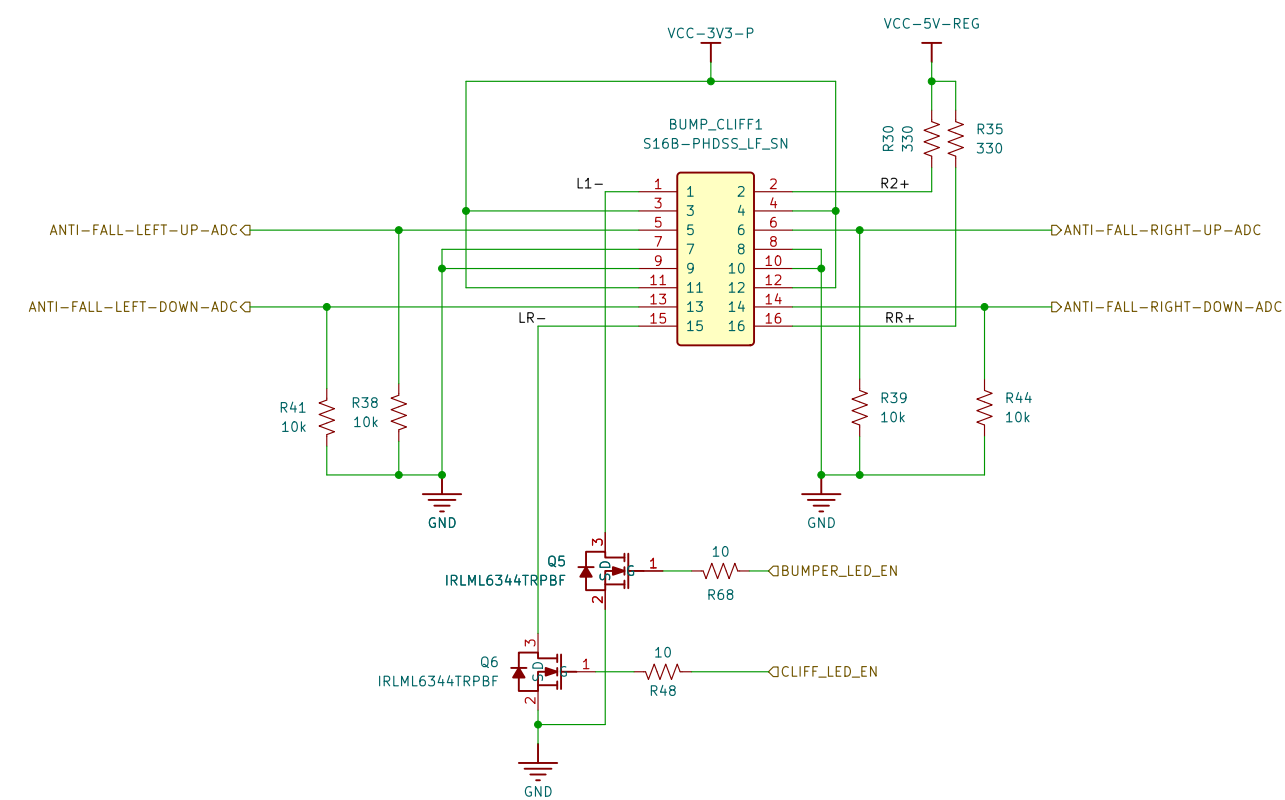


SIDE PROXI IR SENSORS

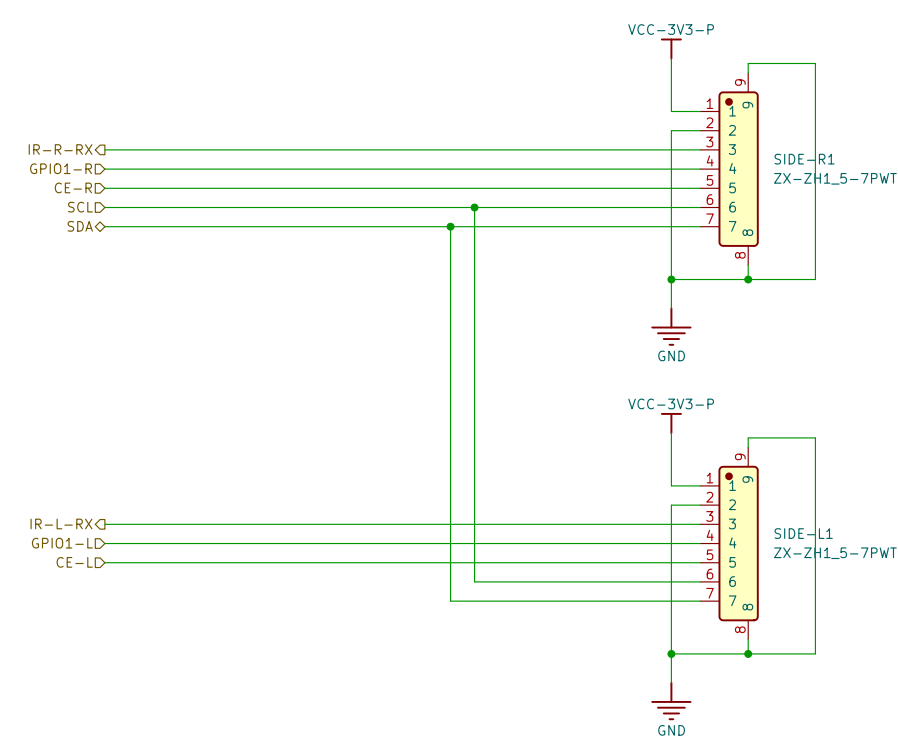


WATER PUMP MOTOR CONTROL

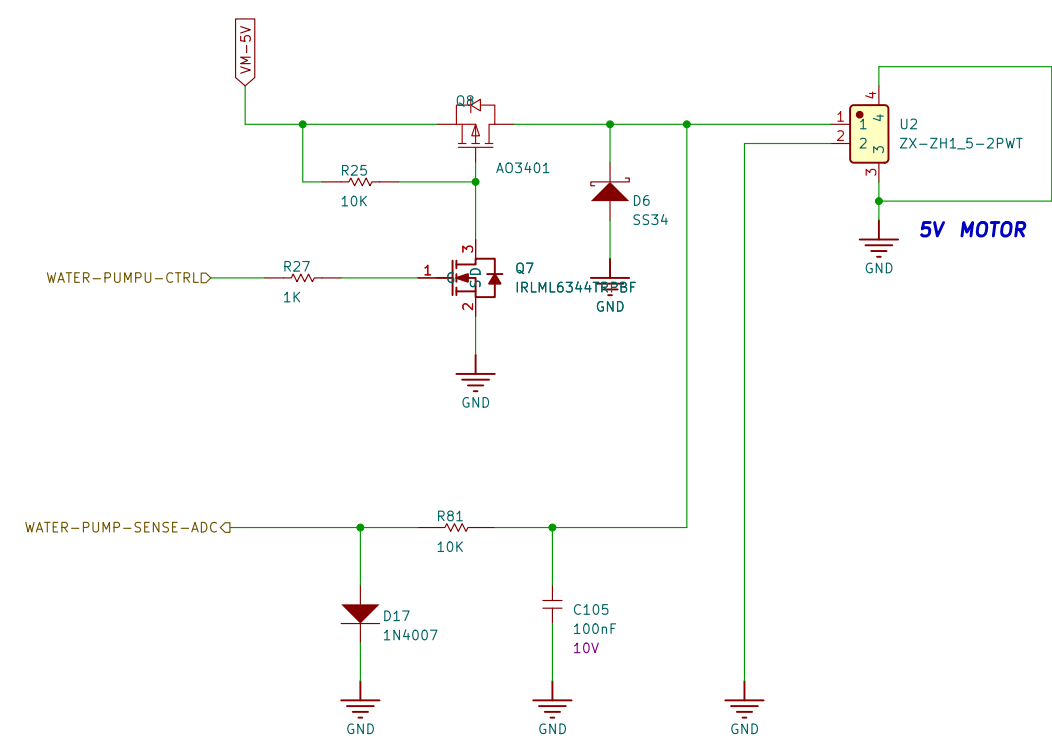


MAIN BUSH MOTOR CONTROL

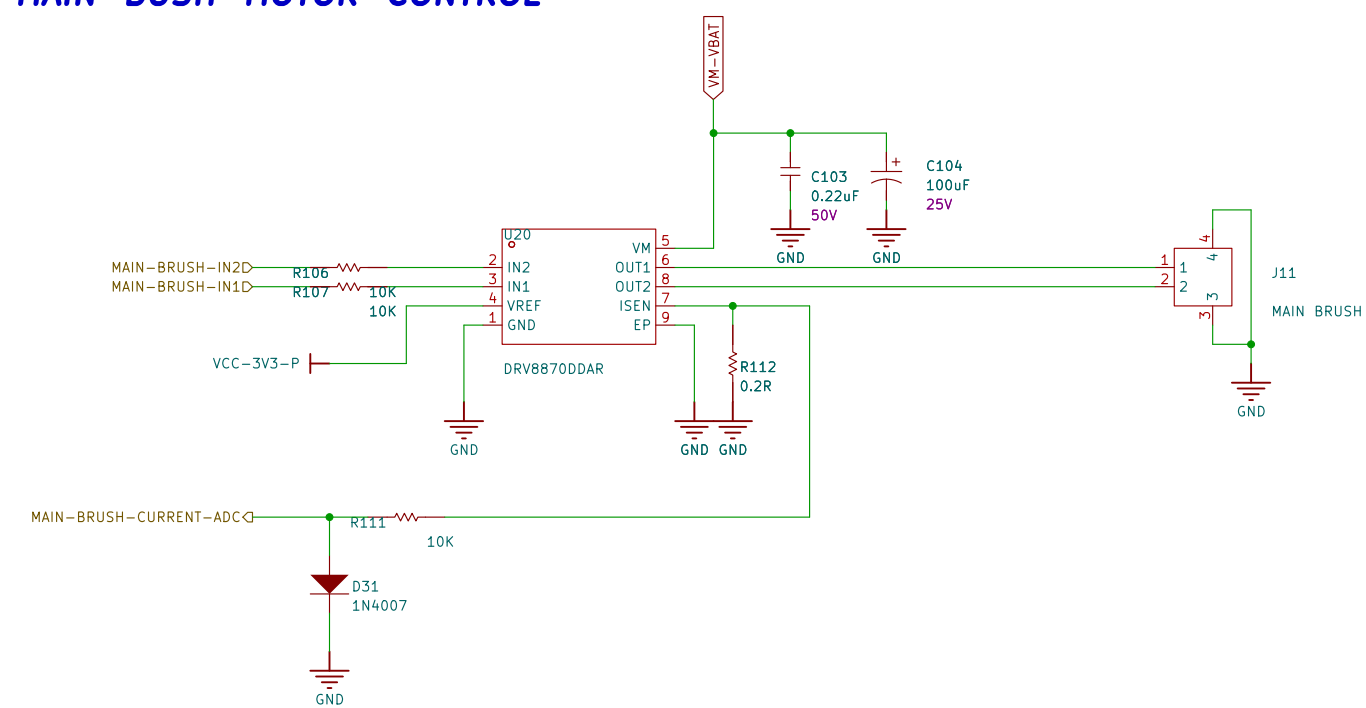


WHEEL MOTOR CONTROL

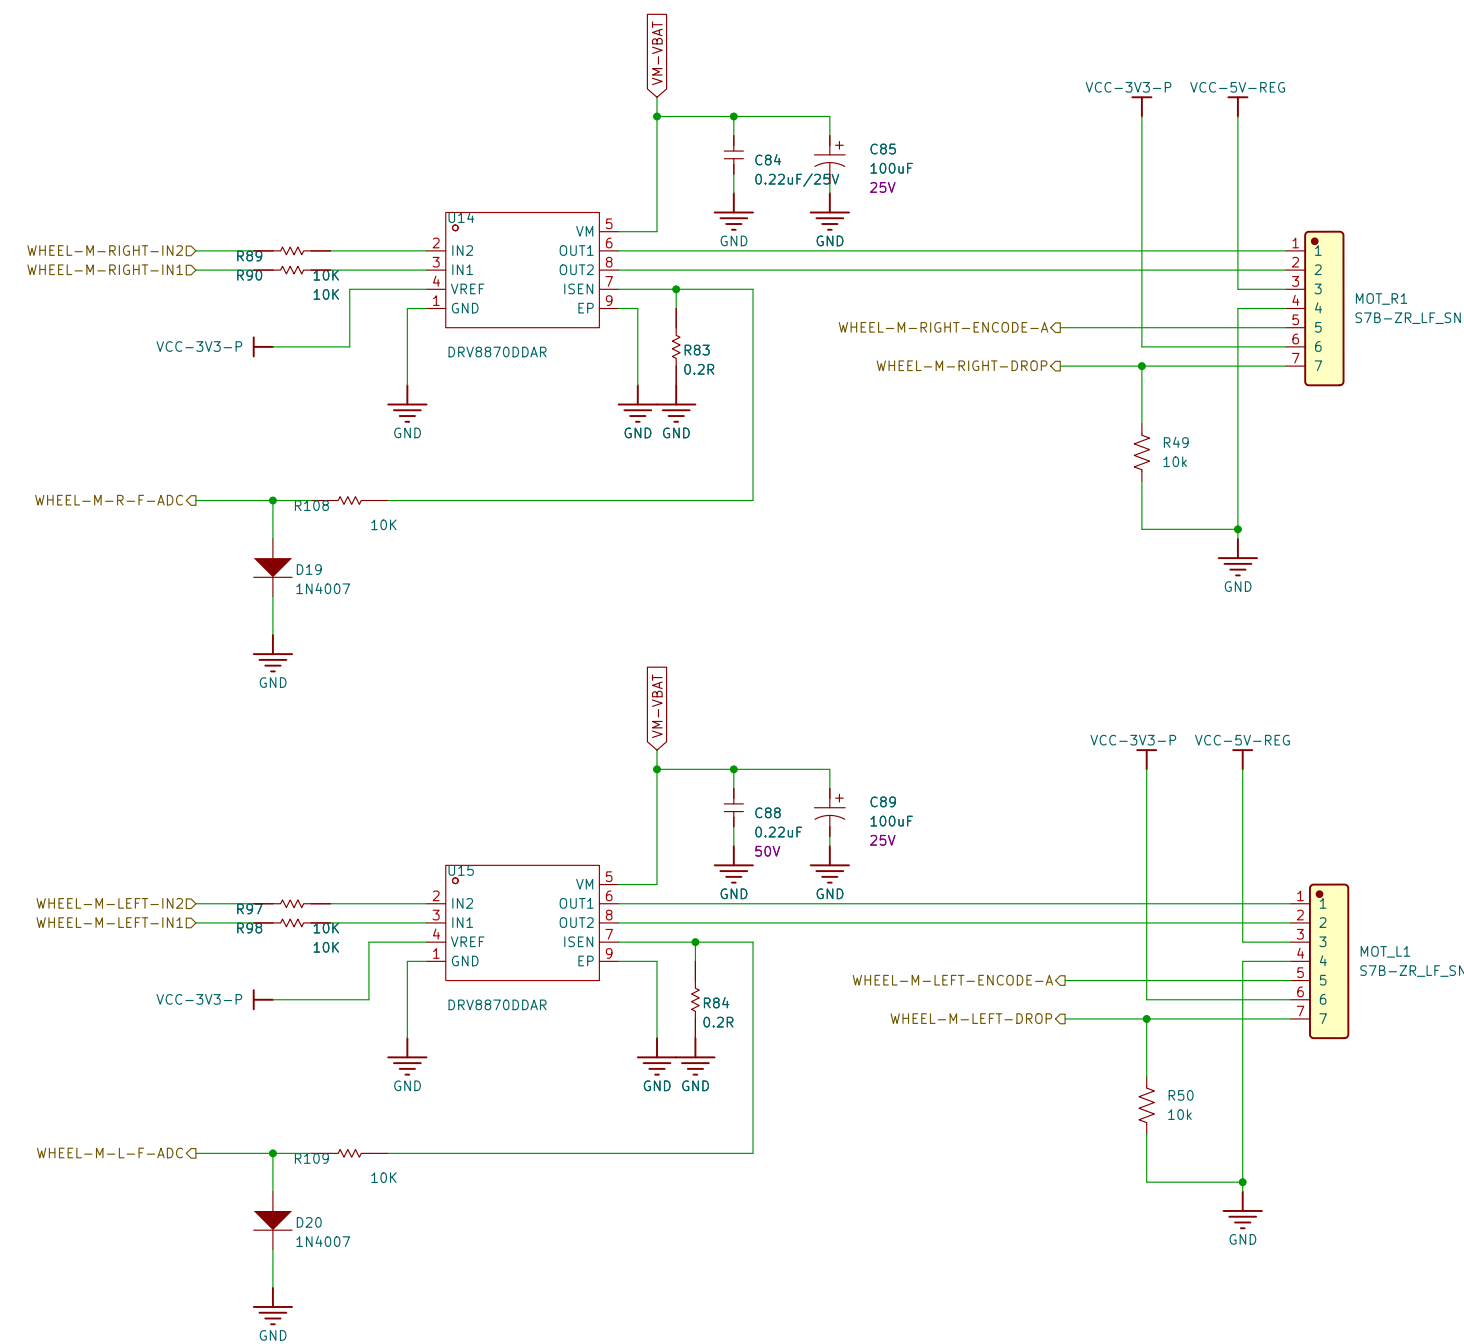

MAIN FAN CONTROL

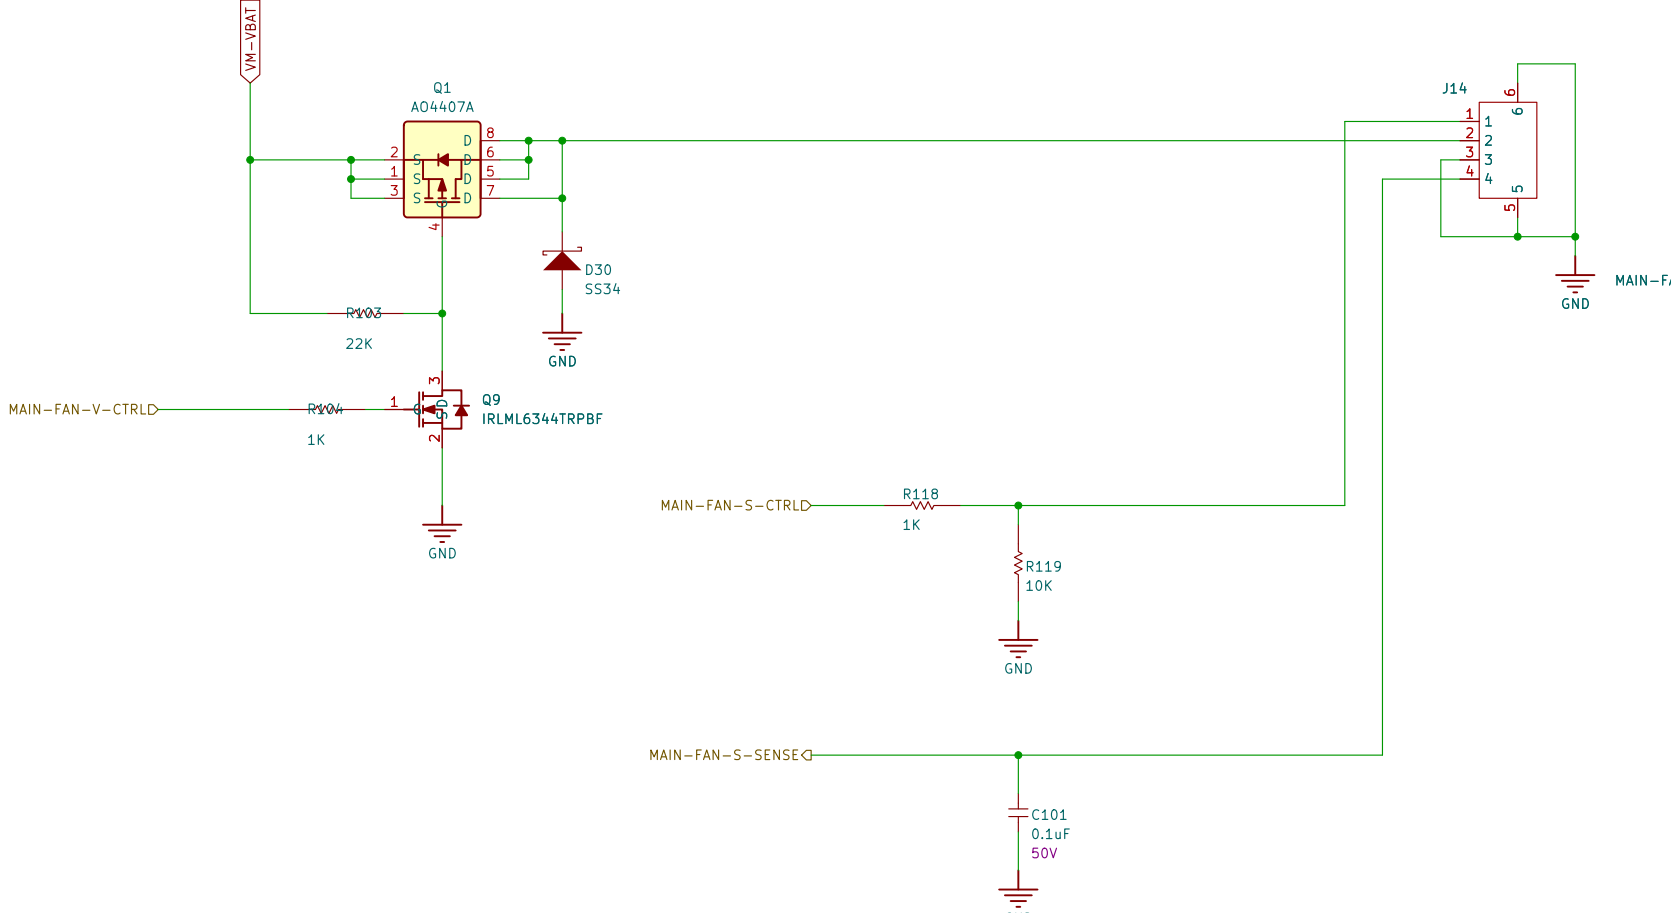



SIDE-BRUSH MOTOR CONTROL

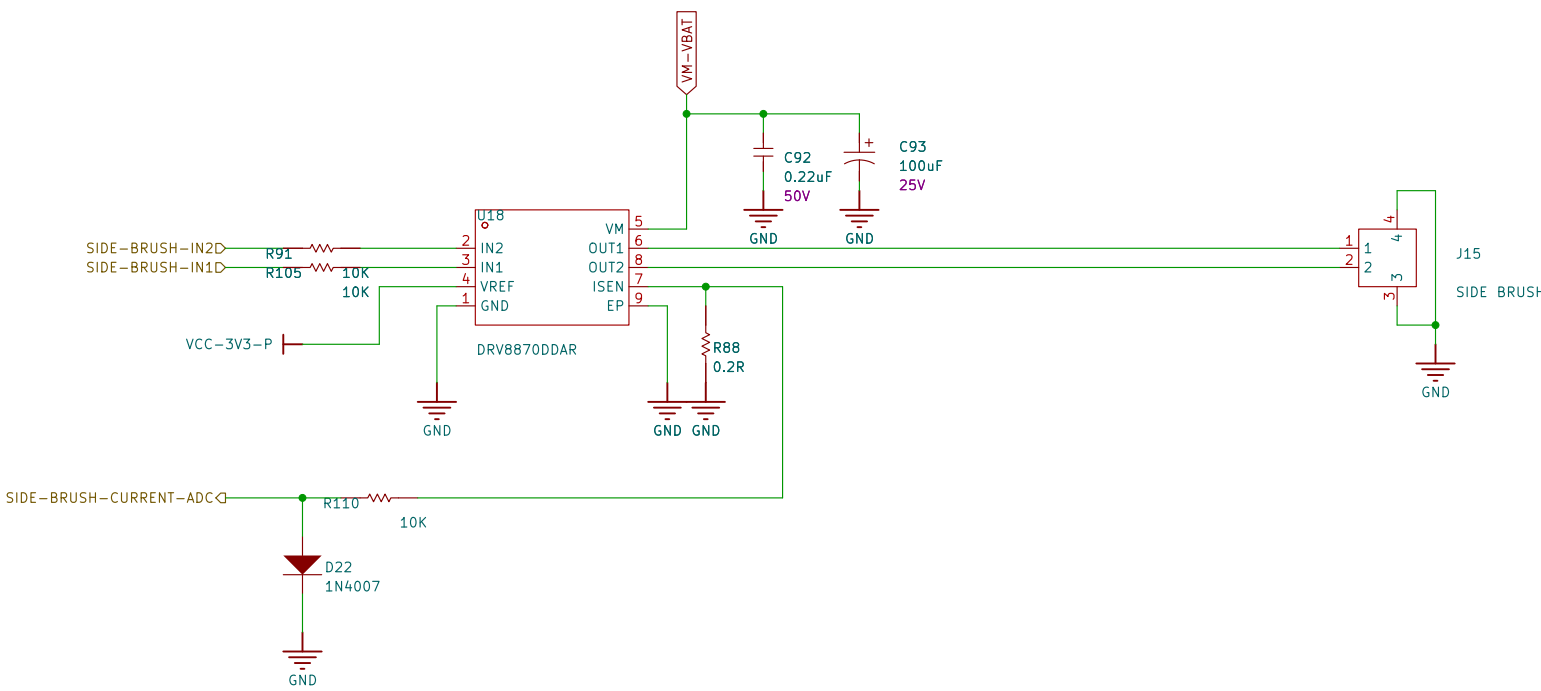



File: LIDAR_KiCad_SCH		
Title:		
Size: A2	Date:	Rev:
KiCad E.D.A. 10.0.3		Id: 26/21

SPEAKER **MIC**


Microphone Input

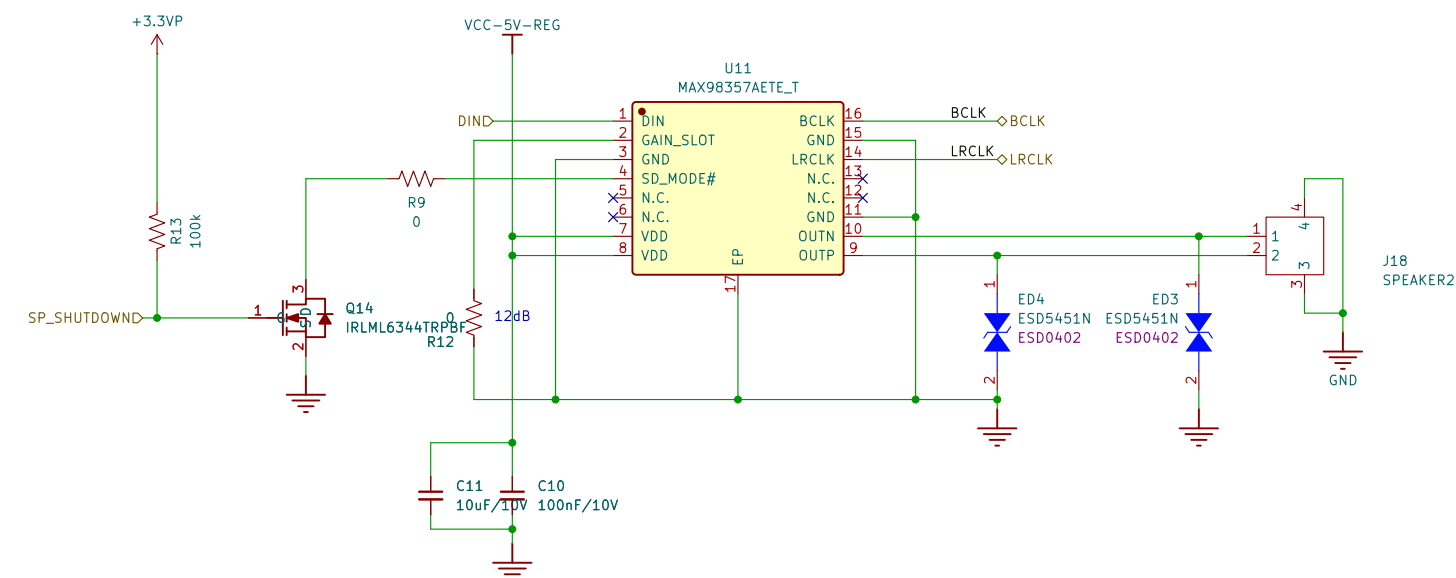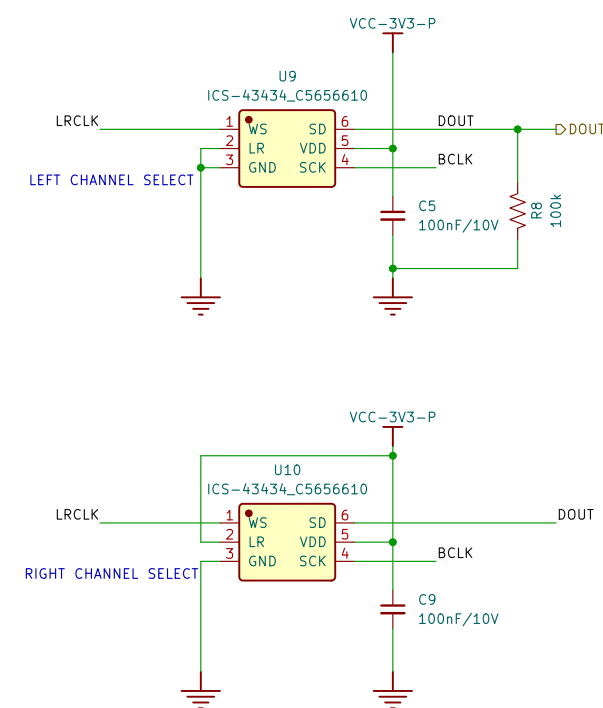





LEDs AND BUTTONs

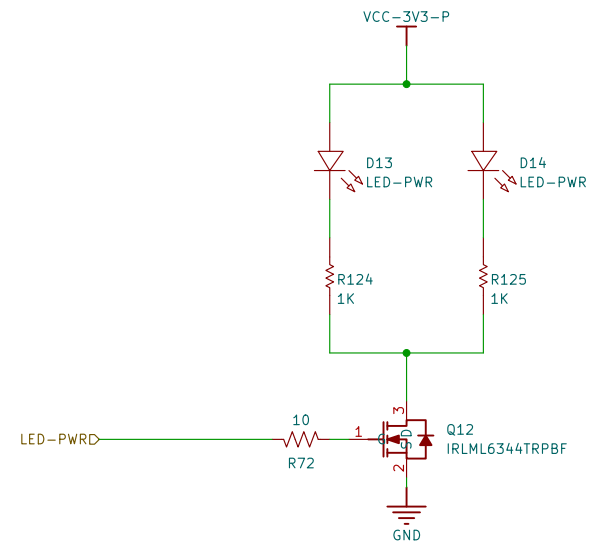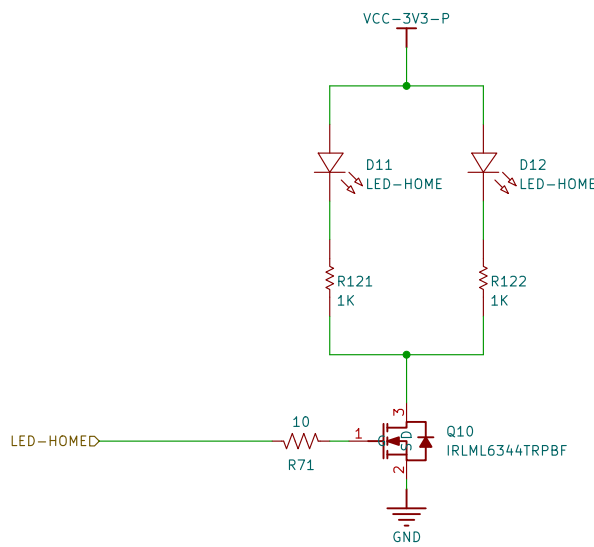


MIPI Cameras
2 lanes / camera

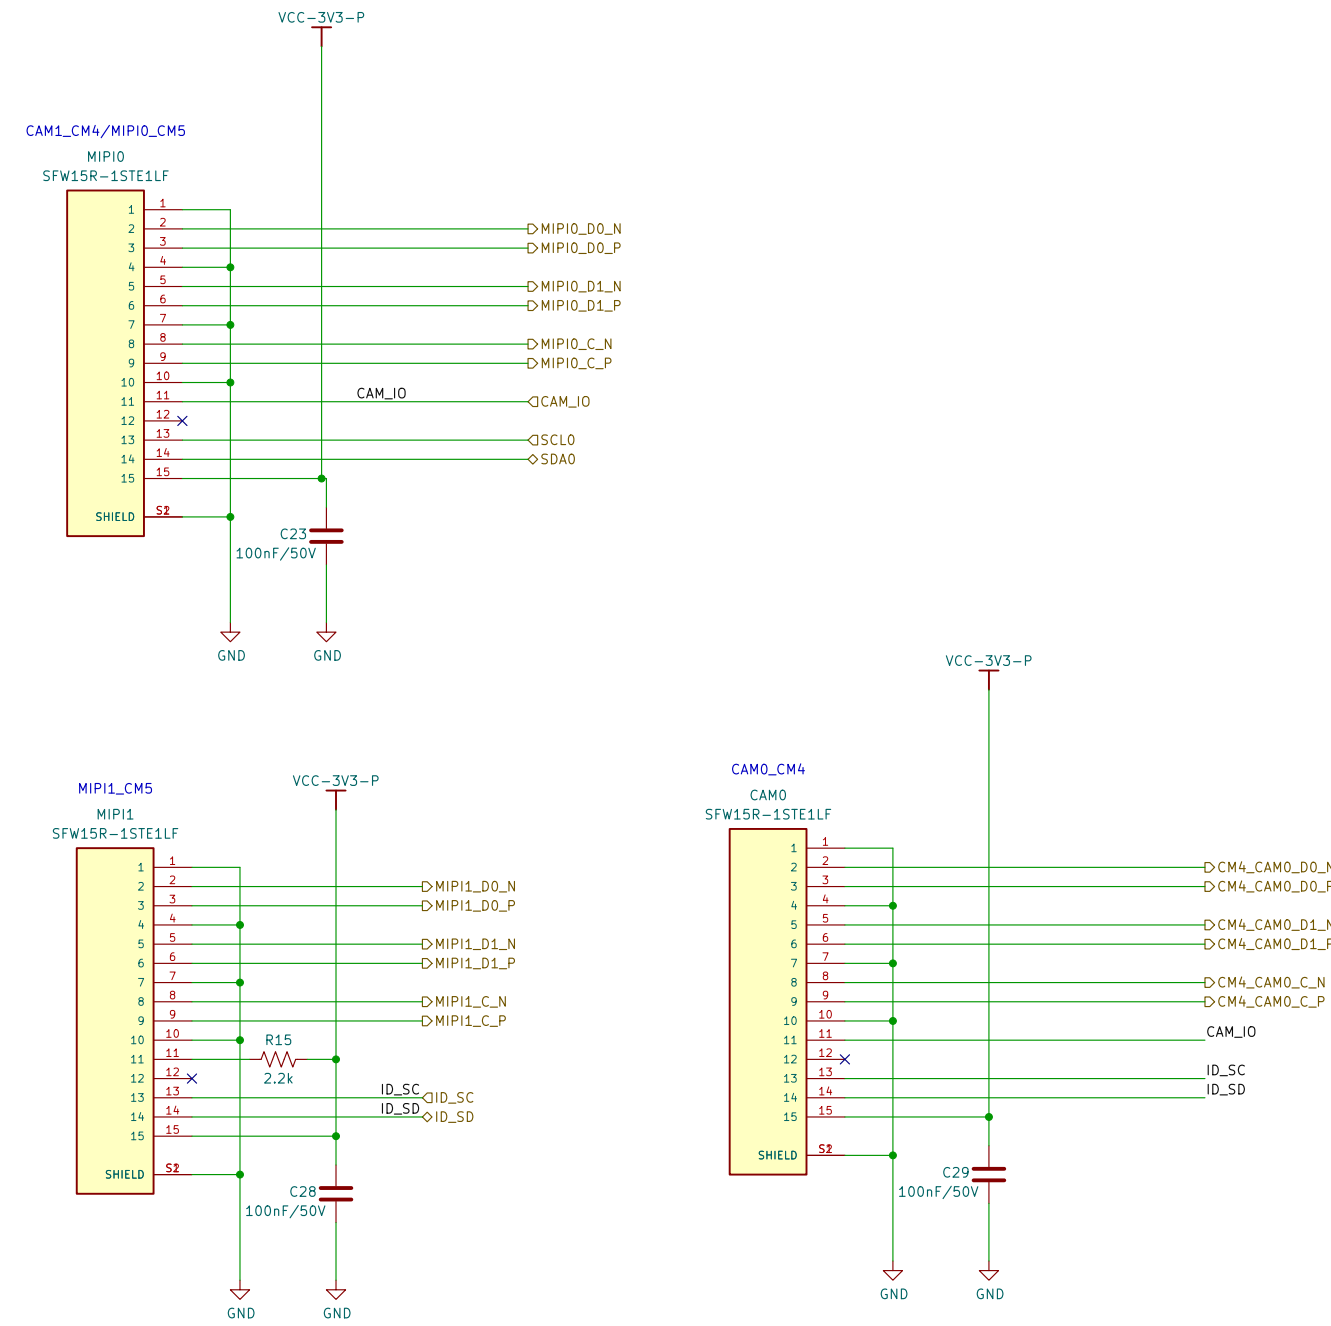


MCU STM32G473

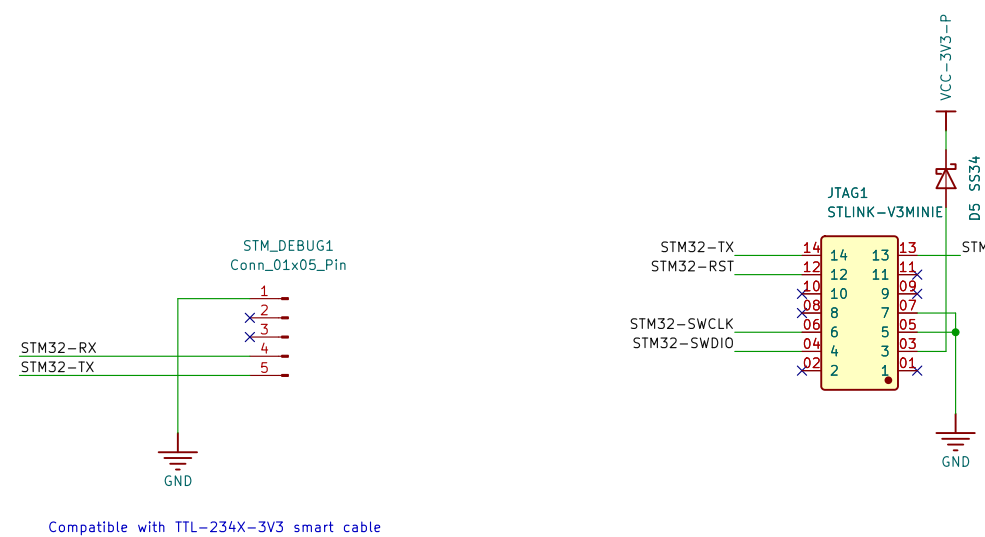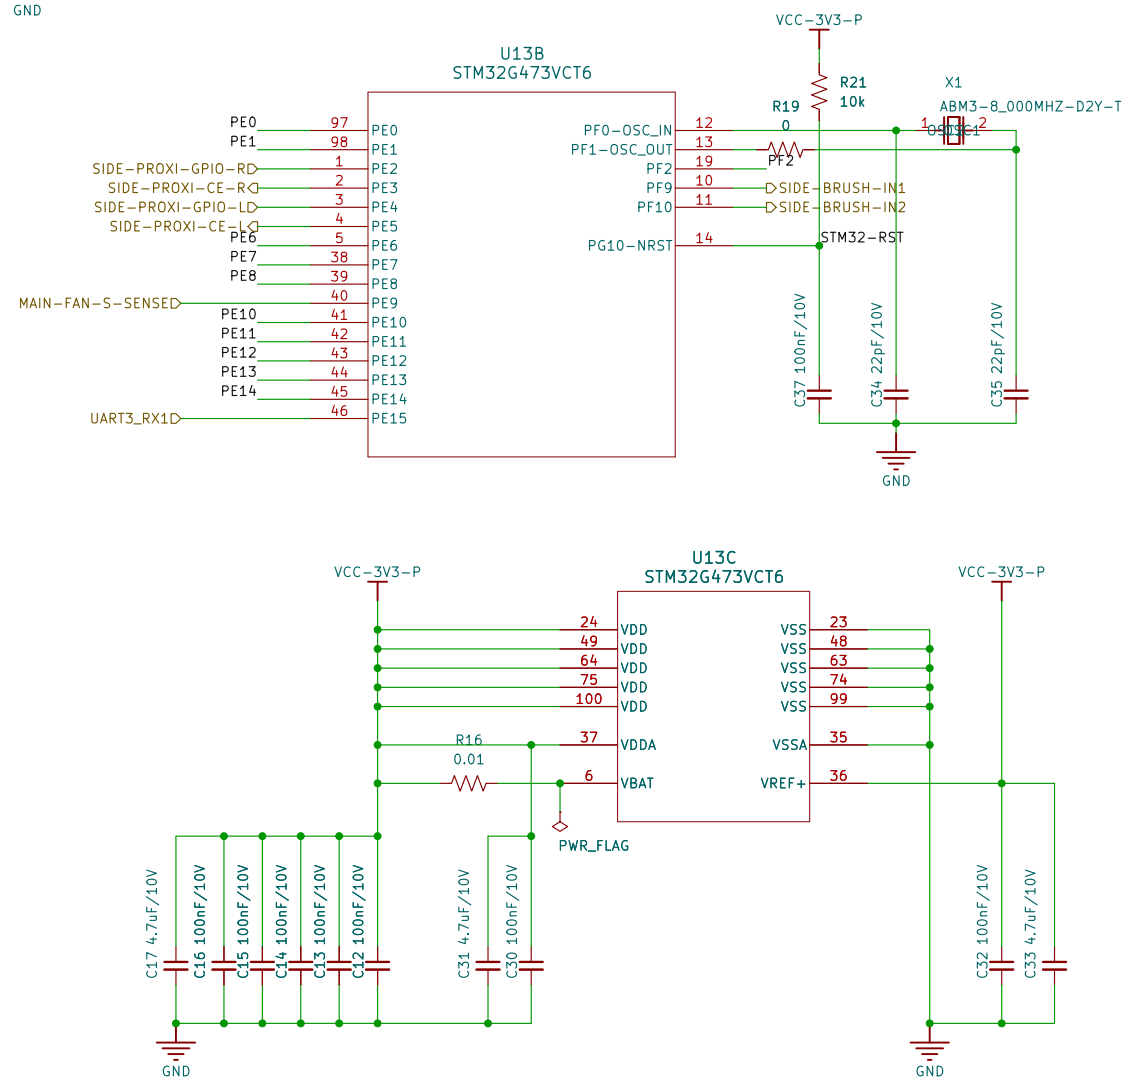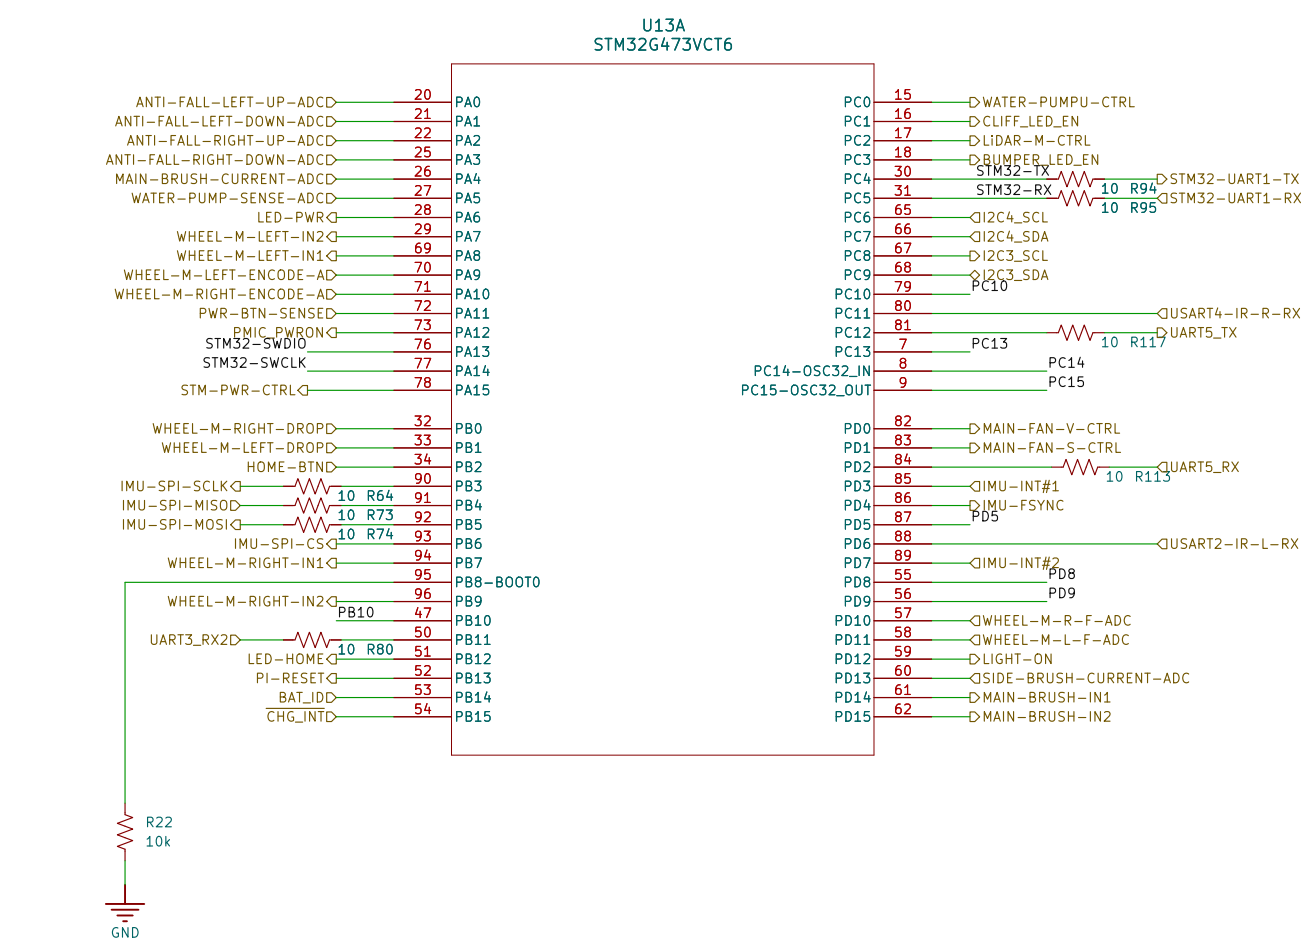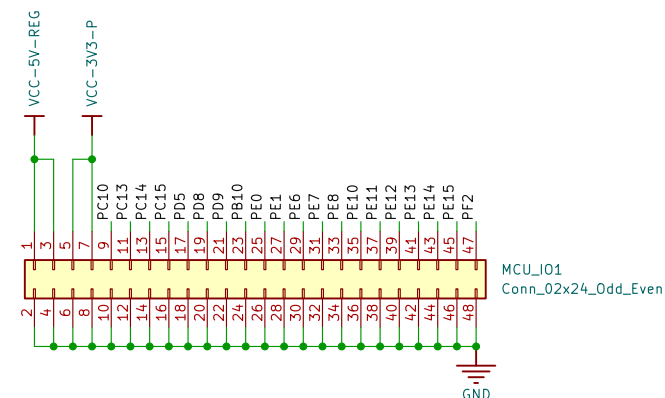


IMU-ICM-42607-P

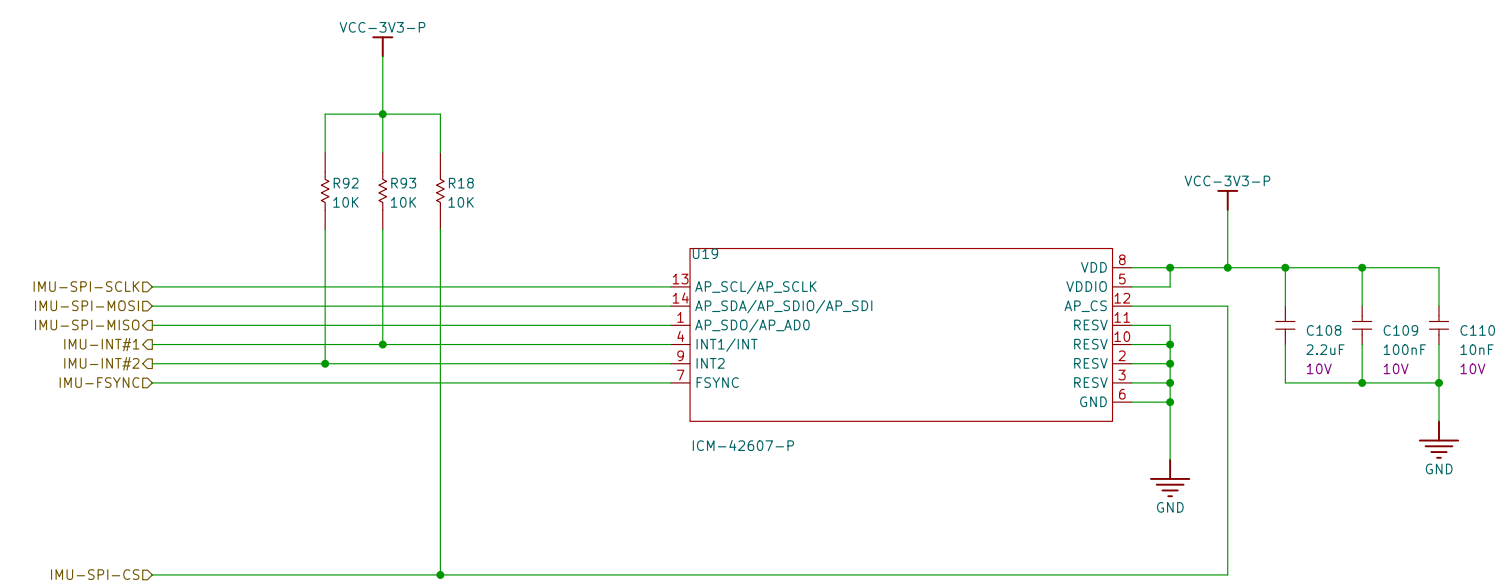

POWER DELIVERY

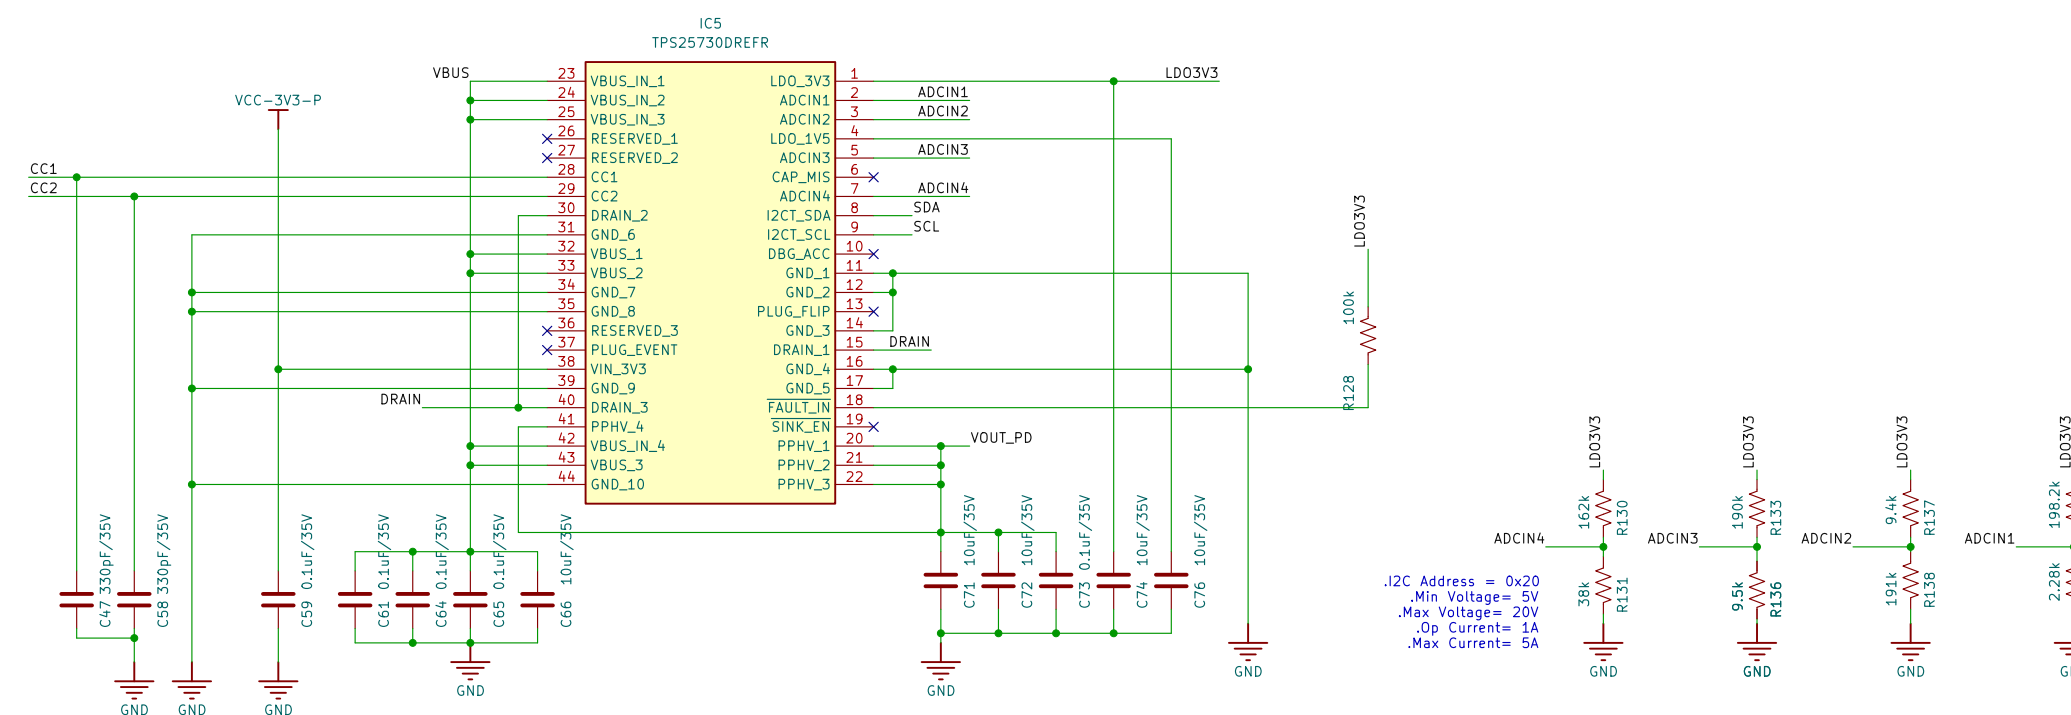


USB-C

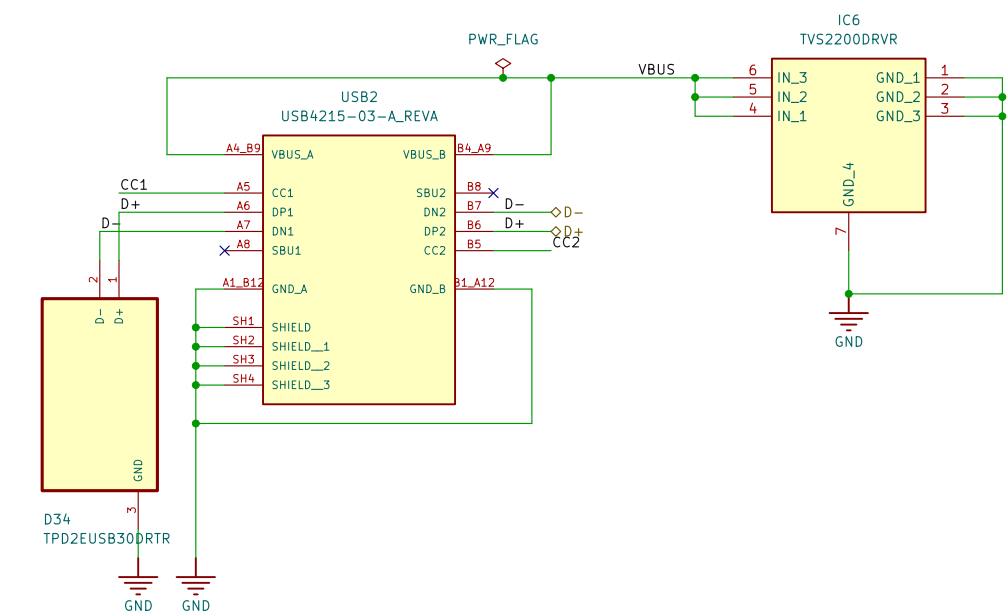

NOTE : D+ , D_ are connected to CM4/5

BATTERY CHARGER

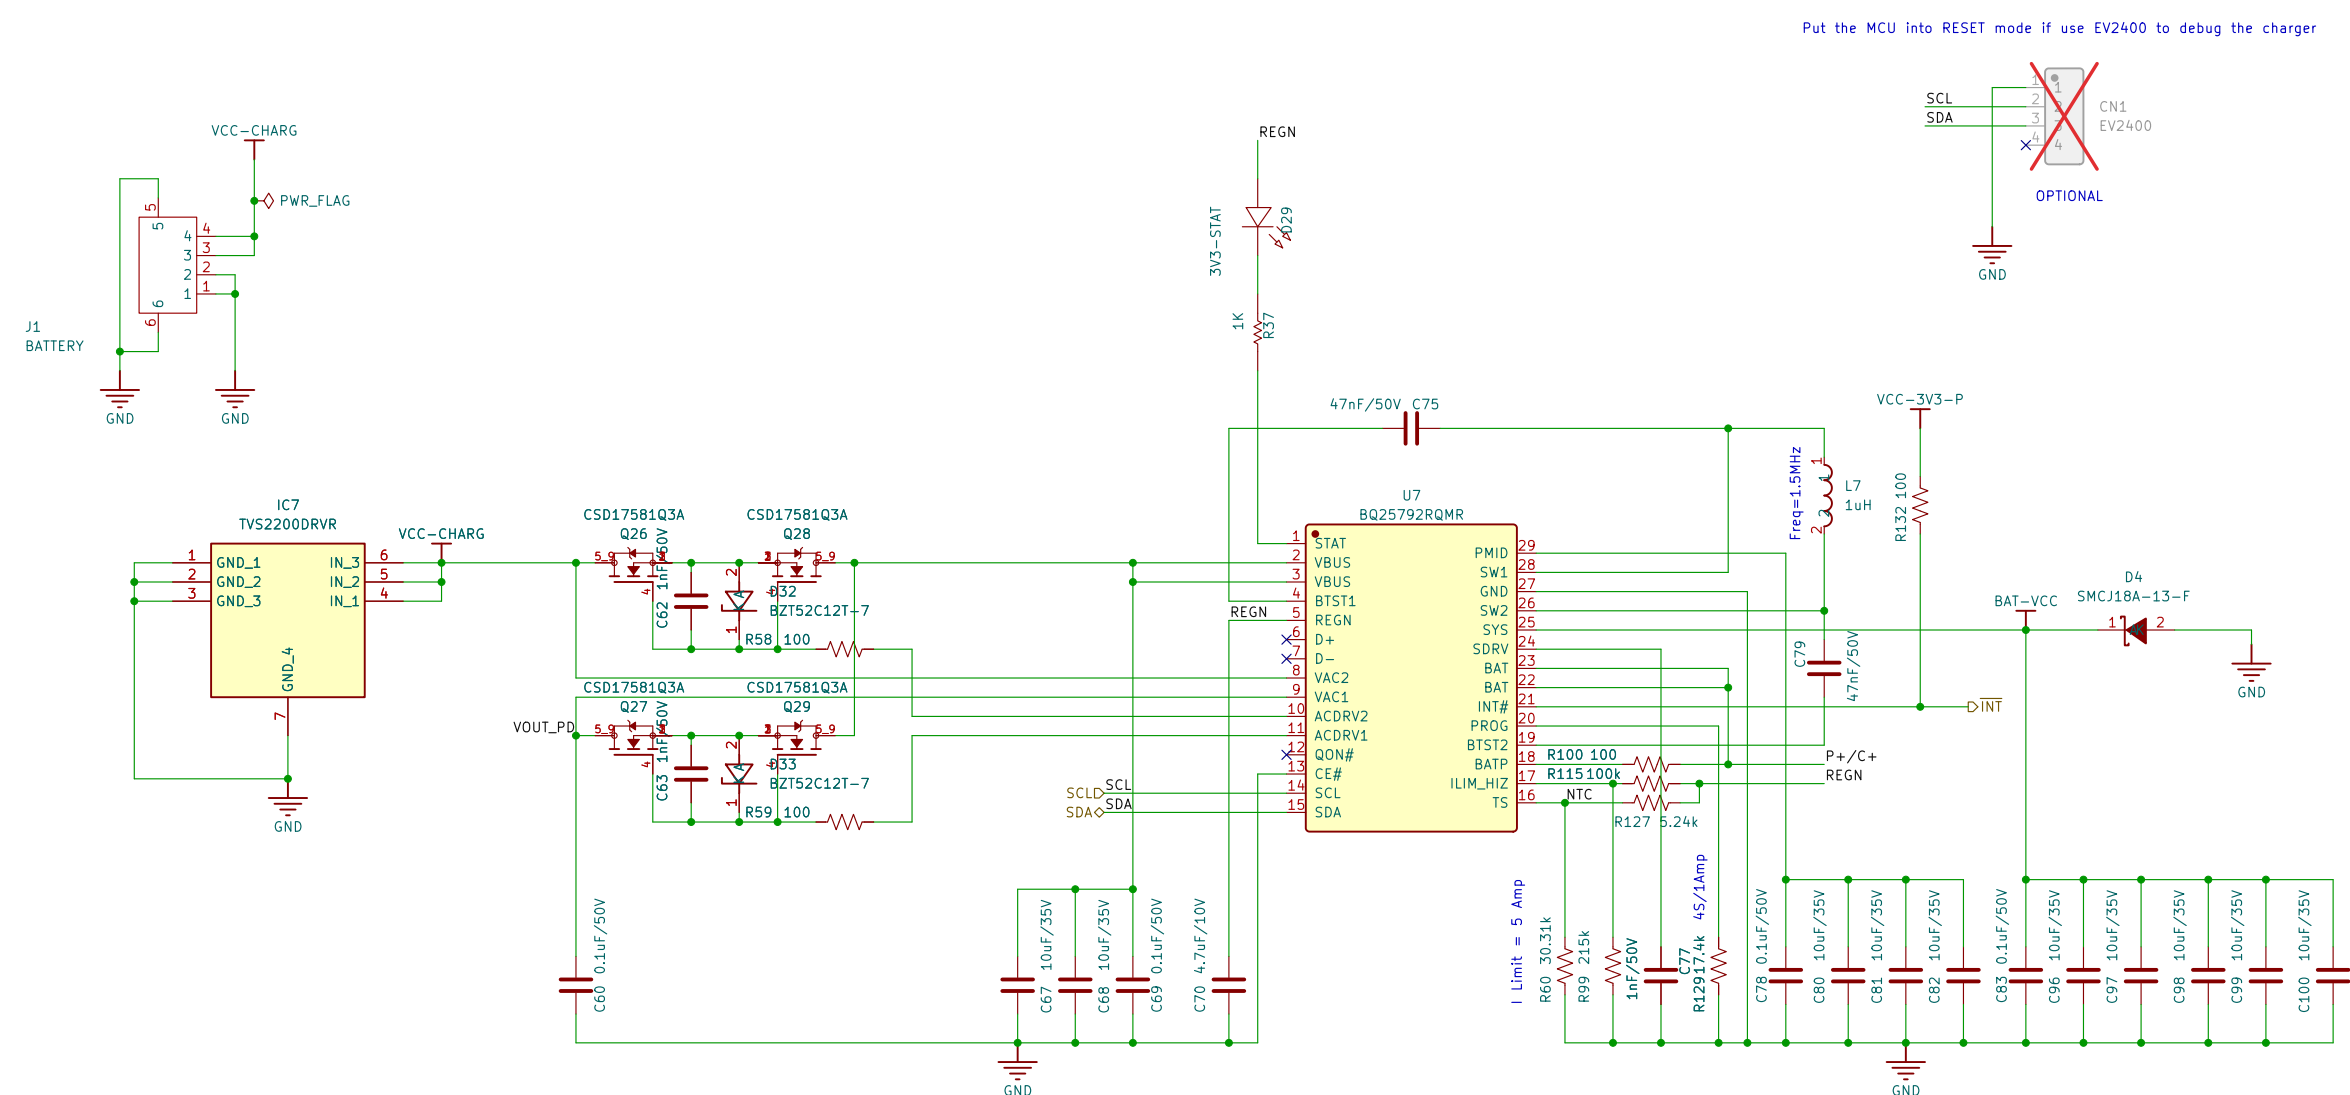

NOTE : SDA,SCL,nINT are connected to MCU

BATTERY CONNECTOR

