

4.3 IOT entry-inch

Engineering notes



category	content			
Key words 4.3 Things inch entry-summary				



revise history

version	date	the reason
V1.0	2017/09/29	Create documents



Sales and Service

Guangzhou color Optoelectronics Technology Co., Ltd.

phone: 020-82186683-601

fax: 020-22059566

Email: hmi@gz-dc.com (Public Service) website: www.gz-dc.com

Ground Address: Jubei Dagang Road, Tianhe District, Guangzhou 14 Building No. Yeshun 401-410 , 507

Room's official website Taobao retail shop: https://gz-dc.taobao.com





table of Contents

1. Scope	1
2. Development Environment version	2
3. New Construction	3
4. Compile the project	4
5. Download Proiect	5



1. Scope

Things document is for serial-type screen products.



2. Development Environment version

1. VisualTFT Software version: V3.0.0.850 And above; versions View: (1) Open the software, the software version number displayed in the lower right corner. (2) turn on VisualTFT Click Help -> About VisualTFT You can view the current software version number. The latest version can be found at www.gz-dc.com Download



Map 2-1 The software version number

- 2. Serial screen hardware version: V2.22.992.XXX And above. View version:
- (1) Check the version number sticker on the back screen.
- (2) VisualTFT After the success of the online screen, the version number displayed in the lower right corner.




3. New Construction

New construction is as follows



Map 3-1 New Construction


Before the project is the need to set a different boot logo Picture

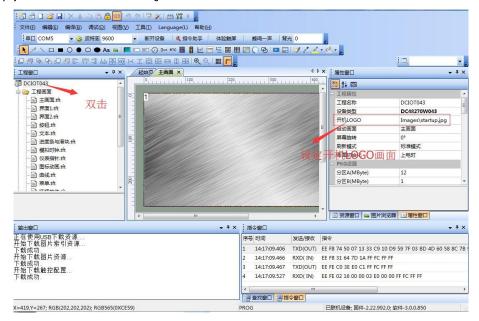

Map 3-2 Configuring the boot logo



4. Compile the project

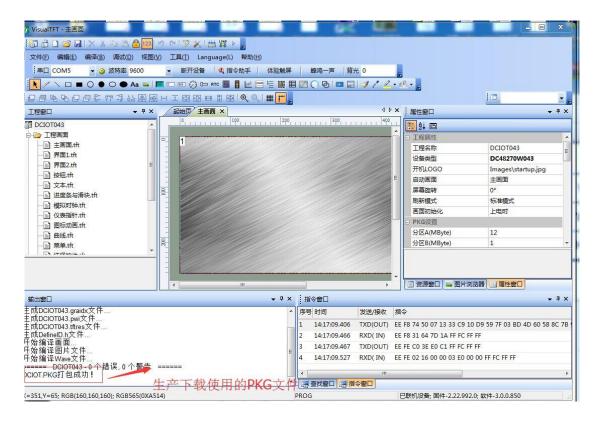


Map 4-1 Download generated using PKG file



5. Download Project

Open the directory under the current project outpu Folder, you will see a DCIOT.PKG file

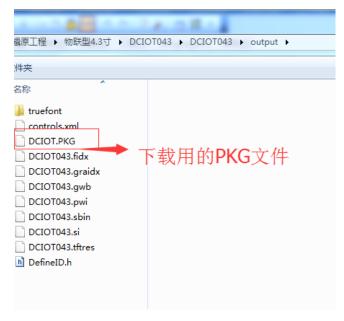

Map 5-1 Find the download PKG file

Find a U Plate, pay attention to this U Disc must be FAT32 Format, if not this format, formatted as FAT32 Format and this PKG Files are copied to U Under the root directory of the disk, the U Disk into the board USB Interface, and power-on, the screen will display the upgrade process picture, as shown, when there "Finish" English words, when the U Pull out the tray and re-energize it, the upgrade is complete picture





Map 5-2 The download is complete