






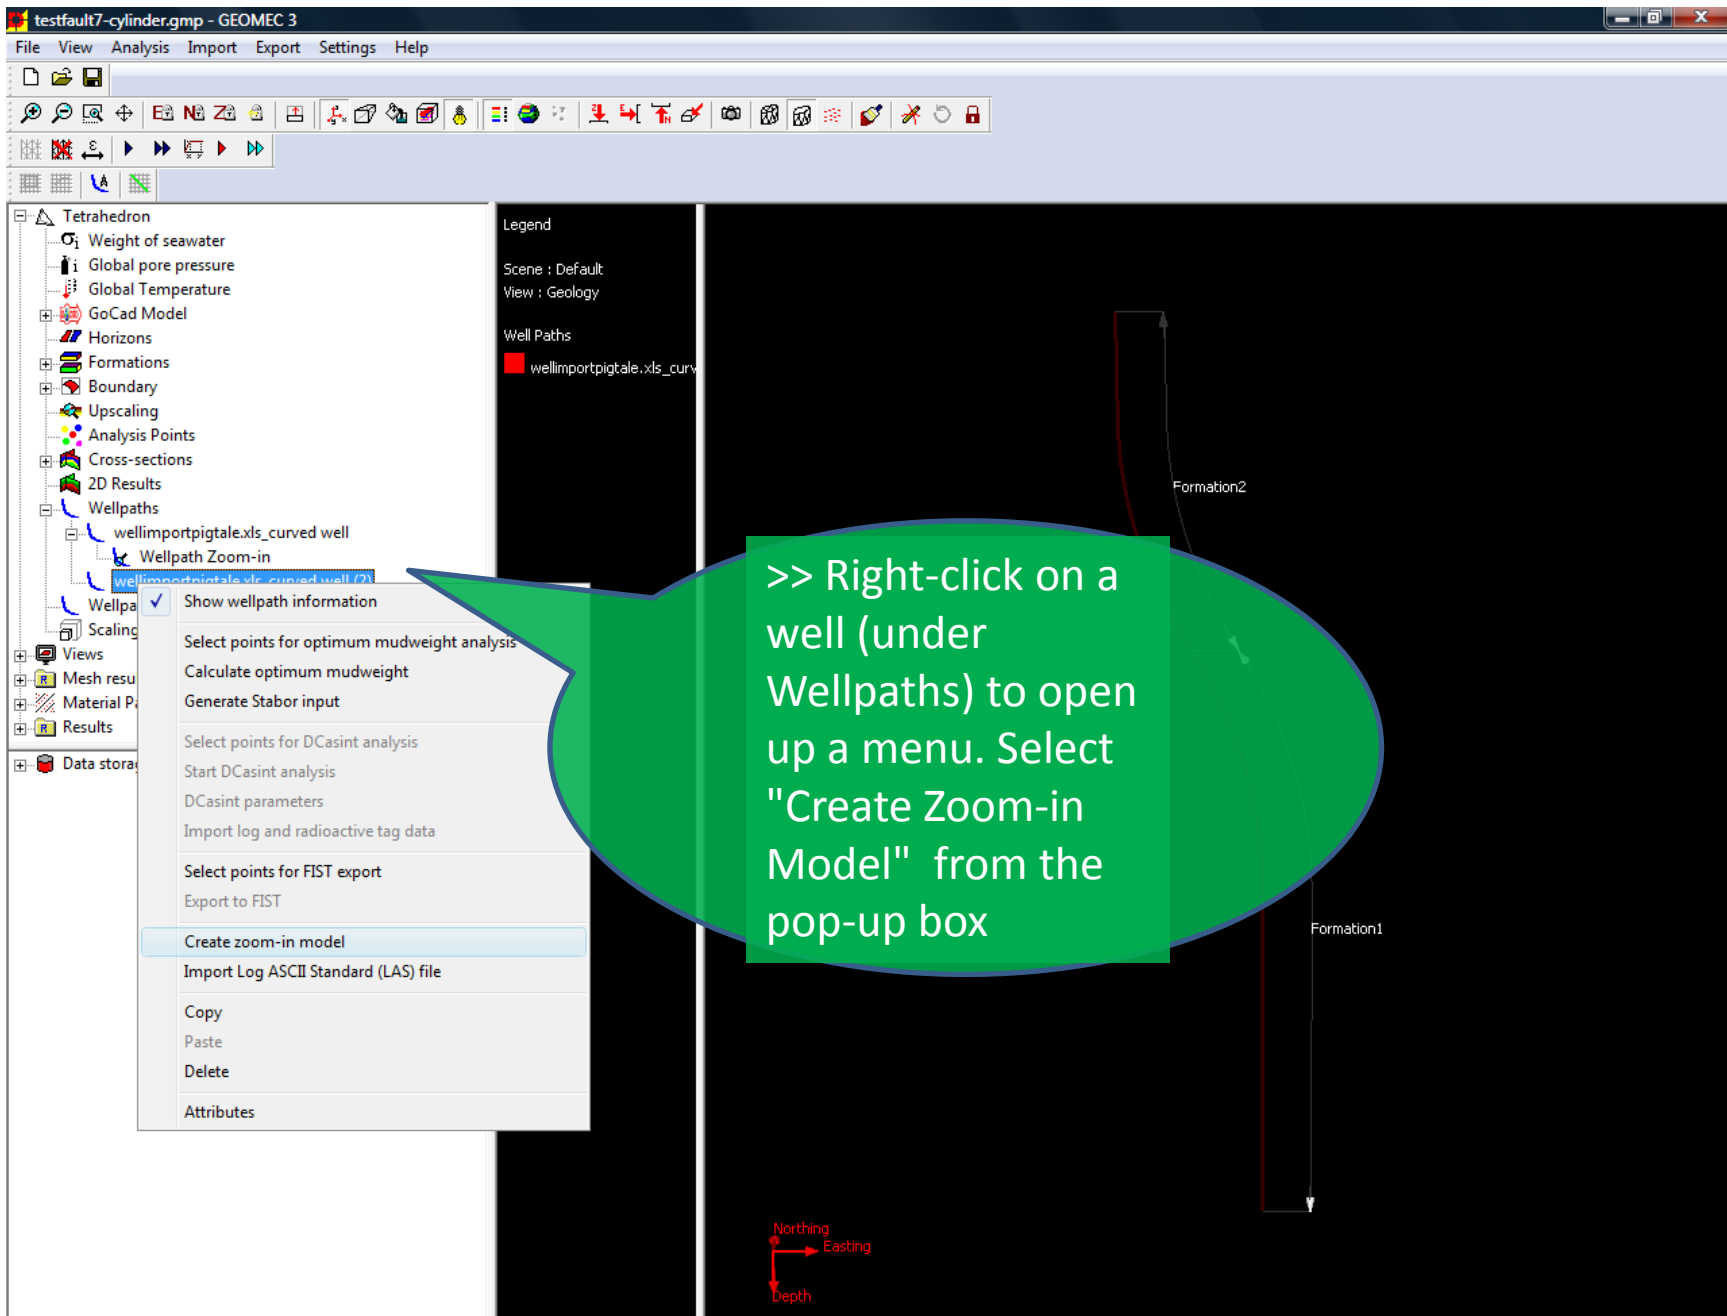


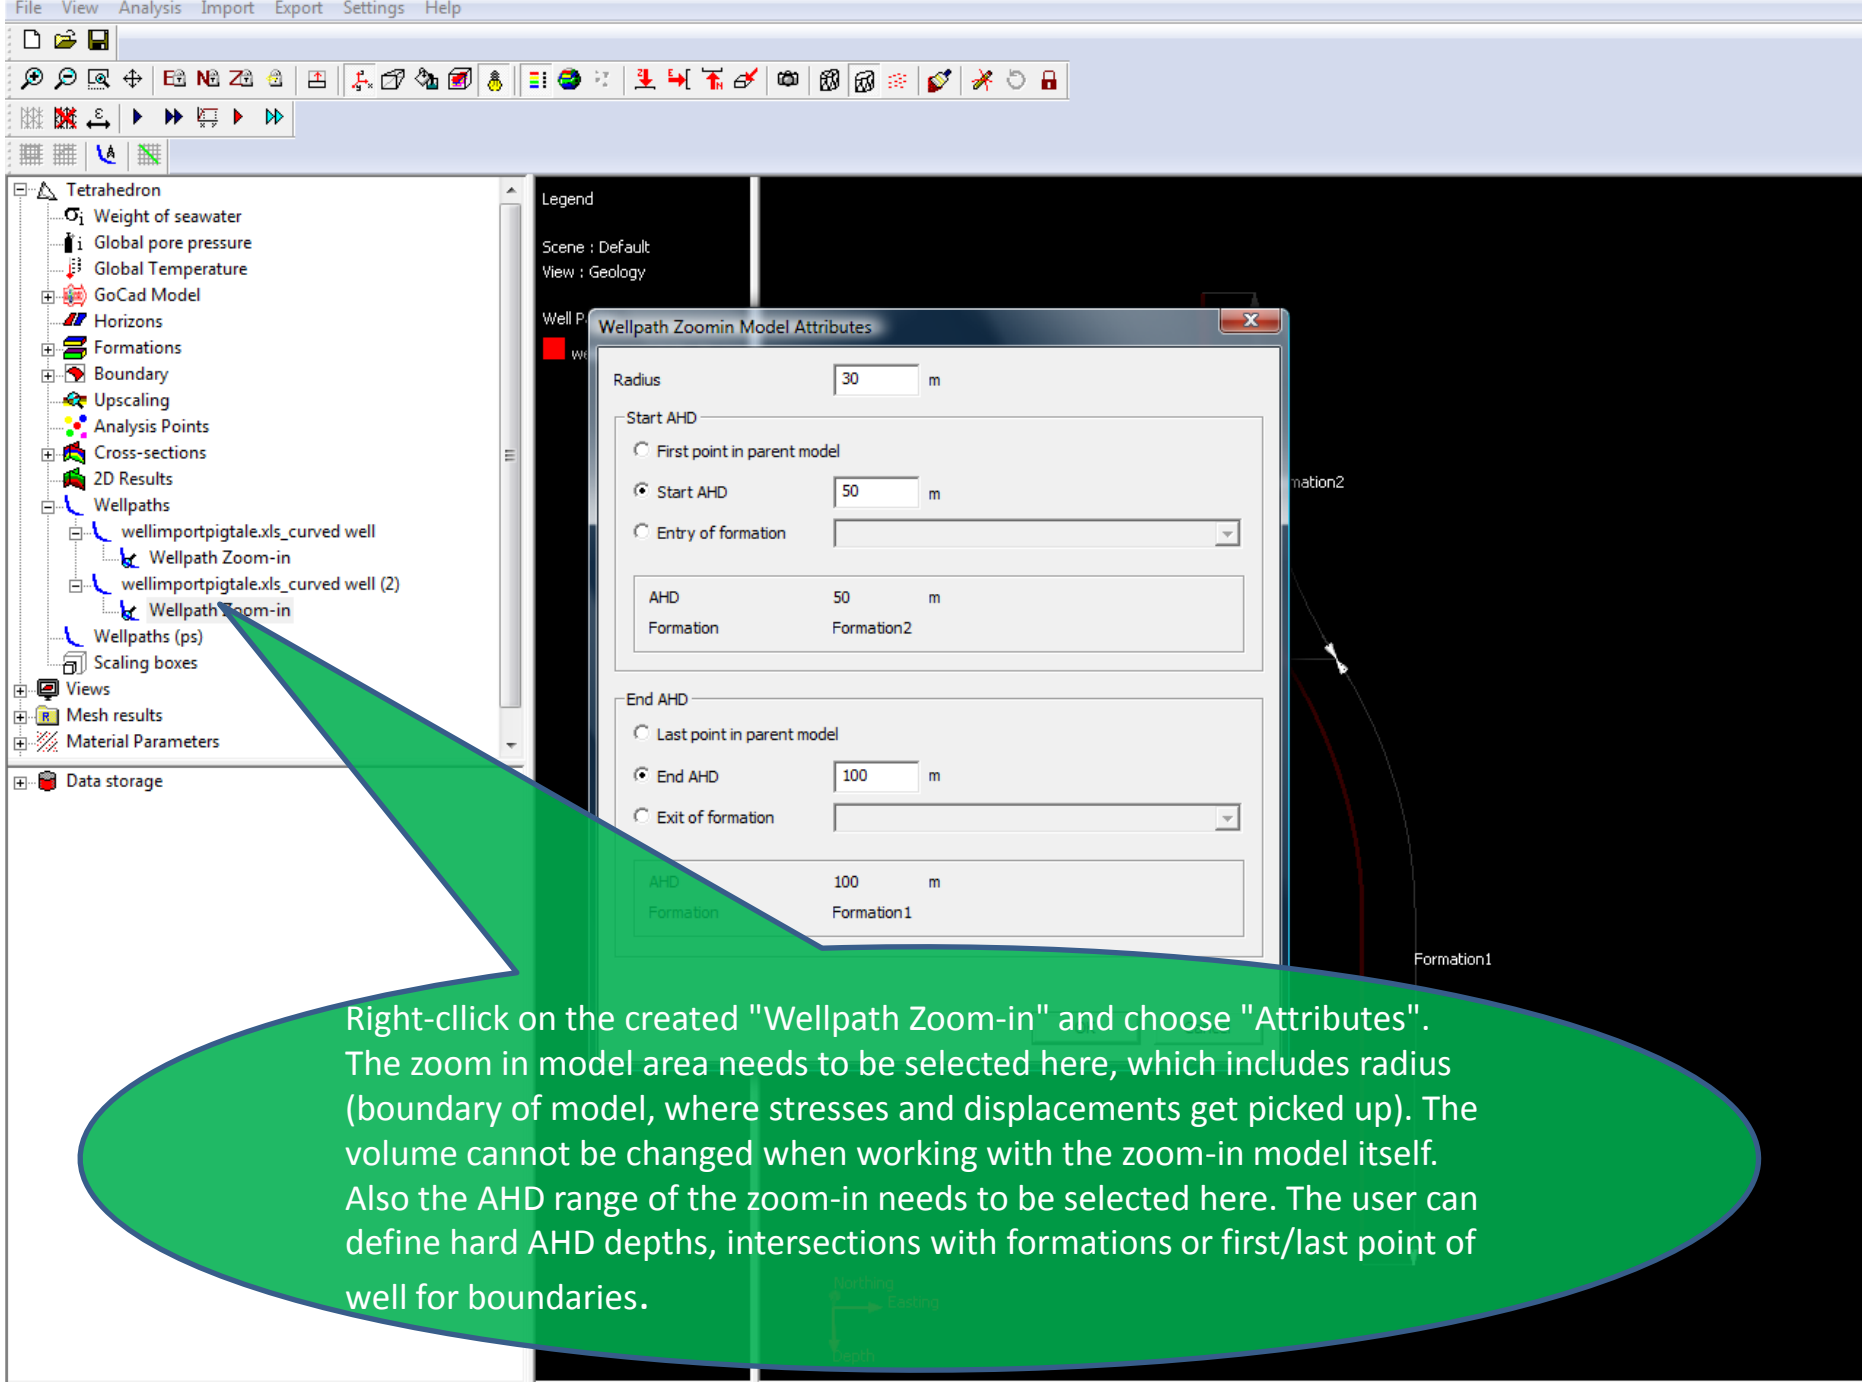

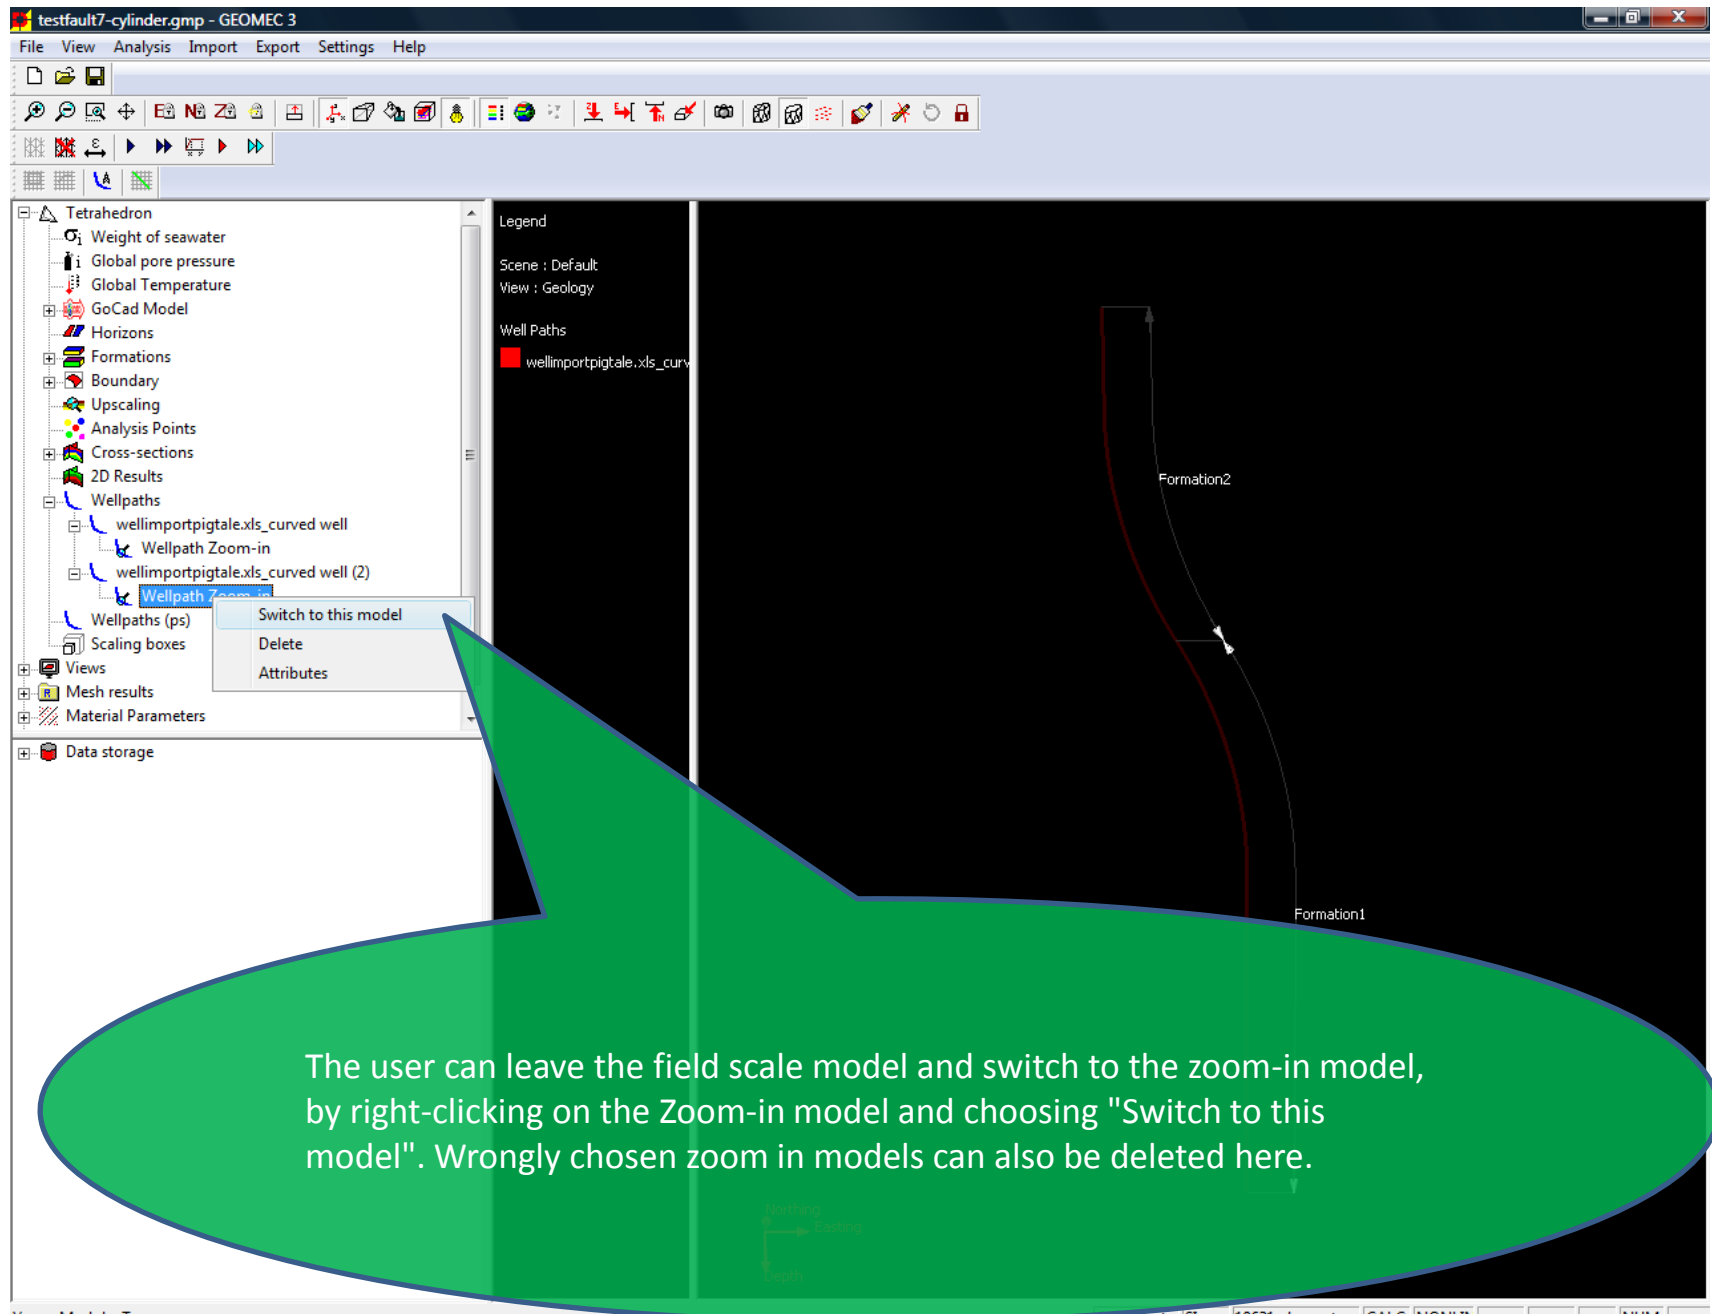


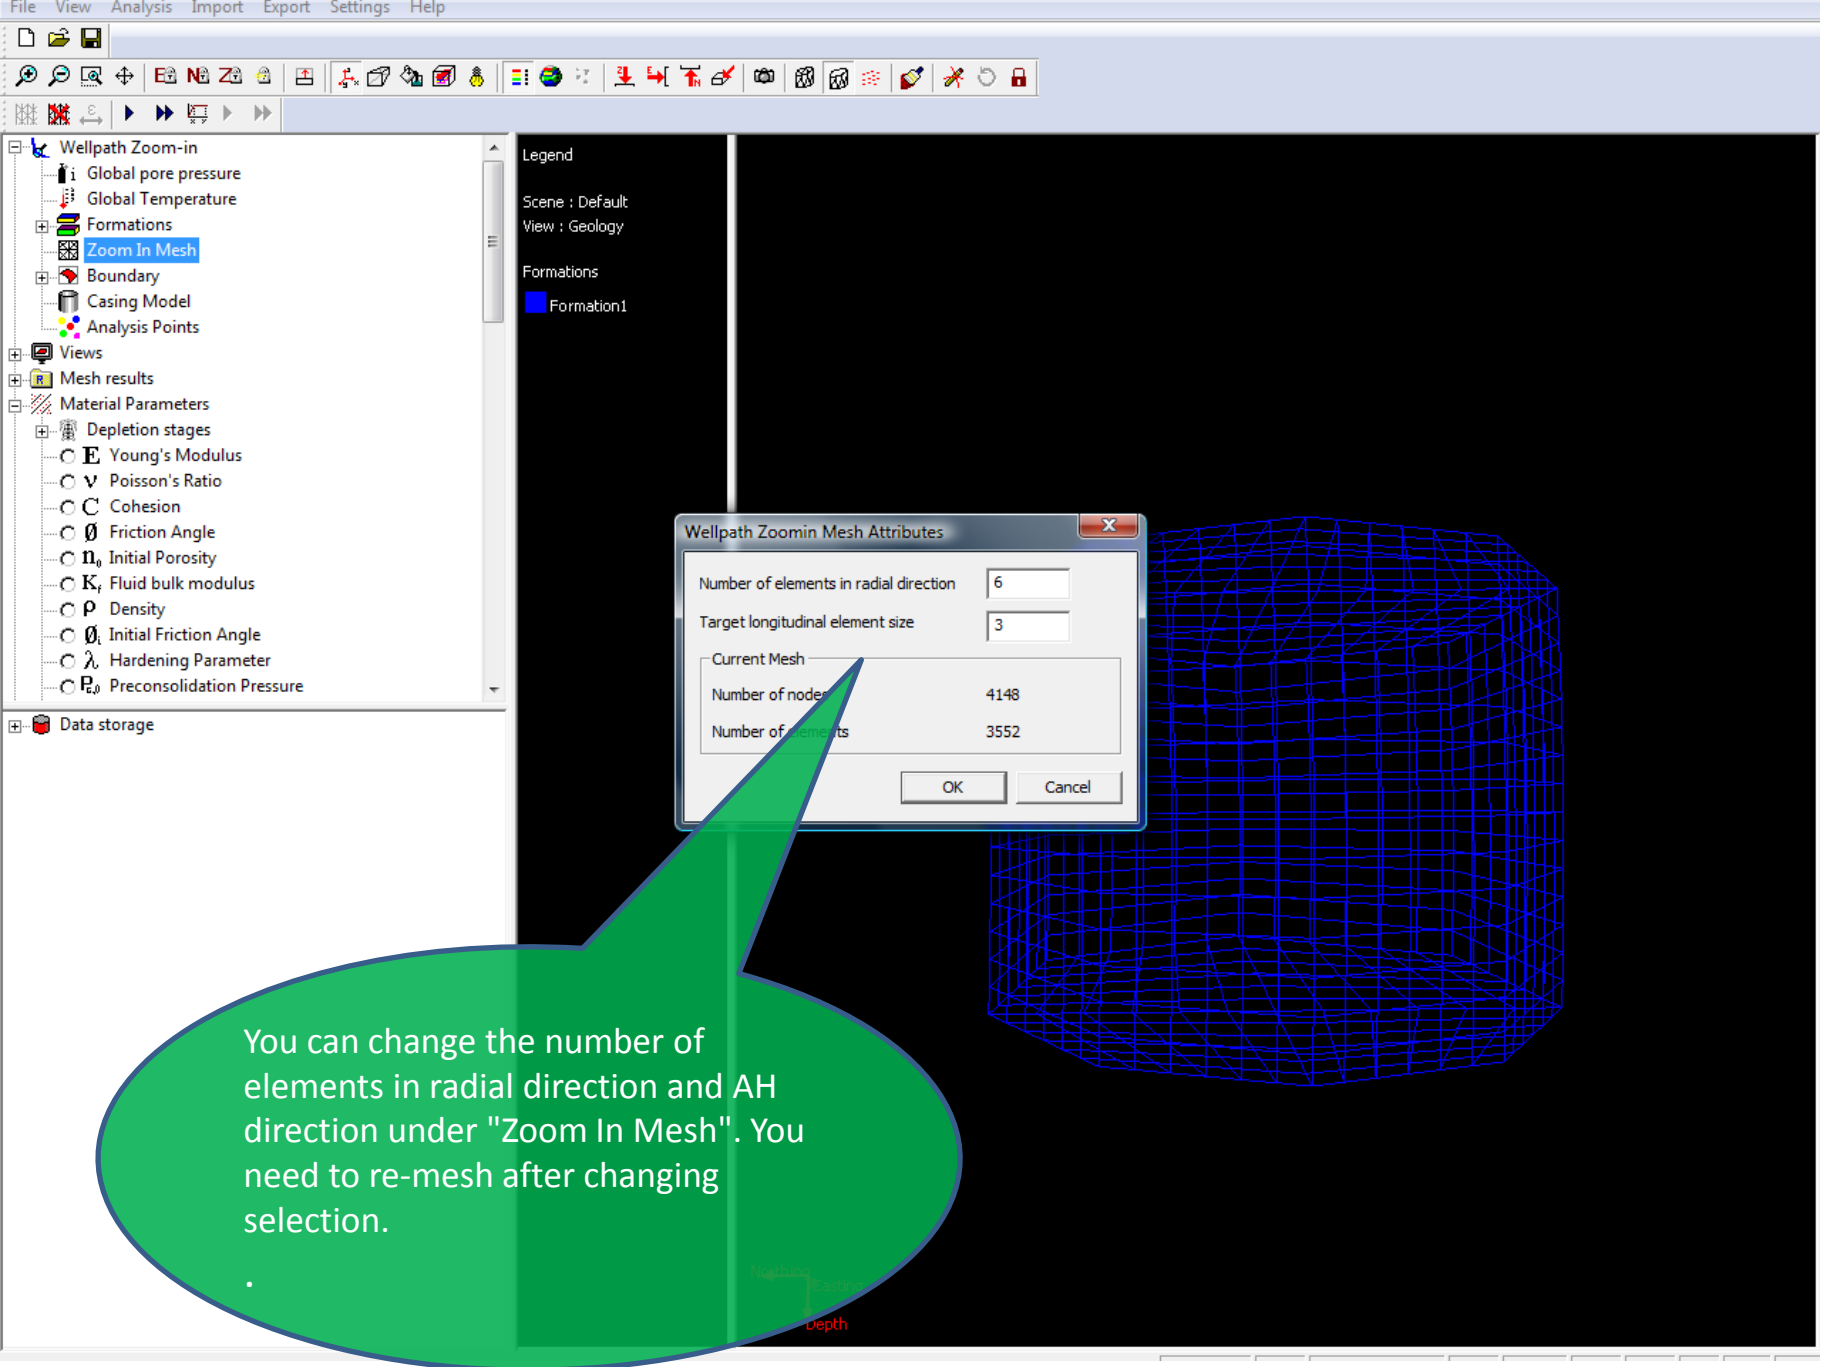


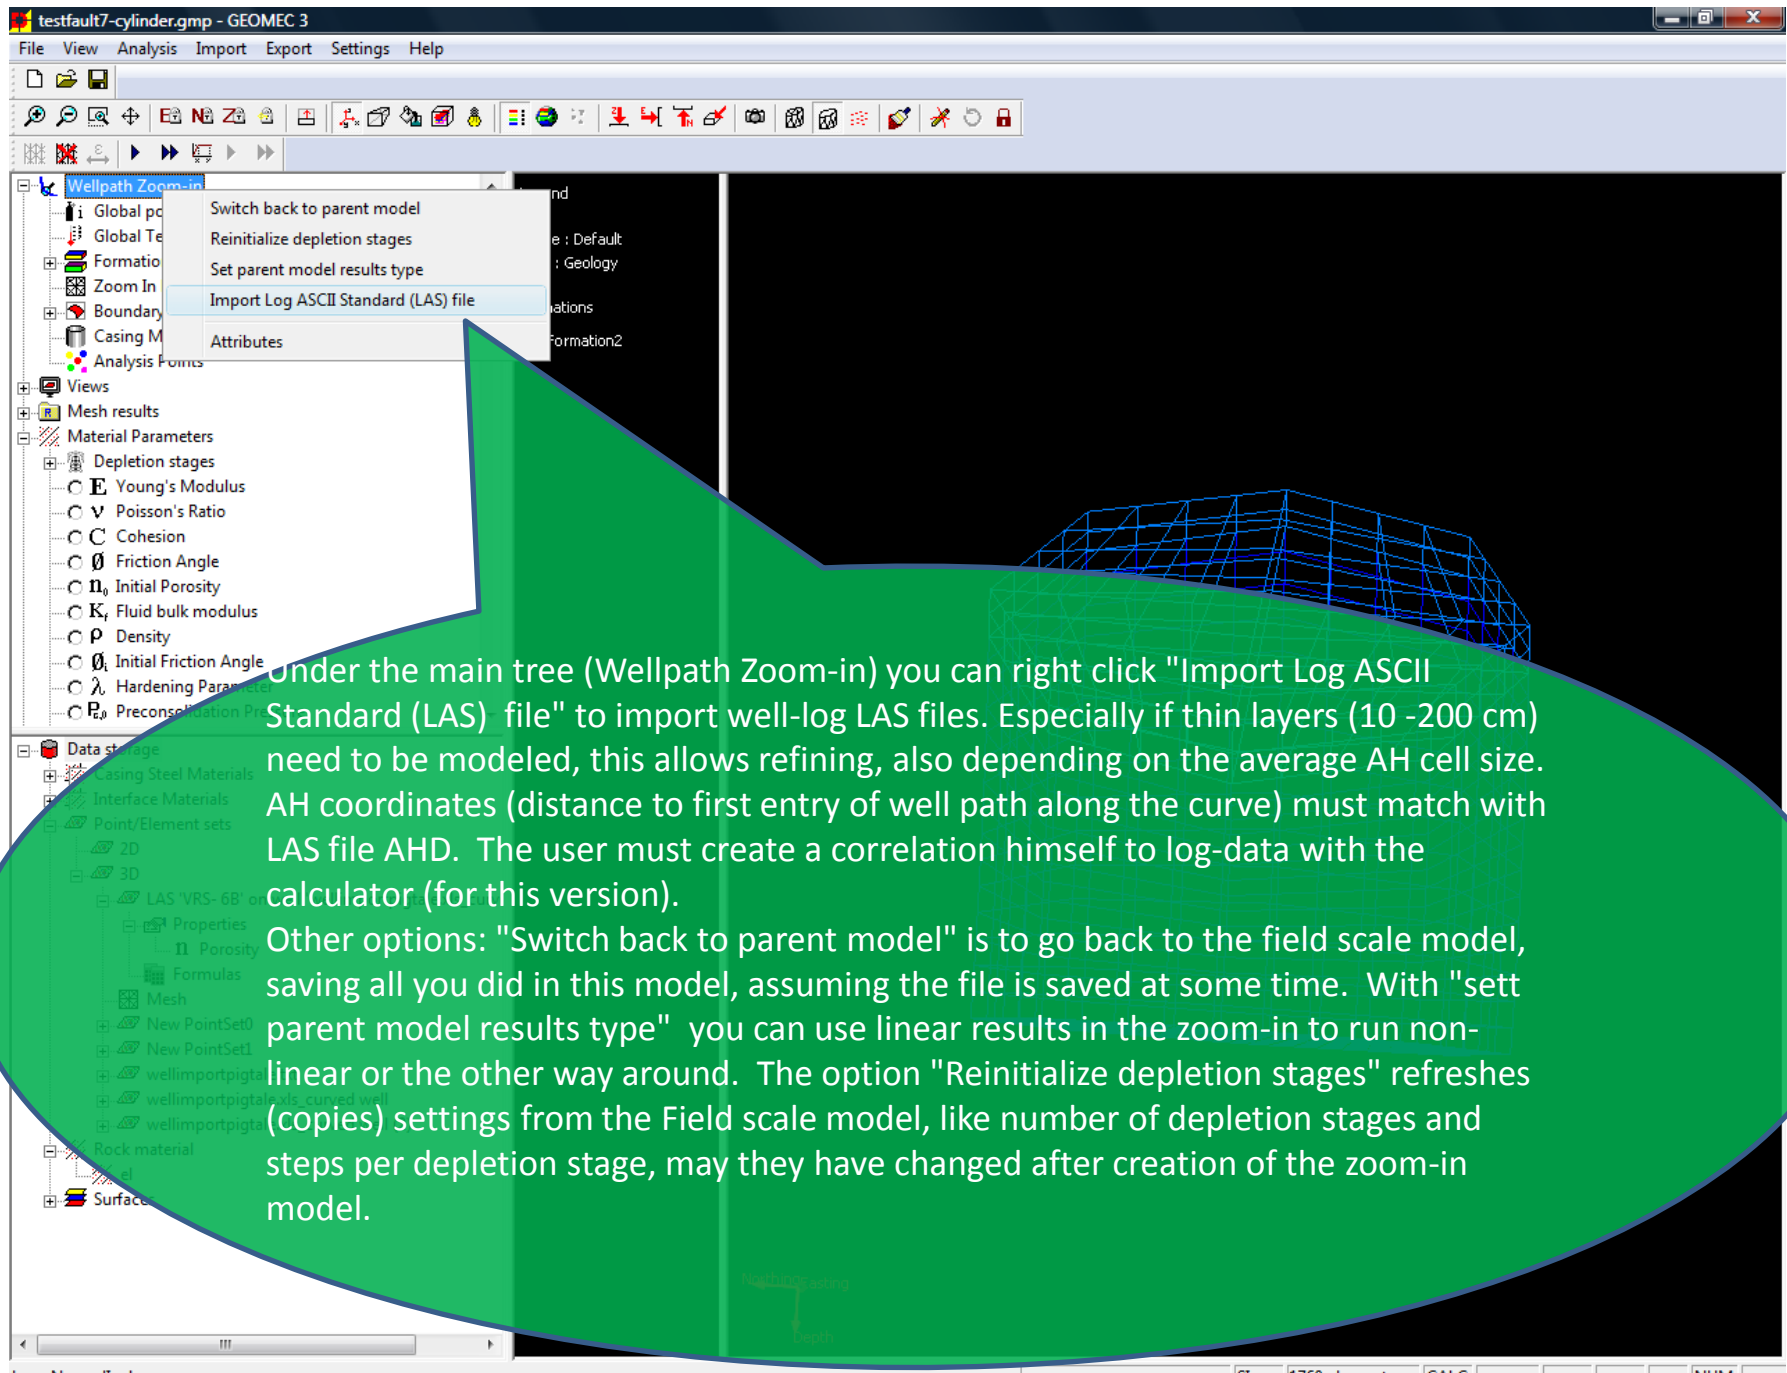

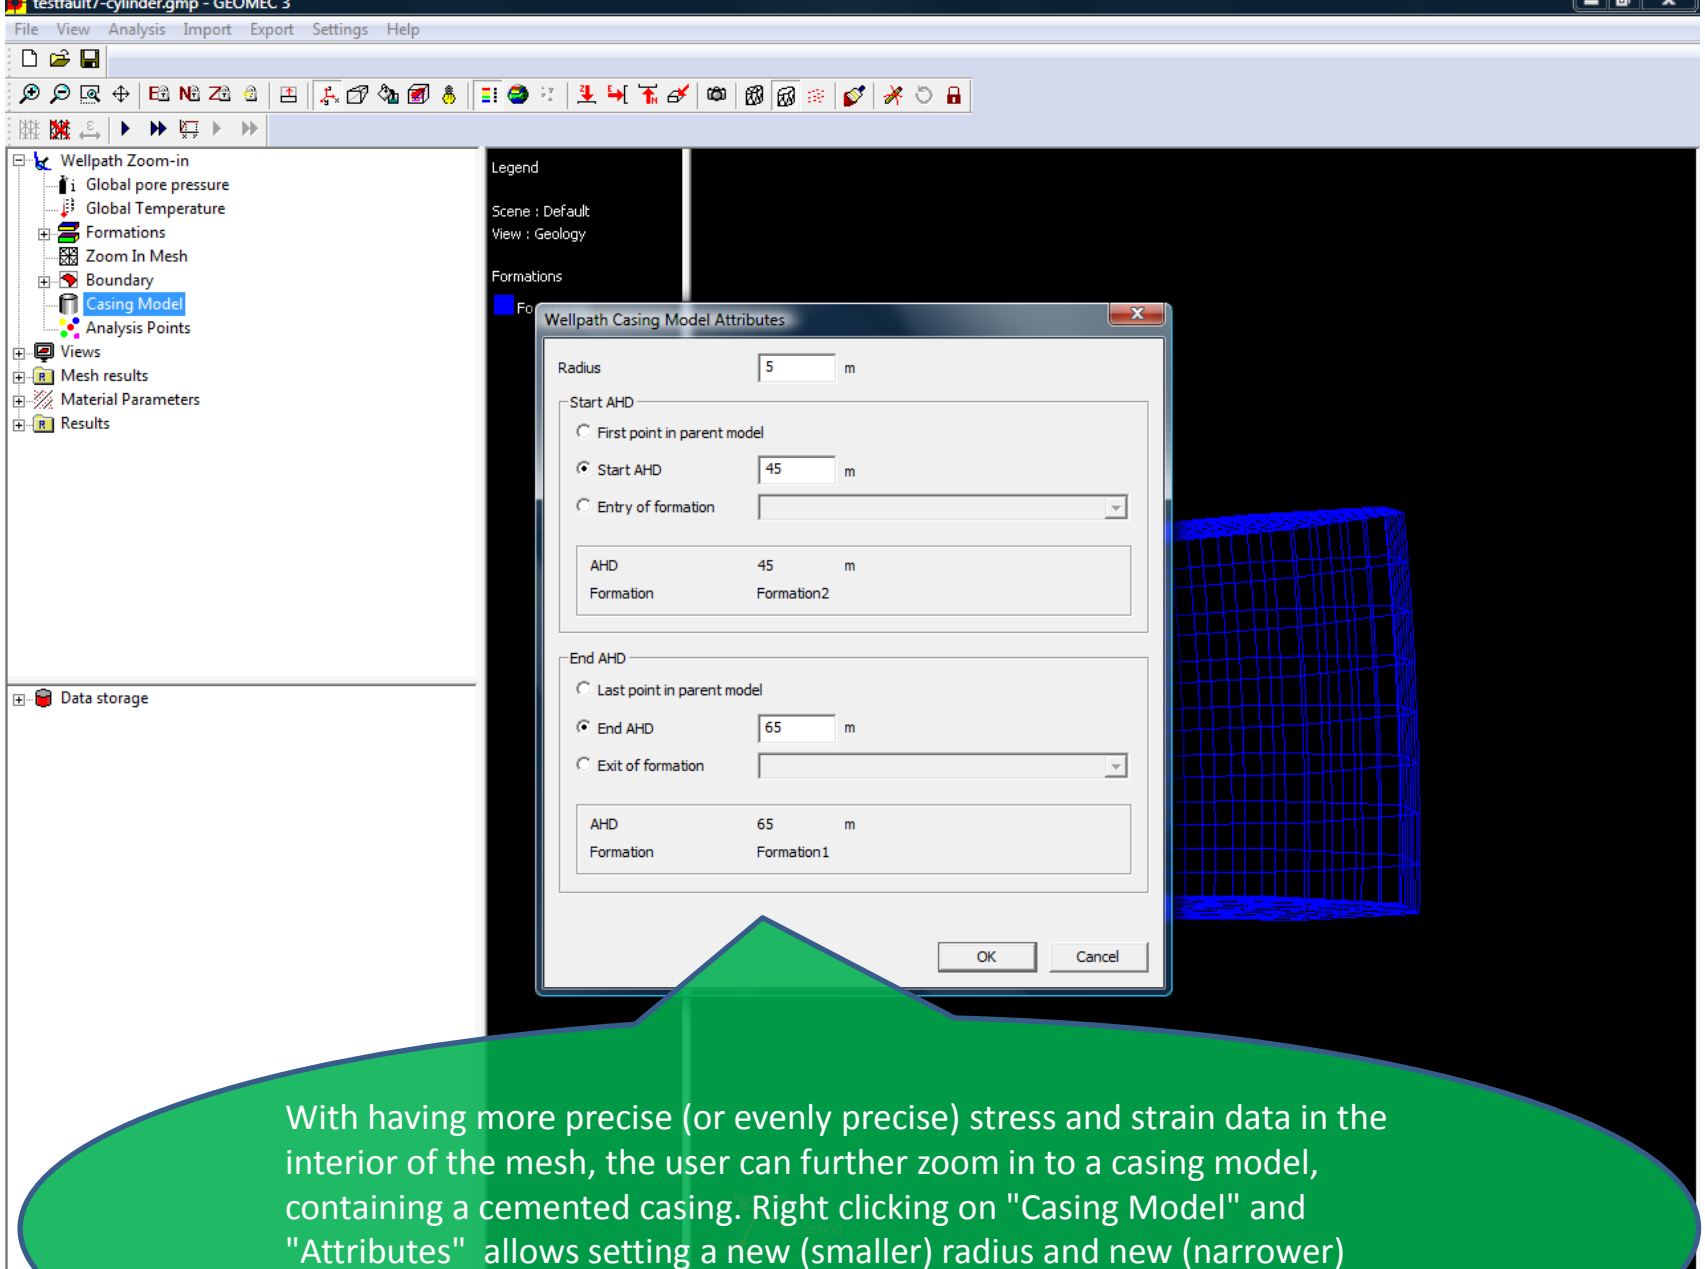

With having more precise (or evenly precise) stress and strain data in the interior of the mesh, the user can further zoom in to a casing model, containing a cemented casing. Right clicking on "Casing Model" and "Attributes" allows setting a new (smaller) radius and new (narrower) range of AHD to look at what the deformation does to the borehole and the casing. Concentric casings are not (yet) possible.

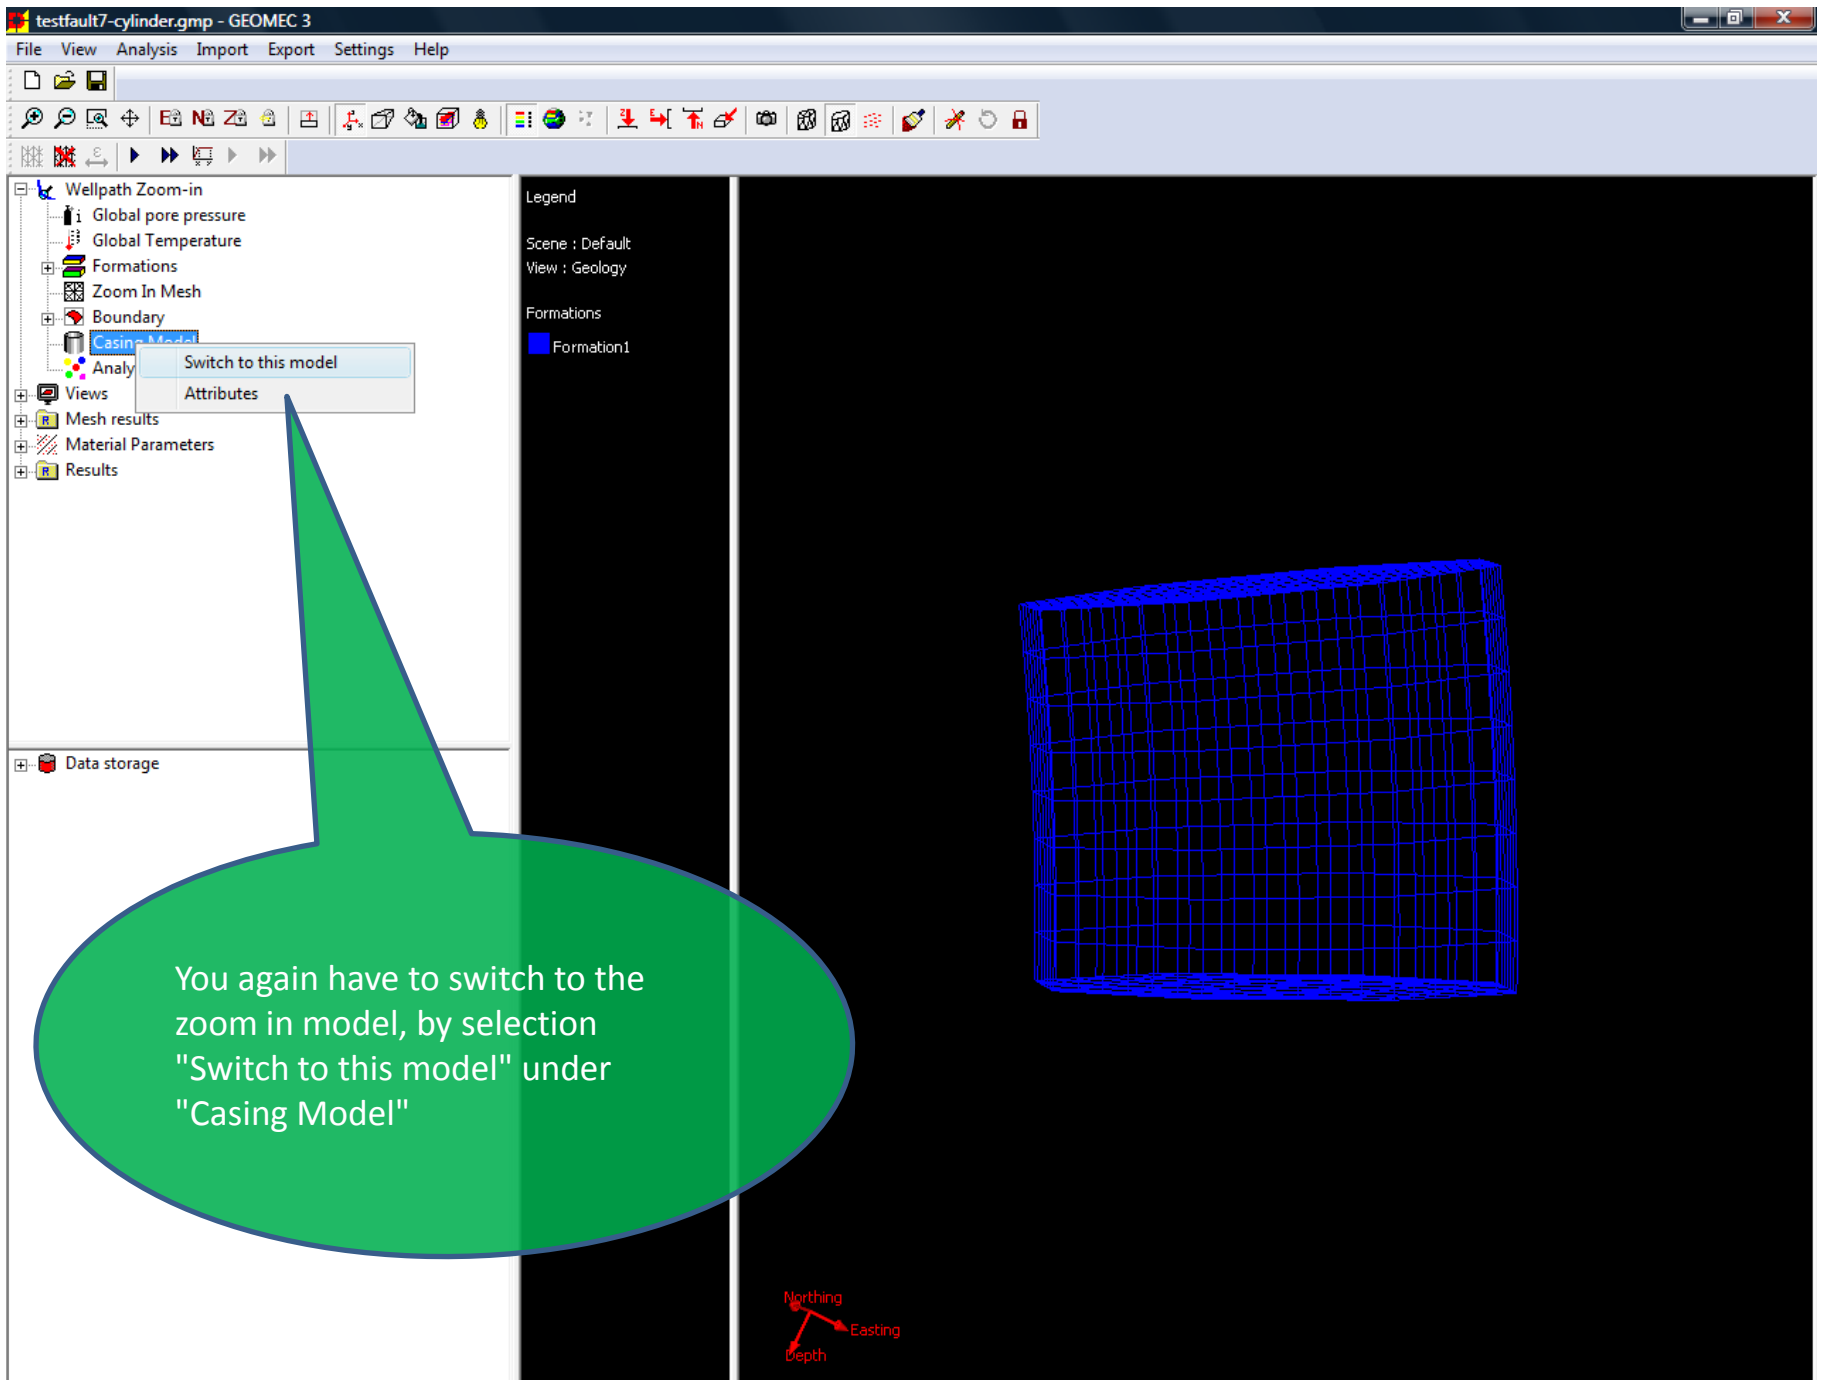

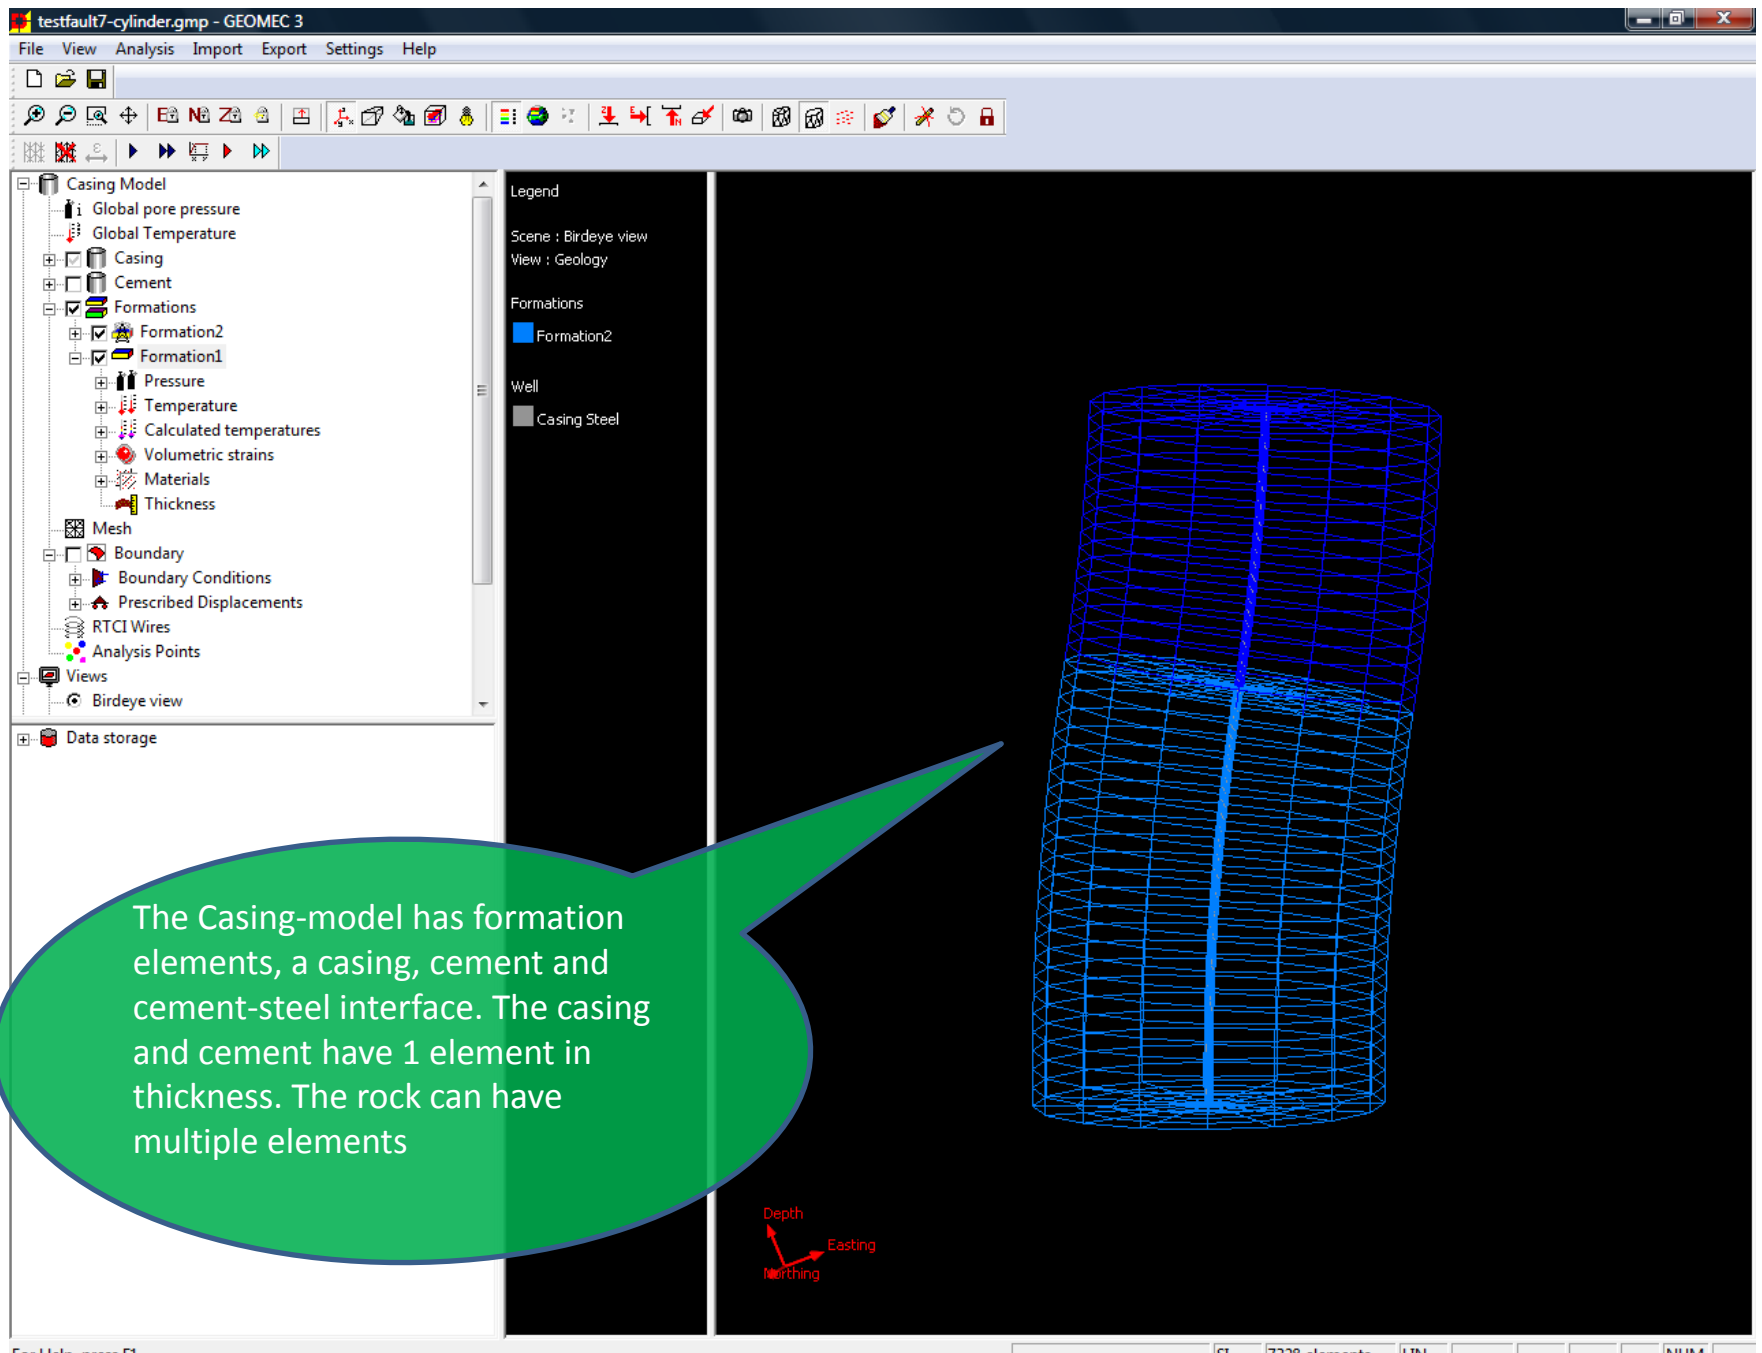



Casing Model

- Global pore pressure
- Global Temperature
- Casing
- Cement
- Formations
 - Formation2
 - Formation1
- Pressure
- Temperature
- Calculated temperatures
- Volumetric strains
- Materials
- Thickness
- Mesh
- Boundary
 - Boundary Conditions
 - Prescribed Displacements
- RTCI Wires
- Analysis Points
- Views
 - Birdeye view
- Data storage

Legend

Scene : Birdeye view
View : Geology

Formations

Formation2

Well

Casing

Wellpath Casing Mesh Attributes

Outer casing diameter 7": 0.1778 m

Casing thickness 0.01 m

Drill hole diameter 0.25 m

Number of rock elements in radial direction 7

Number of elements in tangential direction 16

Target longitudinal element size 0.5 m

Current Mesh

Number of nodes 8256

Number of elements 7328

OK

Cancel

The mesh can be tuned by choosing "Attributes" under "Mesh". The casing diameter can be selected, as well as wall thickness. The drill hole diameter determines the thickness of the cement layer. The number of rock elements in radial direction as well as the number of tangential elements can be changed. Also the length of the element can be changed. Remember that a casing steel element with 1 cm thickness can not have 10 meter elements in AH direction. Calculations will not render useful information.

