USER MANUAL

All Sessions

with a guide to Call Detail

How to find a call or data session in the list, open it, and investigate it in Call Detail: the signal chart, the tables, signalling and comments.

Covers	All Sessions list, Call Detail (in depth), Data Detail (entry point only)
Intended for	Anyone who reviews drive-test calls and sessions in the app
Companion	Summary Tab — User Manual
Date	24 September 2026

1. Overview


The **All Sessions** tab lists everything recorded during a drive or walk test: **voice calls** at the top and **data sessions** below. From the list you open one item to see its full story.

The tab has three views, switched from the bar at its top:

View	What it shows	Available when
All Sessions	The filters and the two lists (calls and data sessions).	Always
Call Detail	Everything about one voice call: radio, signalling, handovers, KPIs, map, comment.	You have clicked a call
Data Detail	Everything about one data session.	You have clicked a data session

> **Share a call:** when Call Detail is open, the browser address contains the call's SessionId. Copy the address and send it; the other person opens exactly the same call (they need the same database and collections selected).

2. The session list

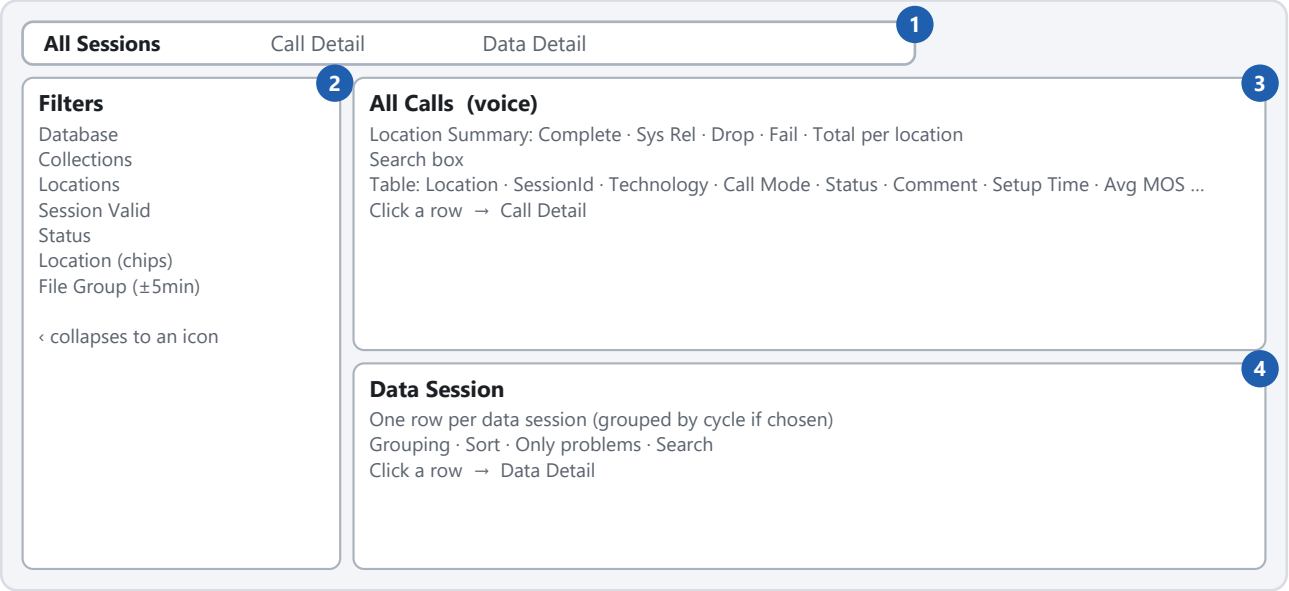

2.1 Filters

The filter column on the left can be collapsed to a small icon to give the lists more room. The first three filters reload data from the database; the others filter what is already loaded, instantly. All filters work together (a row must match all of them).

Filter	What it does
Database	Choose the database. Clears the collections and locations.
Collections	Tick one or more collections. *Select all* and *Clear* are available.
Locations	Limit to specific locations. Nothing ticked = all locations.
Session Valid	All / only valid (1) / only not valid (0) calls.
Status	Completed, Drop, Fail, Sys Release. Tick several to see any of them.

Filter	What it does
Location (chips)	Quick filter by location group (Data, Free + GSM (Voice)). Also filters the data sessions.
File Group (±5min)	Shows one *run*: the voice and data files that were recorded together (started within 5 minutes of each other). The chip shows the time range and how many voice and data sessions it contains.
Search	Free text over the call table (location, SessionId, comment, ...).

> **Device names (Location):** the Location chips group the devices by the words in their name (upper or lower case does not matter). A **voice** device must contain the word **free**, **gsm** or **voice** (for example *Cosmote Free A*, *Vodafone GSM A*, *Nova Voice A*) and is shown under **Free + GSM (Voice)**. A **data** device must contain the word **data** (for example *Nova Data A*) and is shown under **Data**. A location without one of these words appears only under **All**.

2.2 All Calls (voice)

- **Location Summary** next to the title: a small table with Complete / Sys Rel / Drop / Fail / Total per location, for the rows currently shown.
- The table columns are: Location, SessionId, Technology, Call Mode, Call Type, Call Dir, Status, Comment, Setup Time, Avg MOS, Call Start Time, Call Duration, CollectionName. On a phone the rows are shown as cards.
- **Click a row** to open it in Call Detail. The last row you clicked stays highlighted when you come back.


2.3 Data Session

- Each row is one data session with its average DL / UL throughput, RTT and video MOS, plus the worst values. Expand a row to see every test type in it.
- A **cycle** is one full round of the data tests. Turn on **Group by cycle** to see cycle headers; a cycle with missing sessions shows as partial (for example 4/6).
- **Only problems** keeps sessions that have failures or are not valid. **Sort** can bring the most failures, the lowest DL or the highest RTT to the top.
- **Click a row** to open it in Data Detail.

Colour	DL (Mbps)	UL (Mbps)	RTT (ms)	MOS	Success rate
	20 or more	10 or more	50 or less	4 or more	98 % or more
	5 to 20	2 to 10	50 to 150	3 to 4	90 % to 98 %
	below 5	below 2	above 150	below 3	below 90 %

3. Call Detail at a glance

Call Detail shows the whole story of **one** voice call on a single time axis. The panels appear from top to bottom as below. Dashed panels appear only when they apply.

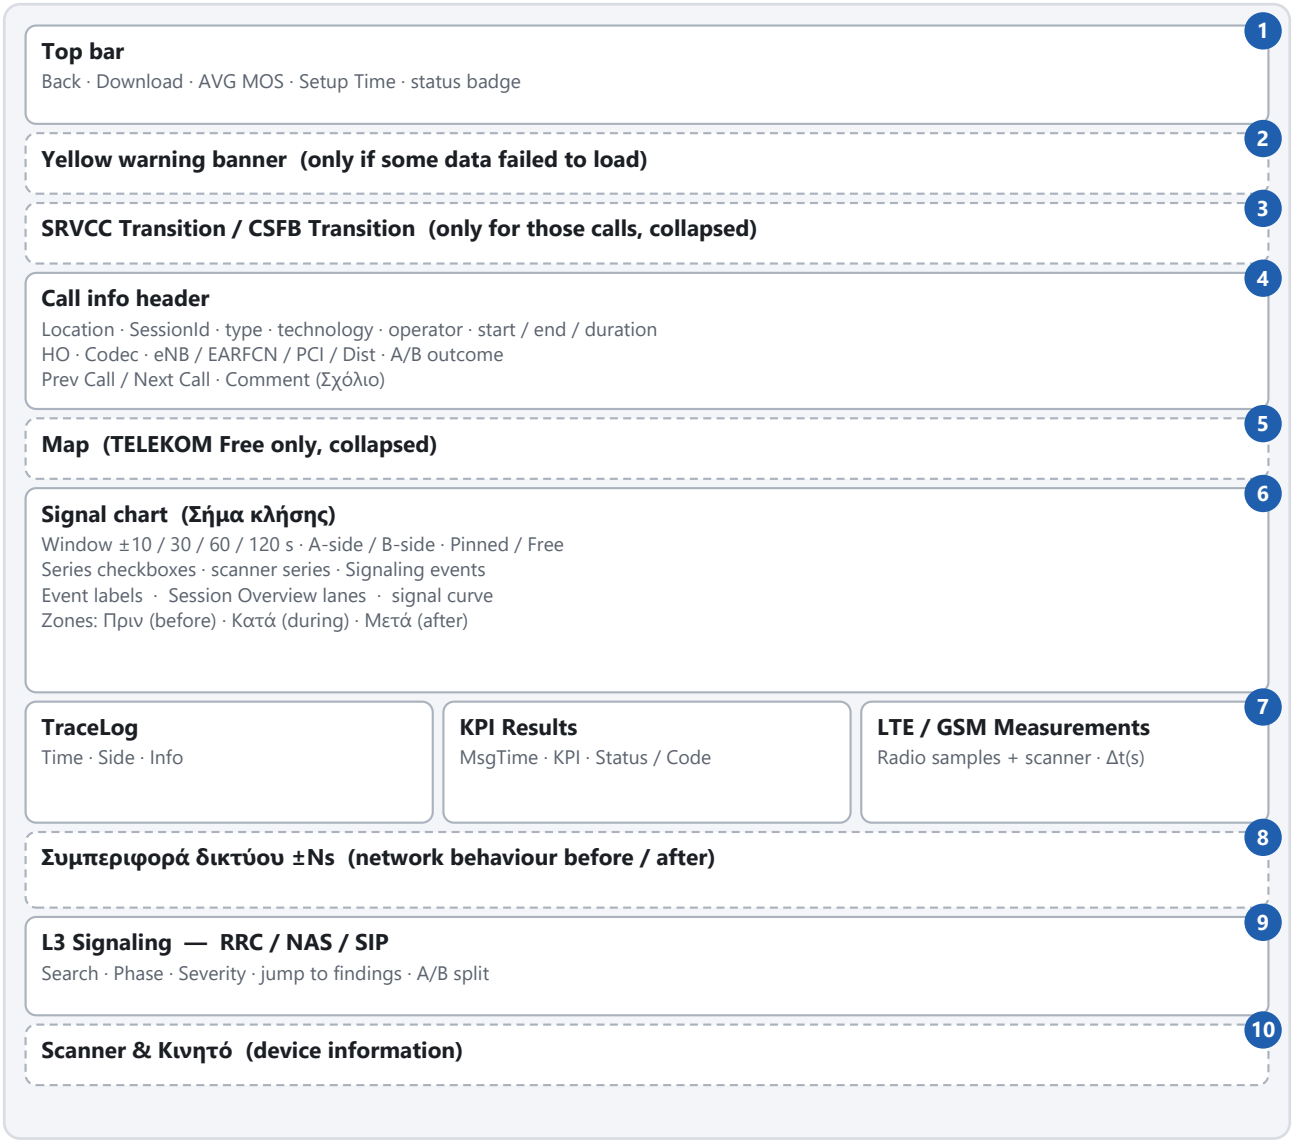

#	Panel	Section
1	Top bar	4.1
2	Warning banner	9
3	SRVCC / CSFB Transition	6
4	Call info header, navigation and comment	4.2 – 4.4
5	Map	7
6	Signal chart	5
7	TraceLog, KPI Results, Measurements	8.1 – 8.3
8	Network behaviour before / after	8.4
9	L3 Signaling	8.5
10	Scanner & device	8.6

> **The key idea — one shared cursor.** Move the mouse over any row of any table (L3, TraceLog, KPI, Measurements) or over the map, and the chart draws a vertical line at that moment. Move over the chart, and the matching row lights up in every table. This is how you connect *what the signal did* with *what the network said*.

4. The call header

4.1 Top bar

A back arrow to the list, three quick metrics — **Download**, **AVG MOS** (hover to see the individual MOS samples) and **Setup Time** (orange if above 500 ms) — and the call's status badge.

4.2 Call info

Line	Content
Title	Location · SessionId (for example *TELEKOM Free A · 123456*).
Details	Call type · technology · operator, then '**Έναρξη** (start), **Λήξη** (end) and the duration.
Signalling strip	**HO**: handover results with their duration in ms (green = success). **Codec**: last UL and DL voice codec and rate. **eNB / EARFCN / PCI / Dist**: serving LTE cell and distance to the matched antenna. **A / B**: how each side of the call ended, with its cause code.

4.3 Prev Call / Next Call

Move to the previous or next call of the same recording without going back to the list. A button is grey when there is no call before or after. If the target call is hidden by your list filters, a message tells you so instead of opening an empty page.

4.4 Comment (Σχόλιο)


1. Pick a quick tag from **Γρήγορη επιλογή...** (quick choice) or type your own text.
2. Click **Αποθήκευση** (save). **Ακύρωση** cancels.

Quick tag	Use it for
LC GSM / LC LTE	Low coverage in GSM / LTE
LQ GSM / LQ LTE	Low quality in GSM / LTE
CORE NETWORK (DEACTIVATE BEARER)	The core network released the bearer
FAKE UE STUCK / FAKE NO SYNC / FAKE EOF	Not a real network failure (device stuck, no sync, end of file)
— Εκκαθάριση σχολίου	Clear the comment

- A quick tag **replaces** the text in the box; it is not added to it.
- The new comment appears in the header and in the list straight away.
- A call marked not valid whose comment starts with **FAKE** is counted as a **Fake Event** in the Summary tab.
- Dropped or failed calls with no comment make their collection show in red in the Summary tab — commenting them clears the red.

5. The signal chart

The chart is the centre of Call Detail. It shows the signal before, during and after the call on one time axis, with the network events on top.

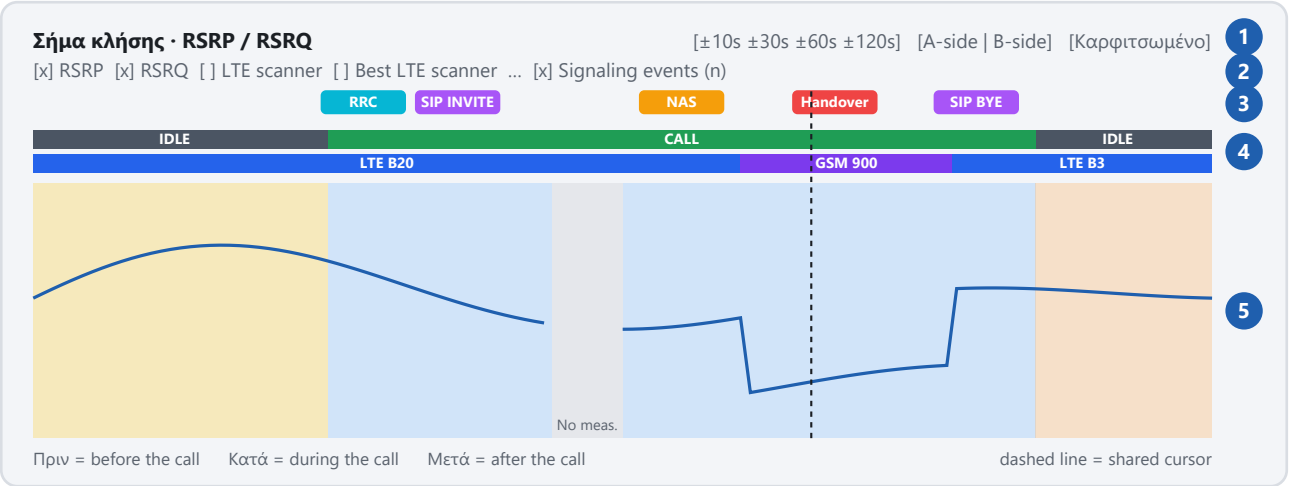

#	Part	How to use it
1	Title & controls	The title shows what is plotted: RSRP / RSRQ (LTE), RxLev / RxQual (GSM) or SS-RSRP / SS-RSRQ (5G). Then the controls (5.1).
2	Series	Tick or untick each line. Scanner lines (LTE, GSM, 5G scanner and *Best* scanner) are off by default. **Signaling events (n)** shows or hides the labels.
3	Event labels	One label per L3 / SIP / NAS / handover message. When labels are crowded some are hidden, but SRVCC / CSFB handovers are always shown.
4	Session Overview	Two lanes: **IDLE / CALL**, and the technology / band in use (for example LTE B20 → GSM 900).
5	Curve & zones	Signal strength and quality. Background zones mark **Πριν** (before), **Κατά** (during, shaded) and **Μετά** (after) the call.

5.1 Controls

Control	What it does
±10s / ±30s / ±60s / ±120s	How much time before and after the call to show. Default ±60 s for CS (GSM) calls and ±30 s for the others. Changing it is instant.
A-side / B-side	Which phone of the call to look at. This choice applies to the **whole page**. B is greyed out when there is no B-side data.
Καρφιτσωμένο / Ελεύθερο	Pinned (default): the chart stays at the top while you scroll the tables, so the shared cursor is always visible. Free: the chart scrolls away with the page.

5.2 Event label colours

	Layer
	Handover / SRVCC
	SIP
	NAS
	RRC / RR

	Layer
🟩	Other

5.3 Gaps in the curve

- **No measurements**: the phone recorded nothing for more than 5 seconds. The curve is broken there on purpose instead of drawing a straight line across the gap.
- **No service** (red outline): the network reported no service during the gap — this is a network finding, not just missing data. No-service periods are also shaded light red behind the curve.
- *Best* scanner lines continue through the gaps: the scanner keeps measuring even when the phone does not.

6. SRVCC and CSFB transitions

These panels appear only for calls that move between LTE and GSM. They start collapsed; the one-line summary shows the handover type, its result and the interruption in ms. Click the title to open them.

Panel	Shown when	What you get when open
SRVCC Transition	The call mode is SRVCC (VoLTE call handed over to GSM)	A zoomed LTE → GSM chart with its own toggles (strength, quality, SINR, thresholds, window) and per-leg statistics: average / min / max for each side of the handover, radio gap and power change.
CSFB Transition	CSFB events are found in the call (even in calls listed as VoLTE or CS)	A card per side, with a tile per phase: redirect → radio fallback → technology change → service → return. Durations come from the CSFB KPIs.

7. The map

Shown only for **TELEKOM Free** calls, collapsed by default. Open it to see the GPS route coloured by signal strength and a dashed line to the antenna that served the call. The expand button opens a larger map in a pop-up. If no GPS was recorded the panel says **Χωρίς GPS** (no GPS).

Route colour	LTE (RSRP)	GSM (RxLev)
🟩	−115 dBm or better	−88 dBm or better
🟧	−115 to −120 dBm	−88 to −92 dBm
🟥	worse than −120 dBm	worse than −92 dBm

8. The tables

8.1 TraceLog

Tester log lines around the call: time, side (A/B), SessionId and the message. Useful to spot device or tool problems (for example the recording stopping).

8.2 KPI Results

The KPIs the measurement system calculated for this call: time, KPI name, status / code and values. **Click a row** to see all its fields (Value1/2/5, Counter, EndTime, IDs).

8.3 LTE / GSM Measurements

The phone's radio samples during the call, with the matching scanner values when available.

Mode	Columns
LTE	EARFCN · RSRP · RSRQ · MsgTime, plus **RSRP Scanner**, **RSRQ Scanner** and **Δt(s)** when the scanner measured the same cell
GSM	BCCH · Band · RxLevSub · RxQualSub, plus **RxLev Scanner**, **BSIC** and **Δt(s)** when the scanner measured the same cell

- **Δt(s)** is the time between the phone sample and the scanner sample it was matched with (up to 10 s). A small Δt means the comparison is reliable.
- A big gap between phone and scanner values for the same cell usually points to the phone (antenna, body loss, device) rather than the network.
- **LTE ↔ GSM** switch: only shown when the call has both (SRVCC / CSFB). **A-side ↔ B-side** switch: B is greyed out, with a tooltip, when B has no data for this technology.
- GSM warning colours: RxLevSub 90 or more (warning) / 95 or more (red); RxQualSub 5 (warning) / 6 or more (red).

8.4 Συμπεριφορά δικτύου ±Ns (network behaviour before / after)

One table of every technology change in the call **and** in the seconds before and after it, for both phones. Columns: **Πλευρά** (side A/B), **Από** (from), → **Σε** (to), Band, LTE CA, Duration, **Φάση** (before / during / after). Rows of the other phone are shown faded. It follows the ±N window of the chart.

8.5 L3 Signaling — RRC / NAS / SIP

Tool	What it does
Search	**Αναζήτηση μηνύματος…** — find a message by name.
Φάση (phase)	Show only messages before, during or after the call.
Σοβαρότητα (severity)	Show only messages of a given severity (*όλα* = all).
Ευρήματα (findings)	Arrows jump to the previous / next DROP, FAIL or ABNORMAL message. **τέλος** jumps to the end of the call — usually where a drop is explained.
Timeline strip	Where each message falls in time; *0s* = call start.
Rows	Φάση, Δευτ. (seconds from start), Τεχν. (technology), Layer, Dir (↓ downlink / ↑ uplink), Μήνυμα (message), PCI, ARFCN, SIP, Ειδοπ. (notes). Click a row to see the full raw message.
A / B split	When both phones have signalling, the two sides are shown next to each other.

8.6 Scanner & Κινητό (scanner & device)

For each side: device model, IMEI, firmware and device type. Useful when a problem repeats on one phone only.

9. Example: investigating a dropped call

1. In **All Sessions**, set **Status** to *Drop*. Use **File Group** to stay inside one run.
2. Click the call. In the header, read the **A / B** outcome and cause code, and the **HO** results.
3. On the chart, look at the end of the **Κατά** zone: is the signal falling? Is there a **No service** band? Did the technology lane change just before the drop?
4. In **L3 Signaling**, click **τέλος** or the **Ευρήματα** arrows to jump to the failure message. Hover it: the chart cursor shows the signal at that moment.
5. Compare with the scanner (tick *Best LTE scanner* / *Best GSM scanner*). If the scanner also shows weak signal, it is coverage; if the scanner is good but the phone is weak, suspect the device.
6. Switch to **B-side** to check the other phone.
7. Write a **comment** (for example *LC LTE*) and save. Use **Next Call** to continue.

10. Troubleshooting

What you see	What it means / what to do
Yellow banner *Μερικά API panels απέτυχαν: …*	Some panels failed to load (for example a server timeout). The panels it names are empty because of the error, **not** because the call had no data. Open another call and come back, or reload the page, to retry.
Επιλέξτε μια κλήση από τη λίστα… in Call Detail	No call is selected, or your list filters now hide it. Go back to All Sessions and click a call.
Call Detail and Data Detail buttons are grey	Nothing is selected yet. Click a row in the list first.
B-side button is grey	The B phone has no data for this call or technology.
No measurements band on the chart	The phone recorded nothing for more than 5 s. Check TraceLog for tool problems.
Prev / Next shows a message instead of opening	The neighbouring call is hidden by your list filters. Relax the filters.
No map panel	The map exists only for TELEKOM Free calls.
Data sessions list is empty but calls load	The data sessions failed to load or none match the Location / File Group filter.