Purpose

This document provides the mapping from IPG stim ASIC channels to IPG header bore contact


Scope

The scope of this document is limited to the Model 2408 and 2412 IPGs.

References

- 1320-000050 IPG PCB
- 1211-000435 MODEL 2408 IPG
- 1211-000430 MODEL 2412 IPG

3x8 Header Configuration Channel Map

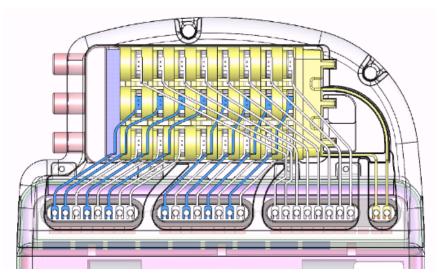

3x8 Header View, Back Side of IPG

| IPG Output | Position | Feedthrough | Flex Finger | Output | Stim ASIC |
|------------|--------------------|-------------|-------------|-----------|-----------|
| Channel | | Connection | Connection | Capacitor | Channel |
| Chan 1 | Bore 1, Position 1 | FT24 | FF24 | C94 | CH16 |
| Chan 2 | Bore 1, Position 2 | FT23 | FF23 | C93 | CH17 |
| Chan 3 | Bore 1, Position 3 | FT22 | FF22 | C92 | CH18 |