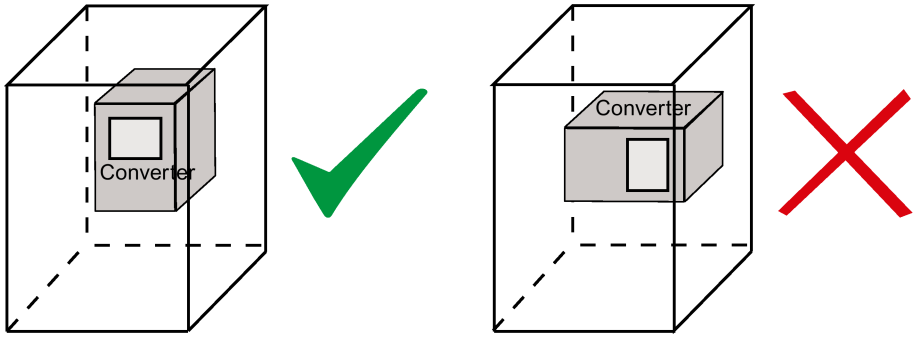
3.1 Mounting orientation and clearance

The converter must be mounted in an enclosed electrical operating area or a control cabinet.

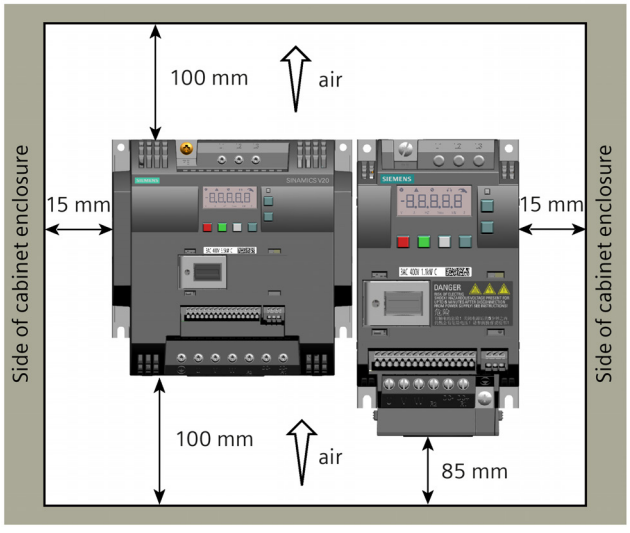
Mounting orientation

Always mount the converter vertically to a flat and non-combustible surface.



Mounting clearance

Minimum clearance at top	100 mm
Minimum clearance at bottom	100 mm (for frame sizes AA ... AD, B ... E, and frame size A without fan) 85 mm (for fan-cooled frame size A)
Minimum lateral clearance between multiple converters	0 mm
Minimum lateral clearance to the side of cabinet enclosure	15 mm



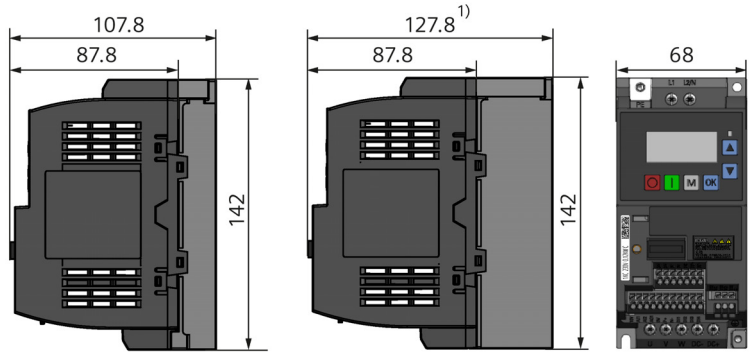
3.2 Mounting in a control cabinet

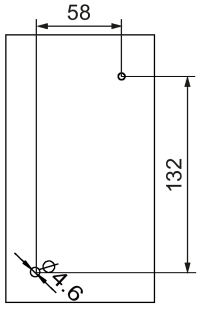
You can mount the converter directly on the surface of the mounting panel in a suitable control cabinet.

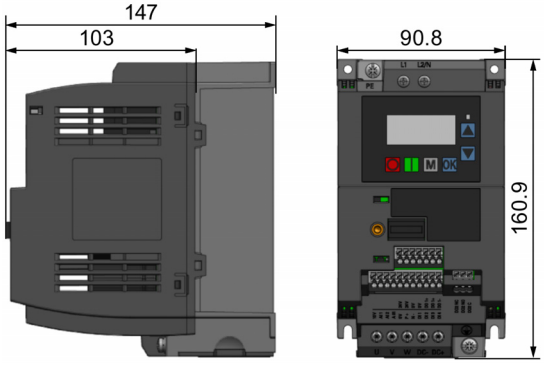
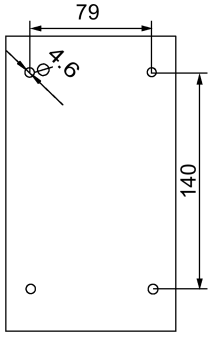
Two additional mounting methods are also available for different frame sizes. For more information, refer to the following sections:

- Push-through mounting (frame sizes B ... E) (Page 34)
- DIN rail mounting (frame sizes AA, AB, AC, A, and B) (Page 37)

Outline dimensions and drill patterns

<table>
<tr><th>Dimensions (mm)</th><th>Drill pattern (mm)</th></tr>
<tr><td>Frame size AA/AB</td><td></td></tr>
<tr><td> 

1) Depth of FSAB</td><td> 

Fixings: 2 x M4 screws, nuts, washers
Tightening torque: 1.8 Nm ± 10%</td></tr>
<tr><td>Frame size AC</td><td></td></tr>
<tr><td> 
</td><td> 

Fixings: 4 x M4 screws, nuts, washers
Tightening torque: 1.8 Nm ± 10%</td></tr>
</table>