Mechanical installation

3

Protection against the spread of fire

The device may be operated only in closed housings or in control cabinets with protective covers that are closed, and when all of the protective devices are used. The installation of the device in a metal control cabinet or the protection with another equivalent measure must prevent the spread of fire and emissions outside the control cabinet.

Protection against condensation or electrically conductive contamination

Protect the device, e.g. by installing it in a control cabinet with degree of protection IP54 according to IEC 60529 or NEMA 12. Further measures may be necessary for particularly critical operating conditions.


If condensation or conductive pollution can be excluded at the installation site, a lower degree of control cabinet protection may be permitted.

3.1 Mounting orientation and clearance

The inverter must be mounted in an enclosed electrical operating area or a control cabinet.


Mounting orientation

Always mount the inverter vertically to a flat and non-combustible surface.

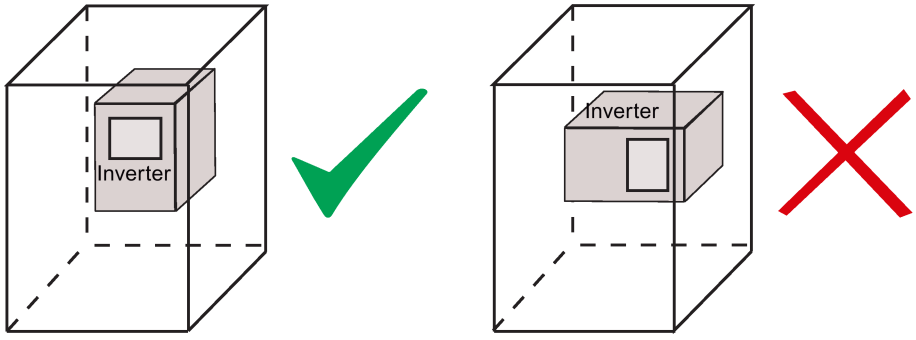

Mounting clearance

Top	≥ 100 mm
Bottom	≥100 mm (for frame sizes AA/AB, B to E, and frame size A without fan) ≥ 85 mm (for fan-cooled frame size A)
Side	≥ 0 mm

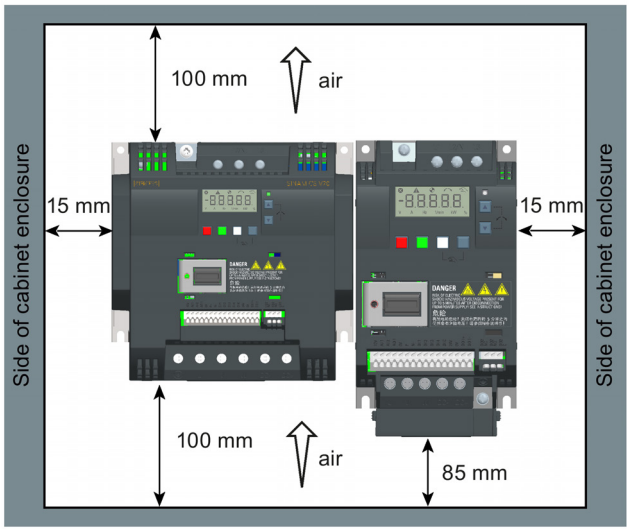



3.2 Cabinet panel mounting (frame sizes AA to E)

You can mount the inverter directly on the surface of the cabinet panel.

An additional mounting method is also available for different frame sizes. For more details, refer to the following section:

Push-through mounting (frame sizes B to E) (Page 26)

Outline dimensions and drill patterns

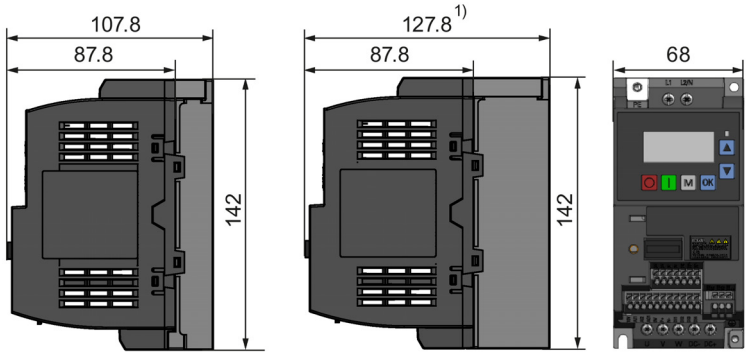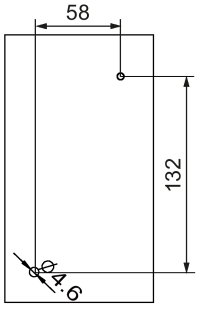Dimensions (mm)	Drill pattern (mm)
Frame size AA/AB	
 1) Depth of FSAB	 Fixings: 2 x M4 screws, nuts, washers Tightening torque: 1.8 Nm ± 10%