


Disassembly sheet and reparability index of the Trinity boat


Disassembly instructions

No. ARTICLE	NUMERO DE PIECE	QTE
1	ACS712_module.step	1
2	floor	1
3	batterie samer	1
4	servomoteur	1
5	ruddersupport	1
6	système de barre	1
7	2-star horn	2
8	servo pin	1
9	UNO R4 WIFI	1
10	magnetometer	1
11	ESC def	1
12	Arduino voltage sensor v1	1
13	flexible shaft	1
14	safran test 1	1
15	back of steering	1
16	Pièce2Assemblage floor	1
17	axe	1
18	propeller	1
19	2435S motor Brushless	1
20	Part Studio 11	1
21	tachymètre	1
22	IR_Proximity_Sensor	1
23	drive dog	1
24	shaft inside	1
25	coupleur moteur	1
26	support moteur	1
27	final roof	1
28	two	2
29	uno	2
30	trinity testing	1

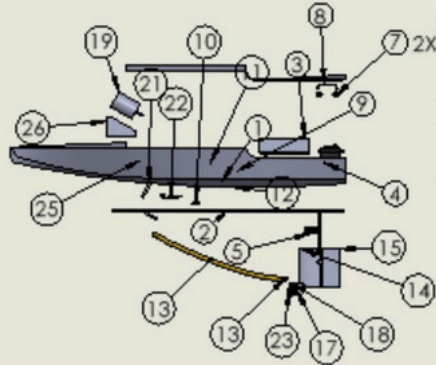

Required tools

The Requirements is:
Screwdriver, Phillips
screwdriver, and Adjustable
Wrench.

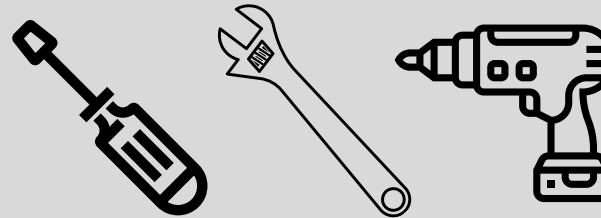

It is needed to wear protective
gloves :



Reparability index

Based on the different
criteria evaluated
including **documentation**,
disassembly, **parts**
availability, **pricing**, and
specificity, the reparability
index equal to:



Steps:

- remove the **battery** and the **Arduino**.
- Take out the **servomotor**, the **motor**, and all **sensors**.
- detach the **propeller**, the **rudder shaft** and the **cover**, leaving **hull** ready to be treated.



TRINITY BOAT notice

 P2 : Oscar Delesalle,
Manuel Neveu, Guillermo
Araujo, Aya Mekrane

16 December, 2025

