二维AI 缺陷检测快速入门

硬件组装

1. 支架组装

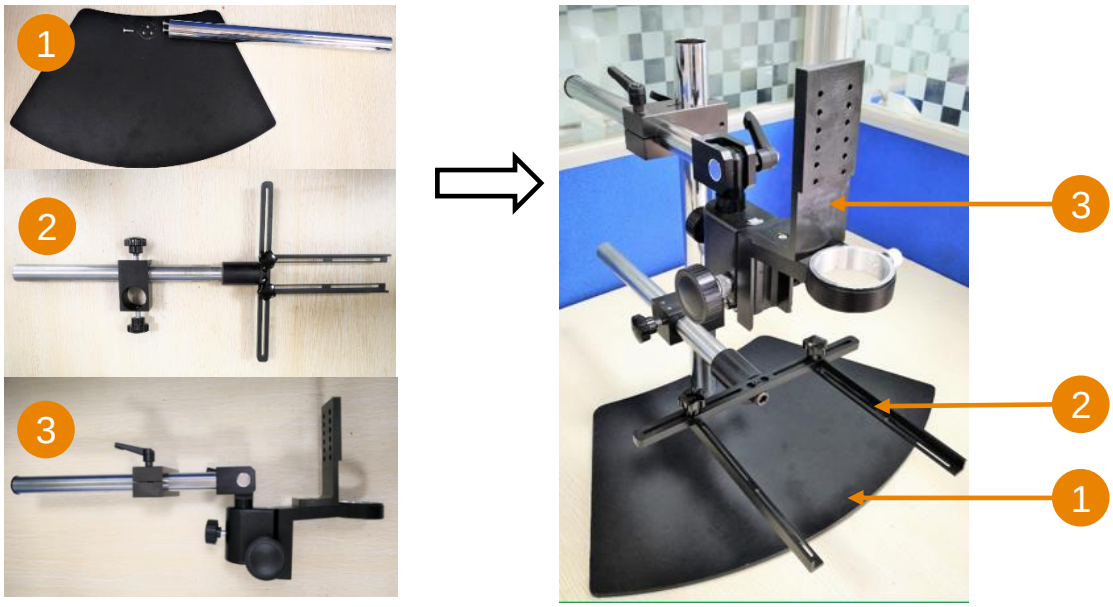

2. 支架，相机和照明单元组装

* 当你站在CCD正前方时，TE商标方向应与图片中的方向一致。请保证方向正确。

3. 照明单元的连接

4. 将相机连接至电脑

Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

软件安装

1. 确认电脑配置

推荐电脑配置:

- CPU: Intel i5 8th 系列或更好
- GPU: NVIDIA GTX 2060 6G 或更好
- ROM: >= 16 G
- 硬盘容量: >= 512 G, 固态硬盘更佳
- USB 3.0
- USB 端口 > 3
- Windows 10 及更高, 64 bit
- 屏幕 > 21 英寸
- 分辨率 >= 1080P
- 彩色显示

2. 请更新显示适配器驱动程序

https://www.nvidia.com/Download/index.aspx

3. 复制 “AIMV Package”文件夹到你的电脑 C:/ 盘

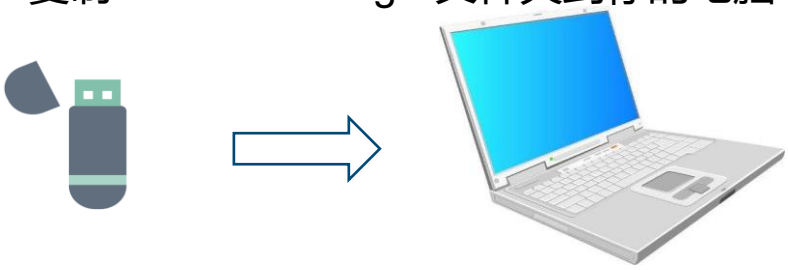

4.打开 AIEvironment_installer_V2 文件夹



5. 安装 “Step1-AIEnvironment_Installer_V2.1.exe”

❶双击 “Step1-AIEnvironment_Installer_V2.1.exe”

❷点击 “Install AI Environment Basic Version for CPU”

❸点击 “Yes” 来重启电脑

❹ 重新打开 “Step1-AIEnvironment_Installer_V2.1.exe”

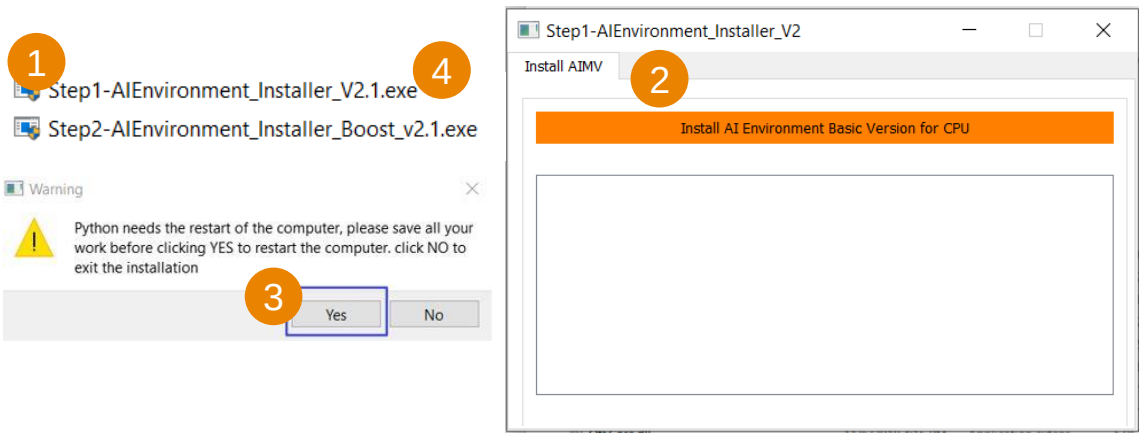

Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

❺ 选择 Custom (Advanced), 然后点击 “NEXT”

❻ 点击 “Yes” 以重启电脑

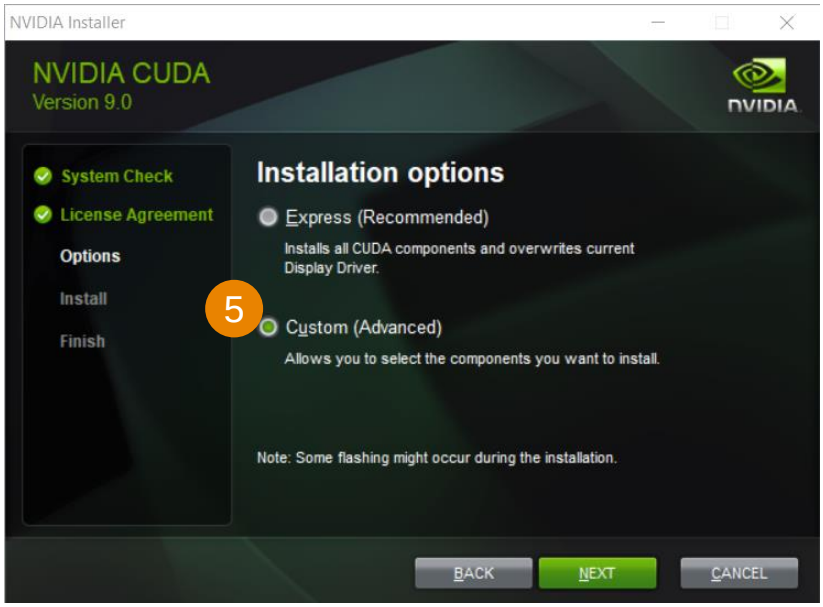

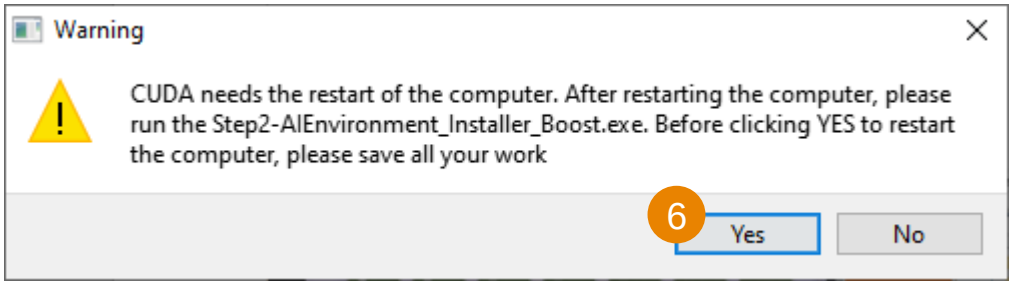

6. 安装 “Step2-AIEnvironment_Installer_V2.1.exe”

❶ 双击 “Step2-AIEnvironment_Installer_Boost_v2.1.exe”

❷ 点击安装并等待安装完成



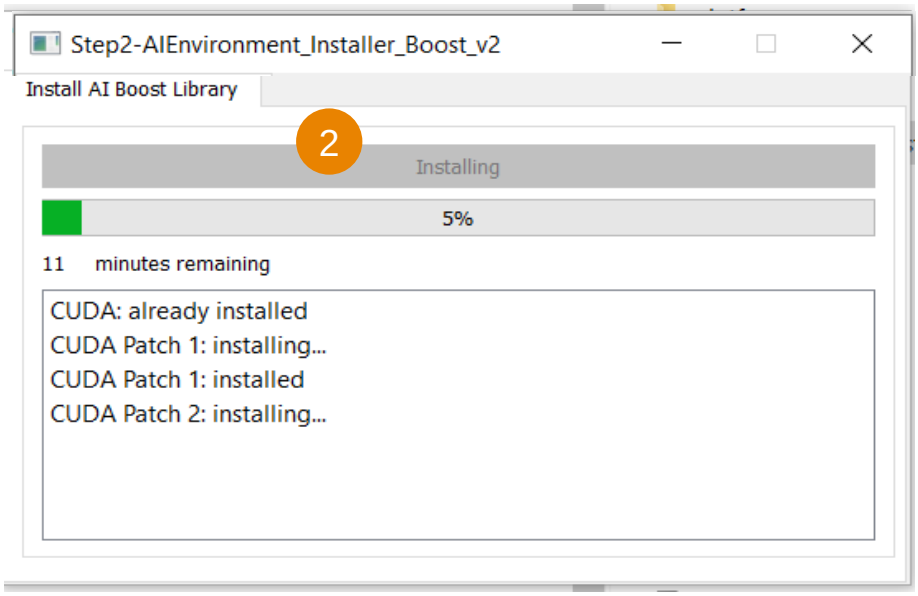

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

7. 双击 AIMV_x64_Installer.exe 以安装AIMV

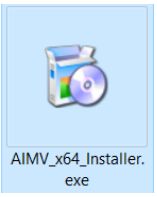

8. 双击 AIMV

9. 点击 “**Help**” 标签下的 “**Registered Tools**”。保证所有AI工具都被安装

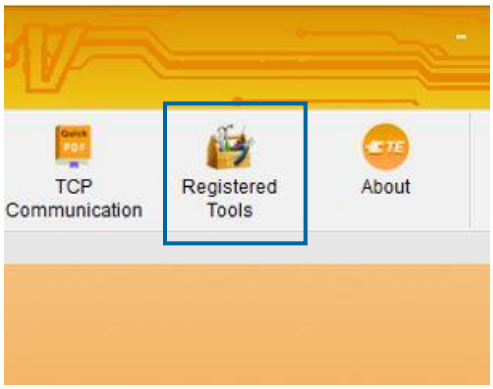

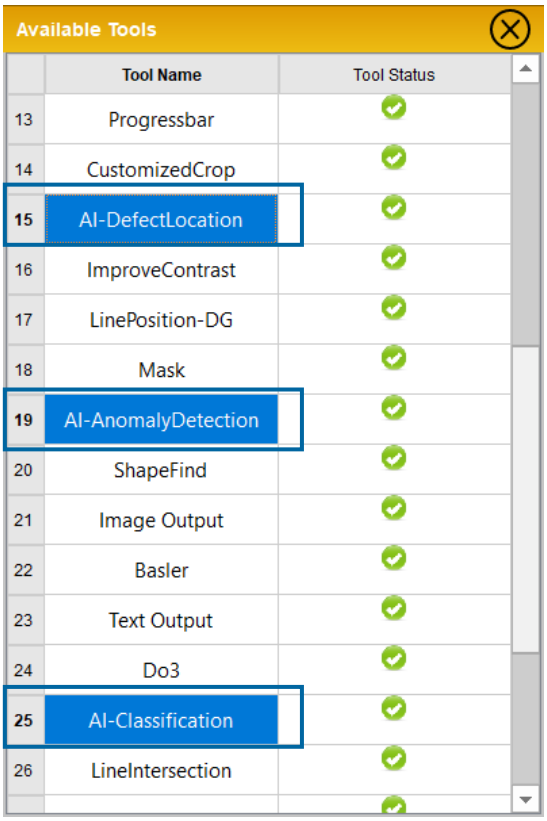

10. 激活相机并访问AWS

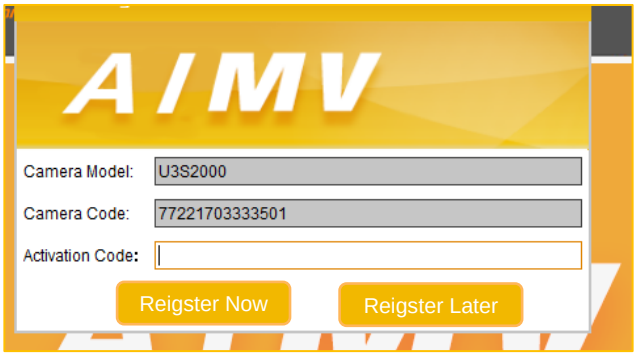

- 点击 “**Control**” 下的“**Scan New Camera**”
- 在相机标签或U盘中找到激活码
- 输入 “Activation Code” 以激活相机
- 发送电子邮件至 james.yu@te.com 以获取AWS访问权限

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

11. 点击 “**Control**” 栏下的 “**Classification No Rotation**”

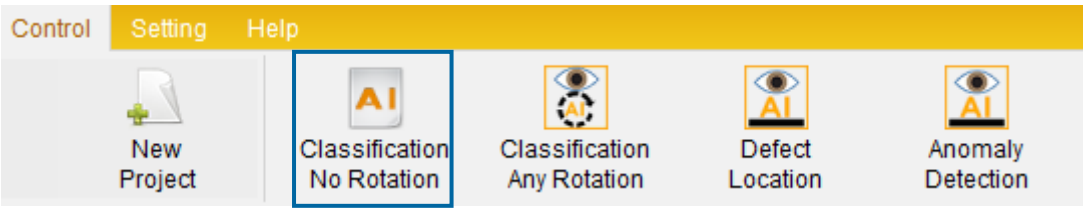

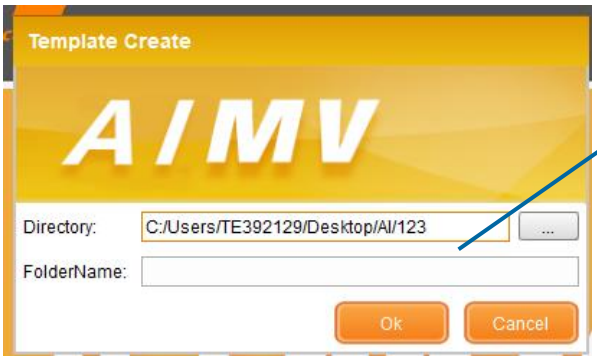

- 选择目录
- 输入你的文件夹名

12. 将把平衡板放在相机下

13. 点击 “**White Balance**” 以调整相机白平衡值

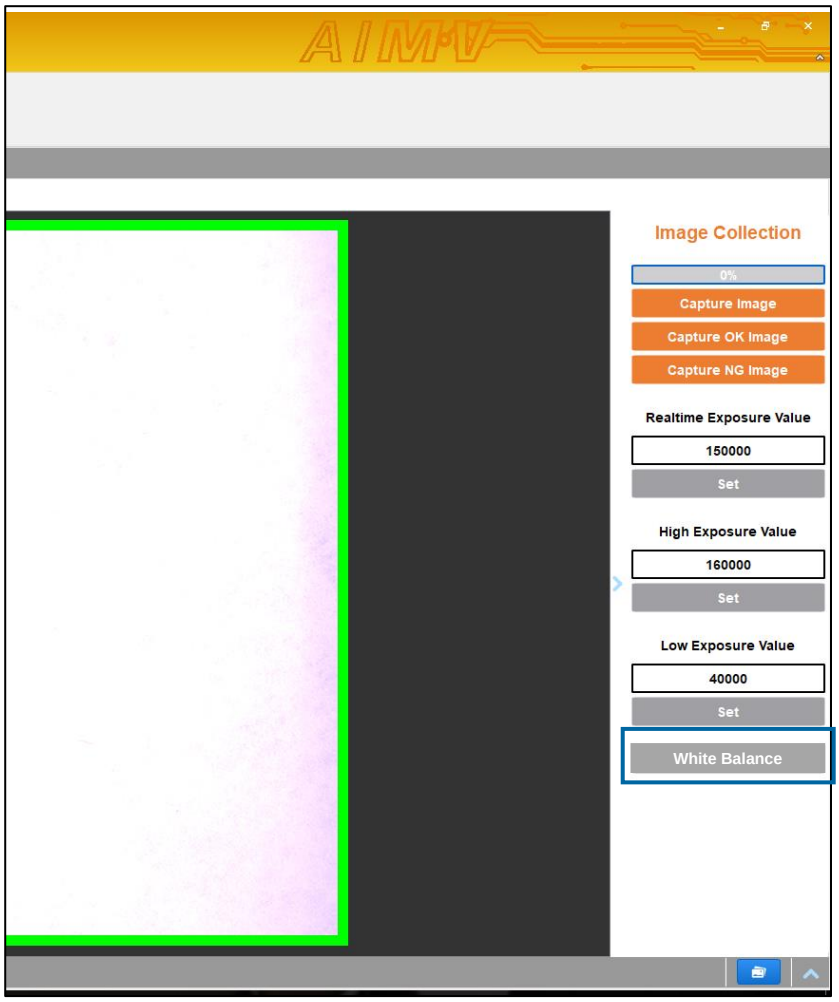

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

14. 将一个产品放在相机下
15. 调节相机以得到清晰图像

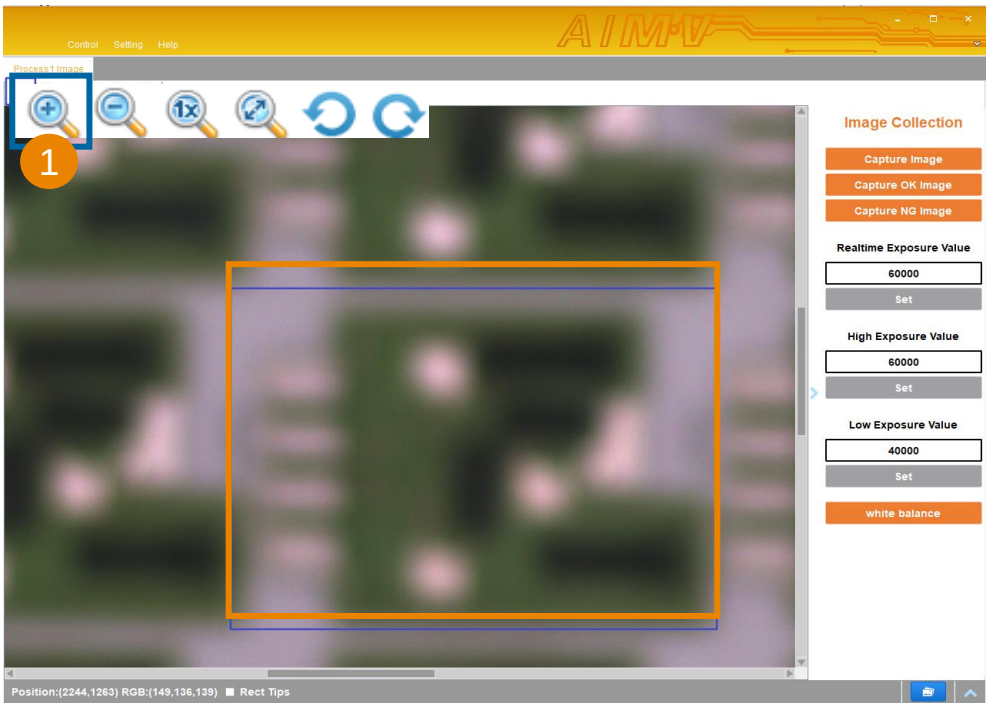

1. 单击此处可清晰地查看产品
2. 旋转以调整相机的高度
3. 旋转以调节镜头焦距

16. 项目实例试验

1. 双击 “AIMV Package” 文件夹

2. 双击 “Project Examples” 文件夹

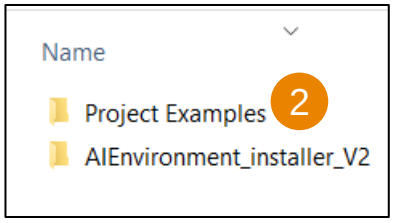

3. 有三个例子可供您尝试

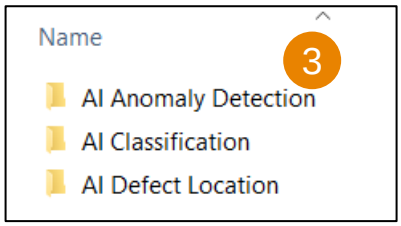

17. 如有任何问题，请参阅常见问题解答（FAQ）

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.