2D AI Defect Inspection Quick Start

Hardware Assembly

1. Holder assembly

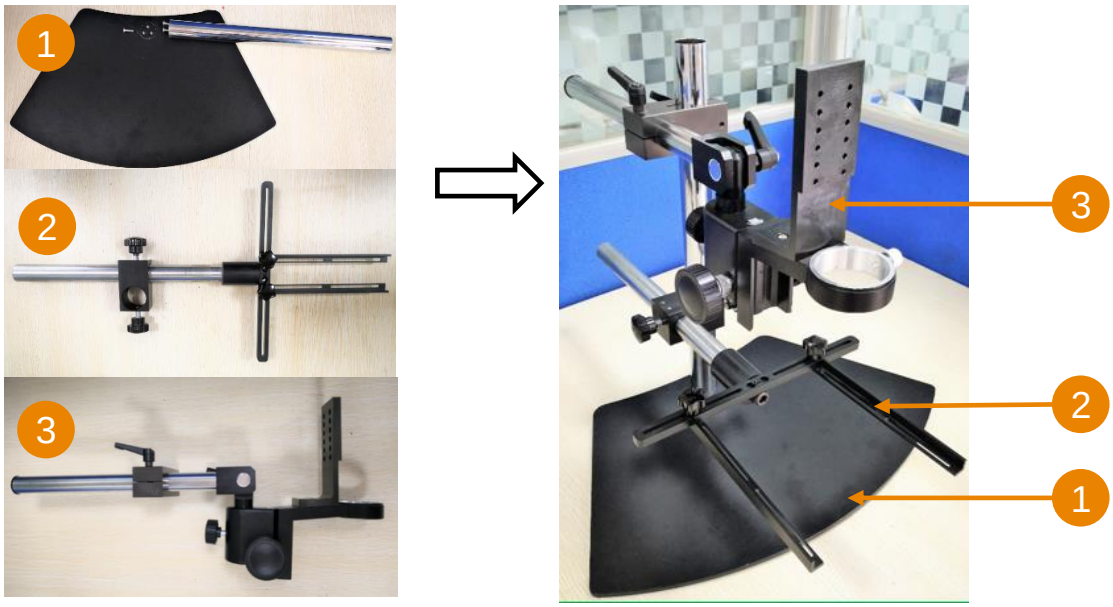

2. Holder, camera and lighting unit assembly

* When you stand in front of the CCD, the TE logo orientation should be the same as in the picture. Make sure the orientation is correct.

3. Lighting unit connection

4. Connect camera to PC

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

2D AI Defect Inspection Quick Start

Software Installation

1. Confirm PC configuration

Recommended configuration for PC:

- CPU: Intel i5 8th series or better
- GPU: NVIDIA GTX 2060 6G or better
- ROM: >= 16 G
- Volume: >= 512 G, SSD is preferred
- USB 3.0
- USB ports > 3
- Windows 10 and above, 64 bit
- Screen > 21 inches
- Resolution >= 1080P
- Color Display

2. Please update the display adaptor driver

https://www.nvidia.com/Download/index.aspx

3. Copy “AIMV Package” folder to C:/ in your computer

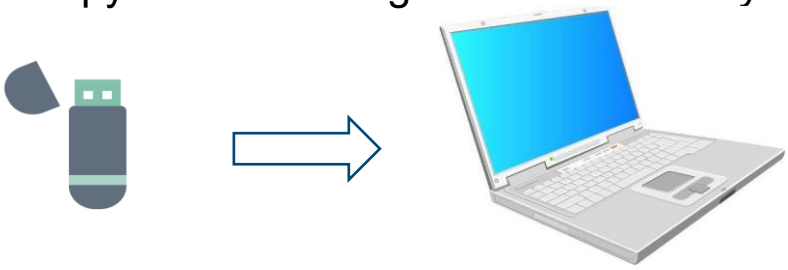

4. Open AIEvironment_installer_V2 folder



5. Install “Step1-AIEnvironment_Installer_V2.1.exe”

1. Double Click “Step1-AIEnvironment_Installer_V2.1.exe”
2. Click “Install AI Environment Basic Version for CPU”
3. Click “Yes” to restart computer
4. Re-start Step1-AIEnvironment_Installer_V2.1.exe

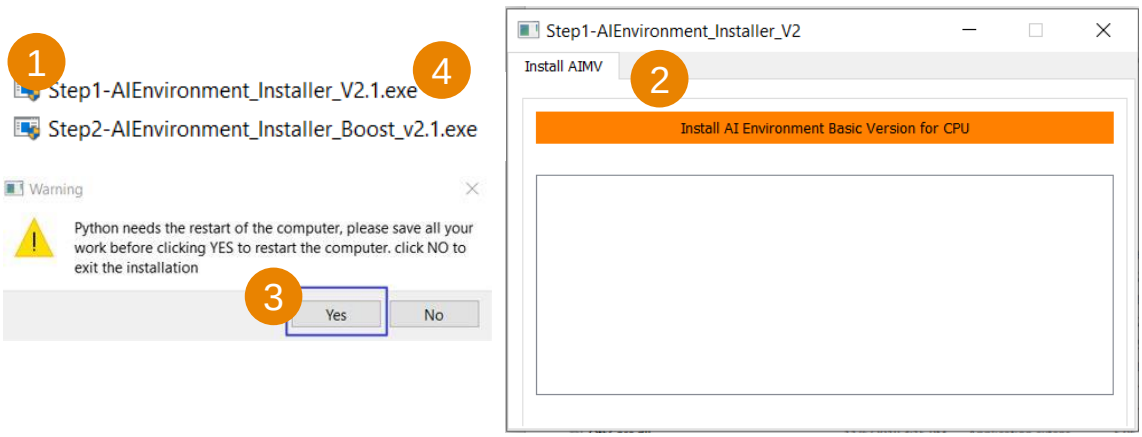

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

5 Select Custom (Advanced), then click “NEXT”

6 Click “Yes” to restart computer

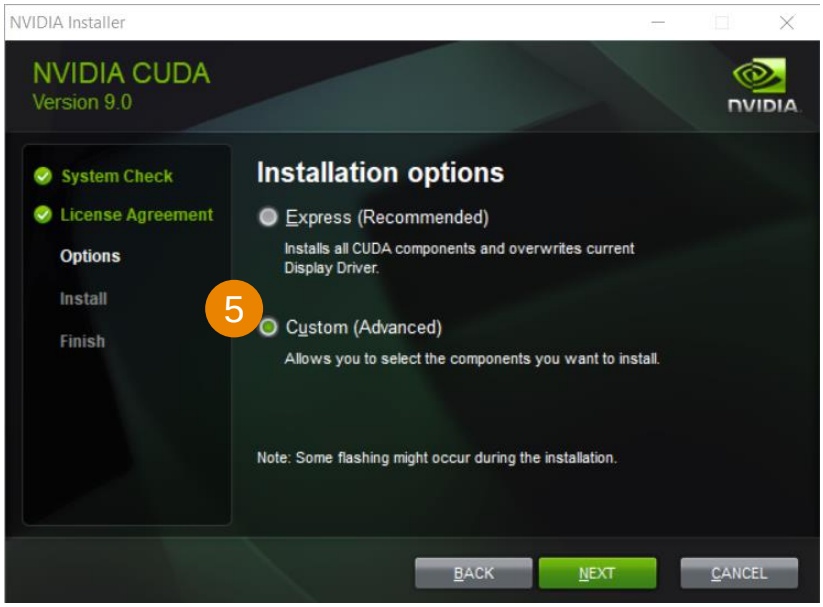

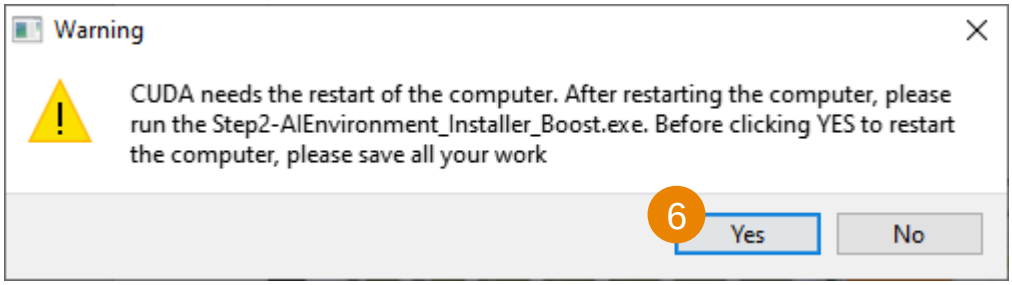

6. Install “Step2-AIEnvironment_Installer_V2.1.exe”

1 Double Click “Step2-AIEnvironment_Installer_Boost_v2.1.exe”

2 Click Installing and wait until finished



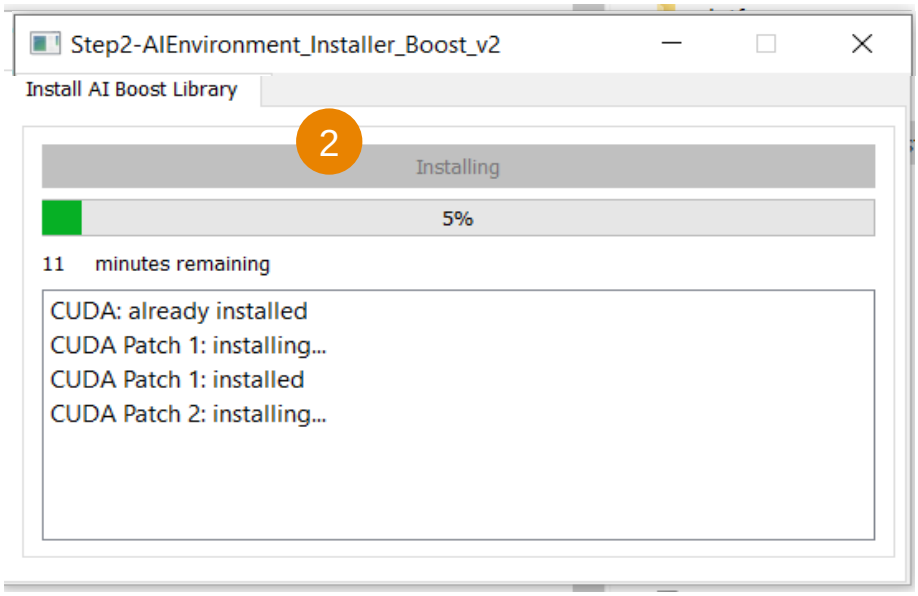

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

7. Double click AIMV_x64_Installer.exe to install AIMV

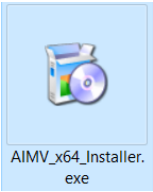

8. Double click AIMV

9. Click "**Registered Tools**" under "**Help**" tab. Make sure AI tools are installed

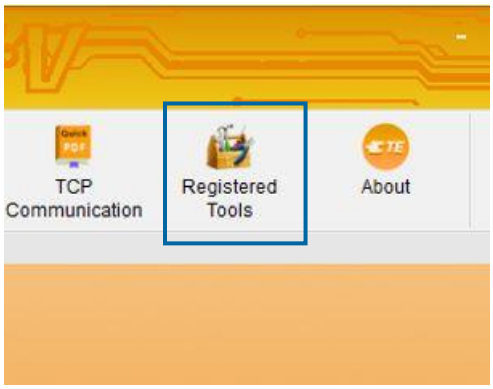

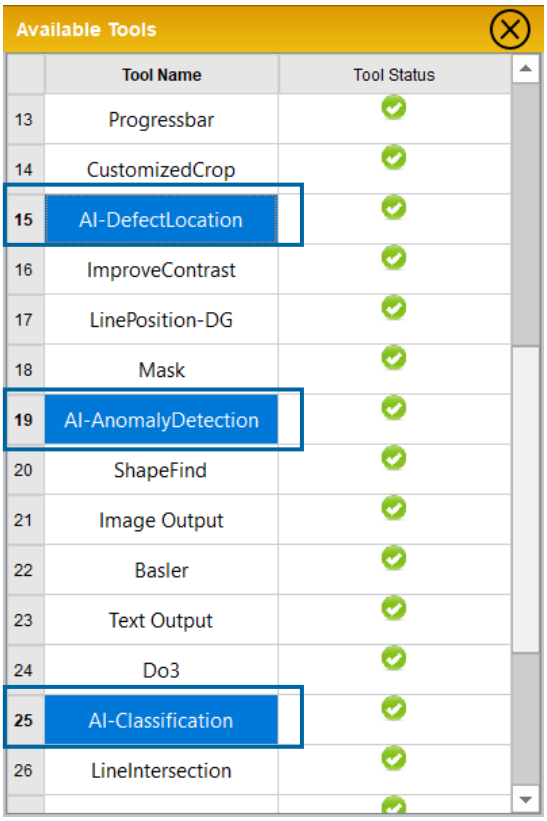

10. Camera activation and access to AWS

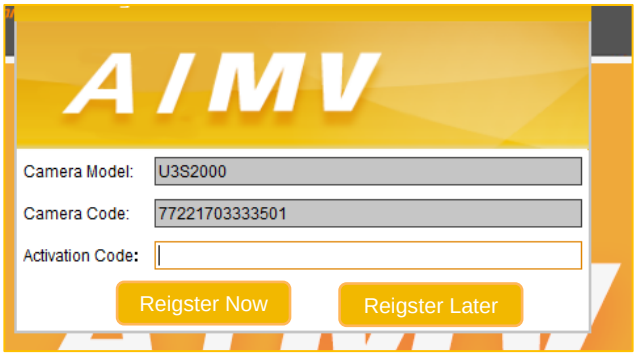

- Click "**Scan New Camera**" under "**Control**"
- Find Activation Code on camera tag or in U-disk
- Input "Activation Code" to activate camera
- Send email to james.yu@te.com to aquire the the AWS Access

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

11. Click “**Classification No Rotation**” under “**Control**”

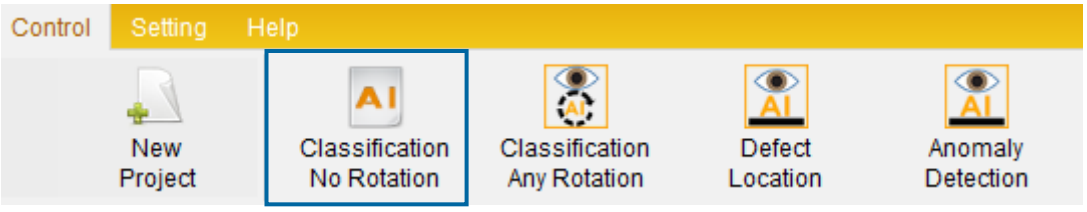

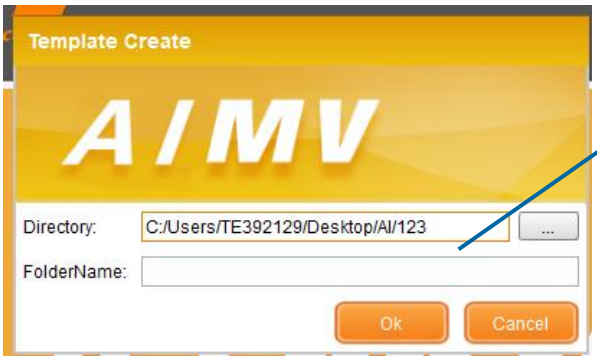

- Choose Directory
- Input your FolderName

12. Place white balance board under camera
13. Click “**White Balance**” to adjust camera white balance value

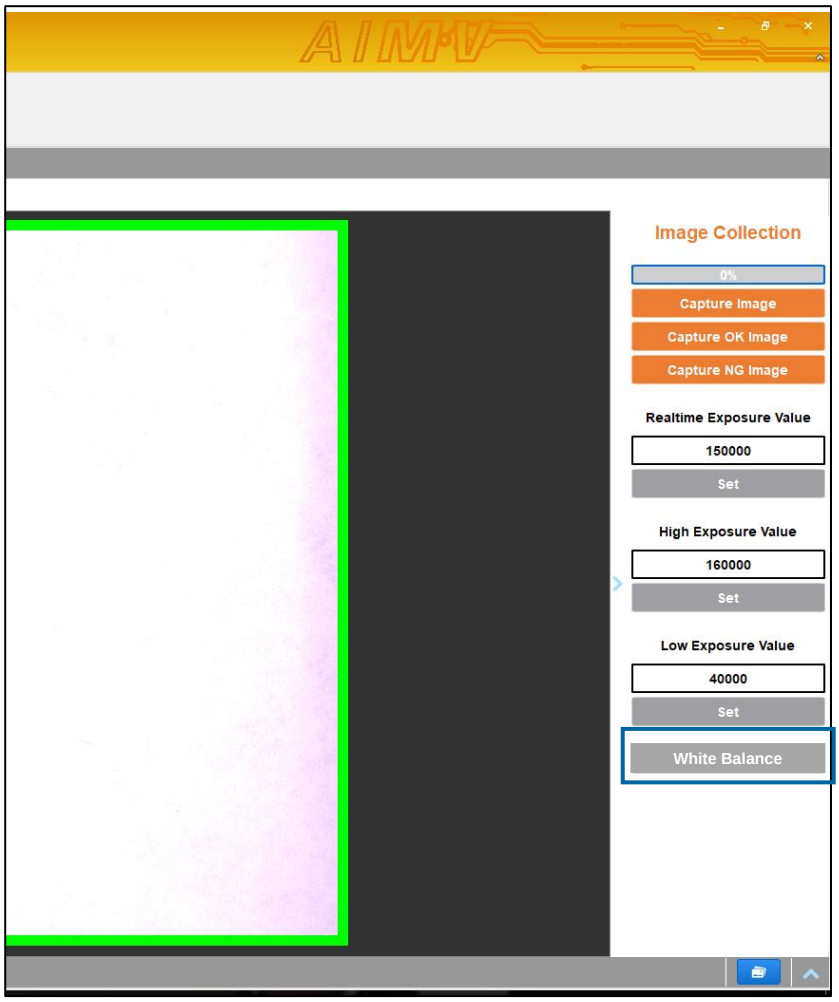

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.

2D AI Defect Inspection Quick Start

14. Put one product under camera
15. Adjust camera to get a clear image

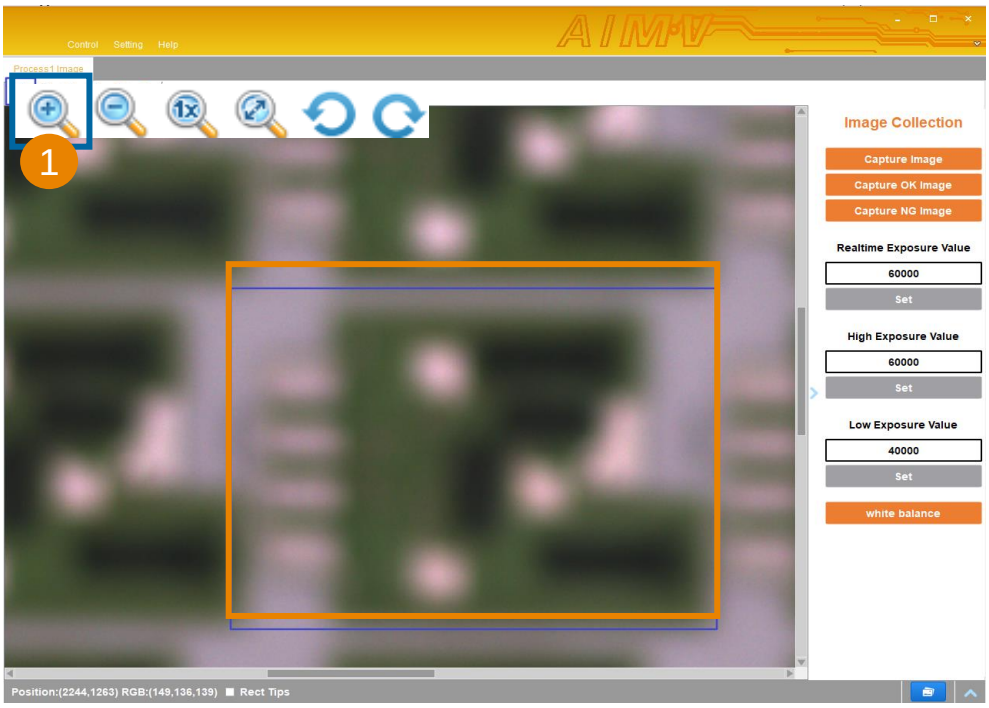

1. Click to view product clearly
2. Rotate to adjust height of the camera
3. Rotate to adjust the lens focus

16. Project examples trial

1. Double Click “AIMV Package” folder

2. Double Click “Project Examples” folder

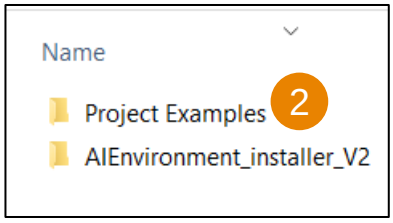

3. Three Examples for you to have a trial

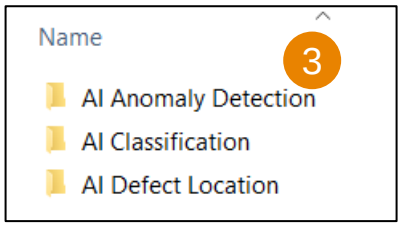

17. Please refer to FAQ for any problems

AI MACHINE VISION | © 2020 TE Connectivity. Confidential & Proprietary.
Do not reproduce or distribute externally including non-authorized representatives and distributors. Create a sustainable future by limiting print copies, and recycling paper.