

THE LAILA LOOM

Laila is suitable for weaving all types of fabrics except for rugs. The loom is equipped with either 4 shafts/4 treadles or 8 shafts/8 treadles that enable weaving a wide range of different fabrics.

Laila is designed for weavers who do not have enough space for a large loom. The loom can be folded even with the warp in place, so it occupies very little space when being stored or transported.

Laila is suitable for both children and adults. Weaving with Laila gives the same feeling as weaving with a larger countermarch loom.

The Laila bench, which is available separately, is especially proportioned for this loom.


The price of the loom includes a cork board, a scissor holder and a manual.



Parts of the loom:

1. Left side
2. Right side
3. Front rail
4. Back rail
5. Breast beam
6. Back beam
7. Upper front rail
8. Upper back rail
9. Warp beam
10. Crank
11. Cloth beam
12. Cloth beam lever
13. 2 warp & 2 cloth sticks*
14. 2 lease sticks *
15. Jacks *
16. 2 rods for jacks *
17. Jack pins *
18. Shaft bars *
19. Upper lamms *
20. Lower lamms *
21. 2 rods for lamms *
22. Box for side lamms
23. Treadles *
24. Treadle rod
25. Treadle holders
26. Beater cover *
27. Beater bottom *
28. 2 beater legs *
29. Long jointing part
30. Short jointing part
31. Right back leg
32. Left back leg

* = Not in the picture


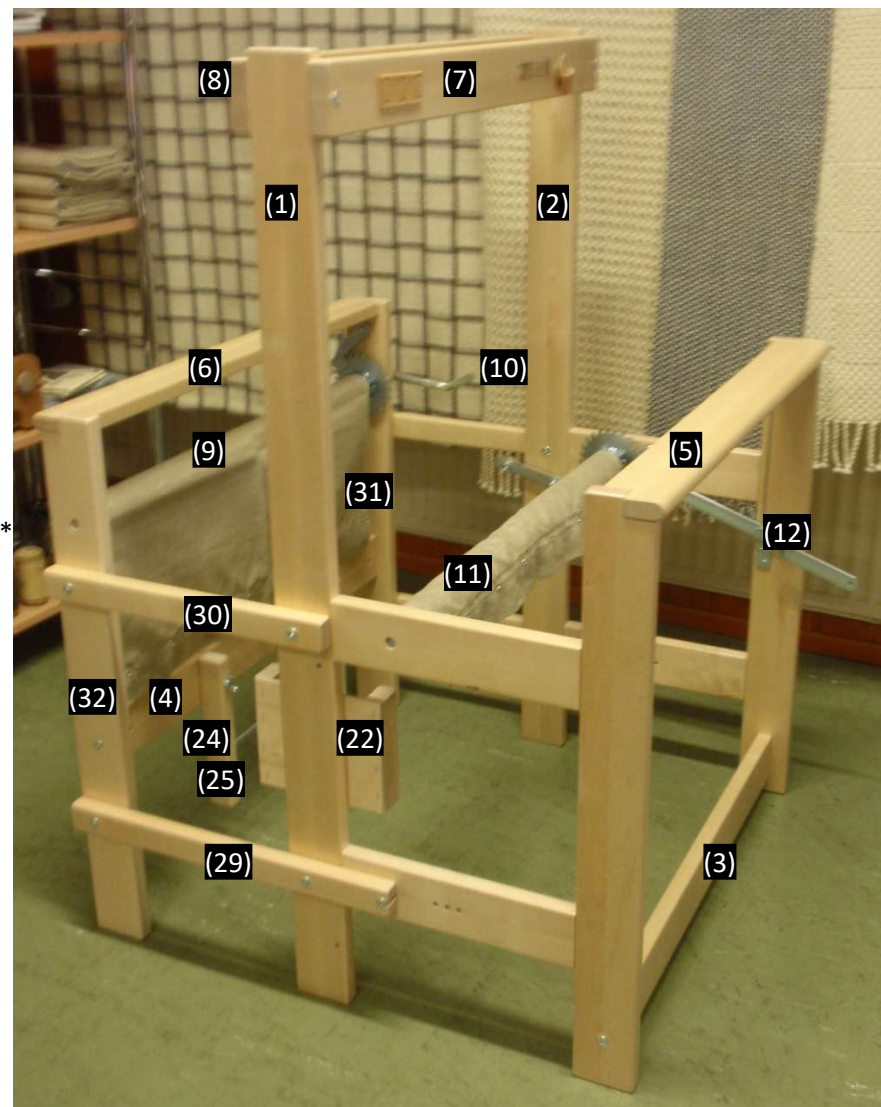


TOIKA OY


Hahttilantie 4 A
37800 AKAA, FINLAND
www.toika.com

Tel: (03) 5421 095

Email: info@toika.com

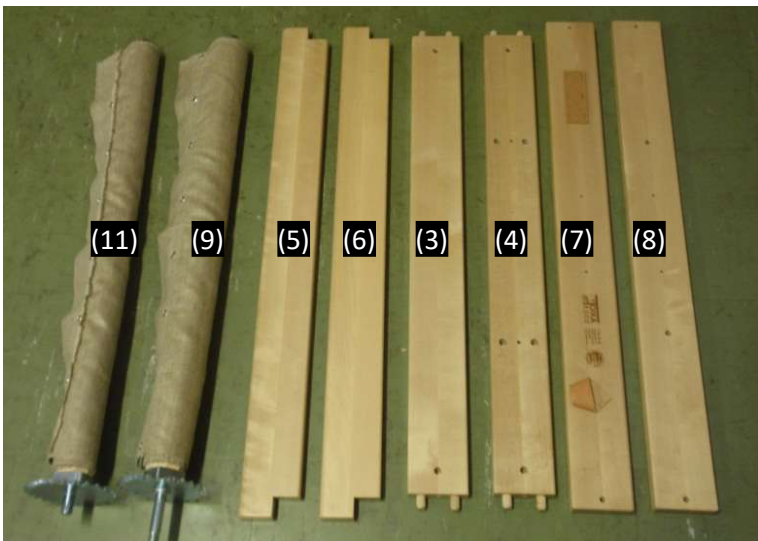
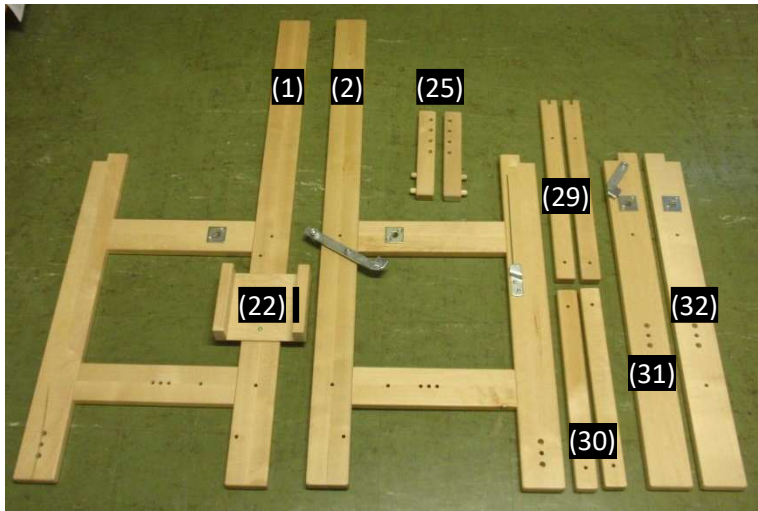


- A. Allen key, 2 pc.
- B. Lock bolt 6x75 mm for fastening the treadle holders, 2 pc
- C. Lock bolt 8x80 mm for fastening the beater cover, 2 pc
- D. Furniture bolt (head + threaded rod + barrel nut) 6x60 mm for fastening the front & back rails, 4 pc
- E. Furniture bolt (head + threaded rod + head) 6x45 mm for fastening the beater to the loom, 2 pc
- F. Furniture bolt (head + threaded rod + head) 6x40 mm for fastening the jointing parts, 10 pcs
- G. Furniture bolt (head + threaded rod + head) 6 x 60 mm for fastening the beater bottom, 2 pc
- H. Furniture screw (head + threaded rod + head) 6x140 mm for fastening the upper rails (castle), 2 pc
- I. Treadle spacer, 3 pc (7 pc)
- J. Small wooden dowel for the breast and the back beam, 4 pc
- K. Bearing plate 50x3 for warp and cloth beam axles, 5 pc
- 16. Rod for jacks and side lamms 14 cm + cotter pin, 4 pc
- 17. Jack pins for locking the jacks, 2 pc
- 24. Treadle rod 34 cm + cotter pin, 1 pc


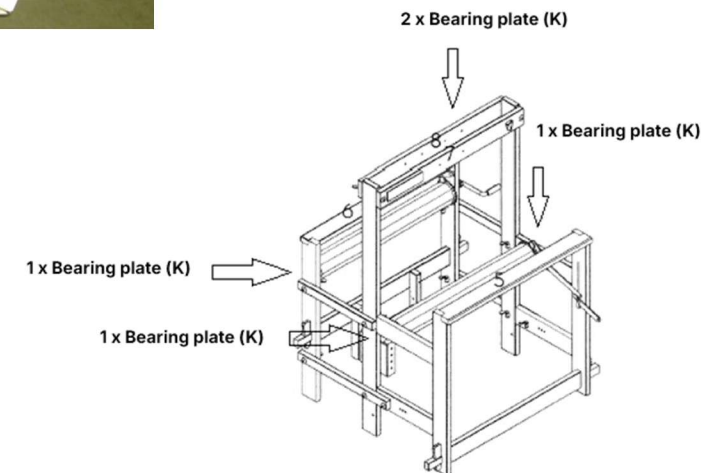


Assembly of the Laila loom:

1. Fasten the treadle holders (25) on the back rail (4) with two lock bolts (B) 6x75 mm. Put the treadle rod (24) in place with the plain head (without hole) first and lock with a cotter pin. The treadle holders have several holes for adjusting the height of the treadles. The second hole from above is usually used.

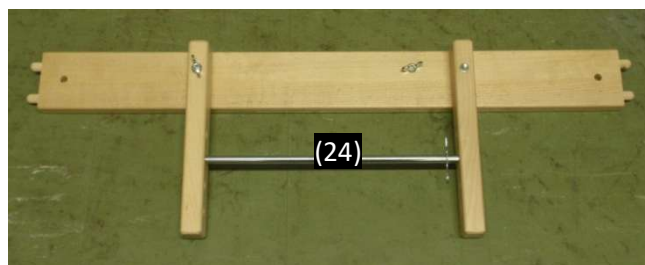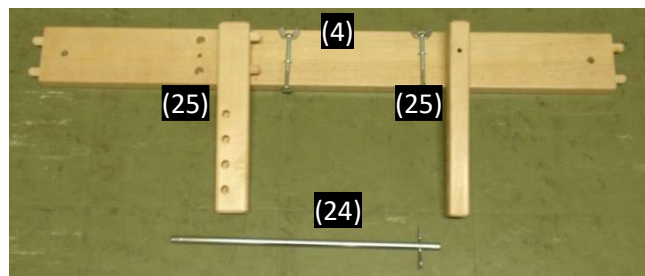


2. Assemble the side parts of the Laila loom with 10 furniture bolts (F) 6x40 mm (head + threaded rod + head): Attach the short joining part with one bolt and the long joining part with two bolts to the right side. Attach the right back leg to the two joining parts with one bolt each. In the same way, attach the short and long joining parts to the left side and the left back leg to the joining parts. Check that you have attached the right back leg to the right side and the left back leg to the left side.

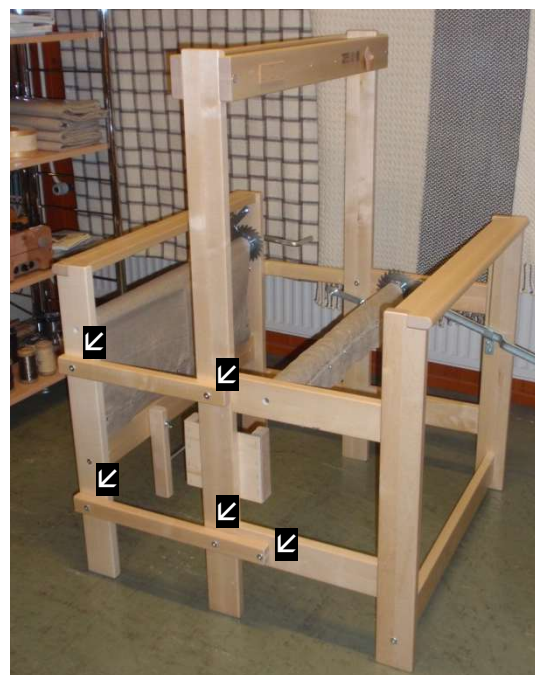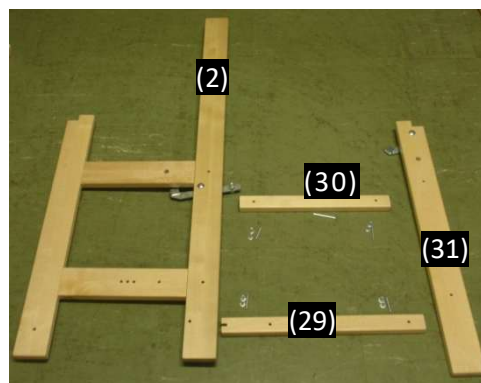

Hammer the head into the wood!




3. Attach the front rail (3) and the back rail (4) to the right side with furniture bolts (D) 6x60 mm. Put 2 bearing plates (K) on the axle of the warp beam (9) before pushing the warp beam in its place in the right back leg (31). Wind the crank (10) onto the axle. Put the cloth beam lever (12) and 1 bearing plate (K) on the axle of the cloth beam (11) before placing the cloth beam into its place in the right side. Note that the bearing plate (K) must be against the wood! The cloth beam will stay in place when you set the pawl on the wheel.

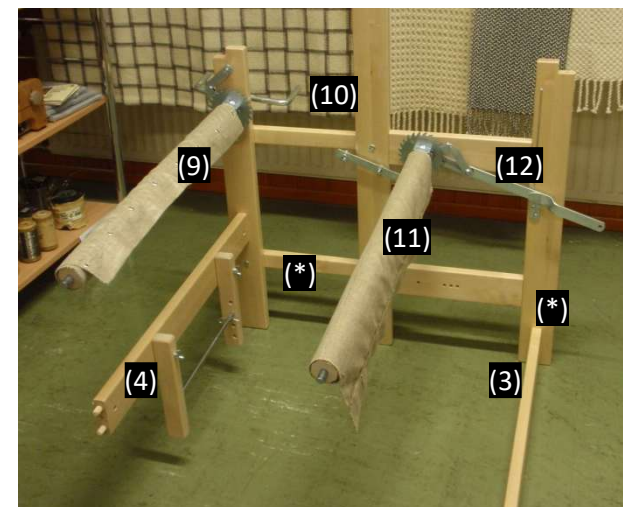

(*) = head + threaded rod + barrel nut
Hammer the barrel nut in place. Adjust the position with a screwdriver.

4. Thread 1 bearing plate (K) on the warp beam axle and another on the cloth beam axle. Carefully place the left side (1) in its place, guiding the rails (3 and 4) and the beams (9 and 11). Fasten the left side with furniture bolts (D).

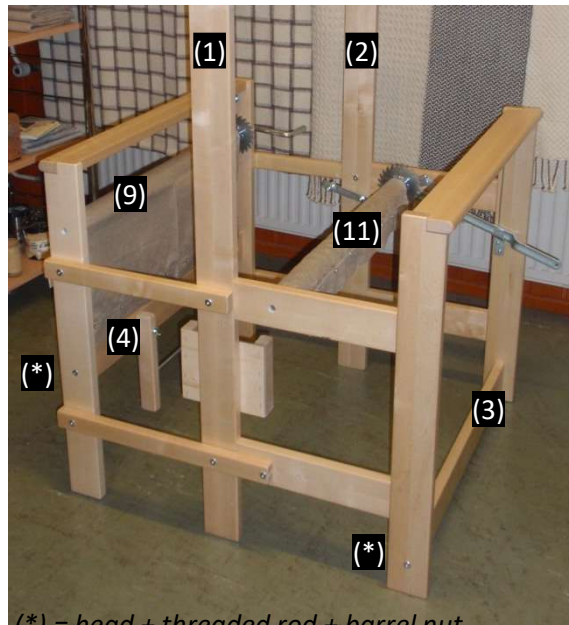


(*) = head + threaded rod + barrel nut
Hammer the barrel nut in place. Adjust the position with a screwdriver.


5. Fasten the upper front and back rails (7 & 8) into place with two long furniture bolts 6x140 (head + threaded rod + head) (H). The same screw locks both the front and the back rail.



6. Set the wooden dowels (J) in the holes of the front legs and put the breast beam (5) in place. Do the same with the back legs and the back beam (6).

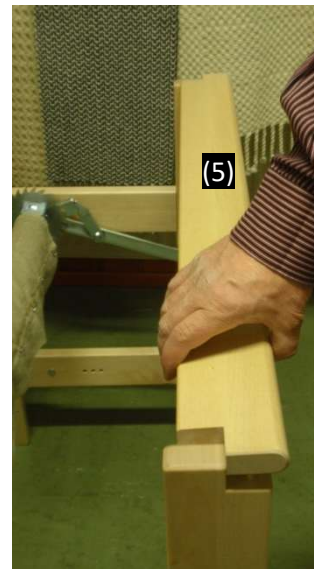

7. Assemble the beater on the floor. Fasten the beater bottom (27) to the beater legs (28) with furniture bolts 6x60 mm (head + threaded rod + head) (G). Fasten the beater cover (26) to the beater legs (28) with two lock bolts (C).

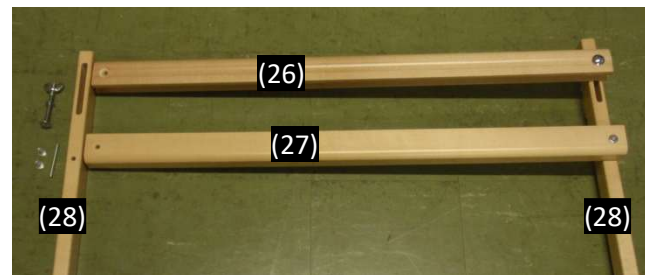


Place the assembled beater in the loom and fasten the beater legs to the loom with furniture bolts 6x45 (head + threaded rod + head) (E). The height and the distance of the beater can be adjusted. The middle holes are often used.




8. Remove the cotter pin from the treadle rod (24) and put the treadles (23) and the treadle spacers (I) in place. Lock the rod with the cotter pin.



9. Insert the rods for the side lamms (21), plain end first (without holes), partially into the top and bottom holes of the box for the lamms (22). Slide the upper lamms (19) onto the upper rod and the lower lamms onto the lower rod and lock the rods with cotter pins.

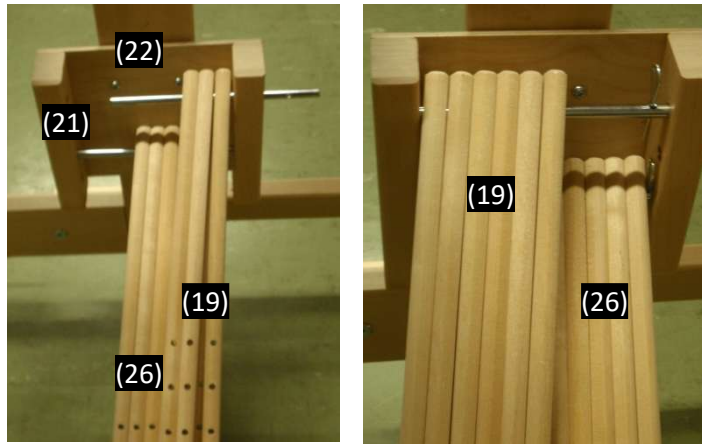

10. Put the rods for the jacks (16) in the outer holes of the upper back rail (8) plain ends first (without holes). Put the jacks (15) in place (the rod goes in the jack's middle hole). Lock the rods with cotter pins. Fit the jack pins (17) in place in the holes in the upper rails (7) and (8).

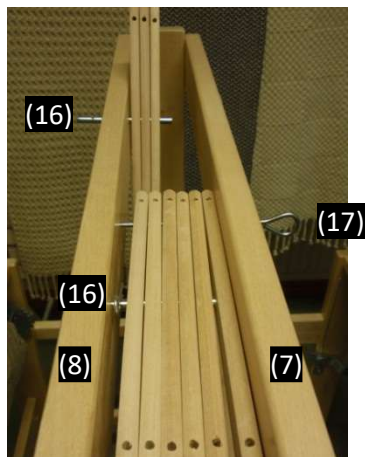

11. Tighten the bolts. This should be done every now and then, for the bolts may loosen during weaving. Now the Laila loom is assembled and you may start preparing the loom for weaving!

12. Folding the Laila loom:

The Laila loom can be folded even with the warp in place, so it can be stored in a small space while waiting for weaving. Tighten or loosen the warp when needed.

- At first loosen the furniture bolts on the lower and upper joint parts (29 & 30).
- Remove the front furniture bolts (F) 6x40 (head + threaded rod + head) from the lower joint parts (29).
- Fold the loom by lifting the warp beam (9).
- Refasten the front furniture bolts (F) 6x40 (head + threaded rod + head) of the lower jointing parts into the lower holes in the sides.

HAPPY WEAVING!

