

Place & time.

For Pages 5-8: open Page 4.
Hold FN + press VOL+ to step forward.

Page 6 - stereo placement

Fader N moves track N.
Down = left. Up = right.

Center = original balance. Tap TN to center.

Page 7 - grid / length

F1 = downbeat offset.
F2 = OFF / 1 / 2 / 4 / 8.

Variable: bars with a grid. Fixed: base loops after the first take.

Record a preset take

Close the page. Arm a track.
Release; the take stops itself.

Tap the recording track to finish earlier.

Page 7 - nudge

Hold TN + move its own fader.

Up = later. Down = earlier. Tap TN to center its nudge.

FN + T1 + T4 resets the open PLACE or TIMING page. Centered T1/T2 on page 7 reset offset/length. Full details: sheet 4.

Route & reset.

Routing affects all four FX pages.

FX on the input

PLAY + VOL-

Recorded into ordinary takes. 1 flash.

FX on the tracks

PLAY + VOL+

Live input stays dry. 2 flashes.

FX on the whole mix

PLAY + double-click either VOL

Ordinary takes stay dry. 3 flashes.

Reset all effects

On an FX page: FN + T1 + T4

Defaults restored; EQ flat; routing BOTH.

Hear reverb


Turn echo off first.

Echo takes priority over reverb.

Back up with Download all before upgrading.
3.0 changes the storage format. Secondary
FX controls: reference sheet 3.

Your first loop.

USB-C audio in. Four tracks out.

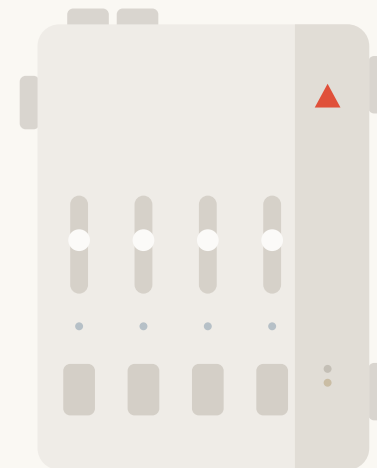

- 1 **Press an empty track.**
Release when it blinks.
- 2 **Send audio.**
Capture starts on the sound.
- 3 **Tap again to stop.**
Raise the fader. Add another track.

Hold FN ~1.5 s to wake.
PLAY = start / stop.

Play & record.

Pages closed. FN = FUNCTION.
TN = track button.

Play / stop

Tap PLAY.

Hold ~0.4 s and release to restart.

Mute / restore

Tap a loaded track.

Faders set track levels. VOL sets master.

Replace a take

Hold a loaded track ~0.18 s.

Tap again to end the recording.

Delete a take

Tap, then press again quickly.

Hold the second press ~0.4 s.

The take is removed.

Choose a song

Hold FN + tap T1-T4.

Selects a bank. Repeat to step through its four songs.

Stop, then hold FN ~2.5 s to power off. USB power keeps the charging gauge active.

Bend & bounce.

Hold the prefix before the next control.

Change tape speed

Use the rocker.

Click = step. Double = semitone. Hold = sweep.

Return to 1x

FN + double-tap PLAY

Range: 0.25x-1.5x. Pitch follows speed.

Chop the loop

FN + rocker

Forward = shorter. Back = longer.

Tape copy

Hold PLAY + tap destination TN.

Tap TN again to stop.

Follows tape speed. Use a spare track.

Sampler print

Hold PLAY + hold destination TN.

Release TN to stop.

Bakes the heard speed for playback at 1x.

A loaded destination is replaced. Choose the mix and effects before bouncing. More tape controls: reference sheet 2.

Find an effect.

Each row is a page. Faders run left to right.

Open / close

FN + hold T1-T4 ~0.4 s.

Tap FN to close.

For Pages 5-8: open Page 4. Hold FN; VOL+ steps forward, VOL- steps back.

- 1 Filter · chorus · drive · gate
- 2 Crush · ring mod · wah · echo
- 3 Phaser · sweep · tremolo · reverb
- 4 Drive · tone · noise · wobble
- 5 Four-band EQ
- 6 Stereo track placement
- 7 Grid · take length · nudge
- 8 Next take: mono (solid) / stereo (blink). Tap TN to switch.

Move through the stored value. The fader picks up, then changes the effect. A nonzero move wakes an OFF lane.

Noise: center = off, up = hiss, down = vinyl crackle.
FX taps and secondary controls: sheet 3.