


Make your first loop.

Start here. The track buttons record and mute. The faders set the level of each track.

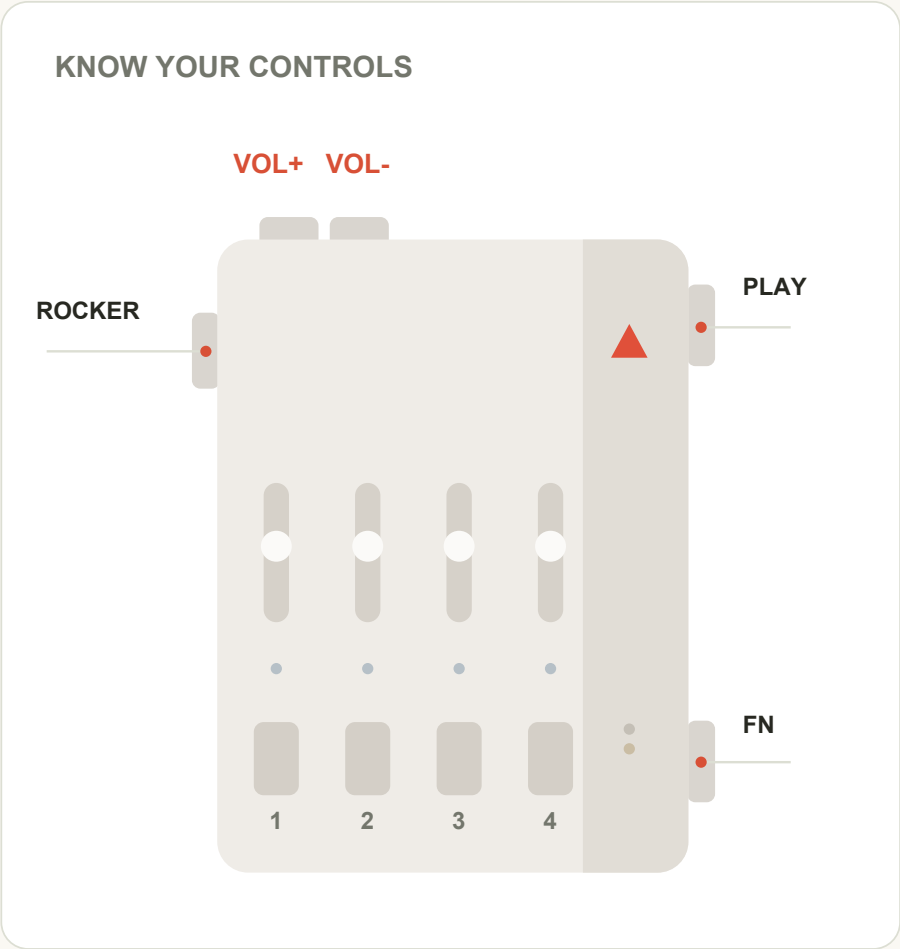

Connect & wake

Audio in

USB-C from your computer or phone.

Select SP-1 as the host's audio output.

Audio out

Headphones or the built-in speaker.

The 3.5 mm jack is an output.

Power on / off

Hold FN ~1.5 s to wake.

To switch off: stop playback, then hold FN ~2.5 s.

01

ARM

Press an empty track until it blinks.

Release. It is now armed.

02

RECORD

Send audio.
Capture starts.

Without a grid, it waits for sound.

03

LOOP

Tap that track again to stop.

Raise its fader to hear it.

Everyday controls

Play / stop

Tap PLAY.

Hold PLAY ~0.4 s, then release to restart.

Mix the tracks

Move faders 1-4.

VOL- / VOL+ changes the master level.

Mute a track

Tap a loaded track.

Tap again to restore. Several buttons toggle their mutes together.

Replace a take

Hold a loaded track ~0.18 s.

This replaces its audio. Tap again to finish.

Delete a take

Tap, then quickly press again.

Hold the second press ~0.4 s.

A quick double-tap only toggles mute.

Songs & settings

Find a song

Hold FN + tap T1-T4.

Selects a bank. Repeat the same button to step through its four songs. Close pages first.

Read the song lights

Solid = bank. Blinking = song.

Hold FN to show them during playback.

Choose loop length mode

Hold FN + PLAY ~0.5 s.

Release both.

Fixed: base-loop multiples, two flashes. Variable: independent lengths, a sweep.

Change brightness

Hold FN + PLAY through 5 s.

The lights change while held. Length mode stays unchanged.

Before upgrading: back up with Download all. 3.0 changes the storage format.

Play the tape.

Speed, windows and resampling. FN means FUNCTION. Hold the prefix first, then use the next control.

01 Speed & pitch

Change speed

Rocker: click = one speed step.
Double-click = one semitone.
Hold = sweep.

Pitch follows speed. Range: 0.25x-1.5x.

Return to normal

Hold FN + double-tap PLAY.
Returns to 1x after a brief triple-tap window.

Jump an octave

Hold FN + PLAY + rocker.
Back = down. Forward = up. A step outside the range does nothing.

02 Chop & window

Shorten / lengthen

Hold FN + rocker.
Forward halves the window. Backward doubles it. Hold to repeat.

Move the window

Hold FN + VOL- / VOL+.
With a page open, this walks pages instead.

Shape it by hand

Hold FN + F1 / F2 / F3.
Start / end / shift. Cross the edges for reverse. FN + F4 controls the filter.

Reset / return home

FN + PLAY + VOL- = whole loop.
FN + PLAY + VOL+ = home.
Home keeps the chop size. Both keep direction.

03 Bounce what you hear.

Play the source. Choose a **spare destination track**. A loaded destination is replaced.

TAPE COPY

Hold PLAY, then **tap TN briefly**.
Tap TN again to stop.

Follows tape speed with the source.

SAMPLER PRINT

Hold PLAY, then **hold TN**.
Release TN to stop.

Bakes the heard speed for playback at 1x.

TN is the destination track button. A hold becomes a sampler print after about 0.18 s.

Stop from an open page

Use PLAY + TN again.
Bounce also works in heads mode.

Timing

A grid can add count-out.
Fixed mode and chop can extend the stop to whole cycles.

Choose the sound first. Mute unwanted tracks, set the mix and effects, then bounce.

04 Reverse or isolate.

Press order chooses the action.

Reverse

Hold **FN + TN first**, then tap PLAY.
Tap PLAY before the page opens. Repeat to reverse back.

Momentary isolate

Hold **FN + PLAY first**, then press TN.
Release TN to restore the previous mutes.

05 Four heads, one loop.

Enter / exit heads

Hold FN + triple-tap PLAY.
Start with a loop playing and pages closed.

Perform the heads

Faders = levels. Track taps = mutes.
FN + faders = head positions.
Hold another loaded track ~0.4 s to make its audio the source.

06 Tap a beat grid.

Set the grid

Close pages. Tap FN 4+ times.
Start on the downbeat. Retap loaded loops to match tempo.

Clear / round

Clear: tap FN, quickly press again, then hold ~1 s.
Round BPM: finish a tempo run, then hold FN ~1 s.

Freshly tapped grids align recording to beats. The grid and MIDI clock follow tape speed.

Find your effect.

One page = four controls. Hold FN + T1-T4 for ~0.4 s to open. Release your hands; the page stays open.

REACH PAGES 5-8
Open Page 4. Hold FN: VOL+ = next page / VOL- = previous.

CLOSETap FNRESET FXFN + T1 + T4

PAGE 1FX 1

F1FILTER
Tap T1: bypass

F2CHORUS
Tap T2: dry

F3DRIVE
T3: soft > hard > fold > OFF

F4GATE
T4: gallop > halves > OFF

Tap rate: FN + T2 or T4.
Hold FN and tap that lane 2+ times.

PAGE 2FX 2

F1BITCRUSH
Tap T1: off

F2RING MOD
Tap T2: off

F3AUTO-WAH
Tap T3: off

F4ECHO
T4: 1/16 > dotted > 1/8 > OFF

Tap rate: FN + T4.
Hold FN and tap that lane 2+ times.

PAGE 3FX 3

F1PHASER
T1: beat > half > quarter > OFF

F2SWEEP
T2: beat > half > quarter > OFF

F3TREMOLO
T3: beat > half > quarter > OFF

F4REVERB
Tap T4: dry · fader: wet + decay

Tap rate: FN + T1, T2 or T3.
Hold FN and tap that lane 2+ times.

PAGE 4TAPE

F1DRIVE
Tap T1: off

F2TONE
Tap T2: flat

F3NOISE
Up: hiss / down: vinyl. T3: off

F4WOBBLE
Tap T4: off + clear tapped rate

Tap rate: FN + T4.
Hold FN and tap that lane 2+ times.

PAGE 5 / GLOBAL EQ
F1: 100 Hz low shelf. F2: 350 Hz. F3: 1.6 kHz. F4: 4 kHz high shelf.
Down = cut; up = boost; center or TN tap = flat.
Always affects the whole mix. Lights show cut/boost amount.

PAGES 6 / 7
Page 6: stereo track placement.
Page 7: take length, grid offset and nudge.
Controls explained on sheet 4.

PAGE 8 / NEXT TAKE FORMAT
Tap TN to choose its next take: mono / stereo.
Solid = mono; blink = stereo. Faders = track levels.
Existing audio stays unchanged. See sheet 4.

Make the fader respond.

Cross its stored value. Pickup prevents jumps when you enter, leave or reset a page.

OFF comes back. A nonzero move after pickup wakes an OFF cycle at its first option.

Neutral: filter, tape tone, noise and EQ at center. Other effect amounts at the bottom.

Clear a tapped rate: on its page, hold FN + PLAY and tap TN.

Hold a lane. Shape it.

P2: T3 + F3 = wah resonance.
T4 + F4 = echo feedback.

P3: T3 + F3 = tremolo shape.
T3 + F4 = stereo spread.
T4 + F4 = reverb damping.

Relative edits. Wah: down sharper/up softer. Tremolo: soft to hard.
Reverb: dark to bright.

Move, then release: no tap action. Hold without moving: the normal tap fires on release.

Choose what gets FX.

PLAY + VOL-: INPUT. Ordinary takes record the input FX. One flash.

PLAY + VOL+: TRACKS. Live input stays dry. Two flashes.

PLAY + double-click either VOL: BOTH. FX on the heard mix; ordinary takes stay dry. Three flashes.

EQ always processes the mix. **Turn echo off to hear reverb.** Echo takes priority.

FN + both VOL on a page: monitor mute. Close the page to restore input.

Place it. Time it.

Use Page 6 for stereo track placement, Page 7 for timing, and Page 8 for the next recording format.

Page 6 / Stereo placement

Stereo track placement

Faders 1-4 control tracks 1-4.

Move left / right

Fader down = left.

Fader up = right.

Center keeps the original balance. A mono take pans; a stereo take leans.

Center one track

With no take recording, tap TN.

Its light goes dark at center; more light means farther to one side.

Center all four

Hold FN + tap T1 + T4 together.

On page 6, this resets placement.

Keep your placement

Wait about 2 seconds after editing.

Saved per song. Replacing or deleting a take keeps that track's placement. A bounce prints the placed mix.

Page 8 / Next take format

Page 8 - MONO / STEREO

Before recording, tap TN to choose that track's next take.

Solid light = mono. Blinking = stereo. Existing audio is unchanged; faders still set track levels.

Page 7 / Take & timing

Page 7 - TAKE & TIMING

F1 = grid offset. F2 = take length.

Move the downbeat

Move F1. Center = no offset.

Up = later; down = earlier, by up to about half a beat. The beat lights and future grid-aligned punches follow.

Choose a take length

Move F2 from bottom to top:

OFF / 1 / 2 / 4 / 8.

Variable mode: bars, with a grid. Fixed mode: base loops, once the first loop exists.

Record to that length

Close the page with FN.

Press an empty track until it arms, then release.

The take stops automatically. Tap the recording track to finish earlier. Bounces do not use the preset.

Read the length lights

F2 changes flash T2's light:

1 / 2 / 3 / 4 flashes = 1 / 2 / 4 / 8.

Open page 7 during a preset take to see the countdown. Up to four lights show units remaining; the last unit blinks.

Fixed / variable mode: hold FN + PLAY about 0.5 s, then release. Page 7 has no separate mode button.

Page 7 / Nudge a loop

Slide one track in time

On page 7, hold TN.

Move its own fader.

Up = later. Down = earlier. Edits are relative to where the fader was when you held the button.

Release and keep editing

Let go of TN.

You remain on page 7: F1 returns to grid offset, F2 to take length, F3/F4 have no plain action. Tap FN to return to the mix.

Read the nudge lights

While held: its light shows the amount.

After release: nudged tracks glow dim between beats. The 1-2-3-4 chase shows the grid.

Reset one control

With no take recording, tap TN to center its nudge.

If already centered: T1 clears the grid offset; T2 switches the take length off. T3/T4 do nothing.

Reset the whole timing page

Hold FN + tap T1 + T4 together.

Grid offset = 0. Take length = OFF. All track nudges = center.

Nudge also works without a grid. A track being recorded cannot be nudged. In heads mode, nudging the source moves all its heads. Settings save per song after about 2 seconds.

Reach Pages 5-8: hold FN + T4 about 0.4 s to open Page 4, then release. Hold FN and click VOL+ once for Page 5, twice for Page 6, three times for Page 7, or four times for Page 8. Release FN to stay on the page. Tap FN to close.