

## xStation User Guide

Before using your new xStation Optical Disc Drive Emulator you will need to prepare your MicroSD card. So far, all sizes of MicroSD cards are compatible. However, they just must be formatted in either FAT32 or exFAT (we advise exFAT to be used since it's easier to work with). The games must be in cue/bin, iso, or cue/img format.


1. Format your MicroSD card. For example, in Windows with the MicroSD card inserted:

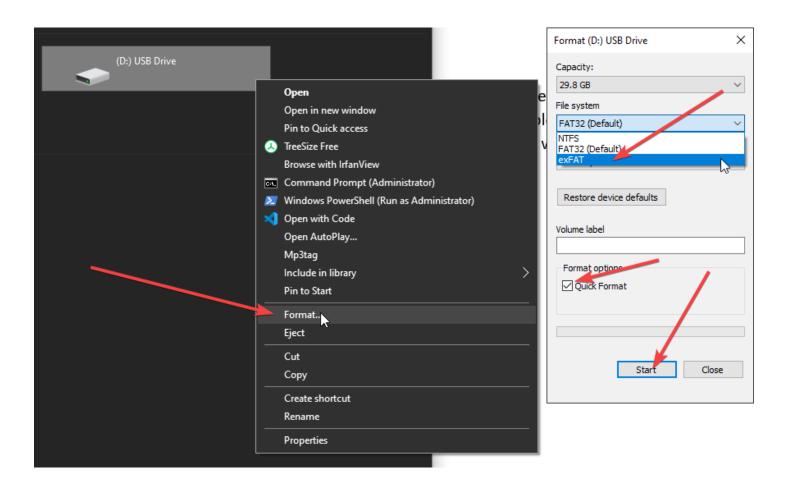


2. Create a new folder on the MicroSD card called "00xstation". This will hold firmware updates, the xStation loader application, as well as system files for the xStation only.

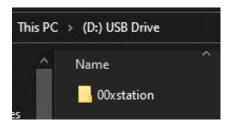


 Download the current release from the xStation Github page (<a href="https://github.com/x-station/xstation-releases/releases">https://github.com/x-station/xstation-releases/releases</a>), unzip those files, and place them into the previously mentioned "00xstation" folder.

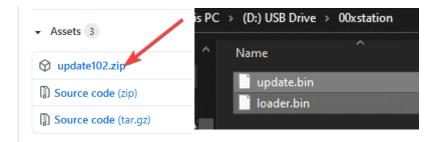

4. Copy your games folders which contain the unzipped files to the root of your MicroSD card.

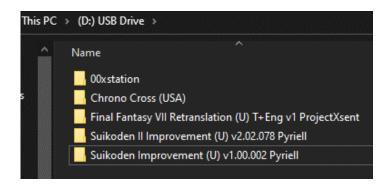

Note: If you plan to have many games (more than 150), then we recommend that you place them in subfolders. This allows much faster scanning for contents.

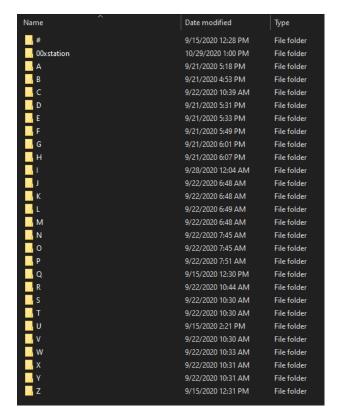


5. When this is all complete, you may remove your MicroSD and place it into the xStation's MicroSD slot.



6. Power on your Playstation. You will see the regular Playstation boot process (Sony Logo and then Playstation logo). Don't worry, that's normal. Eventually the x-station application will load.

If this is your first time booting it, there may be no games list yet. Start the scan process by selecting "Refresh Game List" and pressing "X" and then "X" again when prompted:

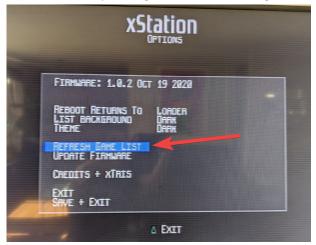

7. If your firmware is not the latest version, you may update using the files you loaded in the <code>00xstation</code> folder earlier, by selecting "Update Firmware" and pressing X.

## Returning to xStation menu with a soft reset:

To go back into the xStation's menu without completely powering off and then on again, press and hold the Playstation's reset button for about 3 seconds.